



BJT S-Parameters and Noise Figure

S-Parameters and Noise Figure versus frequency at a fixed bias point

Var Eqn
VAR
VAR1
IBB=240 uA
VCE=3 V

Disp Temp
DisplayTemplate
disptemp1
"S_Params_Quad_dB_Smith"
"Circles_Ga_NF"

The display that will open after simulation has two pages of information. You can switch between pages using the "Page" menu on the display window.

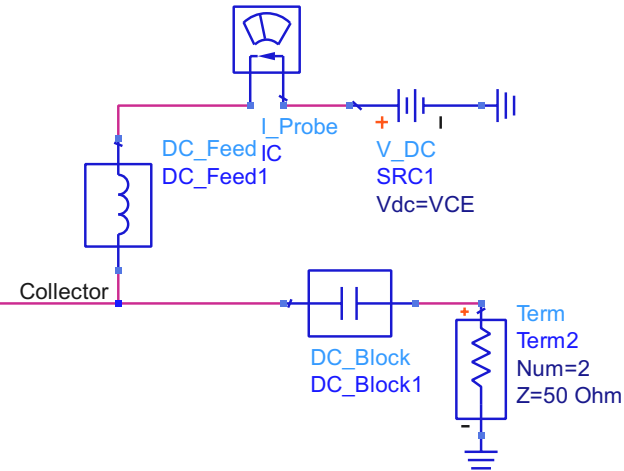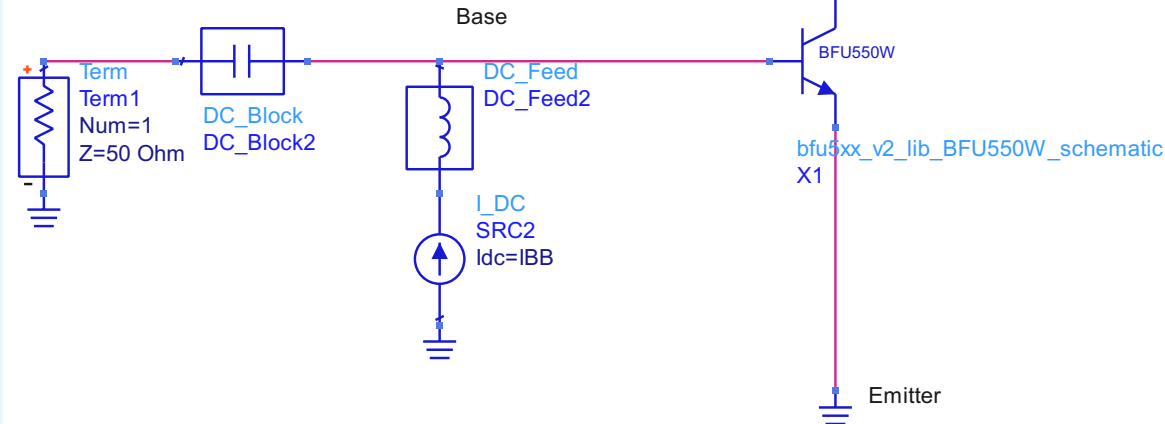

S-PARAMETERS

S_Param
SP1
Start=1 GHz
Stop=1.5 GHz
Step=0.10 GHz
CalcNoise=yes

OPTIONS

Options
Options1
Temp=16.85
Tnom=16.85