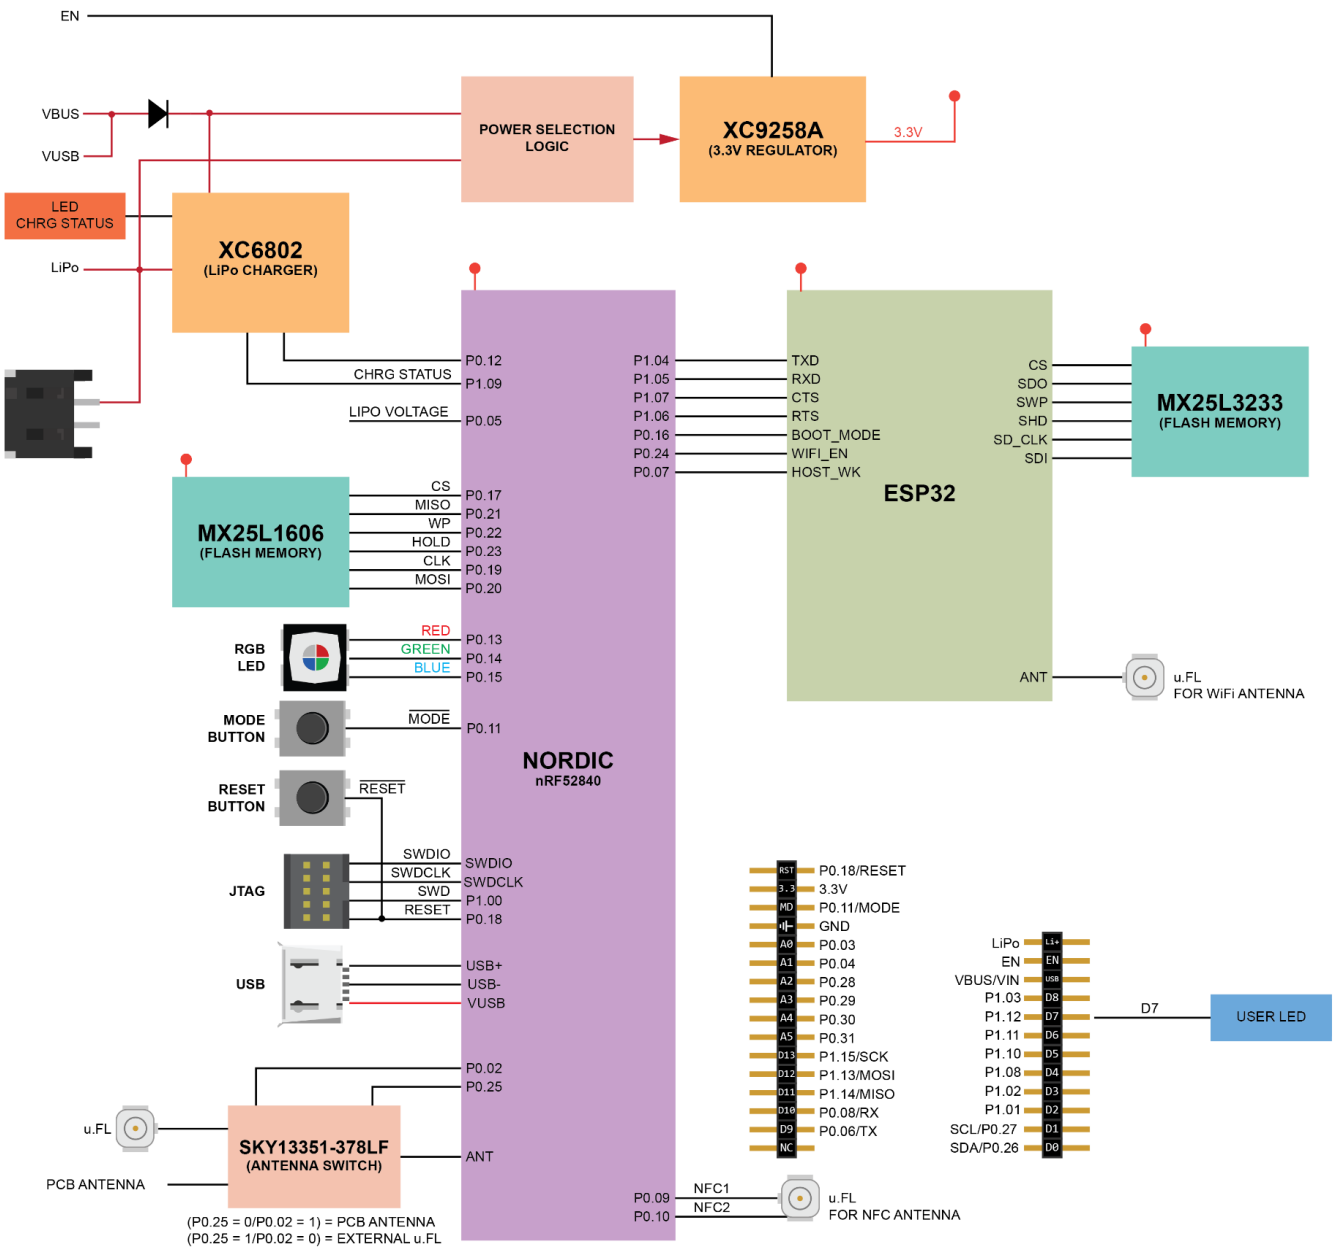
EN
VBUS
VUSB
POWER SELECTION LOGIC
XC9258A
(3.3V REGULATOR)
3.3V
LED
CHRG STATUS
LiPo
XC6802
(LiPo CHARGER)
CHRG STATUS
LIPO VOLTAGE
P0.12
P1.09
P0.05
P1.04
P1.05
P1.07
P1.06
P0.16
P0.24
P0.07
TXD
RXD
CTS
RTS
BOOT_MODE
WIFI_EN
HOST_WK
ESP32
CS
SDO
SWP
SHD
SD_CLK
SDI
MX25L3233
(FLASH MEMORY)
MX25L1606
(FLASH MEMORY)
CS
MISO
WP
HOLD
CLK
MOSI
P0.17
P0.21
P0.22
P0.23
P0.19
P0.20
ANT
u.FL
FOR WiFi ANTENNA
RGB LED
RED
GREEN
BLUE
P0.13
P0.14
P0.15
MODE BUTTON
MODE
P0.11
RESET BUTTON
RESET
NORDIC
nRF52840
JTAG
SWDIO
SWDCLK
SWD
RESET
SWDIO
SWDCLK
P1.00
P0.18
USB
USB+
USB-
VUSB
P0.02
P0.25
u.FL
PCB ANTENNA
SKY13351-378LF
(ANTENNA SWITCH)
ANT
(P0.25 = 0/P0.02 = 1) = PCB ANTENNA
(P0.25 = 1/P0.02 = 0) = EXTERNAL u.FL
P0.09
P0.10
NFC1
NFC2
u.FL
FOR NFC ANTENNA
RST
3.3
MD
A0
A1
A2
A3
A4
A5
D13
D12
D11
D10
D9
NC
P0.18/RESET
3.3V
P0.11/MODE
GND
P0.03
P0.04
P0.28
P0.29
P0.30
P0.31
P1.15/SCK
P1.13/MOSI
P1.14/MISO
P0.08/RX
P0.06/TX
LiPo
EN
VBUS/VIN
P1.03
P1.12
P1.11
P1.10
P1.08
P1.02
P1.01
SCL/P0.27
SDA/P0.26
LI+
EN
USB
D8
D7
D6
D5
D4
D3
D2
D1
D0
D7
USER LED