

# **VEVOR<sup>®</sup>**

## **TOUGH TOOLS, HALF PRICE**

Technical Support and E-Warranty Certificate [www.vevor.com/support](http://www.vevor.com/support)

### **Wireless DMX512 Transmitter&Receiver**

#### **USER'S GUIDE**

**MODEL:TS-WDMX01A-7D-B,  
TS-WDMX01A-3D-S,  
TS-WDMX01A-7D-S**

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually Saving Half in comparison with the top major brands.

# VEVOR®

TOUGH TOOLS, HALF PRICE

Wireless DMX512  
Transmitter&Receive

MODEL:TS-WDMX01A-7C-B,TS-WDMX01A-3C-S,TS-WDMX01A-7C-S



## NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

**Technical Support and E-Warranty Certificate**  
**[www.vevor.com/support](http://www.vevor.com/support)**

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

|                                                                                  |                                                                                                                                                                                                                                                                                         |
|----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Warning-To reduce the risk of injury, user must read instructions manual carefully.</p>                                                                                                                                                                                              |
|  | <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.</p> |

## Features

DMX512 wireless receiver/transmitter transmits standard DMX512 protocol data (generated by console) by wireless way.Low latency in milliseconds when signal data is transmitting,High-speed and reliable signal transmission.This product adopts a 2.4G ISM frequency section.High effective GFSK modulate,communication design; jumping frequency automatically, high anti-jamming ability.

## Specification

1. 2.4G wireless DMX512 T/R.
2. Jumping frequency automatically, high anti-jamming ability. To ensure works reliability.
3. 7 groups ID number settable,User can use 7 groups individual wireless net without any interference.
4. The working network ID number is shown by the indicator(Tricolor LED displaying Indicators).
5. Input voltage: DC5V 500mA MIN.
6. Communication distance: 200M (visible distance).
7. Work frequency section: 2.4G ISM.frequency section.
8. Max transmitting power rate: 20dBm.

## Operating Manual

ID number and LED color corresponding relationship:

1: Red      2: Green      3: Yellow      4: Blue  
5: Purple    6: Cyan      7: White

- Using a small pointed tool, operate the buttons inside the small round holes on the side of the case to change the value of the ID number.
- Each time a buttons is pressed, the ID number and the corresponding indicator light will change cyclically in the order of 1-7 ID number.

## Working Condition

The transmitter and receiver must first be set to the same ID number and the LEDs must be the same color. Then the transmitter plugs into the console and starts working. Receiver connected to fixture XLR connector.

LED flashing blue: signal being transmitted

LED blinks green: signal is received

The operating frequency is automatically selected by the system without human intervention.

### ●Precautions for use and frequently asked questions:

1. the transmitter does not flash blue

The transmitter is not connected to the console signal.

2. The console is not powered on.

The console signal is not in standard DMX512 format.



3. Receiver does not flash green light:

The network number indicator should be consistent with the transmitter's, for example, both pre-set to ID number 1 red light.


No transmitter is turned on, the transmitter needs to blink blue to start working.

Green light flashes slowly or intermittently, the quality of the received signal is not good, restart the transmitter to switch the operating frequency

●This unit is for Indoor use only.

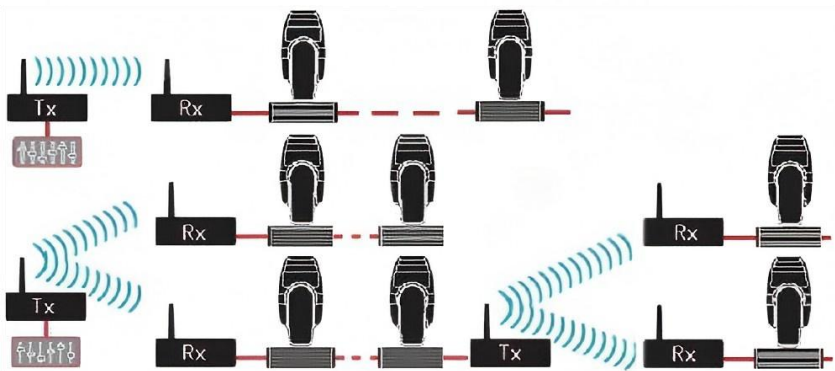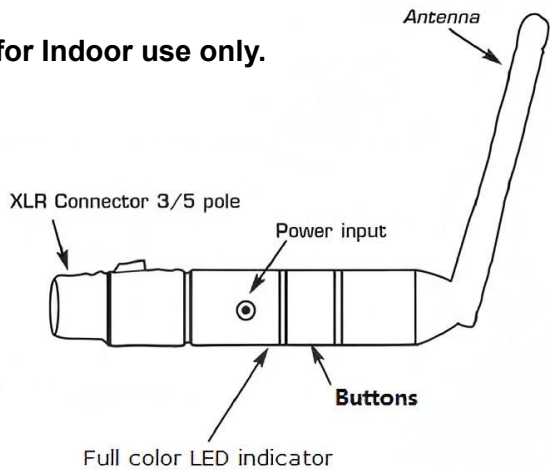

**DMX512 Wireless Receiver with battery Operating Instructions**

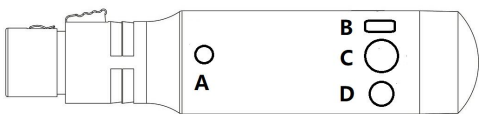

●Graphic description :

|                                                                                                                                                 |                                                                                                |
|-------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| <p>A: Battery working status indicator</p> <p>Flashing green: charging</p> <p>Static green : fully charged</p> <p>Flashing red: low battery</p> | <p>B: ID adjust buttons</p> <p>Add 1 to each keystroke, cycle ID network number 1-7 change</p> |
| <p>C: Power buttons    Power ON:</p> <p>Rapid double-tap in succession</p> <p>Power OFF: Click once</p>                                         | <p>D: Charging port</p> <p>Be sure to use the special charger DC5V 500mA Min</p>               |

## ●Battery Functions in a Nutshell

1. During the charging process, the product will remain on, this is a normal phenomenon
2. When the battery is charging, it will produce micro heat, it is a normal phenomenon .
3. Please use the original charger need about 3 hours to fully charge the battery, the fully charged battery can last about 8 hours of work, and users can also use the product while charging.
4. Built-in lithium battery 16340 600mah, theoretical cycle charging times about 500 times.

## ●Battery Replacement Procedure :

1. close the product power, screw off the plastic cap on the tail of the product.
2. Screw down the plastic connecting ring.
3. Gently pull out the circuit board, when necessary, in the product head to apply a certain force.
4. Take out the battery's 2PIN connector .
5. Install a new battery , pay attention to the positive and negative direction .
6. Finish the circuit board assembly ,checking the antenna does not contact other electronic components, and screw connector of the plastic ring, screw the plastic cover .

Note: When the installation finds that the hole position and the circuit board have a large deviation, please unscrew the plastic cap and adjust the tightness of the plastic connecting ring; the hole position is then corrected, and then screw on the plastic cap again.

**Please take care to follow local environmental norms and recycle your products!**

Shenzhen City Tongsheng Electronic Technology Co.,Ltd  
Address: Building 2, 3rd Industrial Zone, Bantian Subdistrict, Longgang District, Shenzhen City, Guangdong Province, China