
m-card: assembly (top side, 5:1)

Seen as on the FM-1's back with the cover off: the jacks above the top edge. Pads grey, pin 1 (on J2/J3 the cable's line 1) red.

jacks (the LCD's cable comes down between them)

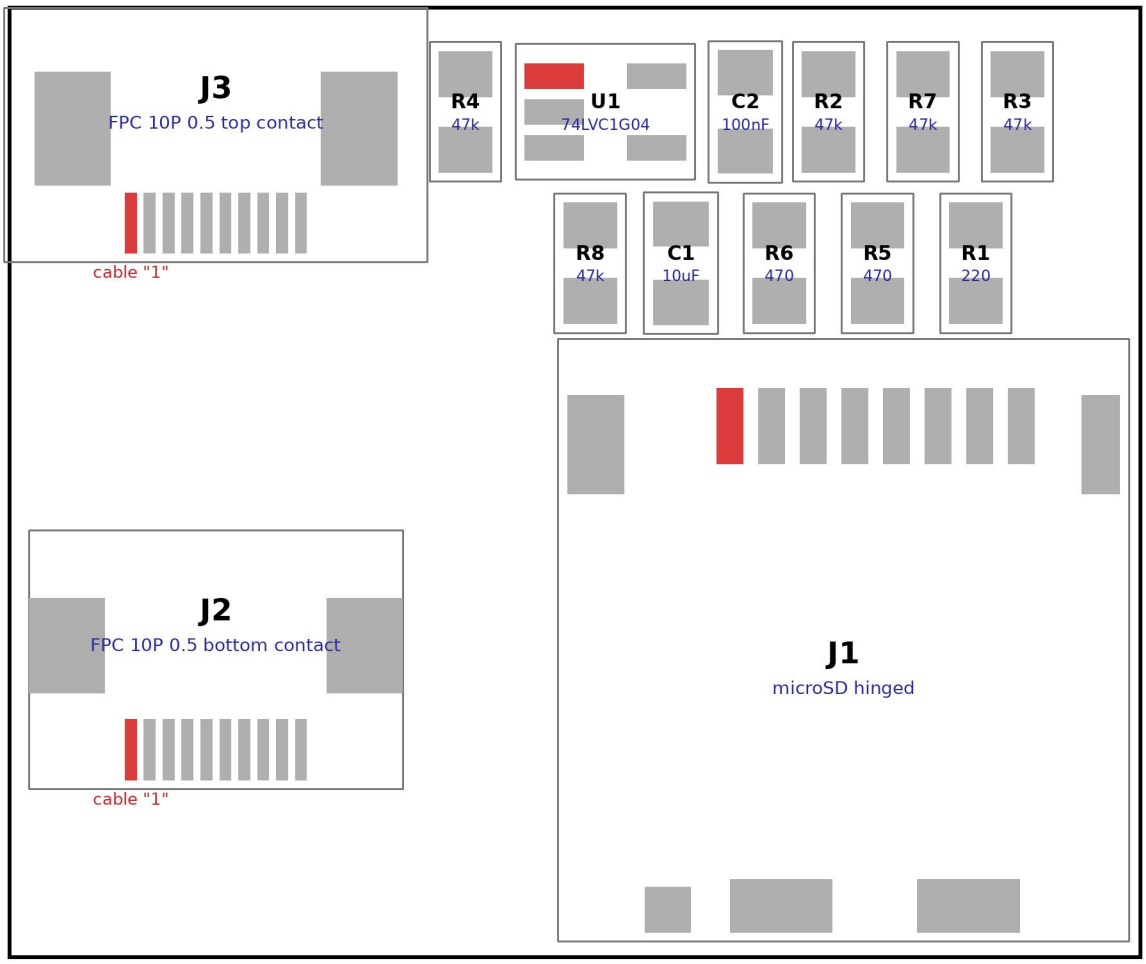

Notes

- J3: LCD cable in from the top edge, its contacts UP (top-contact socket).

- J2: cable from J12 in from the top too, its contacts DOWN (bottom-contact socket).

- J1: hinged microSD socket, hinge along the bottom edge, its 8 contact tails toward the resistors.

- U1: pin 1 (red) top left; the dot on the part goes there. Resistors and capacitors have no polarity.

- Order: J2, J3 (0.5 mm pitch: flux, tack a tab, drag-solder, wick off bridges), then U1, J1, then the 0805s.

- Before the FM-1: no short 3V3 (J2 line 7) to GND (line 1); each J2 line beeps through to the same J3 line.

Parts

Refs	Value	LCSC	Footprint
C1	10uF	C15850	C 0805 2012Metric
C2	100nF	C49678	C 0805 2012Metric
J1	microSD hinged	C202111	microSD Hirose DM3CS-SF hinged
J2	FPC 10P 0.5 bottom contact	C2856798	FPC 10P 0.5 XUNPU FPC-05F-10PH20
J3	FPC 10P 0.5 top contact	C3446068	FPC 10P 0.5 XUNPU FPC-0.5AS-10PWBH
R1	220	C17557	R 0805 2012Metric
R2, R3, R4, R7, R8	47k	C17713	R 0805 2012Metric
R5, R6	470	C17710	R 0805 2012Metric
U1	74LVC1G04	C7827	SOT-23-5 HandSoldering

make_assembly.py from m-card.kicad_pcb (CC0-1.0)