
Savant OpenWx — User Manual

Version 2.0.2 · Weather, forecast and severe-weather alerts for Savant, as plain states you can show on custom screens and use in triggers.

Savant OpenWx is an independent community project. It is not affiliated with, endorsed by, or supported by Savant Systems, Inc. "Savant" is a trademark of Savant Systems, Inc. Released under the MIT License.

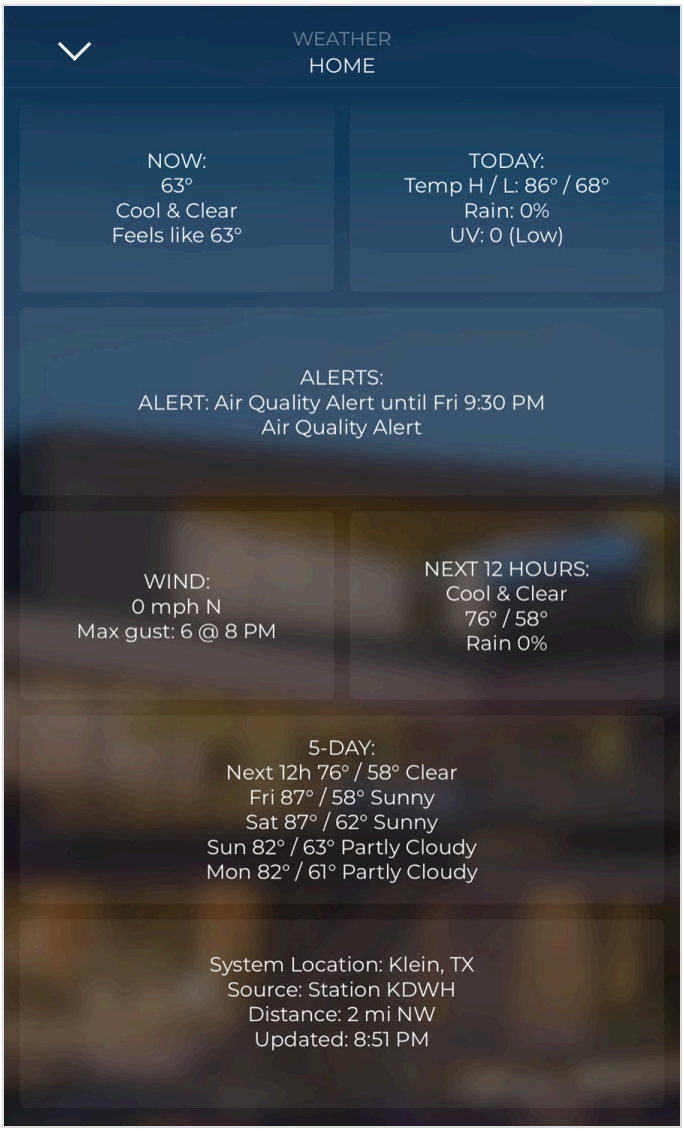

Weather custom screen in the Savant app

Contents

1. What it does
2. How it works
3. Requirements
4. Quick start
5. Installing the bridge
6. Adding the profile in Blueprint
7. Settings you enter in Blueprint

8. Showing weather in the Savant app
9. Automations
10. Data sources and licensing
11. Managing the bridge
12. Troubleshooting
13. FAQ
14. Developer reference
15. Appendix A — State reference

---

1. What it does

Savant OpenWx gives a Savant system **248 weather states**, refreshed every 5 minutes:


- **Current conditions**: temperature, feels-like, humidity, dew point, wind, gusts, UV, cloud cover, pressure, plus plain-language summaries such as "Pleasant & Partly Cloudy".
- **Forecasts**: the next 3, 12 and 24 hours, an hourly strip, and 5 days.
- **Sunrise, sunset, dawn and dusk.**
- **National Weather Service watches, warnings and advisories**, with yes/no flags per category (wind, freeze, tornado, flood, heat, tropical and more).
- **Ready-to-display text** for custom-screen labels ("87°", "Thu 84° / 68° Stormy 70%").
- **Automation flags** with thresholds you set per job: protect shades from wind, rain coming, freeze tonight, high UV, heat.

Typical uses: retract awnings before gusts arrive, run pool freeze protection, close a motorized pergola before rain, lower solar shades on high-UV days, push a notification when a tornado warning is issued, and show a weather page in the Savant app.

Free to use, including on client jobs (US): by default all data comes from US government sources (National Weather Service, EPA, US Naval Observatory) plus MET Norway, with no account or key needed. Outside the US, or if you prefer it, enter an Open-Meteo API key.

---

2. How it works

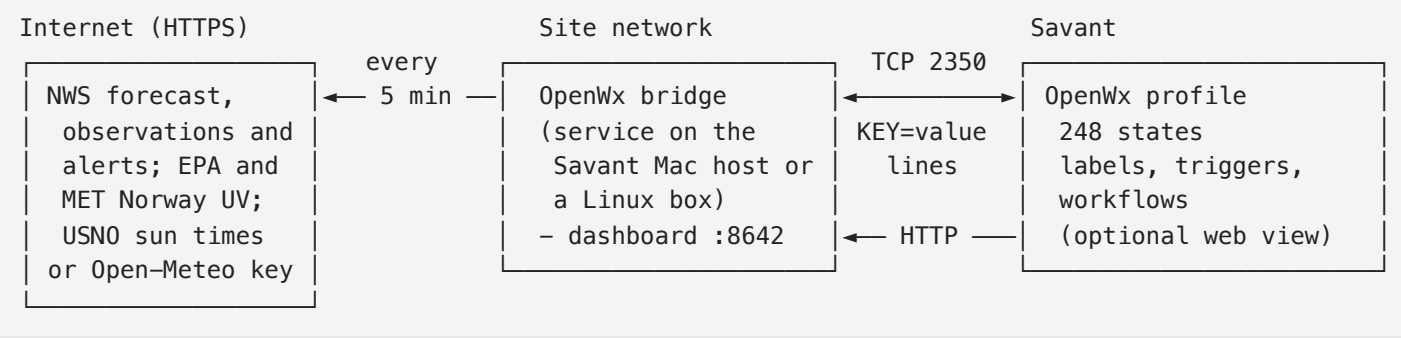

A Savant profile can only talk plain TCP and match simple text, so it can't call modern HTTPS/JSON weather services directly. OpenWx has two parts:

- **The bridge**: a small Python service (standard library only, no installs) that runs on the Savant Mac mini Pro host (or any Linux machine on the network). It fetches the weather, does the math ("highest gust in the next 12 hours"), and sends Savant one simple line per value, e.g. `H12_GUST_MAX=34`. Only changed values are sent.

- **The profile** (`openwx_weatherbridge.xml`): a Blueprint component profile of class *Weather Station Controller* that connects to the bridge and turns each line into a Savant state. It also sends your Blueprint settings (location, contact email, thresholds…) to the bridge when the host starts.

---

3. Requirements

Savant	Blueprint with custom-screen support. Developed and tested on a Savant Mac mini Pro host (macOS, Python 3.9.6).
Bridge machine	The Savant **Mac mini Pro host** (recommended), or any always-on macOS/Linux machine on the same network.
Python	3.6 or newer. macOS 11+ includes Python 3.9 with the Command Line Tools (`xcode-select --install` if `python3 --version` asks).
Network	Outbound HTTPS from the bridge machine. Ports **2350** (Savant ↔ bridge) and **8642** (dashboard) free on the bridge machine. Savant itself uses port 80, so OpenWx doesn't.
Location	US for the free data sources. Anywhere with an Open-Meteo API key.

Not yet tested: Savant Smart Hosts / Linux-based Pro hosts. The bridge runs on Linux, but installing software on those hosts isn't covered here.

---

4. Quick start

1. Copy the unzipped `savant-openwx` folder to the Savant Mac host.
2. In Terminal: `cd savant-openwx/macos` then `sudo ./install.sh`.
3. Check it: `openwx probe 77002` (any ZIP). You should see current weather and `SYS_ONLINE 1`.
4. In Blueprint, import `profile/blueprint-import/openwx_weatherbridge.xml` (keep that exact file name) and drag **OpenWx WeatherBridge** into the layout.
5. Inspector → *Control Ports* → set the Ethernet **Device IP Address** to the host's own IP.
6. Inspector → *State Variables* → enter **Location Override** (a ZIP code works best) and **Contact Email**.
7. Upload the configuration.
8. Build a custom screen with dynamic labels (section 8) and add triggers (section 9).

---

5. Installing the bridge

5.1 On the Savant Mac mini Pro host (recommended)

1. Copy the unzipped `savant-openwx` folder to the host (AirDrop, USB, or `scp`). Remove any older copy first, so macOS doesn't save the new one as `savant-openwx 2`.

2. Open Terminal and run:

   ```
   cd ~/Downloads/savant-openwx/macos      # wherever you put it
   sudo ./install.sh
   ```

   If the zip lost the execute permission, use `sudo bash install.sh`. To run the service as a specific account: `sudo ./install.sh --user RPM`.

The installer:

- Finds Python 3 and checks that ports 2350 and 8642 are free (it stops with a clear message if anything, including Savant, already uses them).
- Installs to `~/OpenWx` (bridge, dashboard, `config.json`, logs).
- Registers a background service, `org.openwx.bridge`, that starts at boot without anyone logged in, restarts itself after a crash, and runs at low priority so it never competes with Savant.
- Adds the `openwx` control command.
- Allows Python through the macOS firewall if the firewall is on (only if Python wasn't already allowed).
- Starts the bridge, confirms it's listening, and prints the host IP, dashboard address and commands.

Upgrading: run the new release's `install.sh` the same way. Your `config.json` and saved settings are kept, and the installer prints `Installing bridge vX (replacing vY)`.

Backups before installing: none needed. The installer doesn't modify Savant or the system Python, and records exactly what it adds so the uninstaller can remove it (section 11.3).

5.2 On Linux (Raspberry Pi, NUC, server)

```
sudo mkdir -p /opt/openwx
sudo cp bridge/* /opt/openwx/
sudo cp linux/openwx-bridge.service /etc/systemd/system/
sudo nano /etc/systemd/system/openwx-bridge.service   # set User= to the account that should run
sudo chown -R <that user> /opt/openwx
sudo systemctl daemon-reload
sudo systemctl enable --now openwx-bridge
journalctl -u openwx-bridge -f
```

Give the machine a DHCP reservation and use its IP in Blueprint. `sudo systemctl stop openwx-bridge` performs a clean shutdown. The `openwx` command is macOS-only; on Linux, test with `python3 /opt/openwx/openwx_bridge.py -c /opt/openwx/config.json --probe 77002`.

5.3 Checking that it works

Check	Command / place	Expect
Service running	`openwx status`	`running`, the version, both ports `listening`, location and current weather
Live data	`openwx probe 77002`	Current weather, sources, station, sun times, alerts; `SYS_ONLINE 1`
Dashboard	`http://<host-ip>:8642/` in any browser	Weather page (section 8.5)
Log	`openwx logs`	`savant connected` once the Savant host is running the profile

5.4 The bridge's configuration file

`~/OpenWx/config.json` (macOS) or `/opt/openwx/config.json` (Linux). Most of it is a **fallback**: anything you enter in Blueprint (section 7) takes priority. After editing, run `sudo openwx restart`.

Key	Default	Purpose
`default_location`	`77002`	Location used when Blueprint sends none (ZIP, `lat,lon`, or `City, ST`)
`contact_email`	placeholder	Contact sent to the data providers when Blueprint's *Contact Email* is blank
`openmeteo_api_key`	blank	Fallback Open-Meteo key (or `private`)

forecast_source	auto	auto = Open-Meteo when a key is set, otherwise NWS. nws or openmeteo forces one
units	imperial	imperial (°F, mph, in) or metric (°C, km/h, mm)
refresh_seconds	300	Update interval (minimum 60)
thresholds	see section 7	Default automation thresholds, plus wind_icon_gust (30 mph; when the *_ICON value becomes wind)
tcp_port / http_port	2350 / 8642	Savant connection / dashboard ports. The profile expects 2350
max_memory_mb	150	Memory watchdog limit (normal use is about 25 MB)

---

6. Adding the profile in Blueprint

6.1 Import and add the component

1. In Blueprint's component library, use **Import** to add profile/blueprint-import/openwx_weatherbridge.xml.
    - **Upgrading from 2.0.0:** delete the older OpenWx entry from the library first, then import. Earlier releases had the profile directly in profile/.
    - **Import it from that folder.** Blueprint also copies in this manual (openwx_weatherbridge.htm), shown on the component's **Documentation** tab, and the component icon (openwx_weatherbridge.icns), but only from beside the .xml. Keep the three files together.
    - **Keep the file name exactly as shipped.** Blueprint finds profiles by a file name built from the manufacturer and model (all lowercase, everything that isn't a letter or digit turned into _). A renamed file, including a browser download saved as openwx_weatherbridge (1).xml, imports and shows in the library but fails with **"Component not found"** when dragged into the layout.
2. Search the library for *OpenWx* and drag **OpenWx WeatherBridge** into the layout. Blueprint names it *Weather Station Controller*; rename it if you like (for example *Internet Weather*).
3. Connect its **Ethernet** port to your network, as you would any IP device.


6.2 Point it at the bridge

Select the component → Inspector → **Show: Control Ports** → *Ethernet*:

- **Device IP Address or URL**: the IP of the machine running the bridge. On a Mac host that's the host's own IP (ipconfig getifaddr en0 in Terminal shows it).
- **Control Port**: 2350, set by the profile and greyed out. That's expected.

6.3 Enter settings, then upload

Inspector → **Show: State Variables** → select each setting and type its **Initial Value**. Section 7 lists every setting. At minimum, enter a **Location Override** (or **Site Coordinates**) and your **Contact Email**. Then upload the configuration.

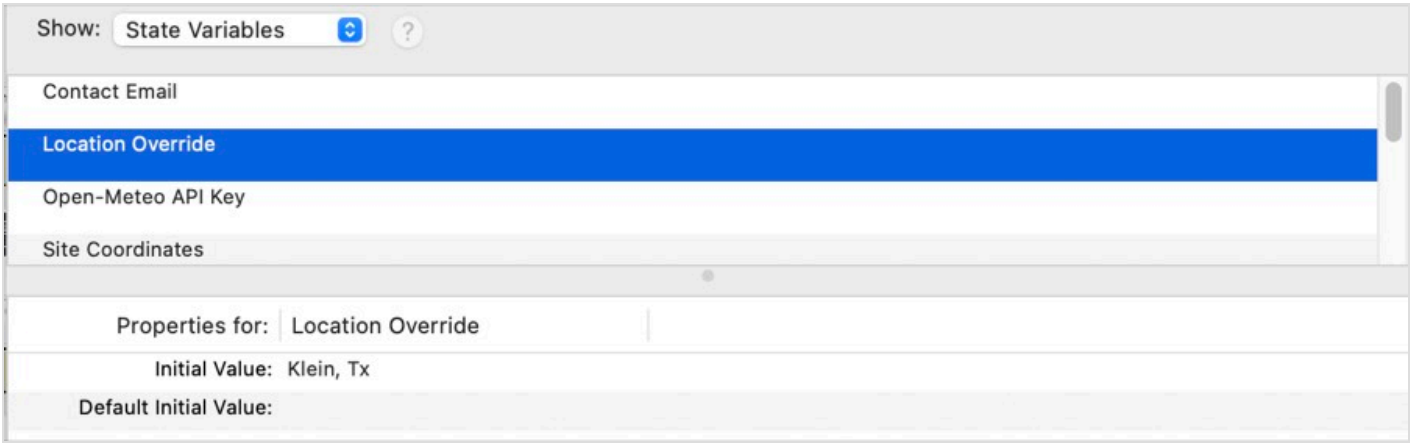

Entering a setting: Inspector → State Variables → Initial Value

When the host starts, the profile connects to the bridge and sends all settings. To watch it happen, run `openwx logs` on the host before uploading. You should see:

```
savant connected: ('127.0.0.1', ...)
cmd: OVERRIDE 77379
location: 77379 (Spring, TX) -> 30.0377, -95.5326 [override]
updated: 73 Pleasant & Clear, Spring, TX
cmd: PING            (every minute after that)
```

6.4 Confirm the states reached Savant

On the host, read a state with Savant's `sclibridge` tool. The state name is `<component name>.Weather.<STATE>`:

```
sclibridge readstate "Weather Station Controller.Weather.CUR_SUMMARY"
→ Pleasant & Clear
```

6.5 Profile actions

These appear under the component's custom actions for workflows. The first five also run automatically at startup.

Action	What it does	Runs automatically
`SendSiteCoordinates`	Sends *Site Coordinates*	At startup
`SendLocationOverride`	Sends *Location Override*	At startup
`SendContactEmail`	Sends *Contact Email*	At startup
`SendApiKey`	Sends *Open-Meteo API Key*	At startup
`SendThresholds`	Sends all six thresholds	At startup
`ClearLocationOverride`	Returns to Site Coordinates / default	—
`RefreshWeather`	Fetches weather now (the bridge also refreshes every 5 minutes on its own)	—
`RequestAllStates`	Re-sends every state	—
`Ping`	Keepalive	Every 60 s

Changing a setting while the system is running (for example from a custom screen or workflow): write the new value to the component's state variable, then run the matching `Send…` action.

7. Settings you enter in Blueprint

All settings live in **Inspector → State Variables** on the OpenWx component. Every one is optional. A blank field falls back to the bridge's `config.json`, so each job only needs what's different. Values are sent at startup and saved on the bridge, so they survive bridge restarts.



A threshold setting in the Inspector

Setting	What to enter	Example	If blank
Site Coordinates	The job site as `latitude,longitude`	`30.0377,-95.5326`	Not used
Location Override	ZIP code, `lat,lon`, or `City, ST`. Takes priority over Site Coordinates	`77379` / `Spring, TX`	Site Coordinates, then `default_location`
Contact Email	Your company email. The NWS, EPA, MET Norway and USNO ask for contact info with each request	`service@yourdomain.com`	`contact_email` from `config.json`
Open-Meteo API Key	Your Open-Meteo key, or the word `private` (section 10.2)	`aBcD1234…`	Free NWS-based forecast (US only)
Threshold Wind Protect Gust	mph that turns on `ACT_WIND_PROTECT`	`25`	25
Threshold Rain Soon Chance	% rain chance within 3 h that turns on `ACT_RAIN_SOON`	`50`	50
Threshold Rain Expected Chance	% that turns on `H3/H12/H24_RAIN_EXPECTED`	`40`	40
Threshold Freeze Temp	°F at or below which `ACT_FREEZE_TONIGHT` and `*_FREEZE_EXPECTED` turn on	`34`	32
Threshold High UV	UV index that turns on `ACT_HIGH_UV`	`8`	8
Threshold Heat Feels Like	°F feels-like that turns on `ACT_HEAT`	`100`	100

Location tips:

- **A ZIP code is the best choice.** The EPA's UV forecast is looked up by ZIP first; with coordinates only, it depends on the EPA recognising the nearest city name.
- **Priority:** Location Override, then Site Coordinates, then `default_location`. A location that can't be found (a typo'd ZIP, say) doesn't stop updates: the bridge uses the next one and reports it in `SYS_ERROR`, e.g. `override '77739' not found, using Houston, TX (default)`.

Checking what's in effect:

State	Shows
`SYS_LOCATION_NAME`, `SYS_LOCATION_SOURCE`	Resolved place and which setting it came from (override / site / default)
`SYS_CONTACT_SET`	1 when a real contact email is in use, 0 while it's still the placeholder
`SYS_FORECAST_SOURCE`	Where the forecast came from
`TH_*`, `TH_SOURCE`	The thresholds in use, and which came from Blueprint

Security note: the API key is stored in the Blueprint configuration and on the bridge in a file only the bridge's user can read. It's never sent back to Savant or shown on the dashboard.


---

8. Showing weather in the Savant app


The Savant app doesn't support images that change with a state, but custom-screen **dynamic labels** show any state's text, mixed with your own text. The bridge pre-formats everything for this.

8.1 Adding a dynamic label

1. Open the custom screen editor and add a label.
2. Set **Label Type** to **Dynamic**.
3. Click into **Dynamic Text**. Type any fixed text you want (e.g. `1. Now:` or `Rain: `).
4. Open the State browser (the **States** triangle), choose the **Component** tab, select your OpenWx component, and **drag a state into the Dynamic Text field**. Typing a state's name does not work; it must be dragged in.
5. Repeat for more states. Each state appears as a chip; press Return between them for separate lines.

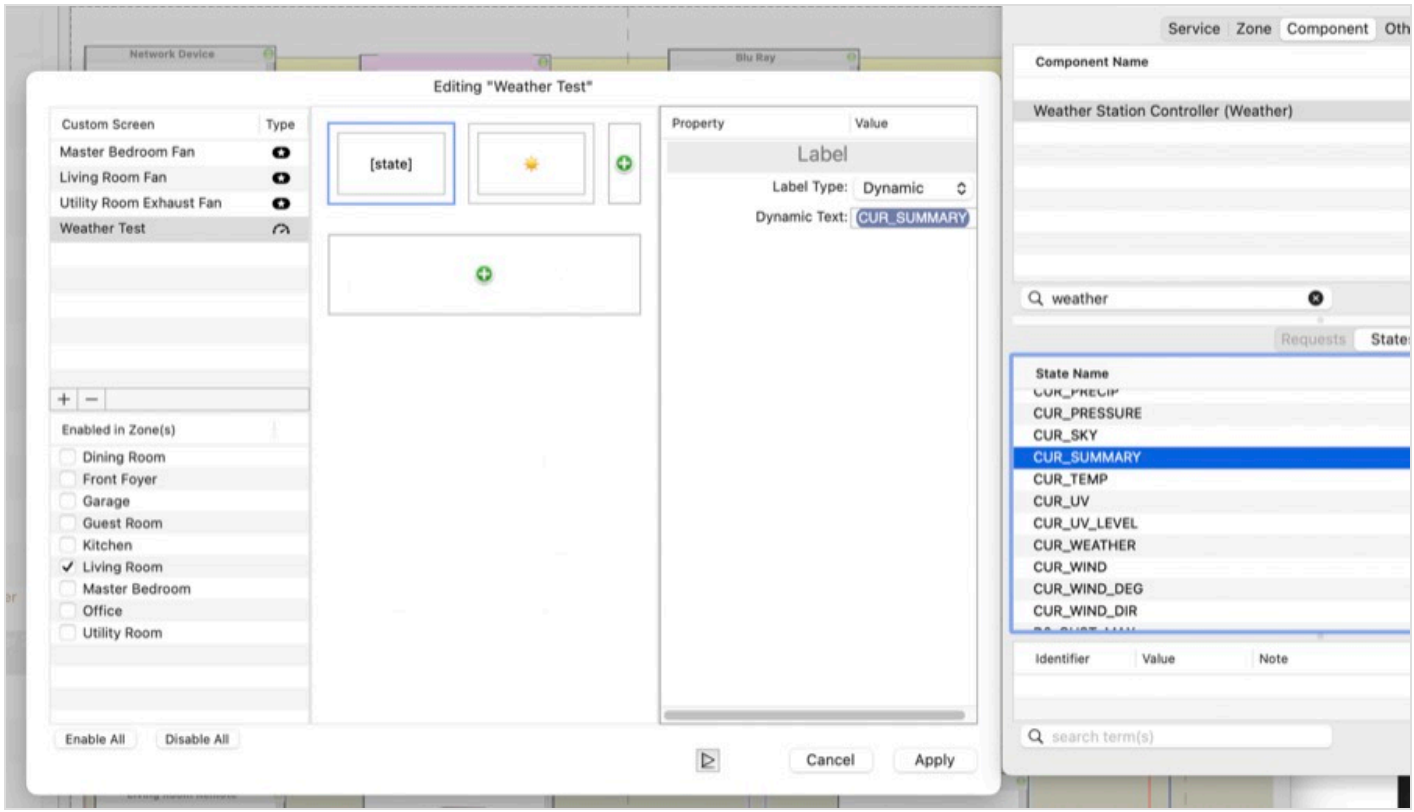

Dragging a state from the Component tab into a dynamic label

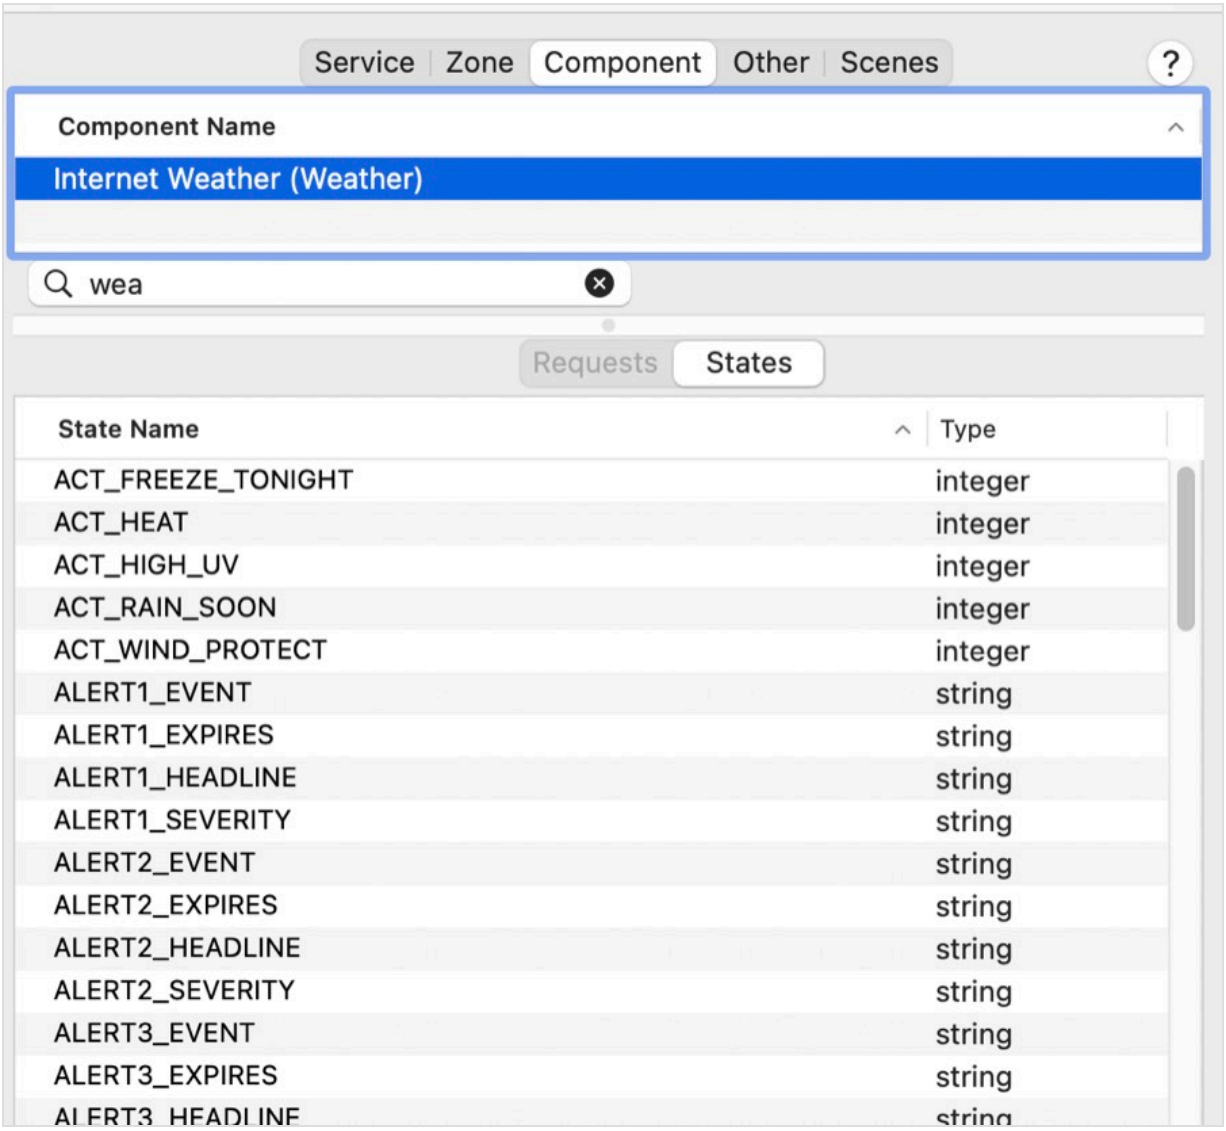

The OpenWx states in the State browser's Component tab



A dynamic label mixing fixed text ("Temp H / L:", "Rain:", "%") with states

8.2 Suggested layout

The app lays custom screens out as tiles: half-width tiles two across, plus full-width tiles. This is the screen shown at the top of this manual. Each line below is one line in the label's Dynamic Text.

Tile	Width	Dynamic Text (fixed text as typed, states in brackets)
Now	half	`NOW:` / `[CUR_TEMP_TEXT]` / `[CUR_SUMMARY]` / `[CUR_FEELS_TEXT]`
Today	half	`TODAY:` / `Temp H / L: [D0_HILO_TEXT]` / `Rain: [D0_RAIN_CHANCE]%` / `UV: [CUR_UV] ([CUR_UV_LEVEL])`
Alerts	full	`ALERTS:` / `[ALERTS_LIST]` (every active alert with its end time, or "No active alerts")
Wind	half	`WIND:` / `[CUR_WIND_TEXT]` / `Max gust: [H12_GUST_MAX] @ [H12_GUST_MAX_TIME]`
Next 12 hours	half	`NEXT 12 HOURS:` / `[H12_SUMMARY]` / `[H12_HILO_TEXT]` / `Rain [H12_RAIN_CHANCE]%`
5-day	full	`5-DAY:` / `[H12_LINE]` / `[D1_LINE]` / `[D2_LINE]` / `[D3_LINE]` / `[D4_LINE]`
Footer	full	`System Location: [SYS_LOCATION_NAME]` / `Source: [SYS_CURRENT_SOURCE]` / `Distance: [SYS_STATION_DISTANCE]` / `Updated: [SYS_LAST_UPDATE]`

The screenshots use `[ALERT_TEXT]` and `[ALERT_EVENTS]` in the Alerts tile; `[ALERTS_LIST]` alone is tidier because it lists every alert once. The Today tile's UV is the current UV, so it reads 0 at night; use `[D0_UV_MAX]` for the day's peak instead.

The footer's update time doubles as a health check: if it stops changing, data isn't flowing. Leave a space or " · " between states in a label; the bridge doesn't add one.

8.3 Most useful display states

State	Example
`CUR_LINE`	87° Hot & Partly Cloudy
`CUR_TEMP_TEXT` / `CUR_FEELS_TEXT`	87° / Feels like 95°
`CUR_WIND_TEXT`	12 mph SSE, gusts 19 (or Calm)
`H3_LINE` / `H12_LINE` / `H24_LINE`	Next 12h 83° / 59° Clear
`H12_HILO_TEXT`, `D1_HILO_TEXT`	87° / 63°
`D0_LINE` … `D4_LINE`	Thu 84° / 68° Stormy 70%
`HR1_TIME` + `HR1_TEMP_TEXT` … `HR8_…`	Hourly strip: Now 78°, 9 PM 70°, …
`ALERTS_LIST`	Wind Advisory until Fri 6:00 PM · Air Quality Alert until Fri 9:30 PM
`ALERT_TEXT`	ALERT: Wind Advisory until Fri 6:00 PM (+1 more)
`SUN_RISE`, `SUN_SET`, `SUN_DAWN`, `SUN_DUSK`	7:28 AM …
`SYS_STATION_NAME`, `SYS_STATION_DISTANCE`	Houston, Hooks Memorial Airport · 2 mi NW


The full list is in Appendix A.

8.4 Limits to know

- **No emoji from the bridge.** Savant reads text from profiles in the Mac Roman character set, which has no emoji (they'd show as garbage like `,òÅÔ∏è`). The bridge sends Mac Roman, so °, · and accented letters display correctly. Emoji typed directly into a label's fixed text do display.
- **Empty states show as `--`.** The text states are designed never to be empty in normal use (e.g. `ALERTS_LIST` says "No active alerts").
- **`*_ICON` states** hold condition names (`partly-day`, `rain`, `thunder`…). They're useful in triggers, not for display.

8.5 Web dashboard

The bridge also serves a weather page at `http://<bridge-ip>:8642/`. It's handy on wall tablets, a browser bookmark, or for checking the bridge. Add `?theme=light` for a light version. It works on the local network only. Data-source credits appear in its footer automatically.

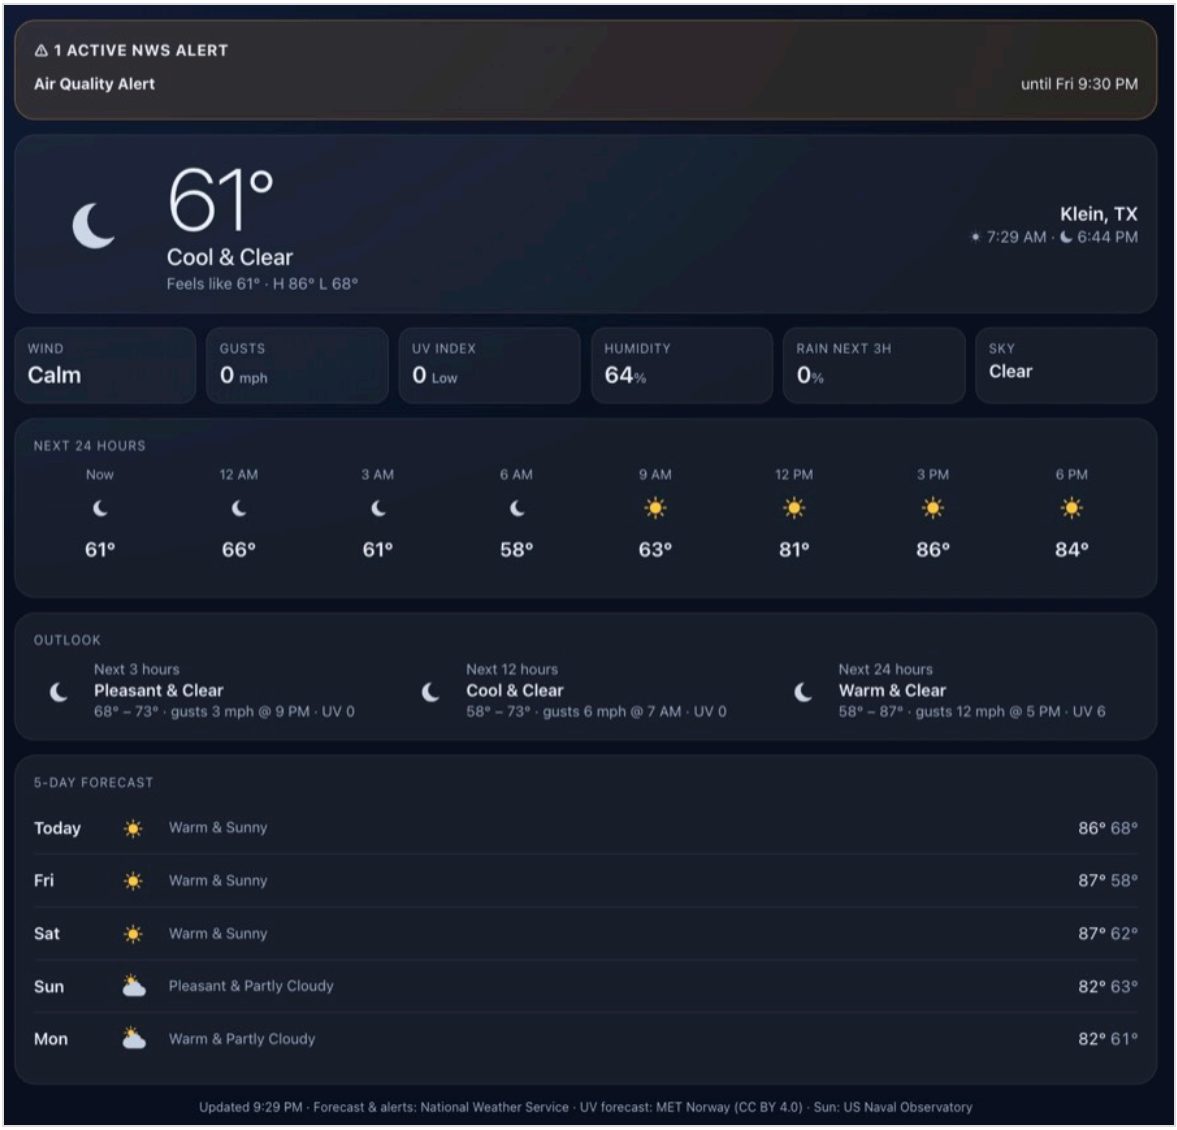

Web dashboard: with the free NWS source, sources are credited in the footer

---

9. Automations

9.1 Automation flags

Each flag is 1 or `0` and is designed to be used directly as a trigger condition. Thresholds are set per job (section 7).

Flag	Turns on when
`ACT_WIND_PROTECT`	The gust now, **or forecast within the next 3 hours**, reaches *Threshold Wind Protect Gust*
`ACT_RAIN_SOON`	Rain chance within the next 3 hours reaches *Threshold Rain Soon Chance*
`ACT_FREEZE_TONIGHT`	The next 12 hours' low is at or below *Threshold Freeze Temp*, or an NWS freeze-related alert is active
`ACT_HIGH_UV`	The UV index now reaches *Threshold High UV*

ACT_HEAT	Feels-like now reaches *Threshold Heat Feels Like*, or an NWS heat alert is active
H3/H12/H24_RAIN_EXPECTED	Rain chance in that window reaches *Threshold Rain Expected Chance*
H3/H12/H24_FREEZE_EXPECTED	That window's low is at or below *Threshold Freeze Temp*

For different values on different triggers, compare the raw numbers instead, for example H3_GUST_MAX ≥ 30 or CUR_FEELS ≥ 95.

9.2 Ideas

Goal	Trigger on	Action
Protect awnings and exterior screens	ACT_WIND_PROTECT = 1	Raise them; block lowering until it clears
Release after wind	ACT_WIND_PROTECT = 0 for 30 min	Allow lowering again
Freeze protection	ACT_FREEZE_TONIGHT = 1	Pool freeze mode and heater, heat tape, notification "Freeze tonight: cover plants, drip faucets"
Rain on the way	ACT_RAIN_SOON = 1	Close pergola and skylights; notify
Skip irrigation	H24_RAIN_EXPECTED = 1	Disable the next watering
Heat	ACT_HEAT = 1	Lower west-facing shades, pre-cool, patio misters
UV	ACT_HIGH_UV = 1 and CUR_IS_DAY = 1	Lower solar shades in sun rooms
Comfortable evening	CUR_COMFORT = Pleasant and CUR_IS_DAY = 0	Outdoor lighting scene, patio fans
Dark afternoon	CUR_SKY = Overcast	Landscape lighting on early
Severe weather	ALERT_TORNADO, ALERT_TSTORM or ALERT_TROPICAL = 1	Raise all exterior shades, push notification with ALERT_HEADLINE
Bridge offline	SYS_ONLINE = 0	Notify the integrator

9.3 Good practice

- **Add the condition SYS_ONLINE = 1** to any trigger that moves equipment, so stale data never drives an action. SYS_ONLINE goes to 0 after three failed updates in a row.
- **Use the alert category flags** (ALERT_WIND, ALERT_FREEZE, ALERT_TORNADO…) for automations, not ALERT_ACTIVE, which also turns on for things like Air Quality Alerts.
- CUR_IS_DAY follows actual sunrise and sunset; SUN_DAWN / SUN_DUSK (civil twilight, about 25 minutes either side) suit lighting.


---

10. Data sources and licensing

10.1 Where the data comes from

Open-Meteo API Key setting	Forecast	Commercial use	Coverage
Blank (default)	National Weather Service	Allowed (US government open data)	US only
Your key	Open-Meteo commercial API	Allowed under your Open-Meteo subscription	Worldwide
private	Open-Meteo free API	**Not allowed**: personal use and testing only	Worldwide

Alerts always come from the National Weather Service. Every state has the same name and meaning whichever forecast source is used.

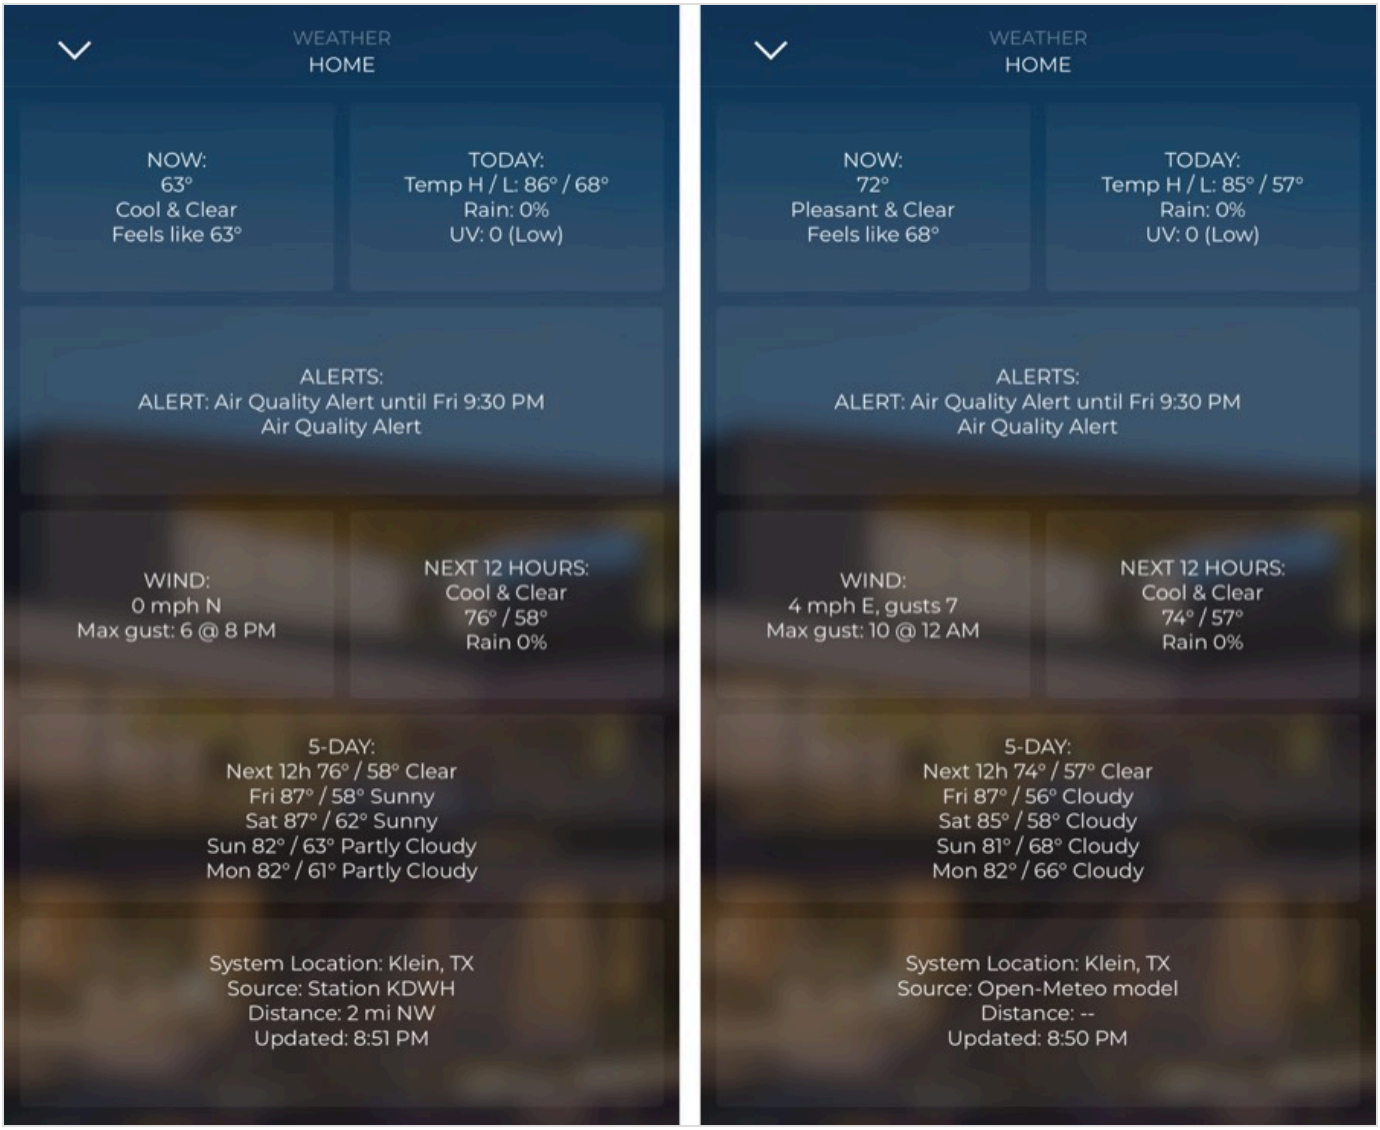

The same screen on the free NWS source (left, current conditions from station KDWH 2 mi away) and on Open-Meteo (right, model data, so no station distance)

With the free (NWS) source:

- **Current conditions** come from the nearest NWS weather station that has a report under 90 minutes old. The 3 nearest are tried, since stations sometimes stop reporting for hours. If the API leaves a value empty, it's read from the station's raw report (the same one weather.gov shows). If no station has a fresh report, the current forecast hour is used. `SYS_CURRENT_SOURCE`, `SYS_STATION_NAME`, `SYS_STATION_DISTANCE` and `SYS_STATION_OBS_TIME` show what's in use.
- **UV today** comes from the EPA's UV forecast, which is cloud-adjusted.
- **UV for later days** comes from MET Norway (the Norwegian Meteorological Institute). `SYS_UV_SOURCE` shows which source is in use.
- **Sunrise, sunset, dawn and dusk** come from the US Naval Observatory, with both forecast sources. If USNO can't be reached, the bridge calculates them itself (within about 2 minutes) and tries USNO again an hour later. `SYS_SUN_SOURCE` shows which.

About later-day UV (MET Norway). MET Norway provides *clear-sky* UV: the UV level if there were no clouds. On cloudy or rainy days the real UV will be lower, sometimes much lower, so `D1_UV_MAX`…`D4_UV_MAX` are a worst case.

That's fine for decisions like "lower the sun-room shades on high-UV days", but don't present them to clients as the expected UV. Beyond about 2½ days MET Norway gives one value every 6 hours, so a daily maximum can miss the midday peak slightly. `D0_UV_MAX` keeps today's highest value through the evening.

10.2 Using Open-Meteo

- **Commercial plans:** the free Open-Meteo API is for non-commercial use only. Installing OpenWx for a paying client with Open-Meteo requires a paid plan (open-meteo.com/en/pricing). Enter the key in *Open-Meteo API Key*.
- **Usage:** one site makes about 9,000 calls a month. Before using one subscription across many client sites, confirm with Open-Meteo that this is allowed.
- **`private`:** uses Open-Meteo's free tier, for comparing sources at your own home or office only. Don't leave it on a client system. `SYS_FORECAST_SOURCE` reads "Open-Meteo free (private, non-commercial use only)" while it's on.
- **Outages:** if Open-Meteo fails (bad key, outage), the bridge uses the NWS for that update and `SYS_FORECAST_SOURCE` says so.

10.3 Obligations

Source	Terms	What you need to do
National Weather Service	Open data, free for any purpose	Send contact info: set *Contact Email*
EPA UV forecast	US government data	—
US Naval Observatory	US government data	—
MET Norway	CC BY 4.0: commercial use allowed **with attribution**; identifying contact required	Where later-day UV is shown to a client, add a credit such as "UV forecast: MET Norway" (the dashboard does this automatically). Set *Contact Email*
Open-Meteo (with a key)	Your subscription; data CC BY 4.0	Credit "Open-Meteo" where the forecast is shown
Zippopotam.us (ZIP lookups)	No published terms	Only called when the location changes. On commercial jobs you may prefer `City, ST` or coordinates

This manual isn't legal advice; check each provider's current terms for your use.

---

11. Managing the bridge

11.1 The `openwx` command (macOS)

Command	Does
`openwx status`	Running/stopped, version, memory, uptime, ports, location, forecast source, last update, errors and alerts
`openwx logs`	Follow the log (Ctrl-C to quit). Log file: `~/OpenWx/logs/bridge.log`, rotated at 1 MB × 3
`openwx refresh`	Fetch weather now
`openwx probe <location> [nws|openmeteo]`	One-off test fetch that prints the main values without touching the running service
`sudo openwx stop`	Clean shutdown. Stays stopped until `start` or the next reboot
`sudo openwx start` / `restart`	Start, or clean stop + start
`sudo openwx disable` / `enable`	Stop and keep it off across reboots / turn it back on

`sudo openwx uninstall [--keep-config]`	Remove everything (section 11.3)

11.2 Built-in safety nets

- **Memory watchdog:** the bridge checks its own memory every minute (`SYS_MEMORY_MB`). Above `max_memory_mb` (150 MB; normal is about 25 MB) it shuts down cleanly and the service starts a fresh copy 30 seconds later.
- **Restarts:** a crash restarts automatically; a deliberate `stop` doesn't.
- **Bad input:** a bad location, key, or threshold value never stops updates (section 7).
- **Outages:** if USNO or MET Norway is unreachable, the bridge pauses requests to it for an hour instead of retrying every update.

11.3 Uninstalling

```
sudo openwx uninstall                 # asks to confirm
sudo openwx uninstall --keep-config   # first saves config + settings to ~/OpenWx-backup-<date>
sudo ~/OpenWx/uninstall.sh            # same, if the openwx command is missing
```

The uninstaller removes only what the installer recorded: the service, the `openwx` command, the install folder, and the firewall entry if the installer added it. Reinstalling after `--keep-config` restores the newest backup automatically. Remove the component from your Blueprint layout if you're not reinstalling.

---

12. Troubleshooting

Symptom	Likely cause	Fix
"Component not found" when dragging the profile into the layout	File renamed, or an older copy still in the library	Import `openwx_weatherbridge.xml` with that exact name; delete older OpenWx entries from the library first
Documentation tab greyed out, or the icon is a *?*	Profile imported without `openwx_weatherbridge.htm` and `.icns` beside it, or an older OpenWx entry still in the library	Delete every OpenWx entry from the library, quit and reopen Blueprint, and import from `profile/blueprint-import/`. A component added before the icon was in the library keeps the *?*: remove it and add it again
Labels show the state's name instead of a value	State name typed instead of dragged	Drag the state from the State browser → Component tab (section 8.1)
Labels show `--`	That state is empty, or the bridge is older than the profile	`openwx status` (versions match?); `openwx refresh`
No `savant connected` in the log	Wrong IP in Blueprint, Ethernet not connected, or firewall	Check the Device IP; `openwx status` shows port 2350 listening; allow Python in macOS Firewall settings
Dashboard works on the host but not from an iPad	macOS firewall	System Settings → Network → Firewall → Options → allow incoming connections for Python
Installer stops: port in use	Another program (or an old bridge) on 2350/8642	Stop it, or change `tcp_port`/`http_port` (the profile expects 2350)
`SYS_ERROR`: "override '…' not found"	Typo in the location	Fix *Location Override*; updates continue from the fallback meanwhile
`SYS_ERROR`: "free NWS forecast covers the US only"	Non-US location without a key	Enter an Open-Meteo API key

`SYS_CURRENT_SOURCE`: "Forecast hour (no recent report …)"	Nearby stations haven't reported recently	Normal for short periods; current values come from the forecast meanwhile
`SYS_UV_SOURCE` has no "EPA"	EPA doesn't know the city name	Use a ZIP code as *Location Override*
`SYS_CONTACT_SET = 0`	Contact email still the placeholder	Enter *Contact Email* in Blueprint
Emoji show as `,òÅÔ⌐è-` style garbage	Emoji can't pass through a profile	Use emoji only in a label's fixed text (section 8.4)
Alerts show for things like air quality	Expected: every NWS alert is passed through	Trigger on category flags, not `ALERT_ACTIVE`

When asking for help, include the output of `openwx status`, `openwx probe <your location>`, and the last 50 lines of `openwx logs`.

---

13. FAQ

Does it need an account or API key? No. In the US, everything works with free government data. A key is only needed outside the US or if you prefer Open-Meteo.

Can I use it on client jobs? Yes with the free sources, as long as you set your Contact Email and credit MET Norway where later-day UV is shown. With Open-Meteo you need a paid plan. See section 10.

Does it slow down the Savant host? No. The bridge uses about 25 MB of memory, runs at low priority, and makes a handful of small web requests every 5 minutes.

What if the internet goes down? States keep their last values. After three failed updates `SYS_ONLINE` goes to 0, and it recovers on its own when the connection returns.

Can I show weather icons? Not as images: the Savant app doesn't switch images by state. Use the text states, or emoji typed into a label's fixed text.

Why does "Next 3 hours" show a range that doesn't include the current temperature? Current conditions come from a real weather station; the next-hours ranges, daily highs and lows, and hourly strip (after "Now") come from the National Weather Service forecast. When the forecast runs a few degrees off from what the station measures, as often happens on clear, calm nights, the two can disagree. This is the forecast itself, not a bridge error, and it usually catches up when the NWS updates the forecast.

Is the forecast as good as the weather.gov page? It's the same National Weather Service forecast data, and current conditions come from the same stations.

Why "Weather Station Controller"? That's the Savant device class the profile uses, the same one as Savant's own weather station profiles.

---

14. Developer reference

14.1 Files

```
savant-openwx/
MANUAL.pdf / MANUAL.md     this manual
STATES.md                  every state (also Appendix A)
CHANGELOG.md, LICENSE
```

```
profile/
blueprint-import/        import from here; keep the three files together:
openwx_weatherbridge.xml   the Blueprint profile
openwx_weatherbridge.htm   this manual, for the Documentation tab
openwx_weatherbridge.icns  the component icon
generate_profile.py      builds the profile, the Documentation tab page and blueprint-import/
icon.svg, make_icon.sh   icon source, and the macOS script that builds the .icns from it
bridge/
openwx_bridge.py         the bridge (Python 3.6+, standard library only)
dashboard.html           web dashboard
config.json              defaults
macos/
install.sh, uninstall.sh, openwx
linux/
openwx-bridge.service    systemd unit
docs/images/               screenshots used in this manual
```

14.2 Protocol (TCP 2350)

Plain text, one message per line.

- **Bridge → Savant:** `KEY=value` + LF. A full dump on connect, then only changed values. Text is Mac Roman encoded.
- **Savant → bridge:** commands may end in CR, LF, CRLF, or nothing (a 300 ms pause ends a command).

Command	Effect
`PING`	Replies `PONG`
`REFRESH`	Fetch now
`DUMP`	Re-send every state
`SITE <lat>,<lon>`	Site coordinates (ignored if blank or 0,0)
`OVERRIDE <zip | lat,lon | City, ST>`	Location override; blank or `CLEAR` removes it
`CONTACT <email>`	Contact email for the data providers; blank = `config.json`
`APIKEY <key | private>`	Open-Meteo key; blank = free NWS source
`SET <threshold> <number>`	Threshold override; blank = `config.json` value

Settings received this way are saved in the install folder's `wx_state.json`.

You can test from Terminal: `printf 'OVERRIDE 77002\n' | nc 127.0.0.1 2350`.

14.3 Changing the profile

The profile is generated from the bridge's state list so the two never drift apart:

1. Add or change states in `STATE_DEFS` and fill them in `Bridge.compute()` / `add_display_text()` in `openwx_bridge.py`.
2. Bump `VERSION`.
3. Run `python3 profile/generate_profile.py`. It writes `blueprint-import/openwx_weatherbridge.xml` with `rpm_xml_version` equal to `VERSION`, and the Documentation tab page `blueprint-import/openwx_weatherbridge.htm` built from `MANUAL.md` and `STATES.md`. The profile is only written there, so it can't be imported without its documentation and icon. `python3 profile/generate_profile.py --test` also writes a 3-state profile for diagnosing import problems. After changing `icon.svg`, run `profile/make_icon.sh` (macOS); it writes `blueprint-import/openwx_weatherbridge.icns`.

Edit `MANUAL.md` and `STATES.md`, never the generated `.htm`. On macOS the generator also makes the smaller JPEG copies of the screenshots in `docs/images/web/` that the page embeds.

Profile notes learned the hard way:

- **File name:** must equal lowercase `manufacturer_model`, with every non-alphanumeric character turned into `_`.
- **Device class:** `Weather_controller` works; made-up device classes don't.
- **Network settings:** omit the `<ip protocol>` attribute (TCP is the default).
- **Incoming lines:** split with `receive_end_condition` 0A and read each value with `terminator_type="end_of_data"`.
- **Outgoing commands:** end with `send_postfix` 0A, and use `<parameter_list>` to append state variables.
- **Startup actions:** `execute_on_schedule period_ms="0"` runs an action when the host starts.
- **Re-importing:** bump `rpm_xml_version` (it follows `VERSION`) for every revision, so Blueprint picks up the new profile.

14.4 Command-line options

```
python3 openwx_bridge.py -c config.json [-l logfile] [-v]
python3 openwx_bridge.py -c config.json --probe 77002 [--source nws|openmeteo]
```

Appendix A — State reference

See `STATES.md` in the package for the complete table of all 248 states with types and descriptions. It's also reproduced on the following pages of the PDF and the Documentation tab.

All 248 states exist in the Blueprint profile under the same names, on the component's logical component **Weather**. Drag them from Blueprint's State browser (Component tab) into labels, triggers and workflows.

- `H3_` / `H12_` / `H24_` states are forecasts for the next 3/12/24 hours, starting at the current hour.
- Temperatures in °F and speeds in mph (or °C and km/h when the bridge's `units` is `metric`).
- An empty state shows as `--` in a Savant label.
- Integer states can be compared directly in triggers.

Display text (for labels)

State	Type	Meaning
`ALERTS_LIST`	string	Every active alert with its end time, most severe first, e.g. Wind Advisory until Fri 6:00 PM · Air Quality Alert until Fri 9:30 PM; or No active alerts
`CUR_TEMP_TEXT`	string	Now: temperature as text, e.g. 67°
`CUR_FEELS_TEXT`	string	Now: e.g. Feels like 70°
`CUR_WIND_TEXT`	string	Now: e.g. 12 mph SSE, gusts 19 (Calm when still)
`CUR_LINE`	string	Now: one line, e.g. 67° Pleasant & Partly Cloudy
`H3_HILO_TEXT`	string	H3: e.g. 84° / 68°
`H3_LINE`	string	Next 3h: one line matching D*_LINE, e.g. Next 3h 67° / 56° Clear
`H12_HILO_TEXT`	string	H12: e.g. 84° / 68°
`H12_LINE`	string	Next 12h: one line matching D*_LINE, e.g. Next 12h 67° / 56° Clear
`H24_HILO_TEXT`	string	H24: e.g. 84° / 68°
`H24_LINE`	string	Next 24h: one line matching D*_LINE, e.g. Next 24h 67° / 56° Clear

HR1_TEMP_TEXT	string	Hourly slot 1: e.g. 67°
HR2_TEMP_TEXT	string	Hourly slot 2: e.g. 67°
HR3_TEMP_TEXT	string	Hourly slot 3: e.g. 67°
HR4_TEMP_TEXT	string	Hourly slot 4: e.g. 67°
HR5_TEMP_TEXT	string	Hourly slot 5: e.g. 67°
HR6_TEMP_TEXT	string	Hourly slot 6: e.g. 67°
HR7_TEMP_TEXT	string	Hourly slot 7: e.g. 67°
HR8_TEMP_TEXT	string	Hourly slot 8: e.g. 67°
D0_HILO_TEXT	string	Day 0: e.g. 84° / 68°
D0_LINE	string	Day 0: one line, e.g. Thu 84° / 68° Stormy 70%
D1_HILO_TEXT	string	Day 1: e.g. 84° / 68°
D1_LINE	string	Day 1: one line, e.g. Thu 84° / 68° Stormy 70%
D2_HILO_TEXT	string	Day 2: e.g. 84° / 68°
D2_LINE	string	Day 2: one line, e.g. Thu 84° / 68° Stormy 70%
D3_HILO_TEXT	string	Day 3: e.g. 84° / 68°
D3_LINE	string	Day 3: one line, e.g. Thu 84° / 68° Stormy 70%
D4_HILO_TEXT	string	Day 4: e.g. 84° / 68°
D4_LINE	string	Day 4: one line, e.g. Thu 84° / 68° Stormy 70%
ALERT_TEXT	string	e.g. ALERT: Wind Advisory until Wed 9:00 PM, or No active alerts

System and data sources

State	Type	Meaning
SYS_ONLINE	integer	1 = bridge has fresh data, 0 = stale/failed
SYS_LAST_UPDATE	string	Time of last successful update (e.g. 10:35 PM)
SYS_LAST_UPDATE_EPOCH	integer	Unix time of last successful update
SYS_LOCATION_NAME	string	Resolved location name
SYS_LOCATION_SOURCE	string	override / site / default
SYS_LAT	string	Latitude in use
SYS_LON	string	Longitude in use
SYS_UNITS	string	imperial / metric
SYS_ERROR	string	Last error message, blank when healthy
SYS_CURRENT_SOURCE	string	Where current conditions came from: Station KDWH / Forecast hour (station report too old) / Open-Meteo model
SYS_STATION_ID	string	NWS observation station used for current conditions, e.g. KDWH
SYS_STATION_NAME	string	Station name, e.g. Houston, David Wayne Hooks Memorial Airport
SYS_STATION_DISTANCE	string	Distance and direction from the site to the station, e.g. 11 mi NW
SYS_STATION_OBS_TIME	string	Time of the station report in use, e.g. 6:15 PM
SYS_CONTACT_SET	integer	1 = a real contact email is set (Blueprint Contact Email or config.json); 0 = still a placeholder
SYS_FORECAST_SOURCE	string	Where the forecast came from: NWS (free) / Open-Meteo (API key) / Open-Meteo free (private...) / NWS (Open-Meteo unavailable)
SYS_MEMORY_MB	integer	Bridge process memory (MB); it restarts itself above max_memory_mb

SYS_SUN_SOURCE	string	Sunrise/sunset source: US Naval Observatory, or Calculated if USNO is unreachable
SYS_UV_SOURCE	string	UV source: EPA (today) + MET Norway clear-sky (later days) / Open-Meteo / blank if none

Current conditions

State	Type	Meaning
CUR_TEMP	integer	Now: Temperature
CUR_FEELS	integer	Now: Feels-like temperature
CUR_HUMIDITY	integer	Now: Relative humidity %
CUR_DEWPOINT	integer	Now: Dew point
CUR_WIND	integer	Now: Wind speed
CUR_GUST	integer	Now: Wind gust
CUR_WIND_DIR	string	Now: Wind direction (N, NE, ...)
CUR_WIND_DEG	integer	Now: Wind direction degrees
CUR_UV	integer	Now: UV index
CUR_UV_LEVEL	string	Now: Low / Moderate / High / Very High / Extreme
CUR_CLOUD	integer	Now: Cloud cover %
CUR_PRECIP	string	Now: Precipitation this hour
CUR_PRESSURE	integer	Now: Sea-level pressure (hPa)
CUR_IS_DAY	integer	Now: 1 = daytime
CUR_SKY	string	Now: Sunny / Clear / Mostly Sunny / Partly Cloudy / Mostly Cloudy / Overcast
CUR_WEATHER	string	Now: Sunny / Clear / Partly Cloudy / Cloudy / Rainy / Stormy / Snowy / Icy / Foggy
CUR_COMFORT	string	Now: Hot / Warm / Pleasant / Cool / Cold / Freezing
CUR_SUMMARY	string	Now: e.g. Warm & Sunny
CUR_ICON	string	Now: Icon key: clear-day, clear-night, partly-day, partly-night, cloudy, fog, drizzle, rain, thunder, snow, sleet, wind

Next 3 hours

State	Type	Meaning
H3_TEMP_HIGH	integer	Next 3h: High temperature
H3_TEMP_LOW	integer	Next 3h: Low temperature
H3_FEELS_HIGH	integer	Next 3h: Highest feels-like
H3_FEELS_LOW	integer	Next 3h: Lowest feels-like
H3_RAIN_CHANCE	integer	Next 3h: Max precipitation chance %
H3_RAIN_TOTAL	string	Next 3h: Total expected precipitation
H3_WIND_MAX	integer	Next 3h: Max sustained wind
H3_GUST_MAX	integer	Next 3h: Max wind gust
H3_GUST_MAX_TIME	string	Next 3h: Hour of max gust
H3_UV_MAX	integer	Next 3h: Max UV index
H3_SKY	string	Next 3h: Most common sky condition
H3_WEATHER	string	Next 3h: Most significant weather

H3_COMFORT	string	Next 3h: Comfort
H3_SUMMARY	string	Next 3h: Plain-language summary
H3_ICON	string	Next 3h: Icon key
H3_RAIN_EXPECTED	integer	Next 3h: 1 = rain chance at/above threshold
H3_FREEZE_EXPECTED	integer	Next 3h: 1 = temp at/below freezing

Next 12 hours

State	Type	Meaning
H12_TEMP_HIGH	integer	Next 12h: High temperature
H12_TEMP_LOW	integer	Next 12h: Low temperature
H12_FEELS_HIGH	integer	Next 12h: Highest feels-like
H12_FEELS_LOW	integer	Next 12h: Lowest feels-like
H12_RAIN_CHANCE	integer	Next 12h: Max precipitation chance %
H12_RAIN_TOTAL	string	Next 12h: Total expected precipitation
H12_WIND_MAX	integer	Next 12h: Max sustained wind
H12_GUST_MAX	integer	Next 12h: Max wind gust
H12_GUST_MAX_TIME	string	Next 12h: Hour of max gust
H12_UV_MAX	integer	Next 12h: Max UV index
H12_SKY	string	Next 12h: Most common sky condition
H12_WEATHER	string	Next 12h: Most significant weather
H12_COMFORT	string	Next 12h: Comfort
H12_SUMMARY	string	Next 12h: Plain-language summary
H12_ICON	string	Next 12h: Icon key
H12_RAIN_EXPECTED	integer	Next 12h: 1 = rain chance at/above threshold
H12_FREEZE_EXPECTED	integer	Next 12h: 1 = temp at/below freezing

Next 24 hours

State	Type	Meaning
H24_TEMP_HIGH	integer	Next 24h: High temperature
H24_TEMP_LOW	integer	Next 24h: Low temperature
H24_FEELS_HIGH	integer	Next 24h: Highest feels-like
H24_FEELS_LOW	integer	Next 24h: Lowest feels-like
H24_RAIN_CHANCE	integer	Next 24h: Max precipitation chance %
H24_RAIN_TOTAL	string	Next 24h: Total expected precipitation
H24_WIND_MAX	integer	Next 24h: Max sustained wind
H24_GUST_MAX	integer	Next 24h: Max wind gust
H24_GUST_MAX_TIME	string	Next 24h: Hour of max gust
H24_UV_MAX	integer	Next 24h: Max UV index
H24_SKY	string	Next 24h: Most common sky condition
H24_WEATHER	string	Next 24h: Most significant weather
H24_COMFORT	string	Next 24h: Comfort

H24_SUMMARY	string	Next 24h: Plain-language summary
H24_ICON	string	Next 24h: Icon key
H24_RAIN_EXPECTED	integer	Next 24h: 1 = rain chance at/above threshold
H24_FREEZE_EXPECTED	integer	Next 24h: 1 = temp at/below freezing

Hourly strip (every 3 hours)

State	Type	Meaning
HR1_TIME	string	Hourly slot 1 (+0h): Hour label
HR1_TEMP	integer	Hourly slot 1 (Now): current temperature
HR1_RAIN	integer	Hourly slot 1 (+0h): Rain chance %
HR1_GUST	integer	Hourly slot 1 (+0h): Gust
HR1_ICON	string	Hourly slot 1 (+0h): Icon key
HR2_TIME	string	Hourly slot 2 (+3h): Hour label
HR2_TEMP	integer	Hourly slot 2 (+3h): Temperature
HR2_RAIN	integer	Hourly slot 2 (+3h): Rain chance %
HR2_GUST	integer	Hourly slot 2 (+3h): Gust
HR2_ICON	string	Hourly slot 2 (+3h): Icon key
HR3_TIME	string	Hourly slot 3 (+6h): Hour label
HR3_TEMP	integer	Hourly slot 3 (+6h): Temperature
HR3_RAIN	integer	Hourly slot 3 (+6h): Rain chance %
HR3_GUST	integer	Hourly slot 3 (+6h): Gust
HR3_ICON	string	Hourly slot 3 (+6h): Icon key
HR4_TIME	string	Hourly slot 4 (+9h): Hour label
HR4_TEMP	integer	Hourly slot 4 (+9h): Temperature
HR4_RAIN	integer	Hourly slot 4 (+9h): Rain chance %
HR4_GUST	integer	Hourly slot 4 (+9h): Gust
HR4_ICON	string	Hourly slot 4 (+9h): Icon key
HR5_TIME	string	Hourly slot 5 (+12h): Hour label
HR5_TEMP	integer	Hourly slot 5 (+12h): Temperature
HR5_RAIN	integer	Hourly slot 5 (+12h): Rain chance %
HR5_GUST	integer	Hourly slot 5 (+12h): Gust
HR5_ICON	string	Hourly slot 5 (+12h): Icon key
HR6_TIME	string	Hourly slot 6 (+15h): Hour label
HR6_TEMP	integer	Hourly slot 6 (+15h): Temperature
HR6_RAIN	integer	Hourly slot 6 (+15h): Rain chance %
HR6_GUST	integer	Hourly slot 6 (+15h): Gust
HR6_ICON	string	Hourly slot 6 (+15h): Icon key
HR7_TIME	string	Hourly slot 7 (+18h): Hour label
HR7_TEMP	integer	Hourly slot 7 (+18h): Temperature
HR7_RAIN	integer	Hourly slot 7 (+18h): Rain chance %
HR7_GUST	integer	Hourly slot 7 (+18h): Gust

HR7_ICON	string	Hourly slot 7 (+18h): Icon key
HR8_TIME	string	Hourly slot 8 (+21h): Hour label
HR8_TEMP	integer	Hourly slot 8 (+21h): Temperature
HR8_RAIN	integer	Hourly slot 8 (+21h): Rain chance %
HR8_GUST	integer	Hourly slot 8 (+21h): Gust
HR8_ICON	string	Hourly slot 8 (+21h): Icon key

Daily forecast (D0 = today … D4)

State	Type	Meaning
D0_NAME	string	Day 0: Day name (Today, Thu, ...)
D0_HIGH	integer	Day 0: High
D0_LOW	integer	Day 0: Low
D0_RAIN_CHANCE	integer	Day 0: Rain chance %
D0_GUST_MAX	integer	Day 0: Max gust
D0_UV_MAX	integer	Day 0: Max UV
D0_WEATHER	string	Day 0: Weather
D0_SUMMARY	string	Day 0: Summary
D0_ICON	string	Day 0: Icon key
D1_NAME	string	Day 1: Day name (Today, Thu, ...)
D1_HIGH	integer	Day 1: High
D1_LOW	integer	Day 1: Low
D1_RAIN_CHANCE	integer	Day 1: Rain chance %
D1_GUST_MAX	integer	Day 1: Max gust
D1_UV_MAX	integer	Day 1: Max UV
D1_WEATHER	string	Day 1: Weather
D1_SUMMARY	string	Day 1: Summary
D1_ICON	string	Day 1: Icon key
D2_NAME	string	Day 2: Day name (Today, Thu, ...)
D2_HIGH	integer	Day 2: High
D2_LOW	integer	Day 2: Low
D2_RAIN_CHANCE	integer	Day 2: Rain chance %
D2_GUST_MAX	integer	Day 2: Max gust
D2_UV_MAX	integer	Day 2: Max UV
D2_WEATHER	string	Day 2: Weather
D2_SUMMARY	string	Day 2: Summary
D2_ICON	string	Day 2: Icon key
D3_NAME	string	Day 3: Day name (Today, Thu, ...)
D3_HIGH	integer	Day 3: High
D3_LOW	integer	Day 3: Low
D3_RAIN_CHANCE	integer	Day 3: Rain chance %
D3_GUST_MAX	integer	Day 3: Max gust

D3_UV_MAX	integer	Day 3: Max UV
D3_WEATHER	string	Day 3: Weather
D3_SUMMARY	string	Day 3: Summary
D3_ICON	string	Day 3: Icon key
D4_NAME	string	Day 4: Day name (Today, Thu, ...)
D4_HIGH	integer	Day 4: High
D4_LOW	integer	Day 4: Low
D4_RAIN_CHANCE	integer	Day 4: Rain chance %
D4_GUST_MAX	integer	Day 4: Max gust
D4_UV_MAX	integer	Day 4: Max UV
D4_WEATHER	string	Day 4: Weather
D4_SUMMARY	string	Day 4: Summary
D4_ICON	string	Day 4: Icon key

Sun

State	Type	Meaning
SUN_RISE	string	Sunrise today
SUN_SET	string	Sunset today
SUN_DAWN	string	Civil dawn today (sky getting light, about 25 min before sunrise)
SUN_DUSK	string	Civil dusk today (sky dark, about 25 min after sunset)

NWS alerts

State	Type	Meaning
ALERT_ACTIVE	integer	1 = any NWS watch/warning/advisory active
ALERT_COUNT	integer	Number of different active alerts (duplicates of the same alert counted once)
ALERT_HIGHEST_SEVERITY	string	Extreme / Severe / Moderate / Minor / None
ALERT_HEADLINE	string	Headline of most severe alert
ALERT_EVENTS	string	Comma-separated active event names
ALERT_FREEZE	integer	1 = active freeze-related alert
ALERT_WIND	integer	1 = active wind-related alert
ALERT_TORNADO	integer	1 = active tornado-related alert
ALERT_TSTORM	integer	1 = active tstorm-related alert
ALERT_FLOOD	integer	1 = active flood-related alert
ALERT_HEAT	integer	1 = active heat-related alert
ALERT_WINTER	integer	1 = active winter-related alert
ALERT_TROPICAL	integer	1 = active tropical-related alert
ALERT_FIRE	integer	1 = active fire-related alert
ALERT_FOG	integer	1 = active fog-related alert
ALERT1_EVENT	string	Alert 1: Event name
ALERT1_SEVERITY	string	Alert 1: Severity
ALERT1_EXPIRES	string	Alert 1: Ends/expires

ALERT1_HEADLINE	string	Alert 1: Headline
ALERT2_EVENT	string	Alert 2: Event name
ALERT2_SEVERITY	string	Alert 2: Severity
ALERT2_EXPIRES	string	Alert 2: Ends/expires
ALERT2_HEADLINE	string	Alert 2: Headline
ALERT3_EVENT	string	Alert 3: Event name
ALERT3_SEVERITY	string	Alert 3: Severity
ALERT3_EXPIRES	string	Alert 3: Ends/expires
ALERT3_HEADLINE	string	Alert 3: Headline

Automation flags

State	Type	Meaning
ACT_WIND_PROTECT	integer	1 = gust now or within next 3h >= wind_protect_gust
ACT_RAIN_SOON	integer	1 = rain chance within next 3h >= rain_soon_chance
ACT_FREEZE_TONIGHT	integer	1 = next 12h low <= freeze_temp or freeze alert active
ACT_HIGH_UV	integer	1 = UV now >= high_uv
ACT_HEAT	integer	1 = feels-like now >= heat_feels or heat alert active

Thresholds in use

State	Type	Meaning
TH_WIND_PROTECT_GUST	integer	Threshold in use: wind_protect_gust
TH_RAIN_SOON_CHANCE	integer	Threshold in use: rain_soon_chance
TH_RAIN_EXPECTED_CHANCE	integer	Threshold in use: rain_expected_chance
TH_FREEZE_TEMP	integer	Threshold in use: freeze_temp
TH_HIGH_UV	integer	Threshold in use: high_uv
TH_HEAT_FEELS	integer	Threshold in use: heat_feels
TH_WIND_ICON_GUST	integer	Threshold in use: wind_icon_gust
TH_SOURCE	string	Which thresholds were set from Savant (blank = all from config.json)