3.2 App Control

Please install app according to “3.1 App Installation and Connection” before reading.

The app has a slider control function and live camera feed function. You can control rotation angle of each servo of the robotic arm by sliding the slider. The live camera feed function of the MiniArm requires the firmware to be burned into the ESP32-CAM according to the “1. Tutorials/ 6. AI Vision Application Course/6.3 Live Camera Feed”.

1. Slider Control

The app interface is divided into two parts as pictured:

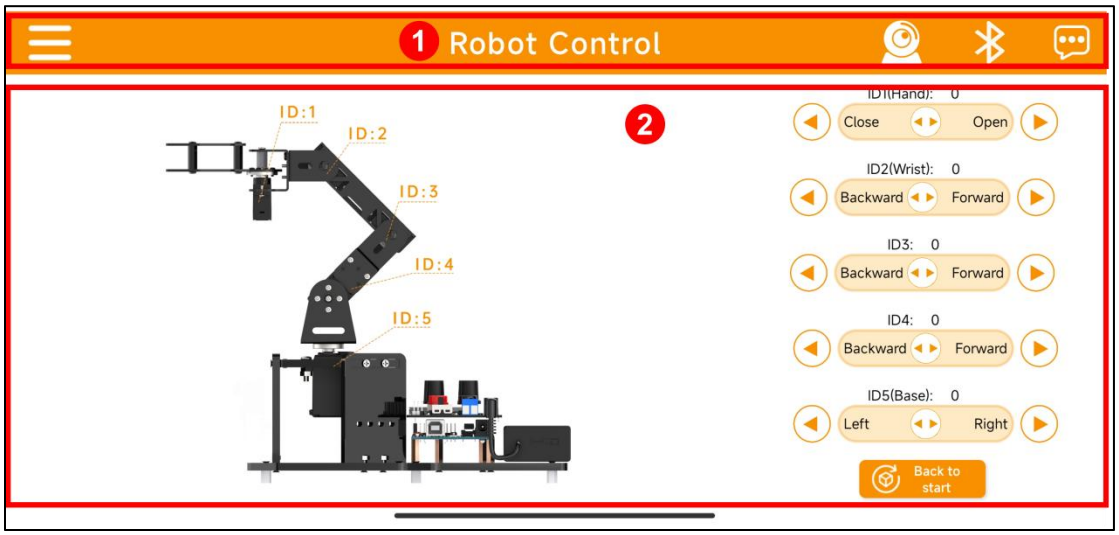

① ： Menu

	Return to the main interface to select robot type
	Open the live camera feed function

	Bluetooth connection
	More information

② ： Control Area

	Servo No.1 controls the robotic claw to open and close, with the angle range of 0 to 180 degrees
	Servo No.2~5 control the rotation of robotic arm, with the angle range of 0 to 180 degrees
	Control all the servos to return to the initial position

2. Live Camera Feed Function

1.Click icon on the menu to open live camera feed mode. The interface of this mode is as pictured:

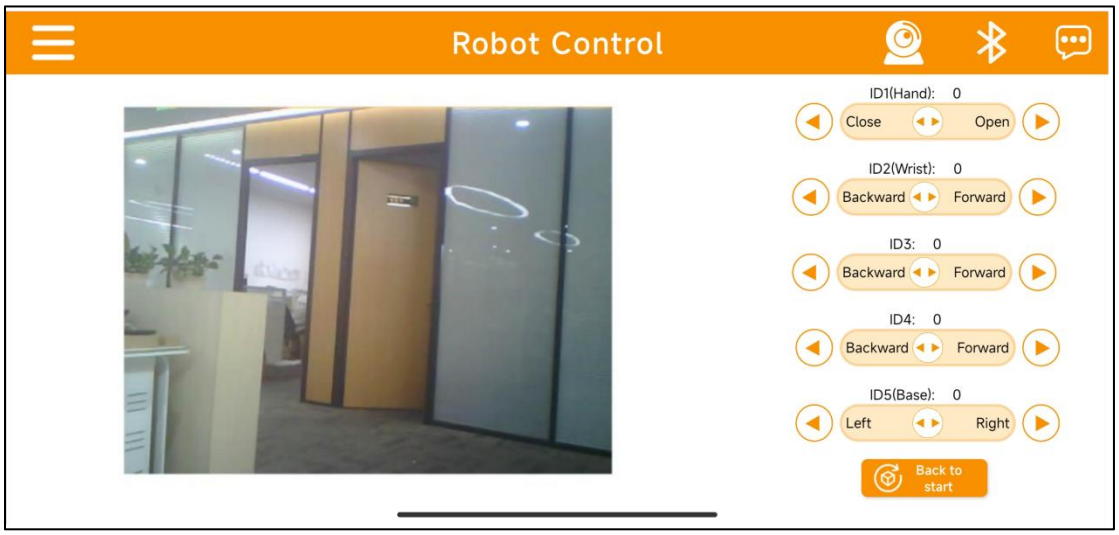

Now you can see the real-time image transmitted by ESP32-CAM on the phone.