

Branch-Line Coupler

A branch line coupler, also known as a quadrature (90°) hybrid, is a four-port network device with one input port, two output ports, with a 90° phase difference between them, and one isolated port. Due to its symmetry, any port can be used as the input port.

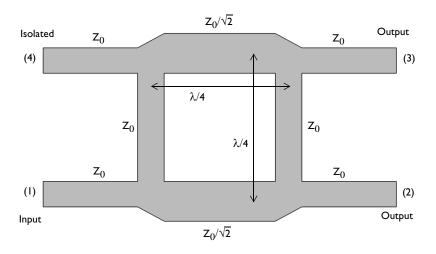


Figure 1: The geometry of a branch line coupler is symmetric.

Model Definition

The form of the branch line coupler is shown schematically in Figure 1. The layout design is based upon Ref. 1, and is tuned to operate at 3 GHz. The design is realized as microstrip lines patterned onto a 0.060 inch dielectric substrate. The microstrip lines are modeled as perfect electric conductor (PEC) surfaces, and another PEC surface on the bottom of the dielectric substrate acts as a ground plane. The entire modeling domain is bounded by PEC boundaries that represent the device packaging. The four ports are modeled as small

rectangular faces that bridge the gap between the PEC face that represents the ground plane, and the PEC faces that represent the microstrip line at each port.

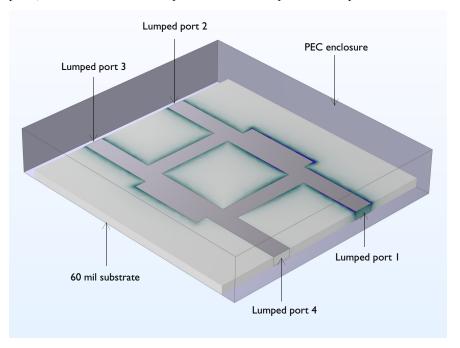


Figure 2: The model of the branch line coupler. Some exterior faces are removed for visualization.

The model is shown in Figure 2. A small air domain bounded by a PEC surface around the device is also modeled. The model is meshed using a tetrahedral mesh. A good rule of thumb is to use approximately five elements per wavelength in each material. The physics-controlled mesh is used to generate the mesh automatically.

After the first study, the model is modified to utilized the SMA connector in the part library. The SMA connector with two holes at the flange is added at each end of the microstrip line and the type of lumped port is changed from uniform to coaxial.

Results and Discussion

The computed S-parameters are plotted in Figure 3. At a frequency of 3 GHz, the signal is evenly split between the two output ports with a very small amount of losses. The input signal is barely coupled to the isolation port where S_{41} is less than -30 dB at 3 GHz. The evaluated phase shift between the two output ports is 89.9° .

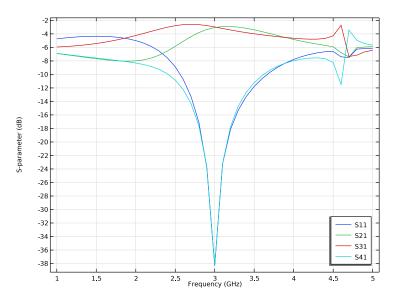


Figure 3: The frequency response of the branch line coupler shows good input matching (S_{11}) and isolation (S_{41}) around 3 GHz. The coupled signal at the two output ports $(S_{21}$ and $S_{31})$ is about -3 dB at 3 GHz.

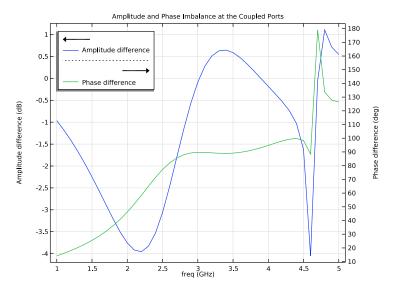


Figure 4: The amplitude and phase imbalance on the two output ports. The phase difference at 3 GHz is approximately 90 degrees.

Because the metallic housing works as a rectangular cavity, there is a resonance observed around 4.6 GHz. The resonant frequency of an air-filled hollow rectangular cavity is

$$f_{nml} = \frac{c}{2\pi \sqrt{\varepsilon_{\rm p} \mu_{\rm w}}} \sqrt{\left(\frac{m\pi}{a}\right)^2 + \left(\frac{n\pi}{b}\right)^2 + \left(\frac{l\pi}{d}\right)^2}$$

where a and b are the dimensions of the sidewall of the cavity and d is the length of the cavity. The dominant resonant frequency at TE_{101} mode is close to 5 GHz. Because the cavity is partially filled by the dielectric substrate, the resonance is expected lower than the that of the air-filled cavity. This resonance can easily be removed by adding a metallic post in the middle of the cavity connecting the bottom ground plane to the top ceiling if necessary.

The results after adding the SMA connectors are similar to those without the connectors and they are presented in the step by step instructions.

Reference

1. D.M. Pozar, Microwave Engineering, John Wiley & Sons, 1998.

Application Library path: RF_Module/Couplers_and_Power_Dividers/branch line coupler

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click 1 3D.
- 2 In the Select Physics tree, select Radio Frequency>Electromagnetic Waves, Frequency Domain (emw).
- 3 Click Add.
- 4 Click Study.
- 5 In the Select Study tree, select General Studies>Frequency Domain.

6 Click **Done**.

STUDY I

Step 1: Frequency Domain

Define the study frequency ahead of performing any frequency-dependent operation such as building mesh. The physics-controlled mesh uses the highest frequency value in the specified range.

- I In the Model Builder window, under Study I click Step I: Frequency Domain.
- 2 In the Settings window for Frequency Domain, locate the Study Settings section.
- 3 In the Frequencies text field, type range(1[GHz], 100[MHz], 5[GHz]).

GLOBAL DEFINITIONS

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- **3** In the table, enter the following settings:

Name	Expression	Value	Description
thickness	60[mil]	0.001524 m	Substrate thickness
1_s	40 [mm]	0.04 m	Length, substrate
w_line2	5[mm]	0.005 m	Width, line 2
l_line2	13[mm]	0.013 m	Length, line 2
l_line1	(l_s-l_line2)/2	0.0135 m	Length, line 1
w_line1	3.2[mm]	0.0032 m	Width, line 1
w_line3	3[mm]	0.003 m	Width, line 3
1_line3	13.6[mm]	0.0136 m	Length, line 3

Here, mil refers to the unit milliinch.

GEOMETRY I

- I In the Model Builder window, under Component I (compl) click Geometry I.
- 2 In the Settings window for Geometry, locate the Units section.
- 3 From the Length unit list, choose mm.

Work Plane I (wpl)

- I In the **Geometry** toolbar, click Work Plane, to add an *xy*-plane for the coupler layout'.
- 2 In the Settings window for Work Plane, click A Go to Plane Geometry.

Work Plane I (wp I)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane I (wp I)>Rectangle I (r I)

- I In the Work Plane toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type 2*w line1+l line3.
- 4 In the Height text field, type 1_s.
- 5 Locate the Position section. From the Base list, choose Center.
- 6 Click Pauld Selected.

Work Plane I (wp I)>Rectangle 2 (r2)

- I In the Work Plane toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type w_line2*2+1_line3.
- 4 In the Height text field, type 1_line2.
- 5 Locate the Position section. From the Base list, choose Center.
- 6 In the Work Plane toolbar, click | Build All.

Work Plane I (wb I)>Rectangle 3 (r3)

- I In the Work Plane toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type 1 line3.
- 4 In the **Height** text field, type 1_line2.
- 5 Locate the Position section. In the xw text field, type -1 line3/2.
- 6 In the yw text field, type 1 line2/2+w line3.
- 7 Click | Build Selected.
- 8 Click the **Zoom Extents** button in the **Graphics** toolbar.


Work Plane I (wpl)>Array I (arrl)

I In the Work Plane toolbar, click Transforms and choose Array.

- 2 Select the object r3 only.
- 3 In the Settings window for Array, locate the Size section.
- 4 From the Array type list, choose Linear.
- 5 In the Size text field, type 3.
- 6 Locate the **Displacement** section. In the yw text field, type -1_line2-w_line3.
- 7 In the Work Plane toolbar, click **Build All**.

Work Plane I (wbl)>Difference I (difl)

- I In the Work Plane toolbar, click | Booleans and Partitions and choose Difference.
- 2 Select the objects r1 and r2 only.
- 3 In the Settings window for Difference, locate the Difference section.
- 4 Click to select the **Activate Selection** toggle button for **Objects to subtract**.
- 5 Select the objects arr1(1), arr1(2), and arr1(3) only, the three rectangles belonging to the array object (arr1).
- 6 Clear the Keep interior boundaries check box.
- 7 In the Work Plane toolbar, click

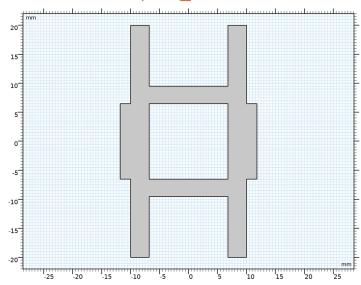

Work Plane I (wbl)

Extrude the xy-plane with the thickness of the substrate. Additional rectangular boundaries at each end of the feed lines are created by this extrusion, too. Use these boundaries to assign lumped ports later.

Extrude I (extI)

- I In the Model Builder window, under Component I (compl)>Geometry I right-click Work Plane I (wpl) and choose Extrude.
- 2 In the Settings window for Extrude, locate the Distances section.
- **3** In the table, enter the following settings:

Distances (mm) thickness

- 4 Click **Build All Objects**.
- 5 Click the **Zoom Extents** button in the **Graphics** toolbar. Choose wireframe rendering to get a better view of the interior parts.
- 6 Click the Wireframe Rendering button in the Graphics toolbar.

Create a block for the substrate.

Block I (blk I)

- I In the Geometry toolbar, click **Block**.
- 2 In the Settings window for Block, locate the Size and Shape section.
- 3 In the Width text field, type 1 s.
- 4 In the **Depth** text field, type 1 s.
- 5 In the **Height** text field, type thickness.
- 6 Locate the Position section. From the Base list, choose Center.
- 7 In the z text field, type thickness/2.
- 8 Click Build All Objects.

Substrate


- I In the Geometry toolbar, click Booleans and Partitions and choose Union.
- 2 In the Settings window for Union, type Substrate in the Label text field.
- **3** Locate the **Union** section. Clear the **Keep interior boundaries** check box.
- 4 Click in the **Graphics** window and then press Ctrl+A to select both objects.
- 5 Locate the Selections of Resulting Entities section. Select the Resulting objects selection check box.
- 6 Click Build All Objects.

Package

I In the Geometry toolbar, click **Block**.

- 2 In the Settings window for Block, type Package in the Label text field.
- 3 Locate the Size and Shape section. In the Width text field, type 1_s.
- 4 In the **Depth** text field, type 1 s+1 s/8.
- 5 In the Height text field, type thickness*5.
- **6** Locate the **Position** section. From the **Base** list, choose **Center**.
- 7 In the z text field, type thickness*5/2.
- 8 Click **Build All Objects**.

The completed geometry describes the microstrip line device on a substrate enclosed by a metal housing.

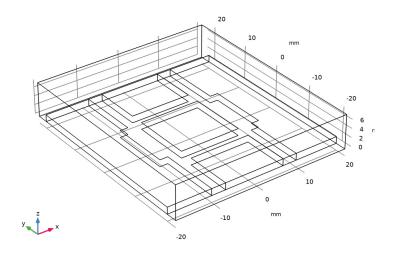

DEFINITIONS

Hide three boundaries to get a better view of the interior parts when reviewing the mesh.

Hide for Physics 1

- I In the Model Builder window, expand the Component I (compl)>Definitions node.
- 2 Right-click View I and choose Hide for Physics.
- 3 In the Settings window for Hide for Physics, locate the Geometric Entity Selection section.
- 4 From the Geometric entity level list, choose Boundary.

5 Select Boundaries 1, 2, and 4 only.

It might be easier to select the boundaries by using the **Selection List** window. To open this window, in the **Home** toolbar click **Windows** and choose **Selection List**. (If you are running the cross-platform desktop, you find **Windows** in the main menu.)

ELECTROMAGNETIC WAVES, FREQUENCY DOMAIN (EMW)


Now set up the physics. The default boundary condition is perfect electric conductor, which is applied to all exterior boundaries. Apply this condition also to the interior boundaries of the microstrip lines.

Perfect Electric Conductor 2

- I In the Model Builder window, under Component I (compl) right-click

 Electromagnetic Waves, Frequency Domain (emw) and choose the boundary condition


 Perfect Electric Conductor.
- 2 Select Boundary 13 only.

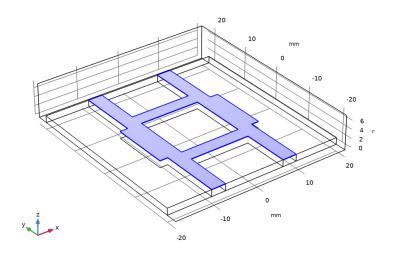

Lumped Port I

I In the Physics toolbar, click **Boundaries** and choose **Lumped Port**.

2 Select Boundary 24 only.

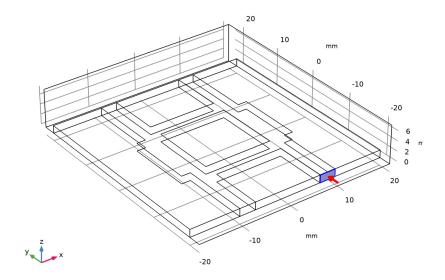

For the first port, wave excitation is **on** by default.

Lumped Port 2

- I In the Physics toolbar, click 🕞 Boundaries and choose Lumped Port.
- 2 Select Boundary 25 only.

Lumped Port 3

- I In the Physics toolbar, click **Boundaries** and choose **Lumped Port**.
- 2 Select Boundary 15 only.

Lumped Port 4

- I In the Physics toolbar, click **Boundaries** and choose **Lumped Port**.
- 2 Select Boundary 14 only.

Lumped ports are assigned at each end of the microstrip lines. Wave excitation is on only at the first port.

MATERIALS

Assign material properties to the model. First, apply air to all domains.

ADD MATERIAL

- I In the Home toolbar, click **Add Material** to open the Add Material window.
- 2 Go to the Add Material window.
- 3 In the tree, select Built-in>Air.
- 4 Click Add to Component in the window toolbar.
- 5 In the Home toolbar, click **Add Material** to close the Add Material window.

MATERIALS

Create a dielectric material of er = 3.38 overriding air in the substrate.


Substrate

- I In the Model Builder window, under Component I (compl) right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, type Substrate in the Label text field.
- 3 Locate the Geometric Entity Selection section. From the Selection list, choose Substrate.
- 4 Locate the Material Contents section. In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Relative permittivity	epsilonr_iso; epsilonrii = epsilonr_iso, epsilonrij = 0	3.38	I	Basic
Relative permeability	mur_iso; murii = mur_iso, murij = 0	1	I	Basic
Electrical conductivity	sigma_iso; sigmaii = sigma_iso, sigmaij = 0	0	S/m	Basic

MESH I

I In the Model Builder window, under Component I (compl) right-click Mesh I and choose **Build All.**

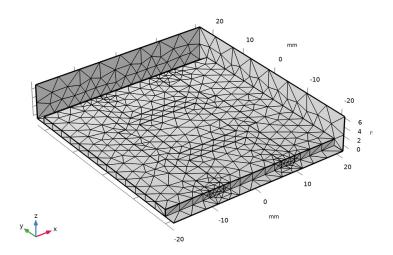

Three exterior boundaries are hidden in this view.

STUDY I

In the **Home** toolbar, click **Compute**.

RESULTS

Electric Field (emw)


Begin the results analysis and visualization by modifying the first default plot to show the E-field norm in the middle of the substrate at 3 GHz.

- I In the Settings window for 3D Plot Group, locate the Data section.
- 2 From the Parameter value (freq (GHz)) list, choose 3.

Multislice

- I In the Model Builder window, expand the Electric Field (emw) node, then click Multislice.
- 2 In the Settings window for Multislice, locate the Multiplane Data section.
- 3 Find the X-planes subsection. In the Planes text field, type 0.
- 4 Find the Y-planes subsection. In the Planes text field, type 0.
- 5 Find the **Z-planes** subsection. From the **Entry method** list, choose **Coordinates**.

- 6 In the Coordinates text field, type thickness.
- 7 Click to expand the Range section. Select the Manual color range check box.
- 8 In the Maximum text field, type 1000.
- 9 In the Electric Field (emw) toolbar, click **Plot**.

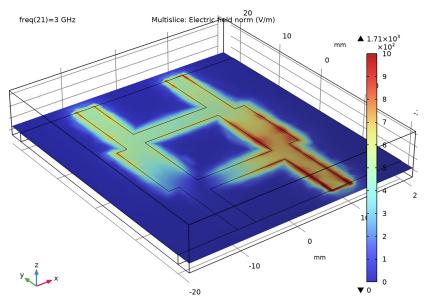


The input power is evenly split between the two output ports.

S-parameter (emw)

- I In the Model Builder window, under Results click S-parameter (emw).
- 2 In the Settings window for ID Plot Group, click to expand the Title section.
- 3 Locate the Legend section. From the Position list, choose Lower right. Compare the resulting plot with that shown in Figure 3.

Smith Plot (emw)

In the Model Builder window, click Smith Plot (emw).

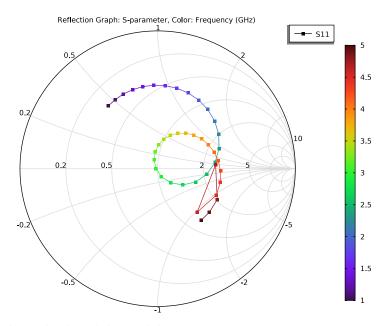

Plot the amplitude and phase imbalance on two output ports (Figure 4).

Imbalance

- I In the Home toolbar, click Add Plot Group and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Imbalance in the Label text field.
- 3 Locate the Title section. From the Title type list, choose Manual.
- 4 In the Title text area, type Amplitude and Phase Imbalance at the Coupled Ports.
- 5 Locate the Legend section. From the Position list, choose Upper left.

Global I

- I Right-click Imbalance and choose Global.
- 2 In the Settings window for Global, locate the y-Axis Data section.
- **3** In the table, enter the following settings:

Expression	Unit	Description
emw.S21dB-emw.S31dB	dB	Amplitude difference

Global 2

- I In the Model Builder window, right-click Imbalance and choose Global.
- 2 In the Settings window for Global, locate the y-Axis Data section.
- **3** In the table, enter the following settings:

Expression	Unit	Description
<pre>if(arg(emw.S21)-arg(emw.S31)<0, arg(emw.S21)-arg(emw.S31)+360[deg], arg(emw.S21)-arg(emw.S31))</pre>	deg	Phase difference

The unit is degree.

Imbalance

- I In the Model Builder window, click Imbalance.
- 2 In the Settings window for ID Plot Group, locate the Plot Settings section.
- 3 Select the **Two y-axes** check box.
- 4 In the table, select the Plot on secondary y-axis check box for Global 2.
- 5 In the Imbalance toolbar, click Plot.

The phase difference between two output ports is approximately 90 degrees at 3 GHz.

Evaluate the phase difference between two output ports at 3 GHz.

Global Evaluation 1

- I In the Results toolbar, click (8.5) Global Evaluation.
- 2 In the Settings window for Global Evaluation, locate the Data section.
- 3 From the Parameter selection (freq) list, choose From list.
- 4 In the Parameter values (freq (GHz)) list, select 3.
- **5** Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
arg(emw.S21)-arg(emw.S31)	0	

6 Click **= Evaluate**.

When the designed circuit is measured with a network analyzer, the circuit is connected to cables through connectors. Those connectors are not part of the network analyzer calibration process, and they may change the frequency response due to an additional reactive loading. By adding connectors, the simulation becomes closer to the real world

device. The RF part library helps to quickly add SMA connectors to the coupler without handling multiple geometry operations.

GLOBAL DEFINITIONS

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- **3** In the table, enter the following settings:

Name	Expression	Value	Description
w_line2	5.2[mm]	0.0052 m	Width, line 2

GEOMETRY I

Package (blk2)

- I In the Model Builder window, under Component I (compl)>Geometry I click Package (blk2).
- 2 In the Settings window for Block, locate the Position section.
- 3 In the z text field, type thickness+0.635.
- 4 Locate the Size and Shape section. In the Depth text field, type 1 s.
- 5 In the Height text field, type 20.
- 6 Click **Pauld Selected**.

PART LIBRARIES

- I In the Home toolbar, click Windows and choose Part Libraries.
- 2 In the Model Builder window, click Geometry 1.
- 3 In the Part Libraries window, select RF Module>Connectors>connector_sma_flange2 in the tree.
- 4 Click Add to Geometry.

GEOMETRY I

SMA Connector, Flange with Two Holes I (pil)

- I In the Model Builder window, under Component I (compl)>Geometry I click SMA Connector, Flange with Two Holes I (pil).
- 2 In the Settings window for Part Instance, locate the Input Parameters section.

3 In the table, enter the following settings:

Name	Expression	Value	Description
l_dielectric	8[mm]	8 mm	Length of dielectric
l_pin	1 [mm]	I mm	Length of pin from flange


- 4 Locate the Position and Orientation of Output section. Find the Displacement subsection. In the xw text field, type -8.4.
- 5 In the yw text field, type -1_s/2.
- 6 In the zw text field, type thickness+0.635.
- 7 Find the Rotation subsection. In the Rotation angle text field, type 90.
- **8** Click to expand the **Domain Selections** section. In the table, enter the following settings:

Name	Кеер	Physics	Contribute to
All		\checkmark	None
Dielectric	\checkmark	\checkmark	None
Conductor		√	None

9 Click to expand the Boundary Selections section. In the table, enter the following settings:

Name	Кеер	Physics	Contribute to
Exterior		V	None
Conductive surface	V	V	None

10 Click Build All Objects.

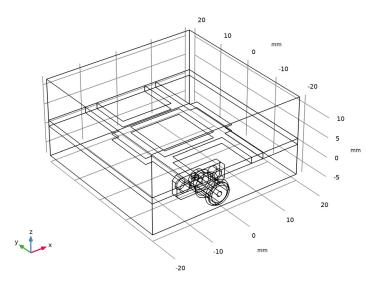


Copy I (copy I)

- I In the Geometry toolbar, click Transforms and choose Copy.
- 2 Select the object pil only.
- 3 In the Settings window for Copy, locate the Displacement section.
- 4 In the x text field, type 16.8.

Rotate I (rot1)

- I In the Geometry toolbar, click 7 Transforms and choose Rotate.
- 2 Select the objects copy I and pil only.
- 3 In the Settings window for Rotate, locate the Rotation section.
- 4 In the Angle text field, type 0 180.

5 Click Build All Objects.

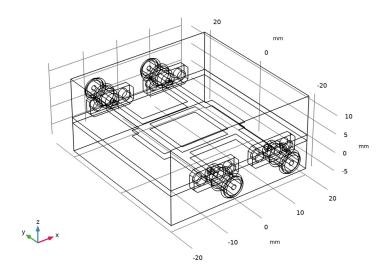

The duplicated trace on the bottom ground plane can be removed as necessary. In this model, it is optional.

Form Composite Faces I (cmfl)

- I In the Geometry toolbar, click Virtual Operations and choose Form Composite Faces.
- **2** On the object **fin**, select Boundaries 6, 44, 153, 156, 158, and 319 only.
- 3 In the Geometry toolbar, click **Build All**.

ELECTROMAGNETIC WAVES, FREQUENCY DOMAIN (EMW)


Perfect Electric Conductor 2

- I In the Model Builder window, under Component I (compl)>Electromagnetic Waves, Frequency Domain (emw) click Perfect Electric Conductor 2.
- 2 Select Boundaries 6 and 44 only.

Lumped Port I

- I In the Model Builder window, click Lumped Port I.
- 2 In the Settings window for Lumped Port, locate the Boundary Selection section.
- 3 Click Clear Selection.

4 Select Boundary 234 only.

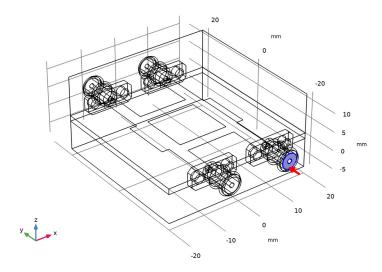

5 Locate the Lumped Port Properties section. From the Type of lumped port list, choose Coaxial.

Lumped Port 2

- I In the Model Builder window, click Lumped Port 2.
- 2 In the Settings window for Lumped Port, locate the Boundary Selection section.
- 3 Click Clear Selection.
- 4 Select Boundary 243 only.
- 5 Locate the Lumped Port Properties section. From the Type of lumped port list, choose Coaxial.

Lumbed Port 3

- I In the Model Builder window, click Lumped Port 3.
- 2 In the Settings window for Lumped Port, locate the Boundary Selection section.
- 3 Click Clear Selection.
- 4 Select Boundary 80 only.
- 5 Locate the Lumped Port Properties section. From the Type of lumped port list, choose Coaxial.

Lumped Port 4

I In the Model Builder window, click Lumped Port 4.

- 2 In the Settings window for Lumped Port, locate the Boundary Selection section.
- 3 Click Clear Selection.
- 4 Select Boundary 71 only.
- 5 Locate the Lumped Port Properties section. From the Type of lumped port list, choose Coaxial.

Perfect Electric Conductor 3

- In the Physics toolbar, click **Boundaries** and choose Perfect Electric Conductor.
- 2 In the Settings window for Perfect Electric Conductor, locate the Boundary Selection section.
- 3 From the Selection list, choose Conductive surface (SMA Connector, Flange with Two Holes I).

MATERIALS


Material 3 (mat3)

- I In the Model Builder window, under Component I (compl) right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, locate the Geometric Entity Selection section.
- 3 From the Selection list, choose Dielectric (SMA Connector, Flange with Two Holes I).
- **4** Locate the **Material Contents** section. In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Relative permittivity	epsilonr_iso; epsilonrii = epsilonr_iso, epsilonrij = 0	2.1	I	Basic
Relative permeability	mur_iso; murii = mur_iso, murij = 0	1	I	Basic
Electrical conductivity	sigma_iso; sigmaii = sigma_iso, sigmaij = 0	0	S/m	Basic

MESH I

I In the Model Builder window, under Component I (compl) right-click Mesh I and choose **Build All.**

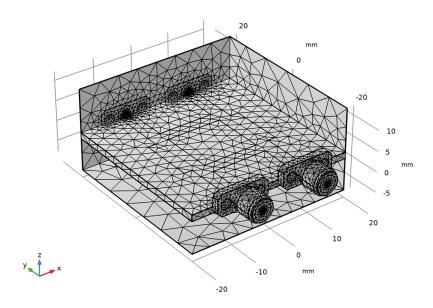

2 In the Home toolbar, click **Compute**.

RESULTS

Electric Field (emw)

- I In the Settings window for 3D Plot Group, locate the Plot Settings section.
- 2 Clear the Plot dataset edges check box.

Multislice

- I In the Model Builder window, click Multislice.
- 2 In the Settings window for Multislice, locate the Coloring and Style section.
- 3 Click Change Color Table.
- 4 In the Color Table dialog box, select Thermal>HeatCameraLight in the tree.
- 5 Click OK.
- 6 In the Settings window for Multislice, locate the Coloring and Style section.
- 7 From the Color table transformation list, choose Reverse.

Surface I

- I In the Model Builder window, right-click Electric Field (emw) and choose Surface.
- 2 In the Settings window for Surface, locate the Coloring and Style section.
- 3 Click Change Color Table.
- 4 In the Color Table dialog box, select Aurora>AuroraAustralis in the tree.
- 5 Click OK.
- 6 In the Settings window for Surface, locate the Coloring and Style section.
- 7 Clear the Color legend check box.


Selection I

- I Right-click Surface I and choose Selection.
- 2 In the Settings window for Selection, locate the Selection section.
- 3 From the Selection list, choose Conductive surface (SMA Connector, Flange with Two Holes I).

Material Appearance 1


- I In the Model Builder window, right-click Surface I and choose Material Appearance.
- 2 In the Settings window for Material Appearance, locate the Appearance section.
- 3 From the Appearance list, choose Custom.
- 4 From the Material type list, choose Aluminum (anodized).
- **5** Locate the **Color** section. Select the **Use the plot's color** check box.

freq(21)=3 GHz Multislice: Electric field norm (V/m) Surface: Electric field norm (V/m)

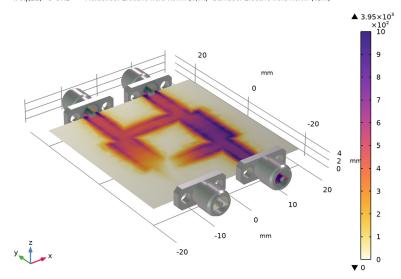


S-parameter (emw)

In the Model Builder window, under Results click S-parameter (emw).

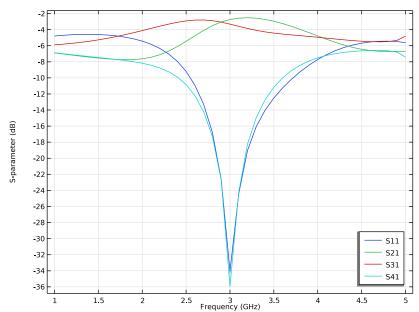


Smith Plot (emw) In the Model Builder window, click Smith Plot (emw).

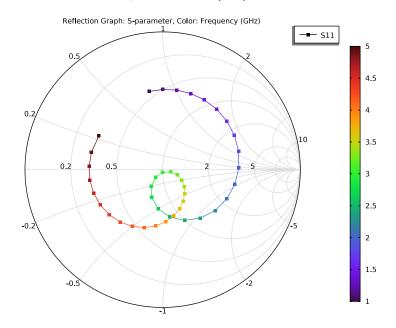

Imbalance

In the Model Builder window, click Imbalance.

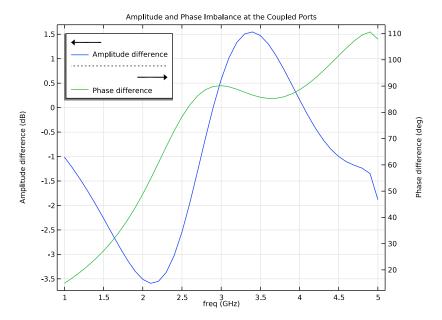

S-parameter with Graph Maker

- I In the Home toolbar, click Add Plot Group and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type S-parameter with Graph Maker in the Label text field.

Global I

- I Right-click S-parameter with Graph Maker and choose Global.
- 2 In the Settings window for Global, click Add Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)> Electromagnetic Waves, Frequency Domain>Ports>S-parameter, dB>emw.S11dB - S11.

Graph Marker I

- I Right-click Global I and choose Graph Marker.
- 2 In the Settings window for Graph Marker, locate the Display section.
- 3 From the Display mode list, choose Bandwidth.
- 4 From the Range type list, choose Stopband.
- 5 In the Cutoff value text field, type 10.

- 6 Locate the Text Format section. In the Display precision text field, type 3.
- **7** Select the **Include unit** check box.
- 8 Click to expand the Coloring and Style section. Select the Show frame check box.

