

# Transient Modeling of a Coaxial Cable

Time-domain simulations of Maxwell's equations are useful for

- · observing transient phenomena,
- finding the time it takes for a signal to propagate, or
- modeling materials that are nonlinear with respect to the electric or magnetic field strength.

This example considers a pulse propagating down a coaxial transmission line for three different termination types: short, open, and matched. The signal propagation time is deduced from the reflected waves detected at the input port.

# Model Definition

The model setup, schematically shown in Figure 1, is a short section of an air-filled coaxial transmission line. The symmetry of the structure allows for a 2D axisymmetric model geometry.




Figure 1: Schematic of a section of a coaxial transmission line connected to a transient voltage source and a load.

At one end of the coaxial cable, or coax for short, a lumped port boundary condition excites the structure; specify a transient excitation pulse,  $V_0(t)$ , by using a Gaussian pulsewindowed sine function. Apply the excitation as a current of magnitude  $I(t) = V_0(t) / Z_{ref}$ flowing tangentially to the excitation boundary. Here  $Z_{\rm ref}$  refers to the specified characteristic impedance between the voltage generator and the model.

At the other end of the coax, consider, in turn, three different boundary conditions:

- 1 perfect electric conductor (PEC) to simulate the short condition;
- 2 perfect magnetic conductor (PMC) to simulate an open condition; and
- 3 lumped port to simulate a matched load.

On the walls of the coax, apply a PEC boundary condition; this condition is appropriate when both skin depth and losses in the conductors are very small.

Use a triangular mesh with the maximum element size chosen such that there are at least two elements in the radial direction and at least eight elements per wavelength.

The only changes required to the default solver settings are to tighten the relative tolerance from the default value, and to adjust the time span and output time steps. The internal time steps taken by the solver are autoselected based on the specified relative tolerance.

## Results and Discussion

Figure 2 shows the results of the transient simulation for the three different termination types. The figure plots the radial component of the electric field at the input port as a function of time for the three different termination conditions. The short (PEC) and open (PMC) terminations reflect waves that are 180° out of phase, and the matched load produces almost no reflections. From the reflected waves in the plot, you can read off an approximate signal propagation time through the air-filled transmission line of (0.37 -0.10) / 2 ns = 0.135 ns. This matches the expected value of  $L_{\rm coax}$  / c, where  $L_{\text{coax}} = 40 \text{ mm}$  is the length of the line and c is the speed of light in air.

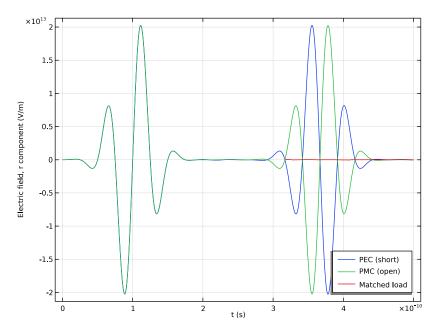


Figure 2: Radial component of electric field at the input port versus time for three different termination conditions: short (blue), open (green), and matched load (red).

**Application Library path:** RF\_Module/Verification\_Examples/coaxial\_cable\_transient

# Modeling Instructions

From the File menu, choose New.

## NEW

In the New window, click Model Wizard.

## MODEL WIZARD

- I In the Model Wizard window, click 2D Axisymmetric.
- 2 In the Select Physics tree, select Radio Frequency>Electromagnetic Waves, Transient (temw).

- 3 Click Add.
- 4 Click 🔵 Study.
- 5 In the Select Study tree, select General Studies>Time Dependent.
- 6 Click **Done**.

## GLOBAL DEFINITIONS

## Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- **3** In the table, enter the following settings:

Name	Expression	Value	Description
r_coax	1[mm]	0.001 m	Coax inner radius
R_coax	2[mm]	0.002 m	Coax outer radius
L_coax	40[mm]	0.04 m	Length of coax core into cavity
f	20[GHz]	2E10 Hz	Pulse frequency
L	c_const/f	0.01499 m	Wavelength, free space
T	1/f	5E-II s	Period
h_max	min(L/8,(R_coax-r_coax)/2)	5E-4 m	Maximum element size

Next, define the excitation, V0(t), in terms of a Gaussian pulse and a sine function.

Define a Gaussian pulse.

# Gaussian Pulse I (gp I)

- I In the Home toolbar, click f(x) Functions and choose Global>Gaussian Pulse.
- 2 In the Settings window for Gaussian Pulse, type gauss\_pulse in the Function name text field.
- 3 Locate the Parameters section. In the Location text field, type 2\*T.
- 4 In the Standard deviation text field, type T/2.

Now use this pulse in an analytic function for V0(t):

## Analytic I (an I)

I In the Home toolbar, click f(x) Functions and choose Global>Analytic.

- 2 In the Settings window for Analytic, type V0 in the Function name text field.
- 3 Locate the Definition section. In the Expression text field, type gauss\_pulse(t)\* sin(2\*pi\*f\*t).
- 4 In the Arguments text field, type t.
- **5** Locate the **Units** section. In the table, enter the following settings:

Argument	Unit
t	s


 ${f 6}$  In the **Function** text field, type V.

To plot the function, you need to specify a suitable time interval.

7 Locate the **Plot Parameters** section. In the table, enter the following settings:

Plot	Argument	Lower limit	Upper limit	Fixed value	Unit
	t	0	0.2[ns]	0	s

**8** Click to collapse the **Plot Parameters** section. Click  **Plot**.

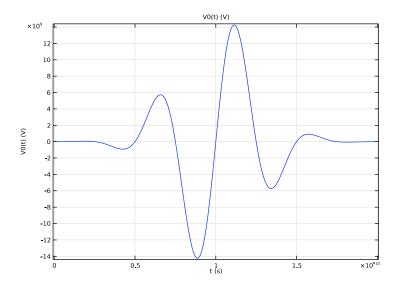

## **GEOMETRY I**

An elongated rectangle offset from the symmetry axis represents the straight coaxial cable.

Rectangle I (rI)

I In the Geometry toolbar, click Rectangle.

- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type R coax-r coax.
- 4 In the **Height** text field, type L coax.
- **5** Locate the **Position** section. In the **r** text field, type **r** coax.
- 6 Click **Build All Objects**.

#### DEFINITIONS

Set up a point probe for plotting the electric field component Er while solving. You will also use this plot to reproduce Figure 2.

Domain Point Probe I

- I In the Definitions toolbar, click Probes and choose Domain Point Probe.
- 2 In the Settings window for Domain Point Probe, locate the Point Selection section.
- 3 In row Coordinates, set r to r coax.
- 4 Select the Snap to closest boundary check box.

Point Probe Expression I (ppb1)

- I In the Model Builder window, expand the Domain Point Probe I node, then click Point Probe Expression I (ppbI).
- 2 In the Settings window for Point Probe Expression, click Replace Expression in the upperright corner of the Expression section. From the menu, choose Component I (compl)> Electromagnetic Waves, Transient>Electric>Electric field - V/m>temw.Er - Electric field, rcomponent.

## ELECTROMAGNETIC WAVES, TRANSIENT (TEMW)

Now set up the physics. Begin by defining the Lumped port input condition.

Lumbed Port I

- I In the Model Builder window, under Component I (compl) right-click Electromagnetic Waves, Transient (temw) and choose Lumped Port.
- **2** Select Boundary 2 only, (the bottom boundary). For the first port, wave excitation is **on** by default.
- 3 In the Settings window for Lumped Port, locate the Settings section.
- **4** In the  $V_0$  text field, type V0(t).
- **5** In the  $Z_{ref}$  text field, type (Z0\_const/2/pi)\*log(R\_coax/r\_coax).

The open case uses a PMC condition at the termination.

# Perfect Magnetic Conductor I

- I In the Physics toolbar, click Boundaries and choose Perfect Magnetic Conductor.
- **2** Select Boundary 3 only, (the top boundary).

Finally, define a lumped port condition to use for the matched load case.

## Lumped Port 2

- I In the Physics toolbar, click Boundaries and choose Lumped Port.
- **2** Select Boundary 3 only.
- 3 In the Settings window for Lumped Port, locate the Settings section.
- 4 In the  $Z_{\rm ref}$  text field, type (ZO\_const/2/pi)\*log(R\_coax/r\_coax).

## ADD MATERIAL

- I In the Home toolbar, click 👯 Add Material to open the Add Material window.
- 2 Go to the Add Material window.
- 3 In the tree, select Built-in>Air.
- 4 Click Add to Component in the window toolbar.
- 5 In the Home toolbar, click **‡ Add Material** to close the **Add Material** window.


#### MESH I

# Free Triangular 1

In the Mesh toolbar, click Free Triangular.

## Size

- I In the Model Builder window, click Size.
- 2 In the Settings window for Size, locate the Element Size section.
- **3** Click the **Custom** button.
- 4 Locate the Element Size Parameters section. In the Maximum element size text field, type h\_max.

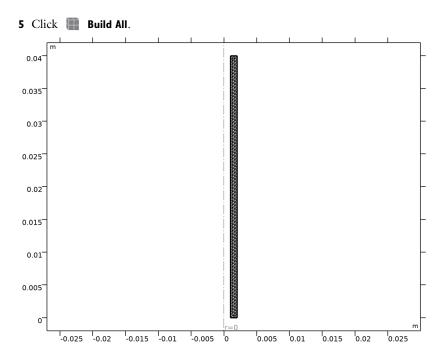

## STUDY I

Step 1: Time Dependent

- I In the Model Builder window, under Study I click Step I: Time Dependent.
- 2 In the Settings window for Time Dependent, locate the Study Settings section.
- 3 In the Output times text field, type range (0,T/24,10\*T).
- 4 From the Tolerance list, choose User controlled.
- 5 In the Relative tolerance text field, type 0.0001. To study the short termination case first, disable the PMC and lumped port conditions so that the default PEC condition is activated on the termination boundary.
- 6 Locate the Physics and Variables Selection section. Select the Modify model configuration for study step check box, disable Perfect Magnetic Conductor I and Lumped Port 2.
- 7 In the Home toolbar, click **Compute**.

#### RESULTS


## 2D Plot Group 2

Click on the **Probe Plot I** tab to place it in focus.

## Probe Plot Group 1

- I In the Model Builder window, click Probe Plot Group I.
- 2 In the Settings window for ID Plot Group, locate the Legend section.
- 3 From the Position list, choose Lower right.


When the solver finishes the plot should look like that in the figure below.

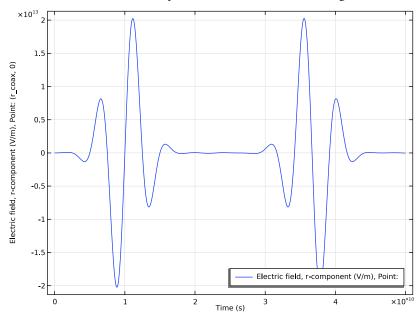


## 2D Plot Group 2

The default surface plot shows the electric field in the coax at the end of the simulation interval. Because the transient has died out, the solution you see is only noise. Modify the time to get a more interesting plot.

- I In the Model Builder window, click 2D Plot Group 2.
- 2 In the Settings window for 2D Plot Group, locate the Data section.
- 3 From the Time (s) list, choose 1.5E-10.



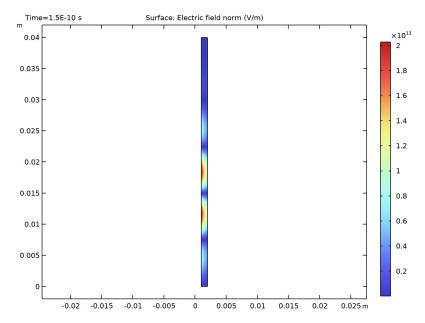

Now turn to the open termination case.

## DEFINITIONS

Point Probe Expression I (ppb1)

- I In the Model Builder window, under Component I (compl)>Definitions> Domain Point Probe I click Point Probe Expression I (ppb I).
- 2 In the Settings window for Point Probe Expression, click to expand the Table and Window Settings section.
- 3 From the Output table list, choose New table. With these settings you get a plot for the short and open termination cases in the same plot window.

## **ELECTROMAGNETIC WAVES, TRANSIENT (TEMW)**

Perfect Magnetic Conductor I

In the Model Builder window, under Component I (compl)>Electromagnetic Waves, Transient (temw) right-click Perfect Magnetic Conductor I and choose Enable.

#### STUDY I


- I In the Model Builder window, click Study I.
- 2 In the Settings window for Study, locate the Study Settings section.
- 3 Clear the Generate default plots check box.
- 4 In the Home toolbar, click **Compute**.

## RESULTS

Probe Plot Group 1

The reflected waves for the short and open terminations are 180 degrees out of phase.

I In the Model Builder window, under Results click Probe Plot Group I.

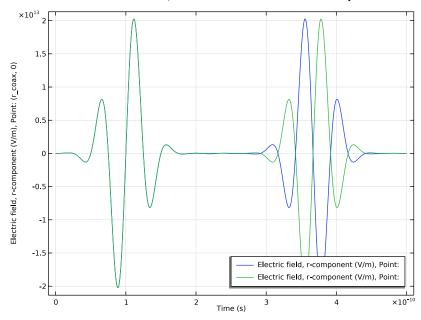

Finally, activate the matched load case.

## DEFINITIONS

Point Probe Expression I (ppb1)

- I In the Model Builder window, under Component I (compl)>Definitions> Domain Point Probe I click Point Probe Expression I (ppbI).
- 2 In the Settings window for Point Probe Expression, locate the Table and Window Settings section.

3 From the Output table list, choose New table.

# ELECTROMAGNETIC WAVES, TRANSIENT (TEMW)

Lumbed Port 2

I In the Model Builder window, under Component I (compl)>Electromagnetic Waves, Transient (temw) right-click Lumped Port 2 and choose Enable.

Note that you do not need to disable the PMC condition because it is overridden by the lumped port.

#### STUDY I

In the **Home** toolbar, click **Compute**.

#### RESULTS

Probe Plot Group 1

- I In the Model Builder window, under Results click Probe Plot Group I.
- 2 In the Settings window for ID Plot Group, locate the Plot Settings section.
- 3 Select the x-axis label check box. In the associated text field, type t (s).
- 4 Select the y-axis label check box. In the associated text field, type Electric field, r component (V/m).
- 5 In the Probe Plot Group I toolbar, click  **Plot**.

Probe Table Graph 1

- I In the Model Builder window, expand the Probe Plot Group I node, then click Probe Table Graph 1.
- 2 In the Settings window for Table Graph, click to expand the Legends section.
- 3 From the Legends list, choose Manual.
- **4** In the table, enter the following settings:

Legends					
PEC	(short)				

Probe Table Graph 2

- I In the Model Builder window, click Probe Table Graph 2.
- 2 In the Settings window for Table Graph, locate the Legends section.
- 3 From the Legends list, choose Manual.

**4** In the table, enter the following settings:

Legends PMC (open)

Probe Table Graph 3

- I In the Model Builder window, click Probe Table Graph 3.
- 2 In the Settings window for Table Graph, locate the Legends section.
- 3 From the Legends list, choose Manual.
- **4** In the table, enter the following settings:

Legends Matched load

The plot should now look like that in Figure 2, with the red graph corresponding to the matched case.