

Substrate Integrated Waveguide Leaky Wave Antenna

Substrate Integrated Waveguides (SIW) can be used in antenna applications. Leaky waves from a slot array on the top surface of the SIW in this example generate a beam in a certain direction that can be steered by choosing a different operating frequency.

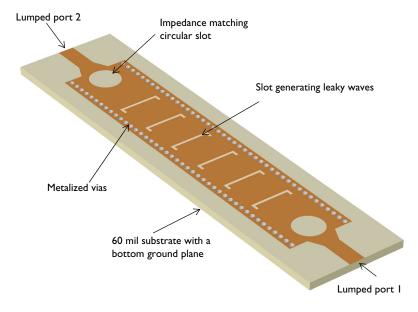


Figure 1: A SIW is realized using 60 mil microwave substrate. The side walls are terminated with metalized via holes. The input and output microstrip lines are connected to the SIW via tapered lines.

Model Definition

Substrate integrated waveguides (SIWs) are widely used because they are easy to fabricate and slotted patterns of any shape can be drawn on the top surface. The leaky wave antenna in this example uses a SIW which is simply realized by using a microstrip line type structure. In the SIW, a 50 Ω microstrip line at the input and output is linearly tapered to a wider line in the middle of a 60 mil substrate with $\varepsilon_r = 3.38$ (Figure 1). The microstrip line and the ground plane work as the top and bottom walls of a waveguide and the side walls are built by adding metallic vias between the wider part of a microstrip line and the ground plane. All metallic parts are modeled using perfect electric conductor (PEC). There is a circular slot on each tapered line for the impedance matching to 50 Ω . Six slots are placed on the top surface of the microstrip line for a leaky wave radiation. The antenna

is modeled in a spherical air domain. The air domain is truncated with Perfectly Matched Layers (PMLs) which absorb all outgoing radiation.

The cutoff frequency of the SIW is calculated using the equation from the rectangular waveguide which is defined by

$$f_{cmn} = \frac{c}{2\pi \sqrt{\varepsilon_{\rm r} \mu_{\rm r}}} \sqrt{\left(\frac{m\pi}{a}\right)^2 + \left(\frac{n\pi}{b}\right)^2}$$

where a and b are the dimensions of a waveguide aperture. Here, a and b are replaced by the width of the wider line and thickness of the substrate, respectively. The calculated cutoff frequency of the SIW is 7.765 GHz with a = 10.5 mm at TE₁₀ mode. The operating frequency of the leaky wave antenna should be higher than the SIW cutoff frequency.

All domains except the PMLs are meshed by a tetrahedral mesh with maximum element size of five elements per wavelength so that the wave is well resolved. The PMLs are swept with a total of five elements along the absorbing direction.

Results and Discussion

Figure 2 shows the default electric field norm plot in the *xy*-plane. The intensity of the electric fields coupled to each slot is getting weaker from the inport to the outport direction. The phase of the electric fields coupled to each slot is arithmetically changing because the wave is traveling inside the SIW.

The combination of these two defines the magnitude and phase properties of the weight function for a slot array antenna. The direction of the maximum radiation of the SIW leaky wave antenna can be steered by controlling the operating frequency that changes the weight function.

The side view of the radiation pattern in a polar format is plotted in Figure 3. The 3D far-field radiation pattern is visualized in Figure 4. Though the slots are open to the upward direction, the radiation pattern is tilted toward the outport at 12.25 GHz because of the leaky wave coupling among the slots with different magnitudes and phases.

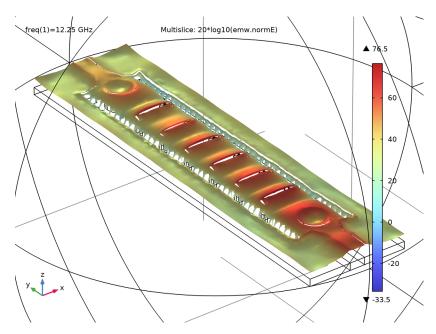


Figure 2: The electric field norm plot in the xy-plane shows the energy leaked via slots.

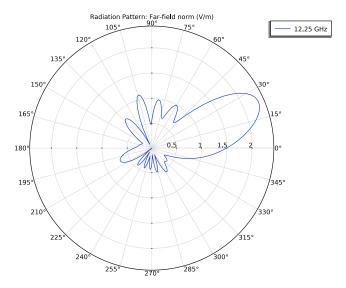


Figure 3: The x-axis cut polar plot of the far-field radiation pattern.

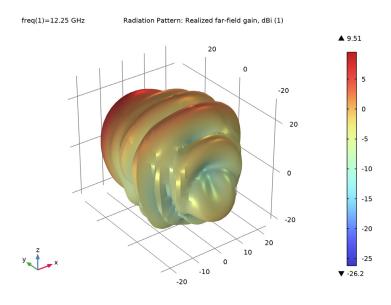


Figure 4: The 3D far-field radiation pattern is tilted toward the positive y-axis.

Application Library path: RF Module/Antenna Arrays/siw leaky wave antenna

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click 1 3D.
- 2 In the Select Physics tree, select Radio Frequency>Electromagnetic Waves, Frequency Domain (emw).
- 3 Click Add.
- 4 Click 🗪 Study.
- 5 In the Select Study tree, select General Studies>Frequency Domain.
- 6 Click M Done.

STUDY I

Step 1: Frequency Domain

Define the study frequency ahead of performing any frequency-dependent operation such as building mesh. The physics-controlled mesh uses the specified frequency value.

- I In the Model Builder window, under Study I click Step I: Frequency Domain.
- 2 In the Settings window for Frequency Domain, locate the Study Settings section.
- 3 In the Frequencies text field, type 12.25[GHz].

GEOMETRY I

- I In the Model Builder window, under Component I (compl) click Geometry I.
- 2 In the Settings window for Geometry, locate the Units section.
- 3 From the Length unit list, choose mm.

Work Plane I (wpl)

In the **Geometry** toolbar, click **Mork Plane**.

Work Plane I (wp I)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane I (wp I)>Import I (imp I)

- I In the **Home** toolbar, click **Import**.
- 2 In the Settings window for Import, locate the Import section.
- 3 Click **Browse**.
- **4** Browse to the model's Application Libraries folder and double-click the file siw_leaky_wave_antenna.mphbin.
- 5 Click Import.

Block I (blk I)

- I In the Model Builder window, right-click Geometry I and choose Block.
- 2 In the Settings window for Block, locate the Size and Shape section.
- 3 In the Width text field, type 21.
- 4 In the **Depth** text field, type 83.
- 5 In the Height text field, type 1.524.
- 6 Locate the Position section. From the Base list, choose Center.
- 7 In the **z** text field, type -1.524/2.
- 8 Click | Build Selected.
- 9 Click the Wireframe Rendering button in the Graphics toolbar.

Extrude I (extI)

- I In the Geometry toolbar, click Extrude.
- 2 In the Settings window for Extrude, locate the Distances section.
- **3** In the table, enter the following settings:

Distances (mm)

4 Click | Build Selected.


Sphere I (sph I)

- I In the Geometry toolbar, click Sphere.
- 2 In the Settings window for Sphere, locate the Size section.
- 3 In the Radius text field, type 65.

4 Click to expand the **Layers** section. In the table, enter the following settings:

Layer name	Thickness (mm)
Layer 1	20

- 5 Click Build All Objects.
- 6 Click the Zoom Extents button in the Graphics toolbar.
- 7 Click the **Q** Zoom In button in the Graphics toolbar.

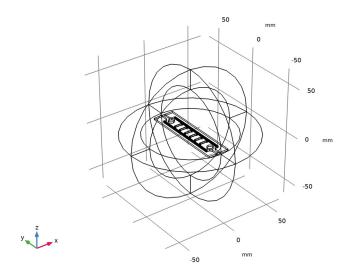


The finished geometry should look like this.

DEFINITIONS

Perfectly Matched Layer I (pml1)

- I In the Definitions toolbar, click MPerfectly Matched Layer.
- 2 Select Domains 1–4 and 59–62 only.
- 3 In the Settings window for Perfectly Matched Layer, locate the Geometry section.

4 From the Type list, choose Spherical.

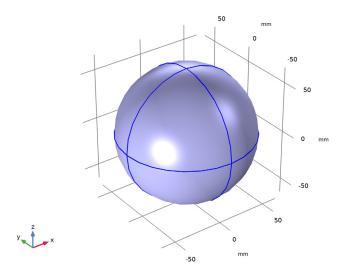


ELECTROMAGNETIC WAVES, FREQUENCY DOMAIN (EMW)

Remove vias from the model domain. Then, PEC boundary condition is applied by default on the boundaries of vias.


- I In the Model Builder window, under Component I (compl) click Electromagnetic Waves, Frequency Domain (emw).
- 2 In the Settings window for Electromagnetic Waves, Frequency Domain, locate the **Domain Selection** section.
- 3 Click Clear Selection.

4 Select Domains 1–7 and 51–63 only.

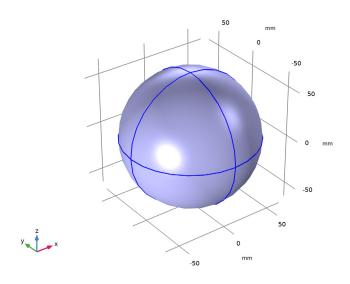

Perfect Electric Conductor 2


- I In the Physics toolbar, click **Boundaries** and choose Perfect Electric Conductor.
- **2** Select Boundaries 15, 20, 21, 283, 289, 295, 301, 307, 313, 332, 336, and 365 only.

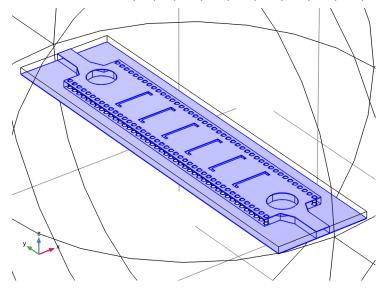

Lumped Port I

- I In the Physics toolbar, click **Boundaries** and choose **Lumped Port**.
- 2 Select Boundary 340 only.


For the first port, wave excitation is **on** by default.

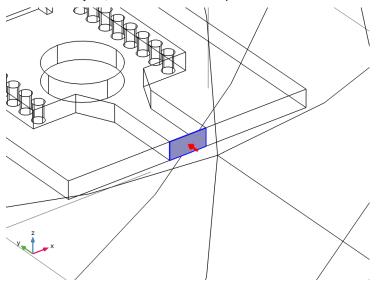

Lumped Port 2

I In the Physics toolbar, click **Boundaries** and choose **Lumped Port**.

2 Select Boundary 342 only.

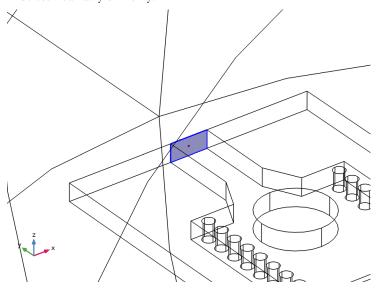

Far-Field Domain I

In the Physics toolbar, click **Domains** and choose Far-Field Domain.

MATERIALS

Material I (mat I)


- I In the Model Builder window, under Component I (compl) right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, locate the Material Contents section.
- **3** In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Relative permittivity	epsilonr_iso; epsilonrii = epsilonr_iso, epsilonrij = 0	1	I	Basic

Property	Variable	Value	Unit	Property group
Relative permeability	mur_iso; murii = mur_iso, murij = 0	1	I	Basic
Electrical conductivity	sigma_iso; sigmaii = sigma_iso, sigmaij = 0	0	S/m	Basic

Material 2 (mat2)

- I Right-click Materials and choose Blank Material.
- **2** Select Domains 6, 7, 51–58, and 63 only.

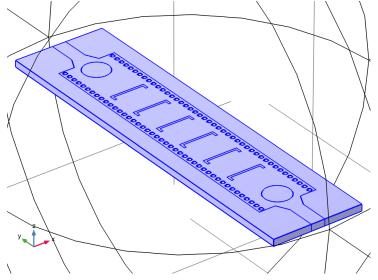

 ${f 3}$ In the Settings window for Material, locate the Material Contents section.

4 In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Relative permittivity	epsilonr_iso; epsilonrii = epsilonr_iso, epsilonrij = 0	3.38	I	Basic
Relative permeability	mur_iso; murii = mur_iso, murij = 0	1	I	Basic
Electrical conductivity	sigma_iso; sigmaii = sigma_iso, sigmaij = 0	0	S/m	Basic

- 5 Locate the Geometric Entity Selection section. Click \(\frac{1}{2} \) Create Selection.
- 6 In the Create Selection dialog box, type Substrate in the Selection name text field.
- 7 Click OK.

MESH I


- I In the Model Builder window, under Component I (compl) click Mesh I.
- 2 In the Settings window for Mesh, locate the Physics-Controlled Mesh section.
- **3** From the **Element size** list, choose **Coarser**.
- 4 Click Build All.

DEFINITIONS

Hide for Physics 1

I In the Model Builder window, right-click View I and choose Hide for Physics.


2 Select Domains 2 and 4 only.

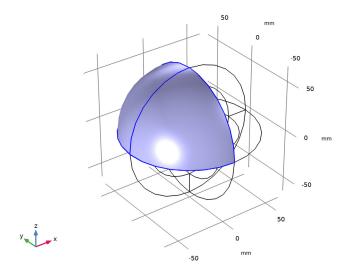


Hide for Physics 2

- I Right-click View I and choose Hide for Physics.
- 2 In the Settings window for Hide for Physics, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Boundary.

4 Select Boundaries 10 and 12 only.

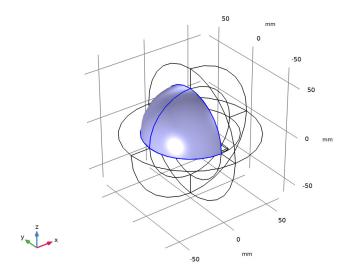

MESH I In the Model Builder window, under Component I (compl) click Mesh I.

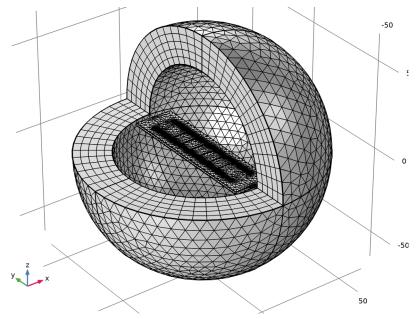

STUDY I

In the **Home** toolbar, click **Compute**.

RESULTS


Multislice

- I In the Model Builder window, expand the Results>Electric Field (emw) node, then click Multislice.
- 2 In the Settings window for Multislice, locate the Expression section.
- 3 In the Expression text field, type 20*log10(emw.normE). Modify the settings to show the plot only on the *xy*-plane.
- 4 Locate the Multiplane Data section. Find the X-planes subsection. In the Planes text field, type 0.
- 5 Find the Y-planes subsection. In the Planes text field, type 0.
- 6 Find the **Z-planes** subsection. From the **Entry method** list, choose **Coordinates**.
- 7 In the Coordinates text field, type 0.

Selection I

- I Right-click Multislice and choose Selection.
- 2 In the Settings window for Selection, locate the Selection section.
- 3 From the Selection list, choose Substrate.

4 Click the **Zoom to Selection** button in the **Graphics** toolbar.

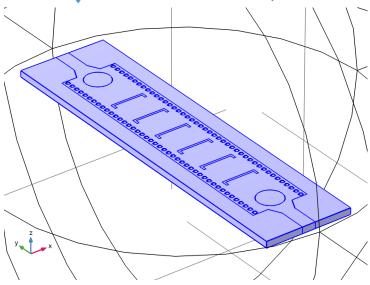


Deformation I

- I Right-click Multislice and choose Deformation.
- 2 In the Settings window for Deformation, locate the Expression section.
- 3 In the X-component text field, type 0.
- 4 In the Y-component text field, type 0.
- 5 In the **Z-component** text field, type 20*log10(emw.normE).
- 6 In the Electric Field (emw) toolbar, click Plot. See Figure 2).

Radiation Pattern 1

- I In the Model Builder window, expand the Results>2D Far Field (emw) node, then click Radiation Pattern I.
- 2 In the Settings window for Radiation Pattern, locate the Evaluation section.
- 3 Find the Normal vector subsection. In the x text field, type 1.
- 4 In the z text field, type 0.
- **5** Find the **Reference direction** subsection. In the **x** text field, type **0**.
- 6 In the y text field, type 1.

7 In the 2D Far Field (emw) toolbar, click Plot.

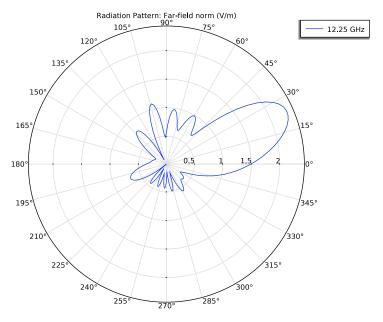

Radiation Pattern 1

- I In the Model Builder window, expand the 3D Far Field, Gain (emw) node, then click Radiation Pattern I.
- 2 In the Settings window for Radiation Pattern, locate the Evaluation section.
- 3 Find the Angles subsection. In the Number of elevation angles text field, type 90.
- 4 In the Number of azimuth angles text field, type 90.
- 5 In the 3D Far Field, Gain (emw) toolbar, click on Plot.

DIRECTIVITY

I Go to the **Directivity** window.This plot shows the 3D far-field radiation pattern (Figure 3).

RESULTS

Inspect the input matching (S_{11}) at the simulated frequency.