

MICROSAR vMem

Technical Reference

Version 3.01.01

Authors	Bernhard Karl, Tomas Ondrovic, Charlotte Ricke, Andreas Lackner, Priya Joseph
Status	Released

Document Information

History

Author	Date	Version	Remarks
Bernhard Karl, Tomas Ondrovic	2018-04-23	1.00.00	Initial creation
Charlotte Ricke	2018-06-21	1.01.00	Core and LowLevel part implemented. Updated Chapter 4.1 and 3.5. Also, minor changes in Chapter 3.3.
Charlotte Ricke	2018-08-06	1.02.00	Updated Chapter 2.1, 2.2 and 2.5.
Bernhard Karl	2018-09-25	1.03.00	Support of burst functionality added inside Chapter 3.1. Wording: "FOTA" was replaced by "OTA" and "Software Download" in Chapter 2.
Charlotte Ricke	2019-03-25	1.03.01	Clarified Chapter 2.2 and description of parameter Length in Chapter 4.2.5 and 4.2.6.
Andreas Lackner	2019-08-14	2.00.00	Added blank check as basic service in Chapter 3.1, 3.4, 3.5.1, 5.1 and 5.2.
Priya Joseph	2019-11-21	2.00.01	Updated Chapter 2.1 and updated 'Particularities and Limitations' in Chapter 5.2.6.
Priya Joseph	2020-09-23	2.00.02	Corrected typos in Chapter 2.2 and referenced document link.
Priya Joseph	2021-09-21	3.00.00	Updated Chapters 1.1, 2.4, 4.2 and added Chapter 3.2.
Priya Joseph	2021-11-08	3.01.00	Updated Chapters 1.1, 2.2, 2.5.1 and 4.2.
Priya Joseph	2024-06-12	3.01.01	Updated Chapter 3.2.1

Reference Documents

No.	Source	Title	Version
[1]	AUTOSAR	AUTOSAR_SWS_DevelopmentErrorTracer.pdf	3.2.0
[2]	Vector	TechnicalReference_vMemAccM.pdf	2.x.x
[3]	AUTOSAR	AUTOSAR_SWS_FlashDriver.pdf	3.2.0

Scope of the Document

This technical reference describes the general use of the vMem core functionality. All aspects which are hardware and flash controller specific (Low Level part of vMem) are described in the additional document of the vMem instance, which is also part of the delivery.

**Caution**

We have configured the programs in accordance with your specifications in the questionnaire. Whereas the programs do support other configurations than the one specified in your questionnaire, Vector's release of the programs delivered to your company is expressly restricted to the configuration you have specified in the questionnaire.

Contents

1	Introduction.....	7
1.1	Architecture Overview	8
1.2	Component Interfaces.....	9
2	Functional Description	11
2.1	Features	11
2.2	Initialization	11
2.3	Main Functions	12
2.4	Accessing Functionality.....	12
2.5	Error Handling.....	13
2.5.1	Development Error Reporting.....	13
3	Integration.....	15
3.1	Scope of Delivery.....	15
3.1.1	Static Files	15
3.1.2	Dynamic Files	15
3.2	Memory Sections	16
3.2.1	Header/Footer sections.....	16
4	API Tables	17
4.1	Type Definitions	17
4.2	Services provided by vMem	18
4.2.1	vMem_Init	18
4.2.2	vMem_MainFunction.....	18
4.2.3	vMem_GetVersionInfo.....	19
4.2.4	vMem_Read.....	19
4.2.5	vMem_Write.....	20
4.2.6	vMem_Erase.....	21
4.2.7	vMem_IsBlank	21
4.2.8	vMem_GetJobResult.....	22
4.3	Services used by vMem	22
5	Configuration.....	23
5.1	Configuration Variants.....	23
5.2	Configuration with DaVinci Configurator.....	23
6	Glossary and Abbreviations	24
6.1	Glossary	24
6.2	Abbreviations	24

7 **Contact..... 25**

Illustrations

Figure 1-1	Component Overview in the likely use cases	8
Figure 1-2	Interfaces to adjacent modules of the vMem	9
Figure 1-3	Interfaces to adjacent modules of the vMem as an Adapter	10

Tables

Table 2-1	Provided Features	11
Table 2-2	Service IDs	13
Table 2-3	Errors reported to DET.....	13
Table 2-4	Development Error Reporting: Assignment of checks to services	14
Table 3-1	Static files	15
Table 3-2	Generated files	16
Table 4-1	Type definitions.....	18
Table 4-3	vMem_Init.....	18
Table 4-4	vMem_MainFunction	19
Table 4-5	vMem_GetVersionInfo	19
Table 4-6	vMem_Read	20
Table 4-7	vMem_Write	21
Table 4-8	vMem_Erase	21
Table 4-9	vMem_IsBlank.....	22
Table 4-10	vMem_GetJobResult	22
Table 4-11	Services used by the vMem.....	22
Table 6-1	Glossary	24
Table 6-2	Abbreviations.....	24

1 Introduction

This document describes the core functionality, API and configuration of the MICROSAR BSW module vMem.

Supported AUTOSAR Release:	4	
Supported Configuration Variants:	Pre-compile	
Vendor ID:	VMEM_VENDOR_ID	30 decimal (= Vector-Informatik, according to HIS)
Module ID:	VMEM_MODULE_ID	255 decimal

The vMem (Vector Memory Driver) provides services for accessing the NV (nonvolatile) Memory. The following document describes the core functionality, which every instance of the vMem has realized.

The vMem offers basic functionalities like read, write, erase, blank check and user requested status reporting comparable to a classical FLS driver, refer [3]. The vMem was originally created within the Vector solution for Software Download (also known as OTA), which is also its most likely use case. This means that not only the classical AUTOSAR memory stack is a user of the vMem, but also the OTA stack. The two stacks are coordinated in the layer above by the module vMemAccM (Memory Access Manager, for documentation refer [2]).

Every vMem driver instance may offer additional hardware specific functionality, supplementing the features specified within this document. These additional services are described in the technical reference of the individual vMem driver instance.

In a Software Download solution more than one vMem instance could be used by the vMemAccM. This depends on the hardware and the use case. For example, there could be separated vMem instances needed for the PFLASH and DFLASH of the device and an additional vMem for an external device.

There are two variants how the vMem can be realized:

- ▶ vMem acts as an own Memory Driver.
- ▶ vMem acts as a wrapper to a classical Fls Driver. Hence in a OTA environment a Fls driver could be provided without offering special services. In this case OTA functionalities could be executed by a Flash Bootloader.

1.1 Architecture Overview

Note that vMem is not an AUTOSAR module. The Vector memory solution together consists of vMemAccM, vMem and Fls_30_vMemAccM.

The following figure shows a possible location of vMem within the Vector Memory solution and in relation to the AUTOSAR memory stack and the software download stack.

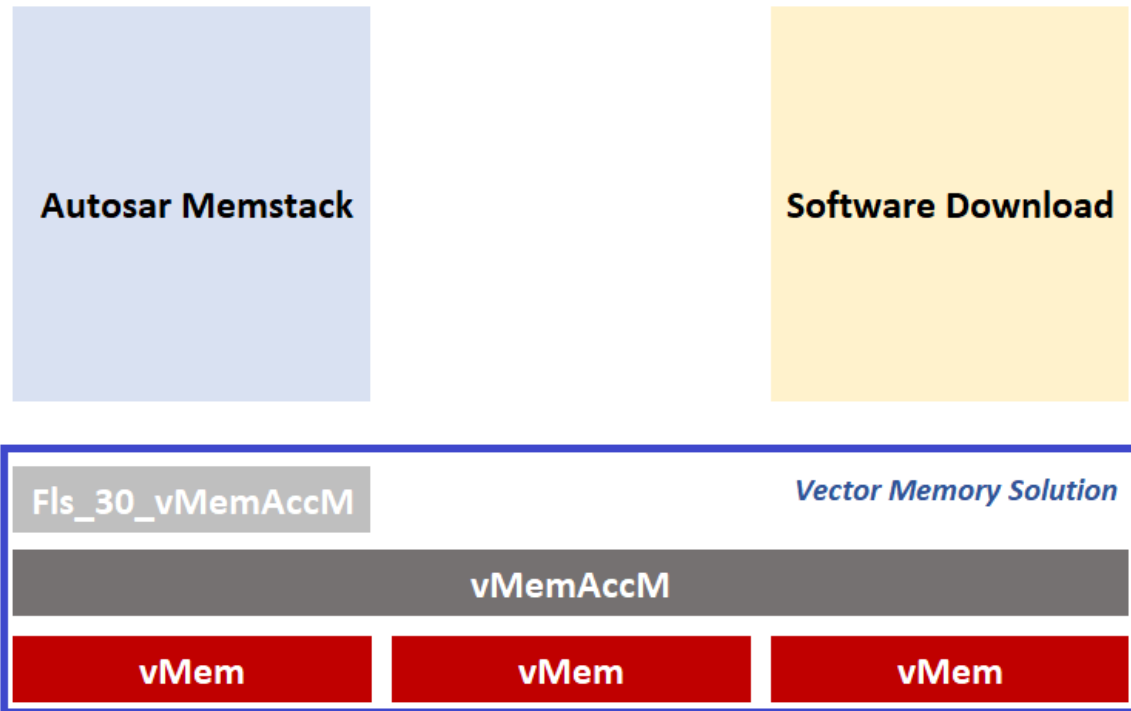


Figure 1-1 Component Overview in the likely use cases

1.2 Component Interfaces

The next figure shows the interfaces to adjacent modules of the vMem. These interfaces are described in chapter 3.2.

As described in the introduction two types of vMem implementation could be distinguished. In case vMem is a full implemented module:

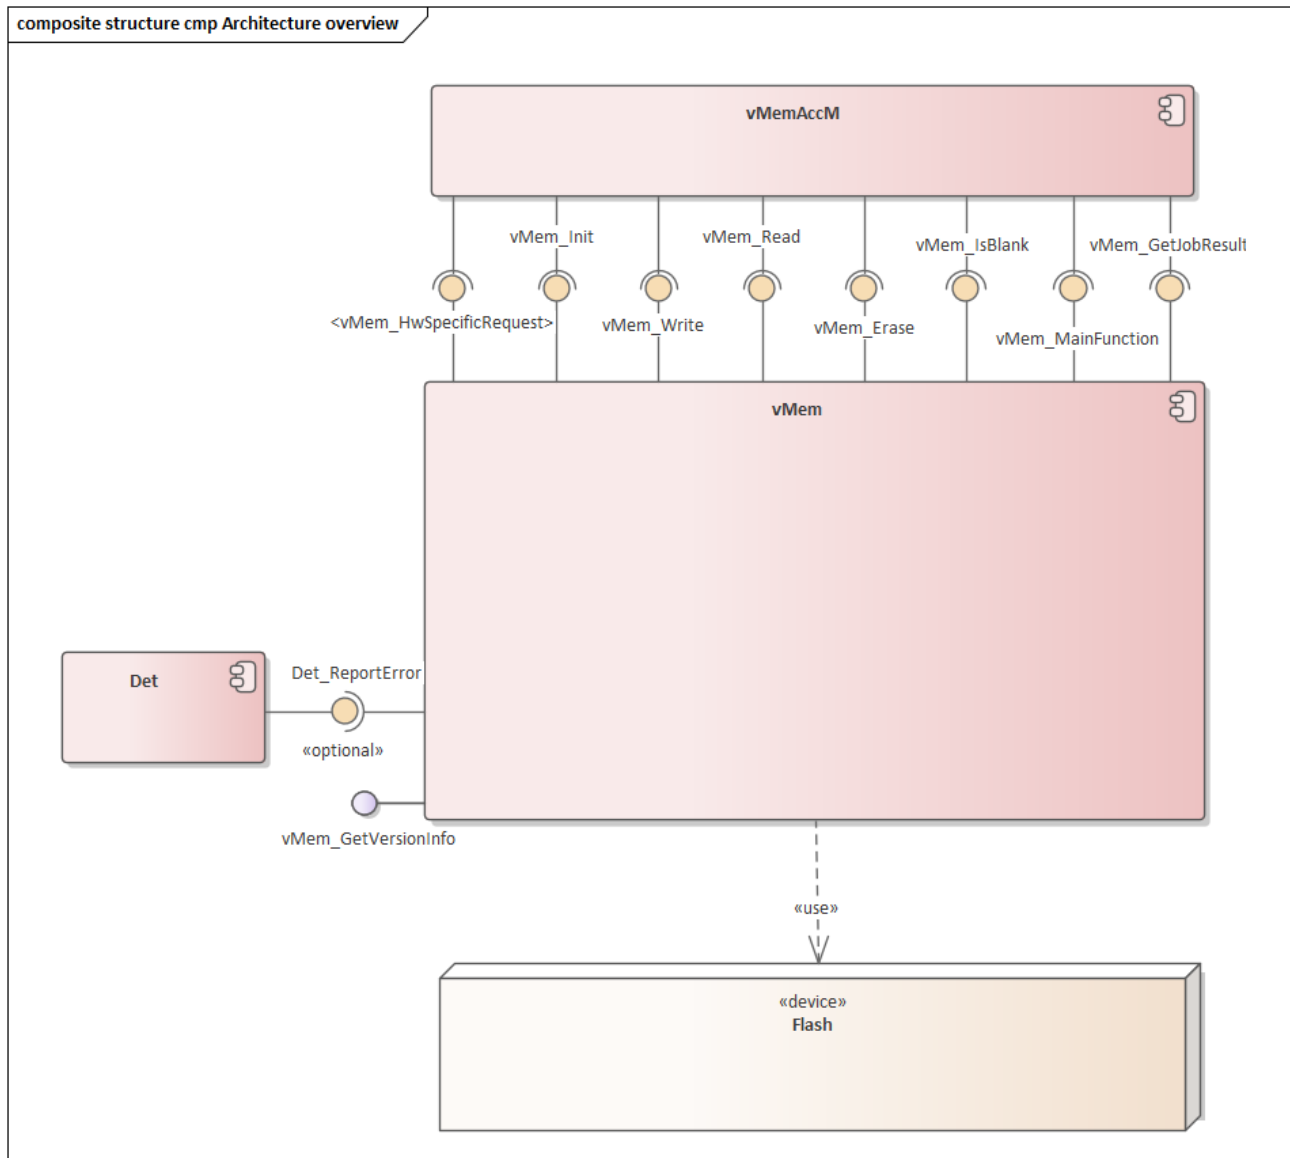


Figure 1-2 Interfaces to adjacent modules of the vMem

In case the vMem acts as an adapter to a FI's Driver:

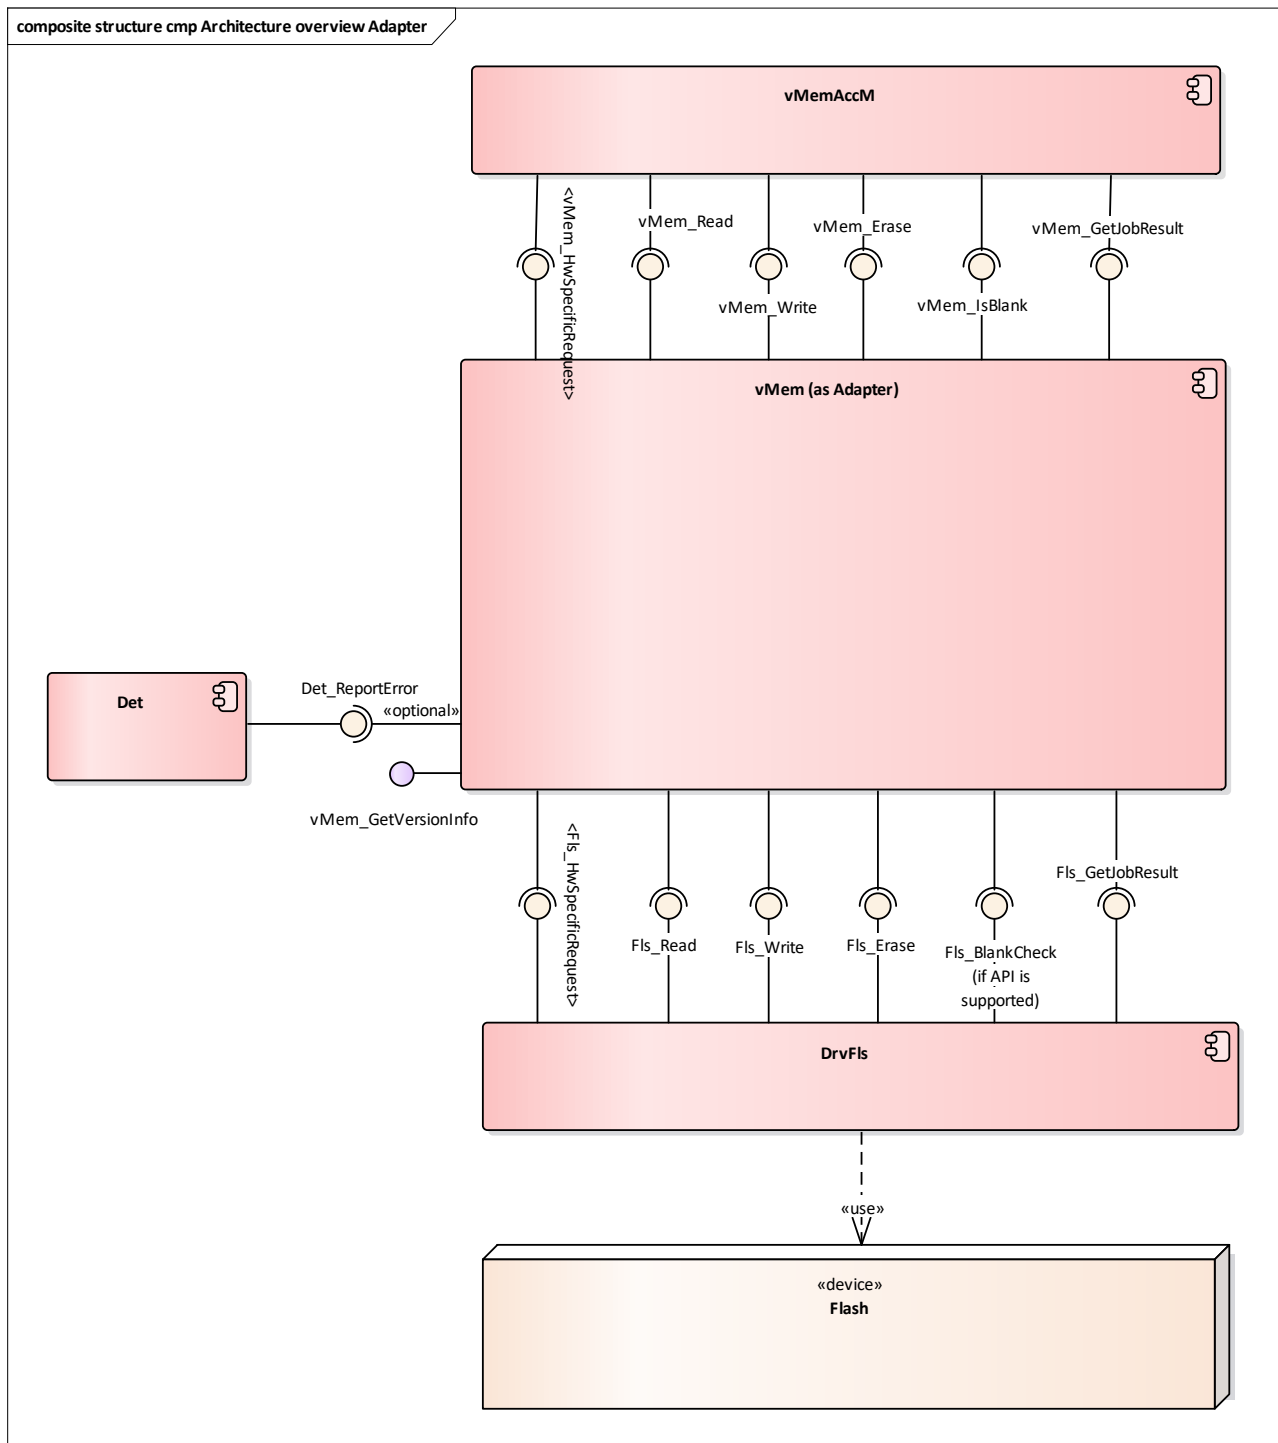


Figure 1-3 Interfaces to adjacent modules of the vMem as an Adapter

2 Functional Description

2.1 Features

The features listed in the following table covers the complete functionality specified for the vMem core. Since the vMem is not an AUTOSAR component all features provided are beyond AUTOSAR standard:

Provided Features
Read data from flash (optional)
Write data with length <i>PageSize</i> or <i>WriteBurstSize</i> to flash (optional)
Erase data with length <i>SectorSize</i> or <i>EraseBurstSize</i> in flash (optional)
Check the erased state of a page (optional)
Provide the current job result
Performing hardware specific functionality (optional)
Provide module version information
Driver initialization (optional)

Table 2-1 Provided Features

In most cases, the services to read, write, erase data from/to flash or blank check will be provided. However, it is possible that a concrete vMem is only used to read data from flash. In that special case, only the read service will be provided. However, the corresponding functions will always be implemented for compatibility reasons. If the service is not supported, the function will return `E_NOT_OK` when called. It will be documented in the technical reference of the concrete vMem, if one of the memory access services is not provided. There it is also described, if the concrete vMem can write and erase data not only with standard length, but also with configurable burst length.

2.2 Initialization

A vMem is initialized via the service `vMem_Init()`. The vMemAccM initializes the vMem during `vMemAccMm_Init()`.



Changes

The `vMem_Init()` does not happen via EcuM anymore. The vMemAccM handles and triggers `vMem_Init()`.



Caution

If the vMem acts as an adapter there may be no initialization services. In particular, the vMem does not initialize the underlying Fls driver. In that case the underlying Fls driver needs to be initialized before using the vMem

2.3 Main Functions

The vMem has one central processing function `vMem_MainFunction()`.

When an asynchronous request is accepted, the job processing will be handled within the `vMem_MainFunction()`. The user no longer needs to trigger the vMem main function. It is triggered internally by the vMemAccM during the `vMemAccM_MainFunction()`.

With the module vMemAccM as the only vMem user, it is secured that the vMem will get at most one asynchronous job request at a time. The services `vMem_Read()`, `vMem_Write()`, `vMem_Erase()` and `vMem_IsBlank()` are asynchronous jobs and their result can be polled via the synchronous service `vMem_GetJobResult()`. However, it is possible, depending on the hardware specific implementation of these services, that e.g. the read job is completed, directly when the `vMem_Read()` service returns.



Caution

If vMem acts as an adapter there is no need to use the main function. All necessary jobs are performed by the underlying FIs driver.



Changes

The scheduling of `vMem_MainFunction()`, either in the background task or in a fixed cycle period is no longer required by the vMems. The configuration parameters in the individual vMems, *vMemMainFunctionTriggering* and *vMemMainFunctionPeriod* have no impact on the trigger frequency of the `vMem_MainFunction()`, and therefore have been removed.

2.4 Accessing Functionality

vMem provides the APIs `vMem_Init()`, `vMem_Read()`, `vMem_Write()`, `vMem_Erase()`, `vMem_IsBlank()`, `vMem_MainFunction()` and `vMem_GetJobResult()` via a function pointer table. The vMem instances can be accessed via their instance identifier, passed to the API as parameter.

The user (vMemAccM) retrieves the name and entries of this table from the configuration and can call the respective service through the known entries and instance identifier.

2.5 Error Handling

2.5.1 Development Error Reporting

By default, development errors are reported to the DET using the service `Det_ReportError()` as specified in [1], if development error reporting is enabled (i.e. pre-compile parameter `VMEM_DEV_ERROR_DETECT==STD_ON`).

If another module is used for development error reporting, the function prototype for reporting the error can be configured by the integrator, but must have the same signature as the service `Det_ReportError()`.

The reported vMem ID is 255.

The reported service IDs identify the services which are described in 4.2. The following table presents the service IDs and the related services:

Service ID	Service
0x00	<code>vMem_Init ()</code>
0x01	<code>vMem_InitMemory ()</code>
0x02	<code>vMem_Read ()</code>
0x03	<code>vMem_Write ()</code>
0x04	<code>vMem_Erase ()</code>
0x05	<code>vMem_MainFunction ()</code>
0x06	<code>vMem_IsBlank()</code>
0x0A	<code>vMem_GetJobResult ()</code>
0x10	<code>vMem_GetVersionInfo ()</code>

Table 2-2 Service IDs

The errors reported to DET are described in the following table:

Error Code	Description
0x0A <code>VMEM_E_PARAM_CONFIG</code>	API service called with wrong config parameter
0x0B <code>VMEM_E_PARAM_POINTER</code>	API service used with invalid pointer parameter (NULL)
0x0C <code>VMEM_E_PARAM_ADDRESS</code>	API service used with invalid address parameter (optional)
0x0D <code>VMEM_E_PARAM_LENGTH</code>	API service used with invalid length parameter (optional)
0x0E <code>VMEM_E_PARAM_BUFFER_ALIGNMENT</code>	API service used with invalid buffer parameter (optional)
0x11 <code>VMEM_E_INITIALIZATION_FAILED</code>	No or invalid communication towards the hardware during (re-)initialization.
0x12 <code>VMEM_E_PARAM_INSTANCE_ID</code>	API service used with invalid instance identifier parameter.
0x13 <code>VMEM_E_PENDING</code>	The requested instance is already pending.

Table 2-3 Errors reported to DET

The following table shows which parameter checks are performed on which services:

Service	Check/Error code	VMEM_E_PARAM_CONFIG	VMEM_E_PARAM_POINTER	VMEM_E_PARAM_ADDRESS	VMEM_E_PARAM_LENGTH	VMEM_E_PARAM_BUFFER_ALIGNMENT	VMEM_E_INITIALIZATION_FAILED	VMEM_E_PARAM_INSTANCE_ID	VMEM_E_PENDING
vMem_InitMemory()									
vMem_Init()							■		■
vMem_Read()			■	■	■			■	■
vMem_Write()			■	■	■			■	■
vMem_Erase()				■	■			■	■
vMem_MainFunction()									
vMem_IsBlank()				■	■			■	■
vMem_GetJobResult()								■	
vMem_GetVersionInfo()			■						

Table 2-4 Development Error Reporting: Assignment of checks to services



Changes

The vMemAccM is responsible for the initialization of the vMem. Therefore, the VMEM_E_UNINIT check/error code is not applicable anymore and removed from this table.

3 Integration

This chapter gives necessary information for the integration of the MICROSAR vMem into an application environment of an ECU. The scope of delivery is described also in the related documentation of the vMem instance.

3.1 Scope of Delivery

The delivery of the vMem contains at least the files which are described in the chapters 3.1.1 and 3.1.2. Additional files that may be needed for the hardware specific implementation are described in the technical reference of the respective vMem. The placeholder <Hw> will be replaced in a concrete instance of the vMem:

3.1.1 Static Files

File Name	Description
vMem_30_<Hw>.c	This is the source file of the vMem. It contains the implementation of the vMem core, that is the part of the implementation, which is the same for all vMem instances.
vMem_30_<Hw>.h	This is the header file of the vMem. It declares the generic interfaces of the vMem.
vMem_30_<Hw>_Types.h	This file defines general types used by vMem and the defines for development error reporting.
vMem_30_<Hw>_LL.c	This is the source file of the vMem LowLevel part. It contains the hardware specific implementation parts of the vMem.
vMem_30_<Hw>_LL.h	This is the header file of the vMem LowLevel part. It declares the interfaces of the vMem LowLevel part, which are used by the vMem core.
vMem_30_<Hw>_Int.h	This internal header file of the vMem declares the common vMem API Read, Write, Erase and GetJobResult. These API can be called by other modules via the FunctionPointerTable, which is maintained by the vMem LowLevel.
vMem_30_<Hw>_DetChecks.c	This is the source file containing Det check functions. These functions are shared and can be also used by the vMem LowLevel.
vMem_30_<Hw>_DetChecks.h	This header file of the vMem contains the declaration of DET checks functions. These interfaces can be used by the vMem LowLevel.
vMem_30_<Hw>_IntShared.h	This header file contains helper functions which may be used by vMem core and the LowLevel part.

Table 3-1 Static files

3.1.2 Dynamic Files

The dynamic files are generated by the configuration tool DaVinci Configurator 5.

File Name	Description
vMem_30_ <Hw>_Lcfg.c	This file contains configuration parameters.
vMem_30_ <Hw>_Cfg.h	This file contains the public configuration parameters of the vMem.

Table 3-2 Generated files

3.2 Memory Sections

3.2.1 Header/Footer sections

For the downloadable driver support, the vMem provides special sections which contain the header and footer data (FPT, unique identifier, address of header and footer etc). These sections must be mapped appropriately for the correct verification and usage of vMem in the flash bootloader context.

- > VMEM_START_SEC_CONST_HEADER_UNSPECIFIED/VMEM_STOP_SEC_CONST_HEADER_UNSPECIFIED
- > VMEM_START_SEC_CONST_FOOTER_32/VMEM_STOP_SEC_CONST_FOOTER_32

The exact memory section names will be documented in the technical reference of the concrete vMem.



Note

The mapping of these sections are specifically only required for the FBL- downloadable driver use-case. For all other use-cases, they should be treated in the same way as the other memory sections of the vMem.

4 API Tables

For an interfaces overview please see Figure 2-3.

4.1 Type Definitions

The types defined by the vMem are described in this chapter. The initial type definitions are implemented in the module vMemAccM, refer [2].

Type Name	C-Type	Description	Value Range
vMem_ConstDataPtr Type	void*	Type for pointer to buffer passed by user in write request.	Must not be NULL pointer
vMem_DataPtrType	void*	Type for pointer to buffer passed by user in read request.	Must not be NULL pointer.
vMem_JobResultType	enum	Type for the asynchronous job results.	VMEM_JOB_OK The last asynchronous job has been finished successfully. In case a blank check was executed this result means that the checked page is blank.
			VMEM_JOB_PENDING An asynchronous job is currently being processed.
			VMEM_READ_CORRECTED_ERRORS Hardware reported that ECC errors were corrected.
			VMEM_READ_UNCORRECTABLE_ERRORS Uncorrectable ECC errors occurred during read.
			VMEM_JOB_FAILED Job failed for some unspecific reason.
			VMEM_MEM_NOT_BLANK The checked page is not erased.
vMem_AddressType	uint32	Type for the address of a physical Flash device.	0 – 4294967295
vMem_LengthType	uint32	Type for the length of an asynchronous job.	0 – 4294967295
vMem_InstanceIdType	uint32	Type of the instance identifier.	0 – 4294967295
vMem_CfgPtrType	uint32*	Specifies the config pointer type for init service. Acts as a	Value is not used, could be a NULL pointer.

Type Name	C-Type	Description	Value Range
		dummy, since the vMem is not post-build capable.	

Table 4-1 Type definitions

4.2 Services provided by vMem

The vMem services for init, read, write, erase, blank check and get job result are accessible by a FunctionPointerTable (see also Chapter 3.4). If the vMem acts as an adapter the services inside chapter 5.2.1, 5.2.2 and 5.2.3 are not realized.

4.2.1 vMem_Init

Prototype	
void vMem_Init (vMem_ConfigPtrType *ConfigPtr)	
Parameter	
ConfigPtr [in]	Pointer to the configuration data (ignored).
Return code	
void	none
Functional Description	
Initialization function. This function initializes the module vMem. It initializes all variables and sets the module state to initialized.	
Particularities and Limitations	
> Interrupts are disabled.	
Call context	
> TASK (called in the ECU initialization sequence e.g. EcuM driver Init-phases within vMemAccM_Init()) > This function is Synchronous > This function is Non-Reentrant	

Table 4-2 vMem_Init

4.2.2 vMem_MainFunction

Prototype	
void vMem_MainFunction (void)	
Parameter	
void	none
Return code	
void	none

Functional Description
Monitors and controls the continuous execution of the vMem job processing.
Particularities and Limitations
-
Call context
> TASK > This function is Synchronous > This function is Non-Reentrant

Table 4-3 vMem_MainFunction

4.2.3 vMem_GetVersionInfo

Prototype	
void vMem_GetVersionInfo (Std_VersionInfoType *VersionInfo)	
Parameter	
VersionInfo [out]	Pointer to where to store the version information. Parameter must not be NULL.
Return code	
void	None
Functional Description	
Returns the version information. vMem_GetVersionInfo() returns version information, vendor ID and AUTOSAR module ID of the component.	
Particularities and Limitations	
This service is always available (VMEM_VERSION_INFO_API is always STD_ON)	
Call context	
> TASK > This function is Synchronous > This function is Reentrant	

Table 4-4 vMem_GetVersionInfo

4.2.4 vMem_Read

Prototype	
Std_ReturnType vMem_Read (vMem_InstanceIdType InstanceId, vMem_AddressType SourceAddress, vMem_DataPtrType TargetAddressPtr, vMem_LengthType Length)	
Parameter	
InstanceId [in]	ID of the related vMem instance.

SourceAddress [in]	Address from which the read job shall start.
TargetAddressPtr [out]	Pointer to where the read data shall be stored.
Length [in]	Number of bytes that shall be read.
Return code	
Std_ReturnType	E_OK job accepted, E_NOT_OK otherwise
Functional Description	
Reads NV memory content of the related address to passed buffer – from address with length number of bytes. The job status can be polled via <code>vMem_GetJobResult</code> .	
Particularities and Limitations	
Expected Caller Context	
> TASK > This function is asynchronous.	

Table 4-5 vMem_Read

4.2.5 vMem_Write

Prototype	
Std_ReturnType vMem_Write (vMem_InstanceIdType InstanceId, vMem_AddressType TargetAddress, vMem_ConstDataPtrType SourceAddressPtr, vMem_LengthType Length)	
Parameter	
InstanceId [in]	ID of the related vMem instance.
TargetAddress [in]	Address from which write job shall start.
SourceAddressPtr [in]	Pointer to the data which shall be written to memory.
Length [in]	Number of bytes that shall be written: must be <i>PageSize</i> or if burst is supported also <i>WriteBurstSize</i> is valid.
Return code	
Std_ReturnType	E_OK job accepted, E_NOT_OK otherwise
Functional Description	
Writes the passed data to NV memory of the related address – from address with length number of bytes. The job status can be polled via <code>vMem_GetJobResult</code> .	
Particularities and Limitations	
vMem core in general does not check the alignment of the SourceAddressPtr. The alignment check of the RAM buffer, if required by the underlying flash hardware, is handled and documented in the respective vMem instances TechnicalReference document.	

Expected Caller Context

- > TASK
- > This function is asynchronous.

Table 4-6 vMem_Write

4.2.6 vMem_Erase**Prototype**

```
Std_ReturnType vMem_Erase (vMem_InstanceIdType InstanceId, vMem_AddressType  
TargetAddress, vMem_LengthType Length)
```

Parameter

InstanceId [in]	ID of the related vMem instance.
TargetAddress [in]	Address from which erase job shall start.
Length [in]	Number of bytes that shall be erased: must be <i>SectorSize</i> or if burst is supported also <i>EraseBurstSize</i> is valid.

Return code

Std_ReturnType	E_OK job accepted, E_NOT_OK otherwise
----------------	---------------------------------------

Functional Description

Erases NV memory content of the related address with length number of bytes.
The job status can be polled via vMem_GetJobResult.

Particularities and Limitations**Expected Caller Context**

- > TASK
- > This function is asynchronous.

Table 4-7 vMem_Erase

4.2.7 vMem_IsBlank**Prototype**

```
Std_ReturnType vMem_IsBlank (vMem_InstanceIdType InstanceId, vMem_AddressType  
TargetAddress, vMem_LengthType Length)
```

Parameter

InstanceId [in]	ID of the related vMem instance.
TargetAddress [in]	Address of the page the erased state shall be checked for.
Length [in]	Size of the page that shall be checked.

Return code

Std_ReturnType	E_OK job accepted, E_NOT_OK otherwise
----------------	---------------------------------------

Functional Description
Checks the erased state of the page that is addressed by the given address. If the checked page is blank, the result of the job is VMEM_JOB_OK; otherwise if the page is not erased the result is VMEM_MEM_NOT_BLANK. The job status can be polled via <code>vMem_GetJobResult</code> .
Particularities and Limitations
Expected Caller Context
> TASK > This function is asynchronous.

Table 4-8 vMem_IsBlank

4.2.8 vMem_GetJobResult

Prototype	
vMem_JobResultType vMem_GetJobResult (vMem_InstanceIdType InstanceId)	
Parameter	
InstanceId [in]	ID of the related vMem instance.
Return code	
vMem_JobResultType	Most recent job result.
Functional Description	
Returns the job result.	
Particularities and Limitations	
Expected Caller Context	
> TASK > This function is synchronous.	

Table 4-9 vMem_GetJobResult

4.3 Services used by vMem

In the following table services provided by other components, which are used by the vMem are listed. For details about prototype and functionality refer to the documentation of the providing component.

If the vMem is used as an adapter to a FI's Driver the services of the corresponding Driver are used, otherwise these are implemented in the vMem itself.

Component	API
DET	Det_ReportError

Table 4-10 Services used by the vMem

5 Configuration

In the vMem the attributes can be configured according to/ with the following methods/ tools:

- > DaVinci Configurator 5 (recommended)
- > AUTOSAR Generic Configuration Editor (GCE)

5.1 Configuration Variants

The vMem supports the configuration variants

- > `VARIANT-PRE-COMPILE`

5.2 Configuration with DaVinci Configurator

The configuration parameters are generally well described within the tool and the vMem_base_bswmd.arxml file.

6 Glossary and Abbreviations

6.1 Glossary

Term	Description
Flash Bootloader	Flash Bootloader gives you a universal and compact solution for reprogramming ECUs quickly, efficiently and securely.

Table 6-1 Glossary

6.2 Abbreviations

Abbreviation	Description
API	Application Programming Interface
AUTOSAR	Automotive Open System Architecture
BSW	Basis Software
DET	Development Error Tracer
DFLASH	Data Flash
ECU	Electronic Control Unit
EcuM	ECU Manager
Fee	Flash EEPROM Emulation
FPT	Function Pointer Table
HSM	Hardware Security Module
ISR	Interrupt Service Routine
MemIf	Memory Abstraction Interface
MICROSAR	Microcontroller Open System Architecture (the Vector AUTOSAR solution)
NV, NVRAM	Non Volatile Random Access Memory
NvM	NVRAM Manager
OTA	Over The Air
OTP	One Time Programmable
PFlash	Program Flash
vFlsAcc	Vector Flash Access (Adapter between AUTOSAR memory stack and other components, e.g. the OTA memory stack)
vMem	Vector Memory (Driver)
vMemAccM	Vector Memory Access Manager
vSwUpdM	Vector Software Update Manager

Table 6-2 Abbreviations

7 Contact

Visit our website for more information on

- > News
- > Products
- > Demo software
- > Support
- > Training data
- > Addresses

www.vector.com