



JL02 User Manual

hk.kaadas.com

KS DIGITAL COMPANY LIMITED reserves all rights for the final interpretation of this user manual.
All design and specifications are subject to change without notice.

Dear customers,

Thank you for choosing our smart lock.

Please check the package content and read the installation instruction carefully before you install this lock, and then install the product according to the instruction.

Our company will not assume any responsibility for direct or indirect product problems, other damages and losses if you don't follow the instruction to install.

Content

1 Important Information

Safety instruction

Warning

Disposal of used battery and lock

2 Installing your smart lock

Package contents

Lock explosive view

Before installation

Installation steps

3 Overview

Outside escutcheon

Inside escutcheon

4 Setting your smart lock

Set up pre-instructions

The master mode for the first time

User settings

5 Using your smart lock

Outdoor unlock

Mechanical key unlock

Outdoor / indoor locking and indoor reverse locking

Restart the system

Enter the master mode with the master fingerprint

6 Other functions

Restore to factory settings

Emergency power supply

Replace battery

7 Connect to the Kaadas Lock APP

1 Important Information

Safety instruction

- ◆ Read and understand all instructions before using this smart lock. Damages caused by failure to follow instructions is not covered by the warranty.
- ◆ It is recommended to use the enclosures/accessories specified by the company.
- ◆ Only use the lithium battery configured in this product.
- ◆ Do not forcibly disassemble this product in order to avoid alarm sound or damage to the product.
- ◆ Do not scratch the fingerprint reader with sharp objects, otherwise it may cause permanent long-term damage.
- ◆ Do not expose the product to corrosive substances, so as not to damage the outer protective layer.
- ◆ Do not hang objects on the handle, so as not to affect the normal use of the door lock.
- ◆ Cleaning the product, please wipe it with a soft cloth.
- ◆ Do not disassemble the battery while the device is operating.
- ◆ Please choose a professional engineer to install the door lock and follow the company's standard installation instruction , and do not install it by yourself .
- ◆ After the door lock is installed , please modify the default master PIN code immediately and keep the mechanical key in a safe place. Don't disclosure PIN code to the unknown person.
- ◆ When low battery alarm is triggered, please replace all the batteries.

Warning

- ◆ Do not place battery close to fire in case of explosion.
- ◆ Do not short-circuit the two poles of the battery lead with metal objects to avoid explosion.
- ◆ Do not let it happened connection of two terminals of battery lead shorted with metal objects in case of explosion.
- ◆ Making sure replacement or maintenance are done by professional person authorized by Kaadas.
- ◆ Your warranty may invalidate if you used accessories produced by other manufacturer or not recommended by Kaadas.

Disposal of used battery and lock

- ◆ Please understand the local electronic product classification and collection system.
- ◆ Please follow the local regulations and do not discard used batteries into ordinary household garbage.
- ◆ Properly disposing of used products helps to avoid potential negative impacts on the environment and human health.
- ◆ The battery can not be disposed of with ordinary household garbage.


2 Installing your smart lock

Package contents


This package list is for reference only, and all contents are subject to the actual packaging contents.




Front panel
(with rubber
gasket)

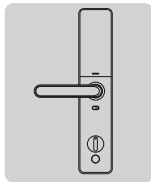


Back panel
(with rubber
gasket)

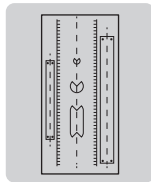


Drilling Template

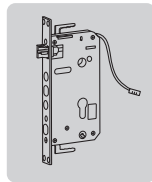


Mortise

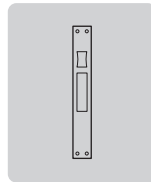


Strike plate

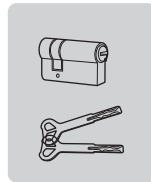

Mechanical key
and lock cylinder

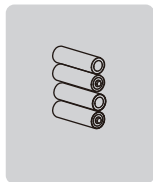

Batteries

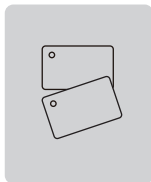

Cards




Screw pack



User manual

Lock explosive view

This lock explosive view is helpful to learn lock's structure.

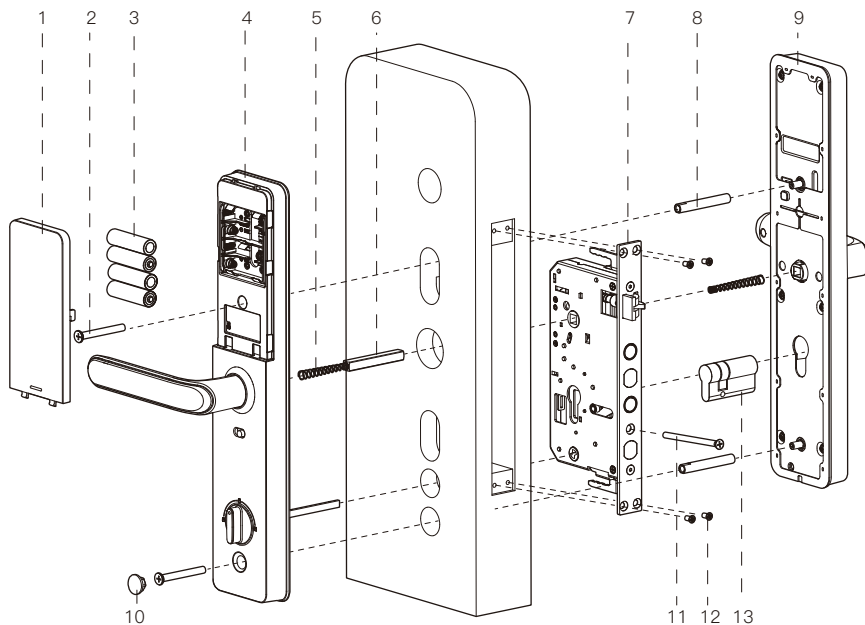


1. Battery cover
2. Fixed Screws (2PCS)
3. Batteries (4PCS)
4. Back Panel Assembly
5. Pressure Springs
6. Square shaft
7. Mortise
8. Screw Post (2PCS)
9. Front Panel Assembly
10. Rubber Stopper
11. Cylinder Screw
12. Mortise Screws (4PCS)
13. Cylinder


Before installation

Check door opening direction prior to installation.


Right-out

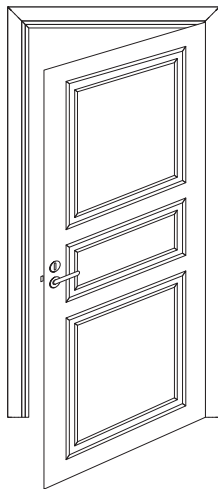


Right-in

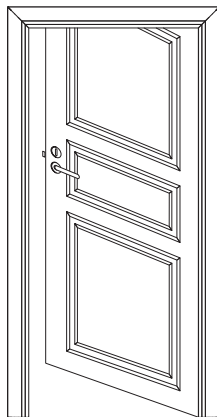


Left-out

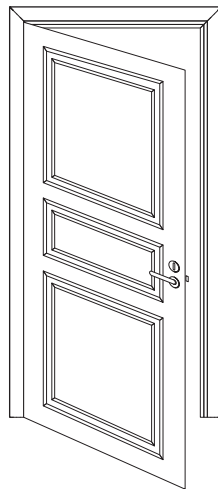

Left-in

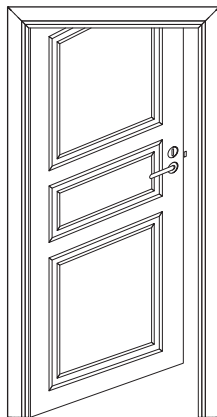


Latch direction change

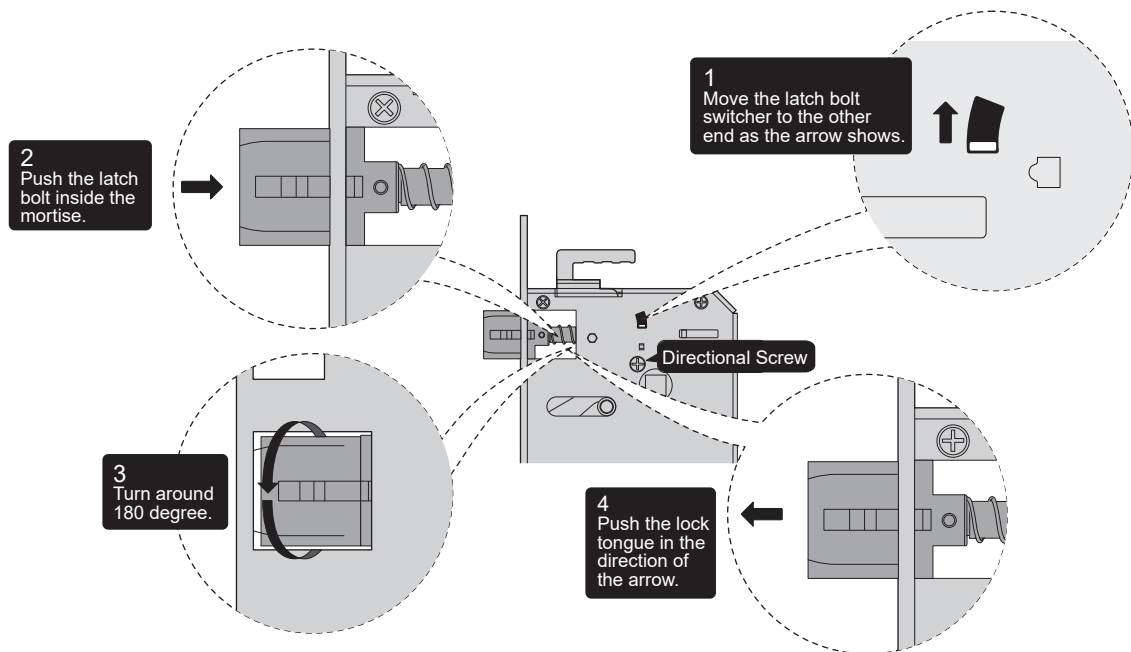


Note: According to the door opening direction requirements, change the direction of the directional screw (the directional screw must be installed on the inside of the door, the side with the directional screw, the side must be the inside escutcheon).

Switch the direction of the handle

Outside escutcheon handle shift

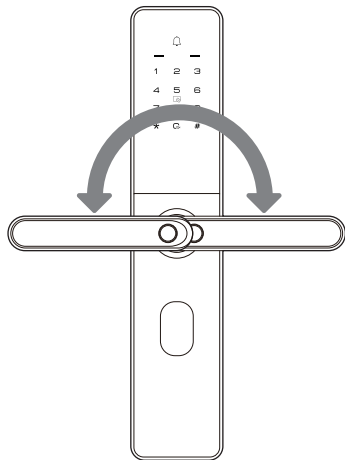


Rotate for 180° to the correct position.

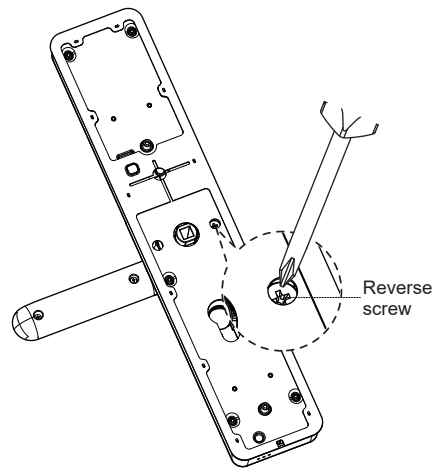


Remove the reversing screw from the kit and install it as shown.

Inside escutcheon handle shift

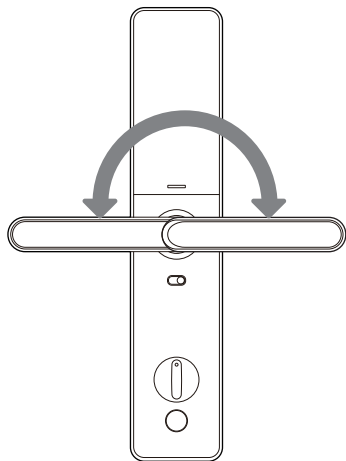


Rotate for 180° to the correct position.

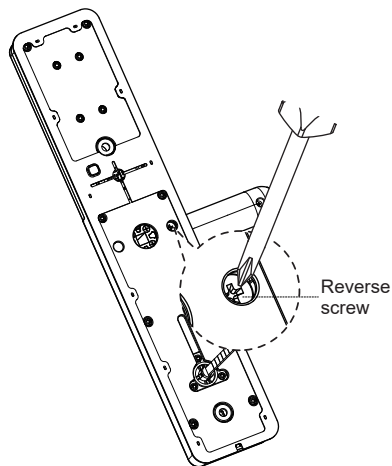


Remove the reversing screw from the kit and install it as shown.

Note: Select accessory kits of different specifications according to the thickness of the door. The accessory kits with the default factory settings are applicable to doors with a thickness of 38-120mm. If your door has a different specification, please contact us in a timely manner.


Installation steps

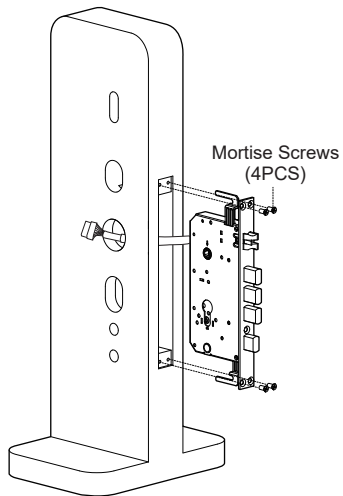


Drill the holes on the door according to the template, Insert the mortise into the door frame, and tighten the fixing screws.

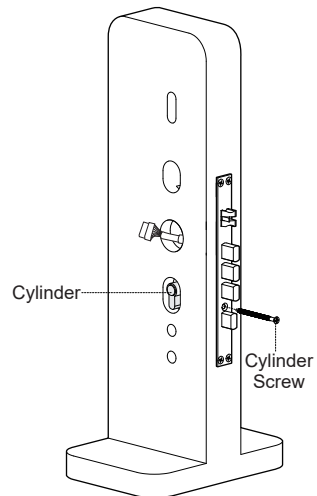

Keep the cylinder in the closed position, insert it into the mortise accordingly, and tighten the screw to secure it.

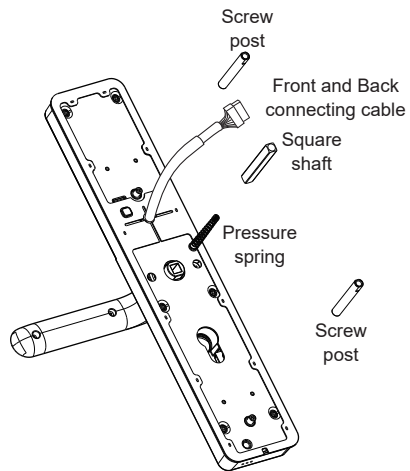


Install the screw post on the front panel.

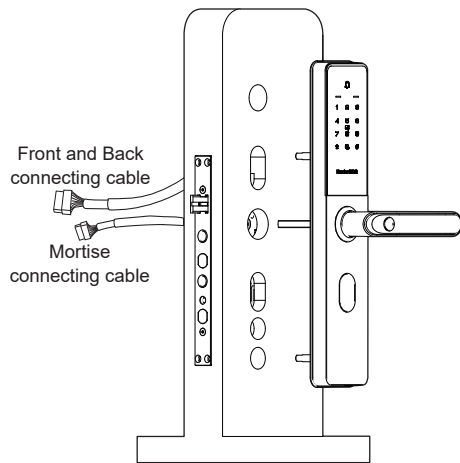


Pass the cables through the hole of the mortise.


Note: Ensure the anti-pry switch is pressed tightly against the door surface; otherwise, an alarm will sound when powered on.

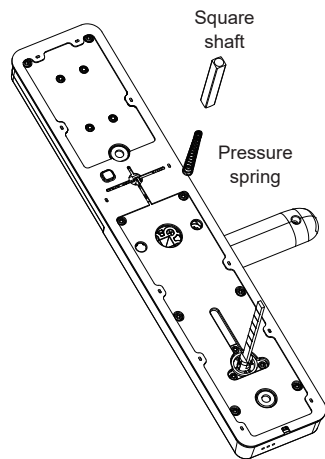

Install the square shaft and the pressure spring into the hole, and cut the thumb turn spiddle to size.

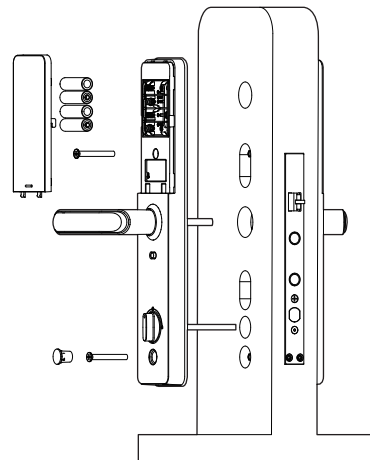


Secure the screws, insert 4 AA batteries, and close the battery cover.

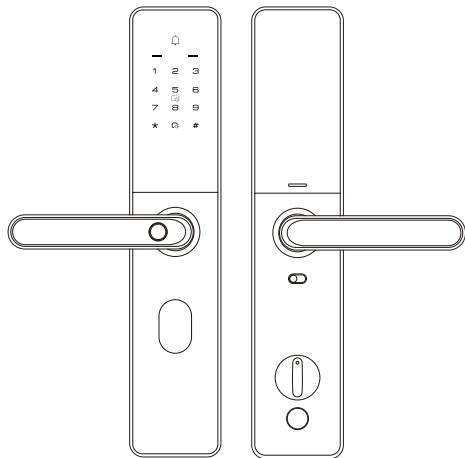


Check the front and rear panels, and ensure that all components are properly connected.

3 Get to know your smart lock

Front panel

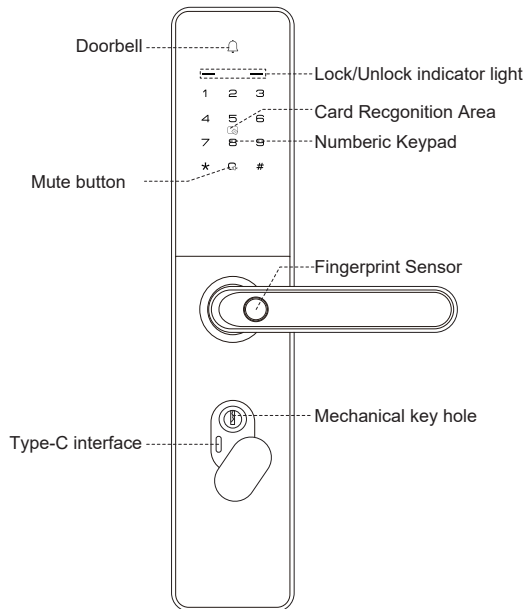

Back panel

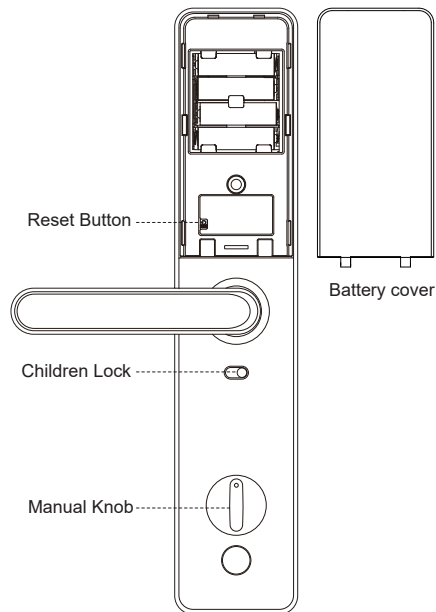

4 Set up your smart lock

Set up pre-instructions

The system mode of this lock is divided into security mode and normal mode. The factory default system mode is normal mode.

Credential	Security mode	Normal mode
Master PIN code	Dedault Master PIN code: 12345678	Dedault Master PIN code: 12345678
User PIN code	20 groups (Commonly used + Temporary)	20 groups (Commonly used + Temporary)
Fingerprint capacity	100 groups (99 groups Commonly used +and 1 group Master)	100 groups (99 groups Commonly used +and 1 group Master)
Card capacity	100 groups	100 groups
Access to master mode	Enter master pin code or master fingerprint (Please don't setting the master fingerprint and commonly used fingerprint as the same fingerprint.)	Enter master pin code or master fingerprint (Please don't setting the master fingerprint and commonly used fingerprint as the same fingerprint.)



Before setting the security mode, you must enter any two of the password, card, and fingerprint.


Dummy passwords are supported both before and after the user password.

Entering Master mode for the first time

1. Wake up touchscreen keypad with palm.
2. Press [*] twice, input master PIN code, and press [#] to confirm.
3. Voice prompts: Please change the master pin code and end it with the # key.

Note:

1. Change default master PIN code is required code.
2. Default master PIN code is **12345678**.

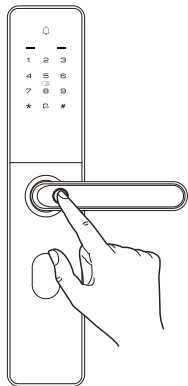

Change master PIN code

Note:

To change master PIN code from the second time, pls follow below operation.

User settings

In master mode

1 1 1

Press 1 to enter user settings, then press 1 to enter add normal general user, then press 1 to add pin code, follow the voice prompts to enter the password until the voice prompts: enrollment successful.

1 1 2

Press 1 to enter user settings, then press 1 to enter add normal general user, then press 2 to add fingerprint, follow the voice prompts to add fingerprint until the voice prompts: enrollment successful.

1 1 3

Press 1 to enter user settings, then press 1 to enter add normal general user, then press 3 to add access card, follow the voice prompts to add access card until the voice prompts: enrollment successful.

1 1 4

Press 1 to enter user settings, then press 1 to enter add normal general user, then press 4 to add one time pin code, follow the voice prompts to add one time pin code until the voice prompts: enrollment successful.

Add master user

In master mode

1 2 1

Press 1 to enter user settings, then press 2 to enter add user, then press 1 to add master pin code, follow the voice prompts to enter the password until the voice prompts: enrollment successful.

1 2 2

Press 1 to enter user settings, then press 2 to enter add user, then press 2 to add master, master fingerprint, follow the voice prompts to place the fingerprint on the reader, until the voice prompts: enrollment successful.

Delete User

In master mode

User number deletion

1 3 1 1

Press 1 to enter user settings, then press 3 to enter delete user, press 1 to delete single user, then press 1 to delete single pin code, follow the voice prompts to enter the user number until the voice prompts: deletion successful.

1 3 1 2

Press 1 to enter user settings, press 3 to enter delete user,

press 1 to delete single user, then press 2 to delete single fingerprint, follow the voice prompts to enter the user number until the voice prompts: deletion successful.

1 3 1 3

Press 1 to enter user settings, then press 3 to enter delete user, press 1 to delete single user, then press 3 to delete single card, follow the voice prompts to enter the user number until the voice prompts: deletion successful.

Delete all users

1 3 2 1

Press 1 to enter user settings, press 3 to enter delete users, press 2 to enter delete all users, then press 1 to delete all pin code, follow the voice prompts: deletion successful, pin code database is empty.

1 3 2 2

Press 1 to enter user settings, press 3 to enter delete users, press 2 to enter delete all users, then press 2 to delete all fingerprint, follow the voice prompts: deletion successful, access card database is empty.

1 3 2 3

Press 1 to enter user settings, press 3 to enter delete users, press 2 to enter delete all users, then press 3 to delete all cards, follow the voice prompts: deletion successful, fingerprint database is empty.

System settings

In master mode

Voice settings

2 1 1 or 2 or 3

Press 2 to enter the system settings, and then press 1 to enter the voice settings.

Press 1 to set to high volume;

Press 2 to set to low volume;

Press 3 to set voice guide off.

Note:

1. In silent mode, there will be no voice prompts in the entire system, in addition to the alarm sound and operation management menu.

2. You also can press the  key for a little moment to switch to voice guide off or voice guide on.

Enable dual-verification

2 4

Press 2 to enter the system settings, then press 2 to enable dual-verification, and the voice prompt Display: Setup successful.

Passage mode settings

2 3

Press 2 to enter the system settings, then press 2 to enable (or disable) passage mode, and the voice prompt Display: Setup successful.

Note:

When you enable the passage mode, the door will remain open. When verification via PIN code, fingerprint, or card is successful, the passage mode will be disabled. Alternatively, enter the menu to turn it off.

Network Settings

In master mode

Connect to the network

4 or 1 or 2

Press 4 to enter Network Setting.

press 1 to join network.


press 2 to log off a network network.

In the mobile application market, search for the "kaadas Lock" app, then download and install it. After logging in, follow the instructions in the app to add devices and complete the network configuration.

5 Using your smart lock

Outdoor unlocking(Common Mode)

Unlock by PIN code

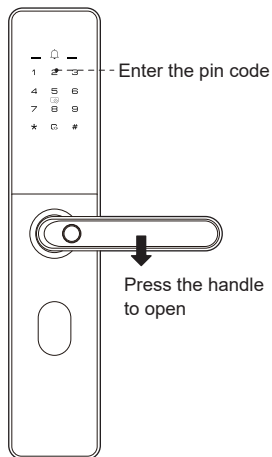


Touch the digital key area in Normal mode wake up the system. Enter those enrolled PIN code with end of #, Voice prompt "Verification successful. "




In security mode, double verification is required for opening door. 1. PIN Code + Fingerprint 2. PIN Code + Card
3. Fingerprint + Card

Unlock by Fingerprint

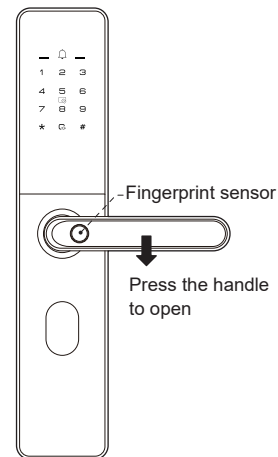

In Normal mode, place the enrolled finger properly on the fingerprint sensor area until one beep sound. Voice prompt"Verification successful. "

Unlock by Card

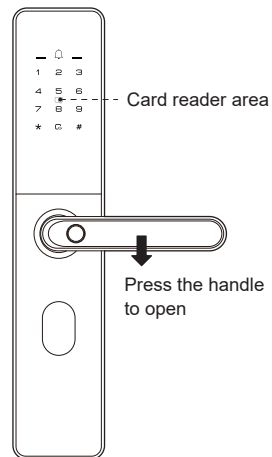


Place the enrolled card properly on the fcard icon area until one beep sound. Voice prompt"verification successful."

Mechanical key unlock

If there is an emergency such as forgetting the password, battery depletion, or the system is unable to start, use the spare mechanical key to unlock the lock.


Open the mechanical key cover, expose the mechanical key hole, insert the mechanical key into the mechanical key hole and turn, you can push or pull to unlock the lock.

Mechanical key cover opening method: Gently press the top of the mechanical keyhole cover, buckle from the bottom of the mechanical key cover, and rotate at 90°.

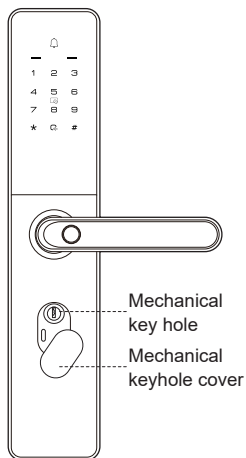


Lock from outdoor/Lock from indoor/Indoor anti-lock

1. Lock from outdoor




Turn the handle upward to lock the deadbolt

2. Lock from indoor



Turn the handle upward to lock the deadbolt


3. Indoor anti-lock

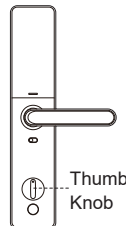

Press and hold the knob inward first, then rotate the knob to the lock icon position to reverse lock. In this case, the outdoor lock cannot be unlocked normally, and you need to unlock it indoors.

Enter master mode using master fingerprint

1. Touch the key area with the palm of your hand to wake up the button, and the keyboard light will light up;
2. Press the * key twice, and then press the master fingerprint on the fingerprint sensor to enter the master mode.

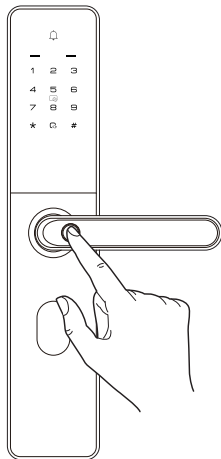

 Please avoid setting the master fingerprint and user fingerprint to be the same.

6 Other functions

Restore factory settings

Step 1:


The device power on.

Step 2:

Double-click the reset button.


Step 3:

Press # key in the keypad.

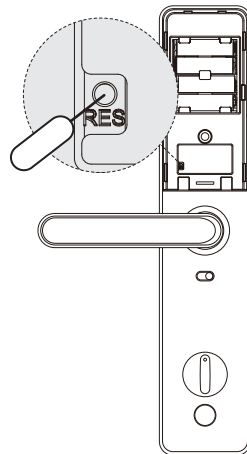


Enter master mode using master fingerprint

1. Touch the key area with the palm of your hand to wake up the button, and the keyboard light will light up;
2. Press the * key twice, and then press the master fingerprint on the fingerprint sensor to enter the master mode.

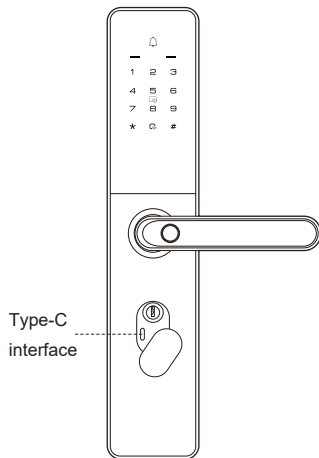

Battery replacement

When the system voice prompts "Low battery, please replace the battery", the battery needs to be replaced in time.

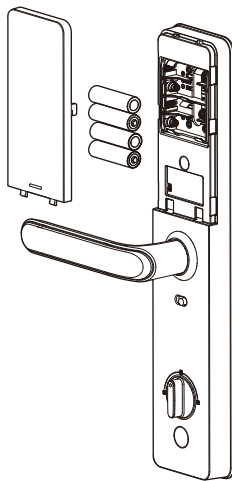

7 Connect to the Kaadas Lock APP

Search in the app store "Kaadas Smart Lock", download and install the Kaadas Smart APP.



a. The door lock currently only supports a WiFi router connected to the 2.4G band (not supported in the 5G band). Ensure the visual distance of the lock and the router shall not exceed 10 meters, otherwise the connection effect will be affected.

b. This product can be networked through the "Kaadas Lock" APP, or scan the battery cover of the product Network QR code, according to the prompt distribution network can be.

溫馨提示:

尊敬的用戶, 您好!感謝您使用本智能鎖, 在您安裝本產品前請仔細核

對產品清單, 閱讀安裝說明書, 並按照安裝說明安裝產品, 若因未按本說明書安裝, 導致的直

接或間接的產品問題, 及其它危害和損失, 我公司不承擔任何責任, 謝謝!

目錄

1 重要訊息

安全

警告

舊產品和電池處理

2 安裝您的智能鎖

產品清單

安裝立體組裝圖

安裝前須知

安裝步驟

3 了解您的智能鎖

前面板

後面板

4 設定您的智能鎖

設定前須知

首次進入管理模式

使用者設定

5 使用您的智能鎖

室外開鎖

機械鑰匙開鎖

室外上鎖/室內上鎖/室內反鎖

室內開鎖/上鎖

用管理指紋進入管理模式

6 其它功能

恢復出廠設定

系統重啟

應急供電方法

電池更換

7 連接凱迪仕APP

1 重要訊息

安全

在使用本智能鎖前, 請閱讀並瞭解所有說明, 因未遵守說明而造成的損壞不在保固範圍內。

建議使用本公司指定的配件。

僅使用本產品配置的電池。

請勿強行拆解本產品, 以免發出警報或損壞產品。

請勿使用尖銳物品刮擦指紋感應器, 否則可能造成永久性損壞。

請勿將產品接觸到腐蝕性物質, 以免破壞外殼保護層。

請勿在執手/手柄上懸掛物件, 以免影響門鎖正常使用。

清潔產品, 請使用柔軟的布擦拭。

請勿在設備操作時拆卸電池。

請您選擇專業的工程師安裝門鎖, 並依照本公司的安裝標準進行操作, 切勿私自拆裝。

門鎖安裝調試合格後, 請第一時間採用凱迪仕智能APP為設備配網操作並妥善保管好機械鑰匙, 不要輕易洩露密碼資訊。

門鎖觸發低電量警報後, 請及時更換充滿電的配套鋰電池。

警告

請勿將電池靠近火源, 以免發生爆炸。

請勿使用不符合安全規定的緊急電源為本產品供電。

請勿用金屬將電池引線的兩極連接短路, 以免造成爆炸。

確保由凱迪仕、凱迪仕授權的服務中心或專業維修人員進行更換。

使用由其它製造商生產的, 或 未經凱迪仕特別推薦的配件或零件, 您的保固可能失效。

舊產品和電池的處理

請自行了解當地的電子產品分類收集系統。

請遵守當地規定, 不要將舊電池丟棄到普通生活垃圾中。

請正確棄置舊電池有助於避免對環境和人類健康造成潛在的負面影響。

電池不可與普通生活垃圾一起處理。


2 安裝您的智能鎖

產品清單本


產品清單僅供參考，一切以實體包裝內容為準。




前面板(含矽膠墊)

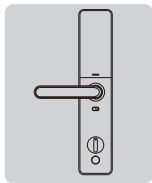


後面板(含矽膠墊)

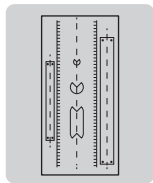


開空孔模板

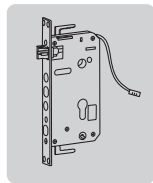


鎖體

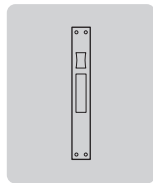


側邊扣板

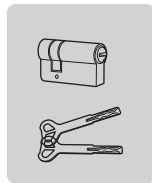

機械鑰匙&鎖芯

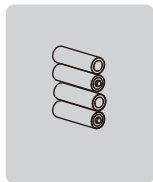

電池

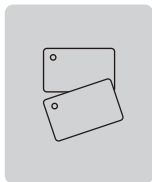

卡片




安裝配件包



使用者手冊

安裝立體組裝圖

了解安裝立體組裝圖, 有利於了解鎖的構造。

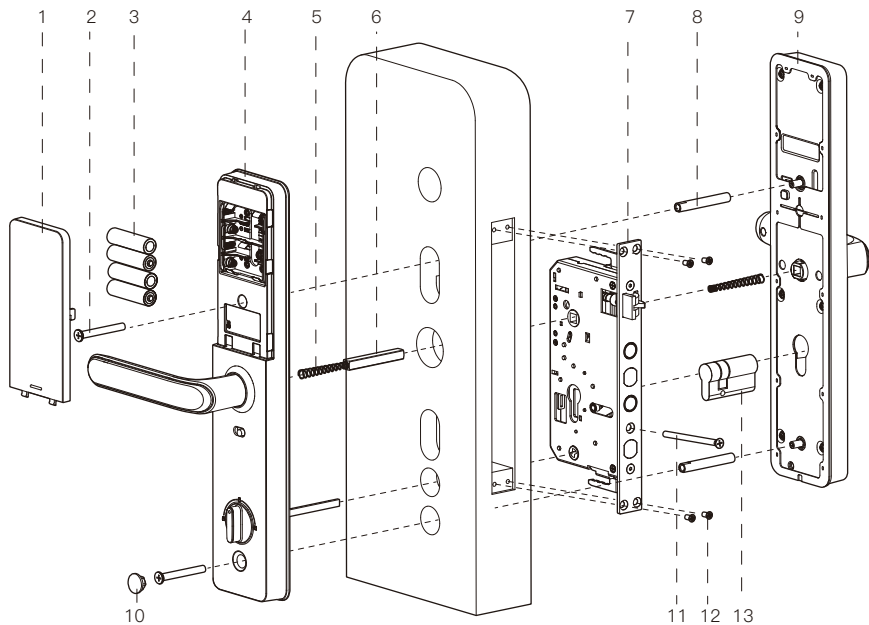


- 1、電池蓋
- 2、固定螺絲 (3個)
- 3、電池 (4個)
- 4、後面板組件
- 5、彈簧 (2個)
- 6、方軸 (2個)
- 7、鎖體
- 8、連接螺絲 (3個)
- 9、前面板組件
- 10、膠蓋
- 11、鎖芯固定螺絲
- 12、鎖體固定螺絲 (4個)
- 13、鎖芯


安裝前須知

安裝前確認開門方向


右外開

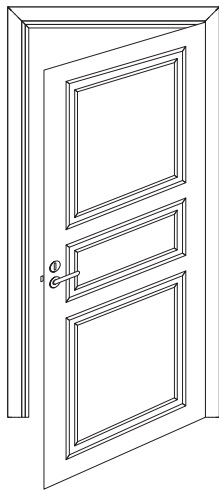


右內開

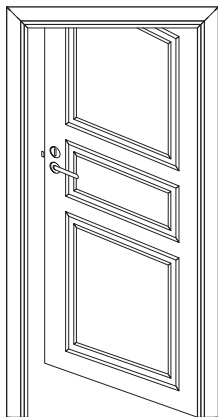


左外開

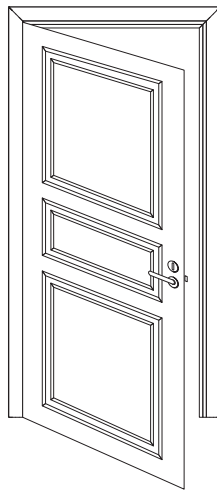

左內開

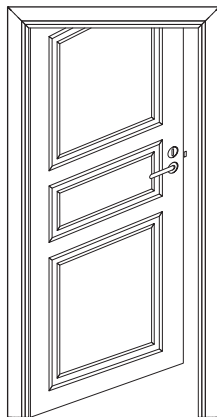


斜舌換向

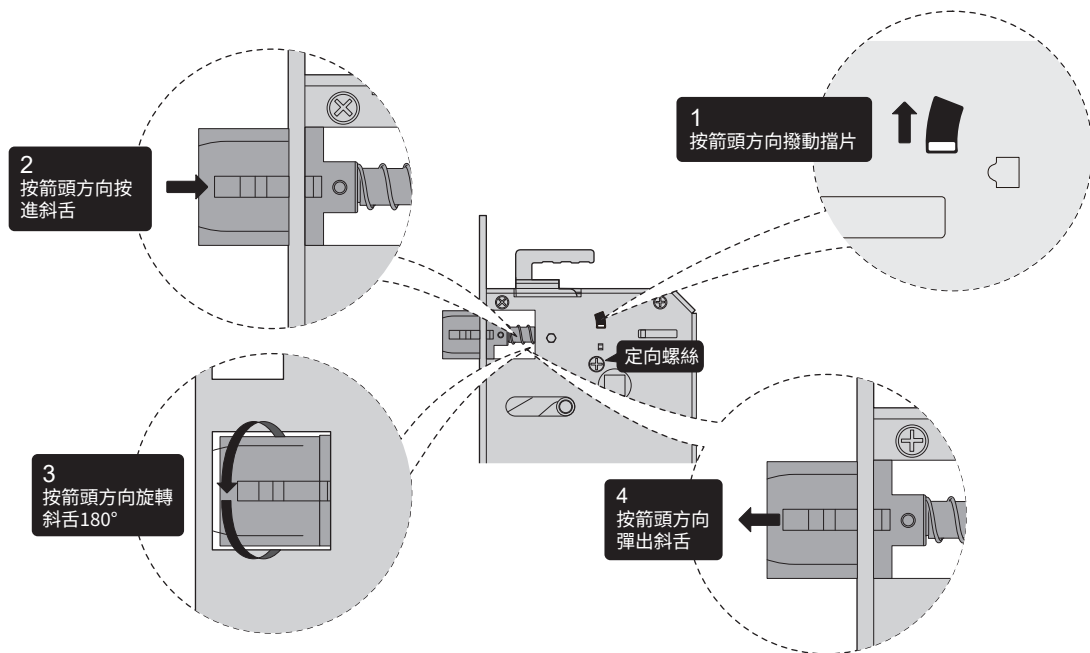


注意：根據內外開門需求,更改定向螺絲方向。(定向螺絲一定要裝在門的內側,哪面裝定向螺絲,哪面必須是後面板)

改變執手方向

前面板執手轉向

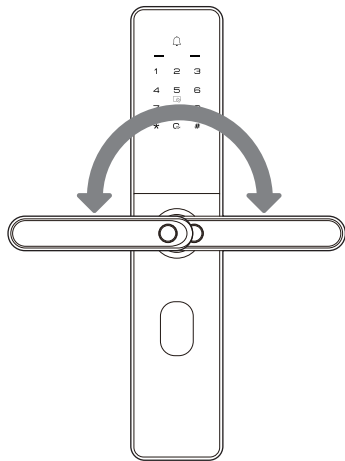


旋轉180°至正確位置。

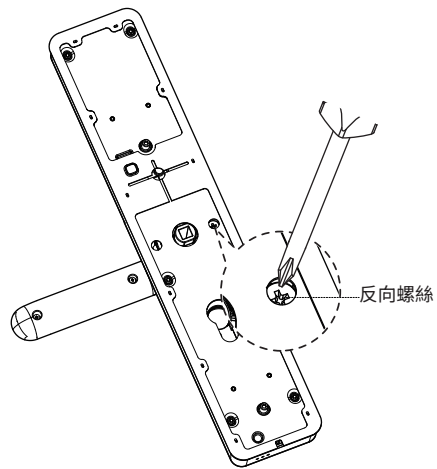


擰緊換向螺絲。

後面板執手轉向

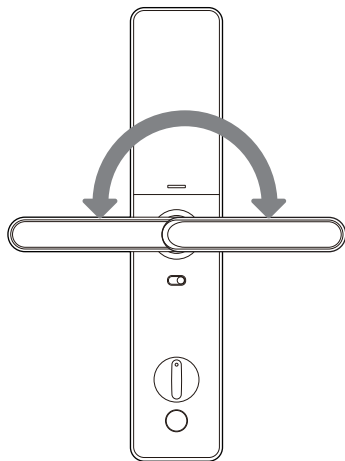


旋轉180°至正確位置。

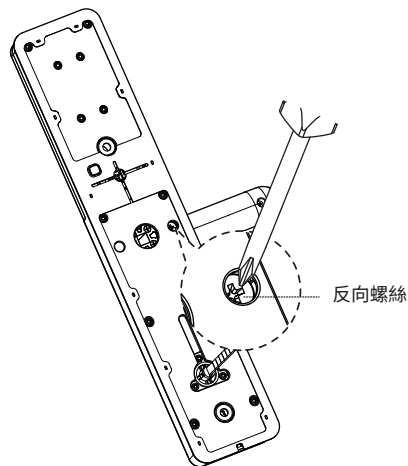


擰緊換向螺絲。

注意：請依照車門的厚度選擇不同規格的配件套裝。出廠預設配置的配件套裝適用於厚度為 38-120 毫米的車門。如果您的門厚度不同，請及時與我們聯繫。


安裝步驟

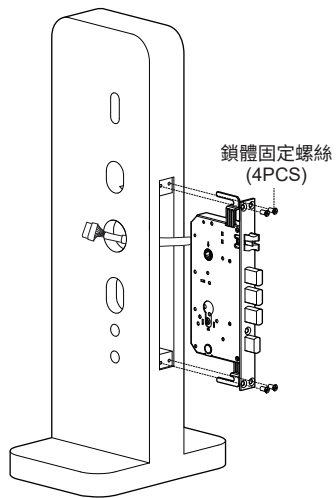


依照開孔模板在門上開好孔將鎖體放入門框內，旋緊固定螺絲。

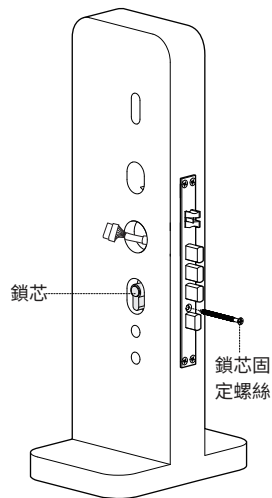

將葫蘆頭鎖心放入鎖體對應位置，然後鎖緊螺絲固定葫蘆頭鎖心。

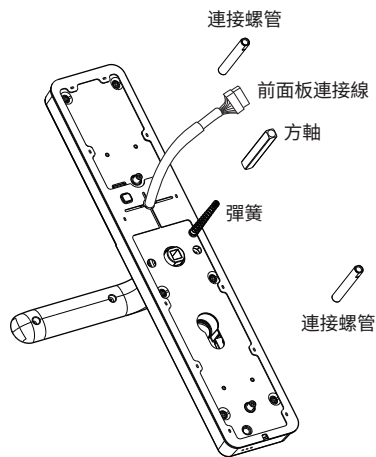


在前面板上裝上連接螺管。

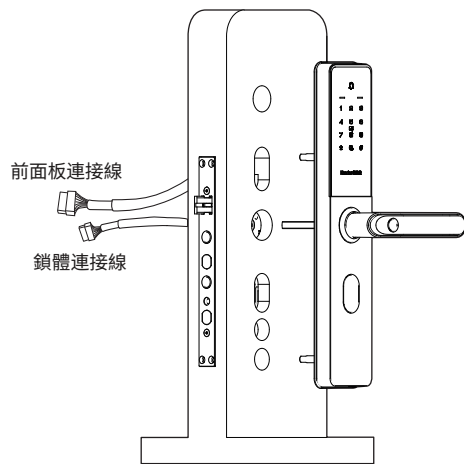


將連接線穿過鎖體的過線孔。


注意:防撬開關應緊貼門面,否則一旦通電將發出警報聲。

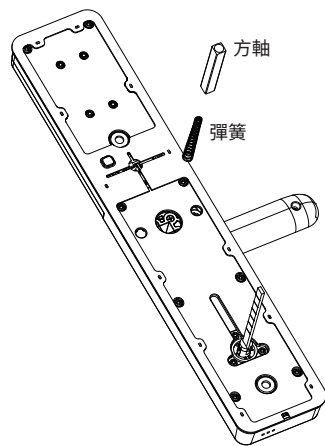

把方軸和彈簧放入後方的方軸孔中。（壓簧大頭部分朝向執手方向）


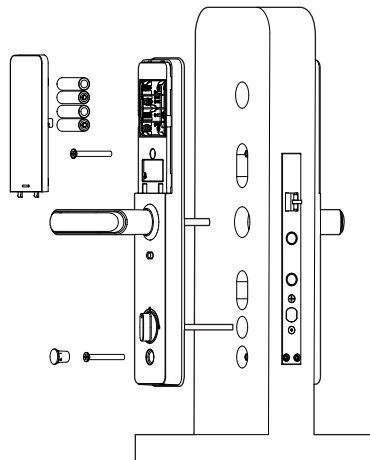


前面板連接線和鎖體連接線插入後面板對應的接口，方軸對準後面板方軸孔，後面板緊貼門面，旋緊螺絲，固定前面板，在後面板上裝上電池，並合上電池蓋。

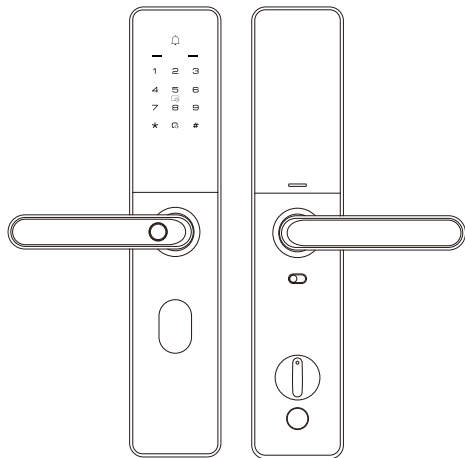

檢查前、後面板等，各個部件是否連接完好。

3 了解您的智能鎖

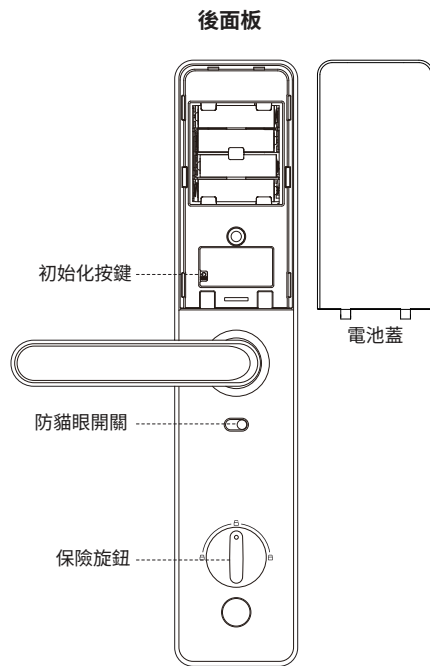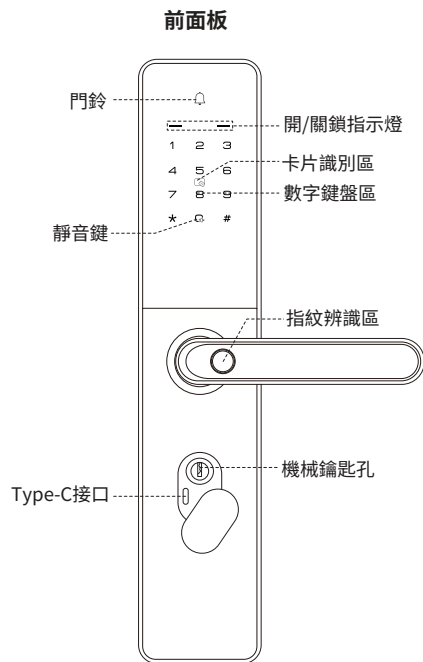

4 設定您的智能鎖

設定前須知

本鎖的系統模式分為安全模式和常用模式；出廠預設系統模式為常用模式。

	安全模式	常用模式
管理密碼	有初始管理密碼 12345678	有初始管理密碼 12345678
使用者密碼	20組(常用密碼+臨時密碼)	20組(常用密碼+臨時密碼)
使用者指紋	100組(99組常用指紋, 1組管理指紋)	100組(99組常用指紋, 1組管理指紋)
使用者卡片	100組	100組
進入管理模式的方法	透過輸入管理密碼或輸入管理指紋 (請避免把管理指紋和使用者指紋設定為同一個)	透過輸入管理密碼或輸入管理指紋 (請避免把管理指紋和使用者指紋設定為同一個)



設定安全模式前,必須先錄入密碼、卡片、指紋三者中任兩個; 使用者密碼前後都支援虛位密碼(使用者密碼和虛位密碼一起不超過20位)。


防貓眼開關開啟以後, 室內無法開門, 有效防止透過貓眼開鎖, 幼童寵物誤開。

首次進入管理模式

- 1、用手掌面觸摸按鍵區喚醒按鍵，鍵盤燈點亮。
- 2、先按*鍵兩次，再輸入管理密碼，按#鍵確認。
- 3、語音提示：請修改管理密碼，以#，號鍵結束。

注意：

- 1、如果管理密碼為初始密碼，請先修改管理密碼。
- 2、初始管理密碼：**12345678**

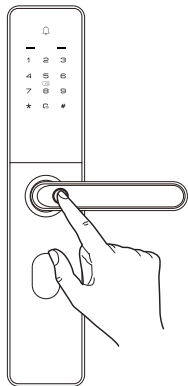

使用者設定

新增普通用戶

新增使用者時，門鎖自動辨識新增密碼、指紋、卡片，使用者直接新增對應的鑰匙類型即可。

在管理模式下：

1 1 1

按1鍵進入用戶設置，再按1鍵進入新增一般用戶，再按1鍵進入新增密碼，輸入新的用戶密碼，按#鍵確認，再次輸入用戶密碼，按#鍵確認，語音提示：新增成功。

1 1 2

按1鍵進入用戶設置，再按1鍵進入新增一般用戶，再按2鍵進入新增指紋，輸入新用戶指紋，直到語音提示：新增成功。

1 1 3

按1鍵進入用戶設置，再按1鍵進入新增一般用戶，再按3鍵進入新增卡片，輸入新的用戶卡片，語音提示：新增成功。

1 1 4

按1鍵進入用戶設置，再按1鍵進入新增一般用戶，再按4鍵進入新增臨時密碼，輸入新的臨時密碼，按#鍵確認，再次輸入臨時密碼，按#鍵確認，語音提示：新增成功。

新增管理密碼

在管理模式下：



按1鍵進入用戶設置，再按2鍵進入新增管理用戶，再按1鍵進入新增管理指紋，輸入新的管理密碼，按#鍵確認，語音提示：新增成功。

新增管理指紋

在管理模式下：



按1鍵進入用戶設置，再按2鍵進入新增管理用戶，再按1鍵進入新增或修改管理指紋，輸入新的管理指紋，直到語音提示：設定成功。

刪除用戶

在管理模式下：



按1鍵進入用戶設置，再按3鍵進入刪除用戶，再按1鍵進入編號刪除，再按1鍵進入刪除單一密碼，再輸入兩位編號，按#鍵確認，語音提示：刪除成功。



按1鍵進入用戶設置，再按3鍵進入刪除用戶，再按1鍵進入編號刪除，再按2鍵進入刪除單一指紋，再輸入兩位編號，按#鍵確

認，語音提示：刪除成功。



按1鍵進入用戶設置，再按3鍵進入刪除用戶，再按1鍵進入編號刪除，再按3鍵進入刪除單張卡片，再輸入兩位編號，按#鍵確認，語音提示：刪除成功。

刪除全部用戶

在管理模式下：



按1鍵進入用戶設置，再按3鍵進入刪除用戶，再按2鍵進入刪除全部用戶，再按1鍵進入刪除全部密碼，語音提示：刪除成功。



按1鍵進入用戶設置，再按3鍵進入刪除用戶，再按2鍵進入刪除全部用戶，再按1鍵進入刪除全部指紋，語音提示：刪除成功。



按1鍵進入用戶設置，再按3鍵進入刪除用戶，再按2鍵進入刪除全部用戶，再按1鍵進入刪除全部卡片，語音提示：刪除成功。

系統設定

語音設定

在管理模式下：

2 **1** **1** 或 **2** 或 **3**

按2鍵進入系統設置，再按1鍵進入語音設置，

按1鍵：高音量

按2鍵：低音量

按3鍵：靜音

語音提示：設定成功。（系統預設：高音量）

開啟（關閉）雙重驗證（安全模式）

在管理模式下：

2 **4**

在管理模式下，按2鍵進入系統設置，再按4鍵進入開啟（關閉）

雙重模式，語音提示：設定成功。（系統預設：關閉）。

網路設定

在管理模式下：


4 或 **1** 或 **2**

在管理模式下，按4鍵進入網路配置，按1鍵加入網路，按2鍵退出網路。

5 使用您的智能鎖


室外開鎖(常用模式)

密碼開門

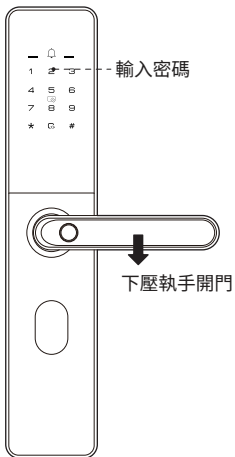


常用模式下觸碰數字鍵區域，喚醒系統。
在數字鍵區輸入已新增的密碼，按#確認。
語音提示：驗證成功，請開門。

卡片開門

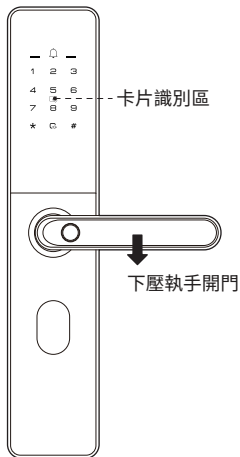

常用模式下直接將已經添加指紋的手指放到指紋感應器上；語音提示：驗證成功，請開門。

指紋開門

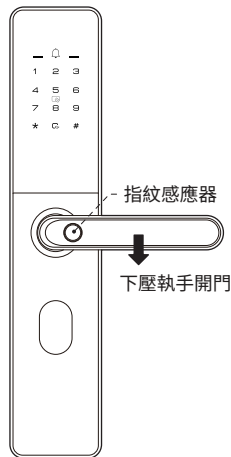

常用模式下將已新增的卡片放置卡片識別區；語音提示：驗證成功，請開門。


⚠ 安全模式下，需要密碼、卡片、指紋三者中任兩個雙重驗證才能開鎖。

機械鑰匙開鎖


若出現忘記密碼、電瓶耗盡或系統無法啟動等緊急狀況，可使用備用機械鑰匙開鎖。摺開機械鑰匙蓋，露出機械鑰匙孔，將機械鑰匙插入機械鑰匙孔並轉動，即可推或拉動門開鎖。

機械鑰匙蓋打開方法：

輕輕用力按住機械鑰匙孔蓋頂端，從機械鑰匙蓋底部扣開，同時90°旋轉即可打開。

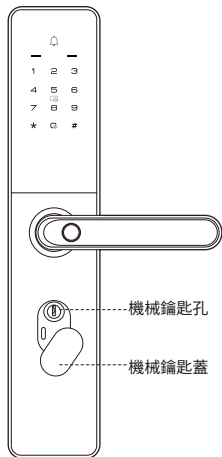


室外上鎖/室內上鎖/室內反鎖

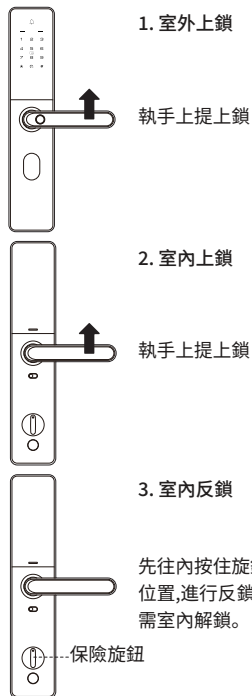

用管理指紋進入管理模式


- 1、用手掌面觸摸按鍵區喚醒按鍵，鍵盤燈點亮；
- 2、先按*鍵兩次，再在指紋感應器上按壓管理指紋；即可進入管理模式。

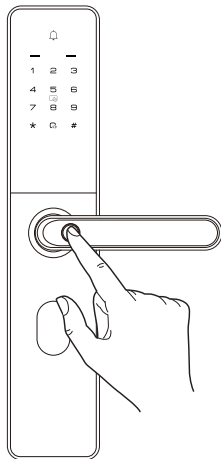

6 其它功能

恢復出廠設置


若您不慎遺忘管理密碼，可拆開後面板飾板在通電狀態下，雙擊初始化按鍵，待語音提示「繼續恢復出廠請按#鍵，返回請按*鍵」，選擇#鍵恢復出廠設定。

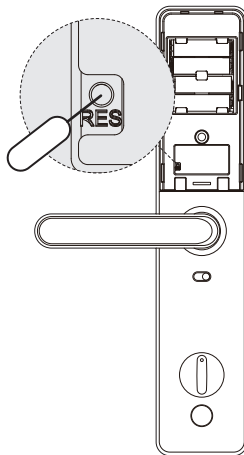

 請避免把管理指紋和使用者指紋設定同一個。


應急供電方法

當電池電壓不足時，無法從外部開啟時，您可以透過使用5V充電寶作為緊急電源，透過USB Type-C介面為門鎖上電，打開門鎖後，請立即更換電池。

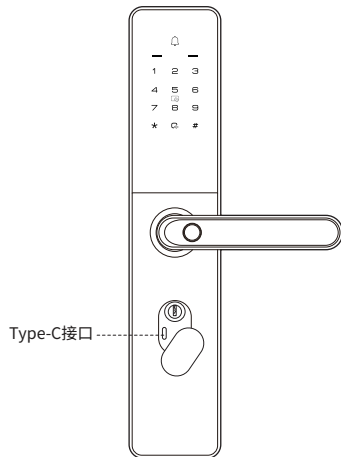

電池更換

電池更換提示：當系統語音提示「電量低請更換電池」時，需及時更換電池。

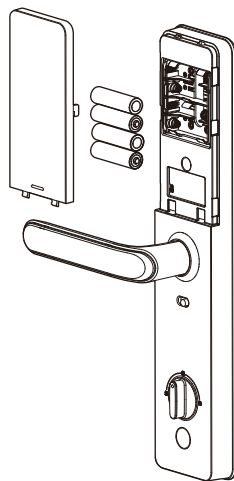

7 連接凱迪仕APP



掃描二維碼或在應用
商店搜索“凱迪仕智
能”，下載並安裝凱
迪仕APP

a. 門鎖目前僅支援連接2.4G頻段的WiFi路由器（5G頻段不支援），請確保路由器門鎖的可視距離不超過10米，否則會影響連線效果。

b. 本產品可透過「凱迪仕智能」APP實現產品連網功能，或掃描產品電池蓋上的配網二維碼，依照指示配網即可。

佳迪數位有限公司

KS DIGITAL COMPANY LIMITED

地址: 新界火炭坳背灣街57-59號利達工業中心6樓622室

Address: FLAT/RM 622, 6/F, Leader Industrial Centre, 57-59 Au Pui Wan Street, Fo Tan, N.T., Hong Kong

聯絡電話 / TEL: 38455613 官方網站 / Website: hk.kaadas.com