



JL05 User Manual

hk.kaadas.com

KS DIGITAL COMPANY LIMITED reserves all rights for the final interpretation of this user manual.
All design and specifications are subject to change without notice.

Dear customers,

Thank you for choosing our smart lock.

Please check the package content and read the installation instruction carefully before you install this lock, and then install the product according to the instruction.

Our company will not assume any responsibility for direct or indirect product problems, other damages and losses if you don't follow the instruction to install.

Content

1 Important Information

- Safety instruction
- Warning
- Disposal of used battery and lock

2 Installing your smart lock

- Package contents
- Lock explosive view
- Before installation
- Latch direction change
- Installation steps

3 Overview

- Front panel
- Back panel

4 Setting your smart lock

- WiFi Pairing
- Door lock installation and setup
- Adding user and user credential
- Adding via App
- Add inlocal management mode
- Prior to setting up

5 Using your smart lock

- Unlock from outside
- Unlock by mechanical key
- Unlocking by quickly unlock handle
- Unlock/lock from inside
- Defense mode
- Volume adjustment
- Doorbell function
- Indoor anti-lock
- Inside display screen

6 Other functions

- Restore to factory settings
- System reboot
- Emergency power supply
- Charging inside the door
- Replace battery

1 Important Information

Safety instruction

- ◆ Read and understand all instructions before using this smart lock. Damages caused by failure to follow instructions is not covered by the warranty.
- ◆ It is recommended to use the enclosures/accessories specified by the company.
- ◆ Only use the lithium battery configured in this product.
- ◆ Do not forcibly disassemble this product in order to avoid alarm sound or damage to the product.
- ◆ Do not scratch the fingerprint reader with sharp objects, otherwise it may cause permanent long-term damage.
- ◆ Do not expose the product to corrosive substances, so as not to damage the outer protective layer.
- ◆ Do not hang objects on the handle, so as not to affect the normal use of the door lock.
- ◆ Cleaning the product, please wipe it with a soft cloth.
- ◆ Do not disassemble the battery while the device is operating.
- ◆ Please choose a professional engineer to install the door lock and follow the company's standard installation instruction , and do not install it by yourself .
- ◆ After the door lock is installed , please modify the default master PIN code immediately and keep the mechanical key in a safe place. Don't disclosure PIN code to the unknown person.
- ◆ When low battery alarm is triggered, please replace all the batteries.

Warning

- ◆ Do not place battery close to fire in case of explosion.
- ◆ Do not short-circuit the two poles of the battery lead with metal objects to avoid explosion.
- ◆ Do not let it happened connection of two terminals of battery lead shorted with metal objects in case of explosion.
- ◆ Making sure replacement or maintenance are done by professional person authorized by Kaadas.
- ◆ Your warranty may invalidate if you used accessories produced by other manufacturer or not recommended by Kaadas.


Disposal of used battery and lock

- ◆ Please understand the local electronic product classification and collection system.
- ◆ Please follow the local regulations and do not discard used batteries into ordinary household garbage.
- ◆ Properly disposing of used products helps to avoid potential negative impacts on the environment and human health.
- ◆ The battery can not be disposed of with ordinary household garbage.


2 Installing your smart lock

Package contents


This package list is for reference only, and all contents are subject to the actual packaging contents.

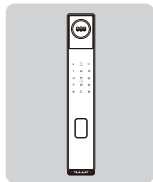


Front panel
(with rubber
gasket)

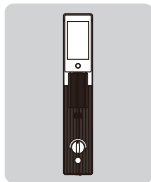


Back panel
(with rubber
gasket)

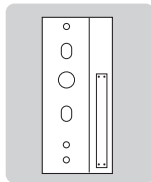


Template

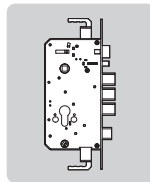


Mortise

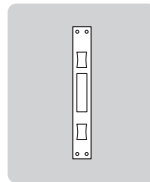

Strike

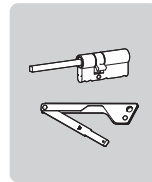


Mechanical key
and lock cylinder

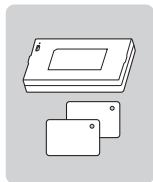


Lithium battery &
user card




Screw pack

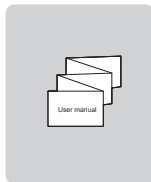


User manual

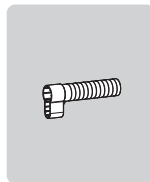

Lock cylinder
protector

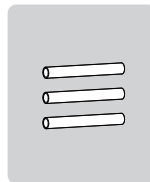


(Screw tube)
positioning sleeve

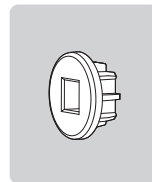

square shaft
locating sleeve

Lock explosive view


This lock explosive view is helpful to learn lock's structure.

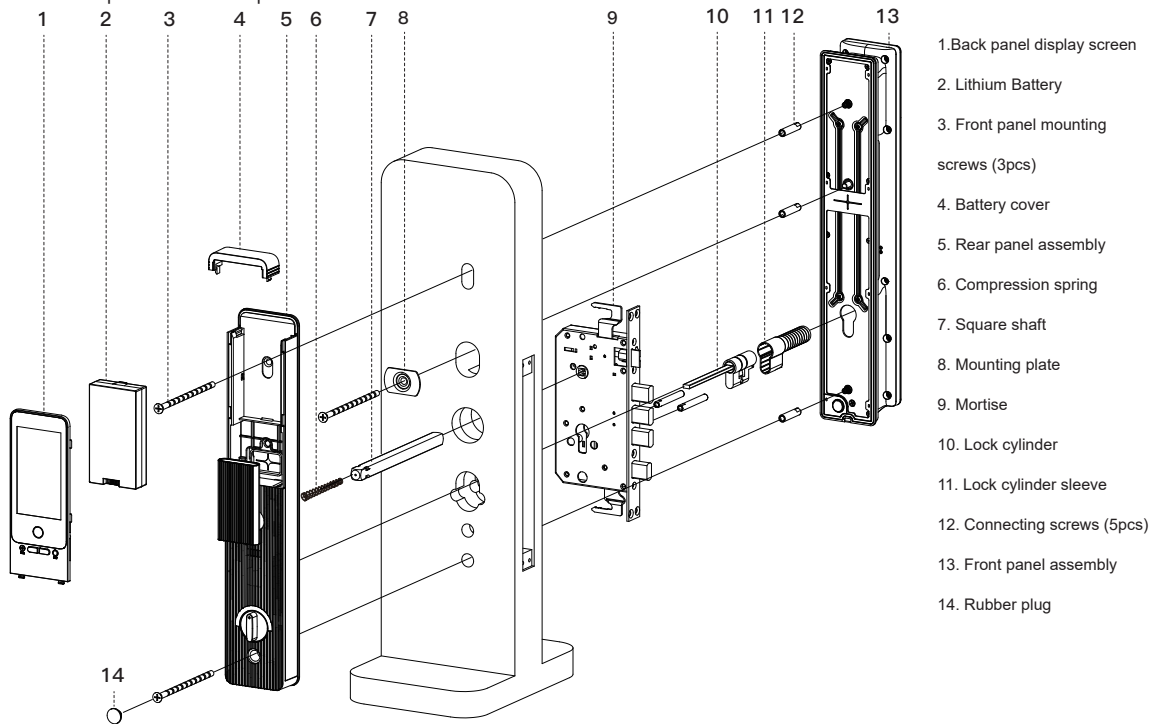


Before installation

Check door opening direction prior to installation.


Right-out

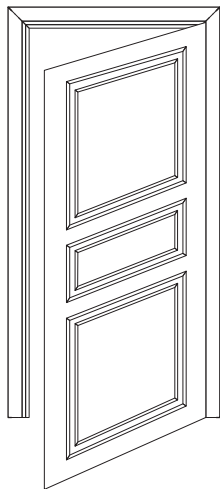


Right-in

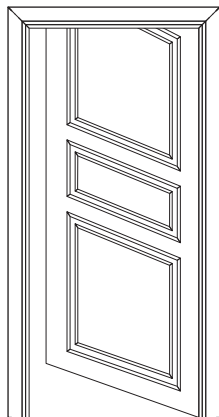


Left-out

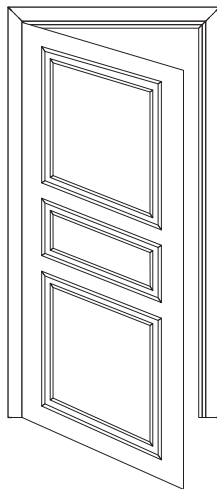


Left-in

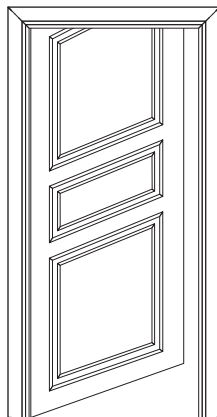


Latch direction change

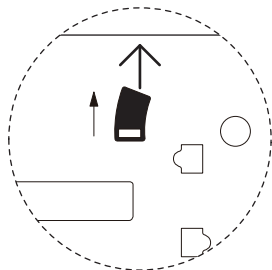


1. Toggle the reversing paddle in the direction of the arrow.

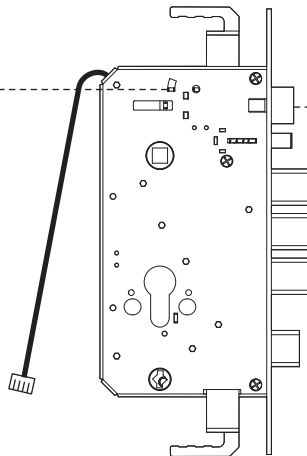


2. Eject the lock tongue, rotate the oblique tongue 180° in the direction of the arrow.

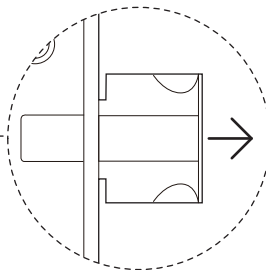


3. Press the lock tongue back as per the direction of the arrow.
Reversing completed.

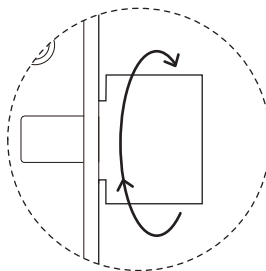

Installation steps

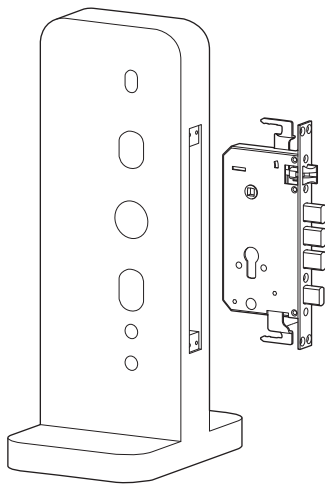


Drilling holes on the door prior to installing lock, then install mortise in door and secure mortise with supplied screws.

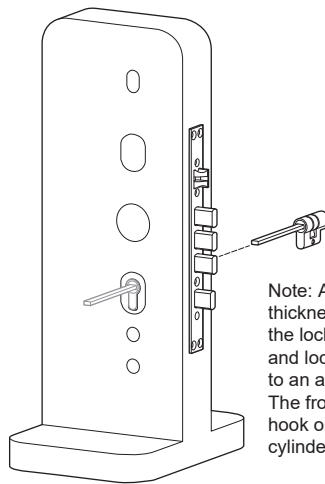


Note: According to the thickness of the door, cut the lock cylinder tailpiece and lock cylinder sleeve to an appropriate length. The front panel needs to hook onto the lock cylinder sleeve.

Keep the lock cylinder in the closed state, put the lock cylinder sleeve over the lock cylinder and place it in the corresponding position of the lock body, then tighten the screws to fix the lock cylinder.

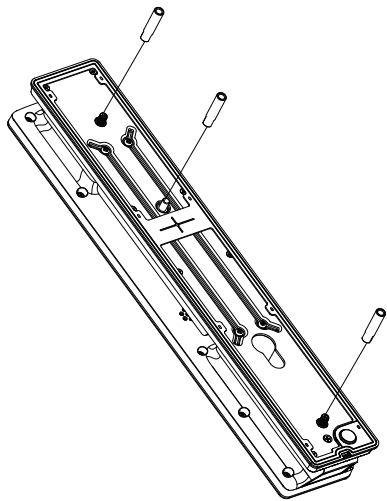


Install the connecting screw on the front panel.

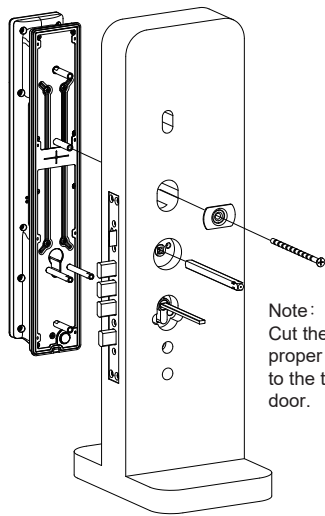


Note:
Cut the square shaft to proper length, according to the thickness of the door.

Thread the front panel connecting wire and the lock body connecting wire through the corresponding holes, align them with the fixing plate, and then insert the square shaft. Make the square shaft hole of the lock body, the square shaft, and the square shaft hole of the sealing plate coaxial. Tighten the segmented screws, fix the front panel, and then remove the square shaft positioning sleeve.

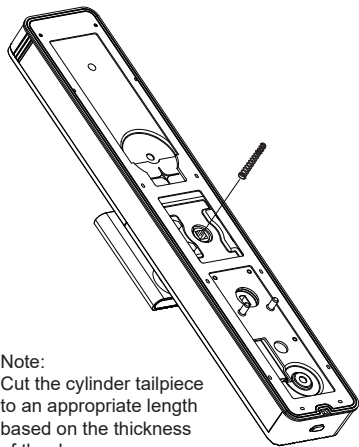


Note:
Cut the cylinder tailpiece
to an appropriate length
based on the thickness
of the door.

Insert the compression spring into the square shaft hole on the rear panel. (The larger end of the compression spring should face the handle).

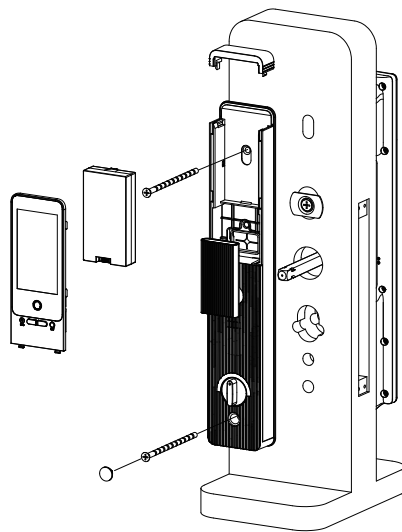


Insert the front panel connecting wire and the lock body connecting wire into the corresponding interface on the rear panel. Insert the redundant wire harness into the door through the door hole. Align the square shaft, lock cylinder lever, and deadbolt lever and install them into the corresponding holes to make the rear panel fit tightly against the door. Tighten the screws to fix the front panel. Install the battery on the rear panel and close the battery cover.

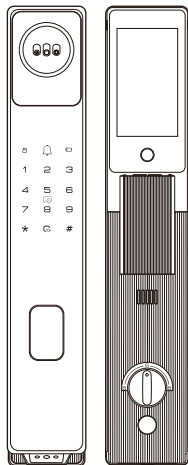


Check the front and rear panels, and ensure that all components are properly connected.

3 Get to know your smart lock

Front panel

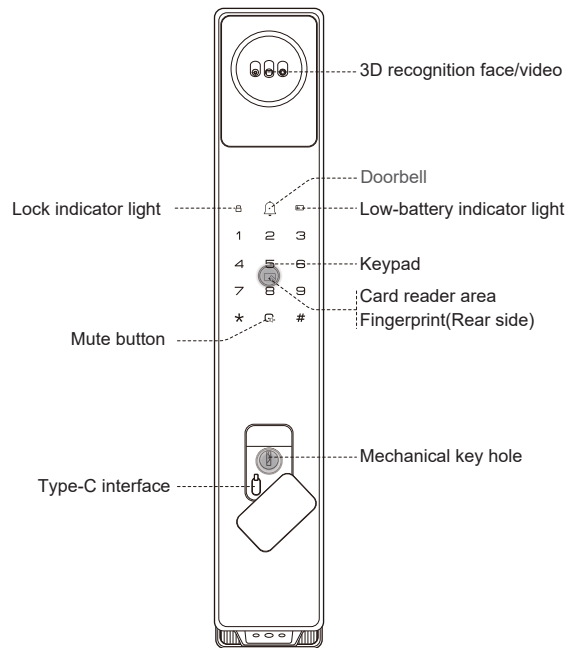

Back panel

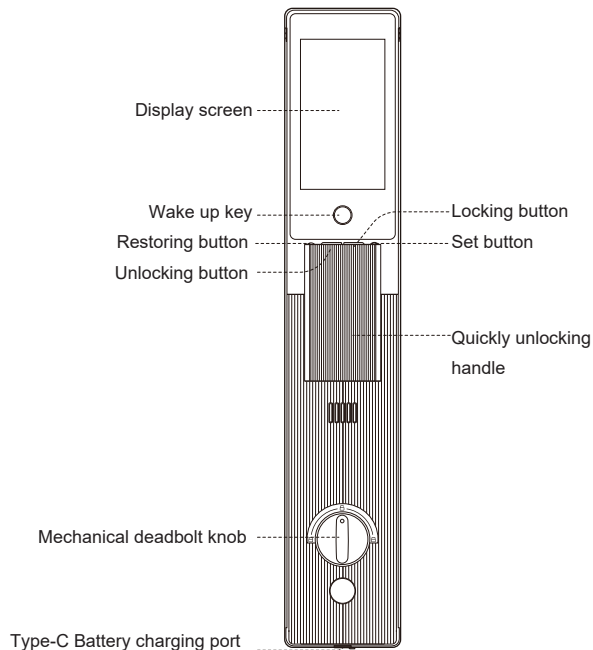

4 Setting your smart lock

WiFi Pairing

Please scan QR code or search "Kaadas Smart" in App store to download and install APP. Please complete registration if use this APP first time. Open App home page after sign in successfully, click "+" at right corner, select "scan code to add", then scan the QR code on the back of the battery cover to add the device.



Please ensure the latest app version if you have downloaded "Kaadas Smart" APP on your phone. If QR code on the battery cover can not be scanned, please select " manual add ", then enter the device model. (Please install the battery cover before network configuration).


1. This lock only supports 2.4Ghz WiFi frequency and does not support 5Ghz frequency. If WiFi pairing failed, please check router setting.
2. Make sure distance between router and lock not exceed 10m, otherwise weak signal may affect connection effect.
3. Please keep WiFi network connection smooth, otherwise it may affect some lock function.
4. Please make sure lock power supply is normal.

Door lock installation and setup

To ensure the door lock functions properly, network configuration needs to be completed as soon as possible after installation. This can be done in the app's settings by configuring the door lock's installation settings. These settings will need to be adjusted according to the actual installation configuration, such as left-opening/right-opening settings.



1. For door lock installation and setup, it is recommended that the installation technician or a consultant perform the setup. After setup, please do not adjust the settings arbitrarily during daily use unless there are special circumstances, to avoid causing malfunctions of the door lock.
2. If there is no Wi-Fi network at the installation site, you can skip the Wi-Fi configuration in the APP during the network pairing process and complete the network pairing operation using your phone's Bluetooth. After pairing, please complete the setup in "APP > Settings > Installation Settings".
3. Restoring factory settings will not erase the previously set door lock installation parameters, so there is no need to repeat the settings. If you reinstall the door lock, you will need to adjust the settings according to the actual installation situation.

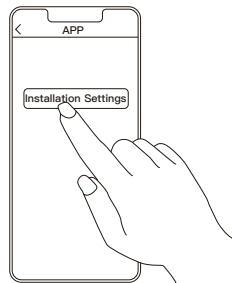


Adding user and user credential

When the door lock is in initial state, press the SET button once. Follow the voice prompts to enter the master PIN code into the lock. Other keys (credentials) need to be added or deleted via the APP according to its instructions after the network is configured. They can also be added in the local management mode.

1. Adding via App

After the network configuration is complete, open the App, approach the door lock, and add the key according to the App's prompts and instructions.

For setting functions such as adding/deleting keys and door lock settings, please firstly open the APP to configure them.

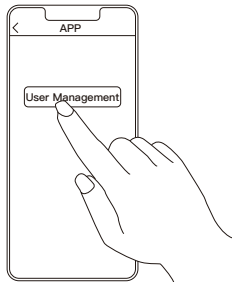


2. Add in local management mode

After adding the master user, double-click the [SET] button on the back panel of the door lock and verify the master PIN code to enter the local management mode; then following the voice to add the user key, the fingerprint, the card, the facial.

1. After verifying the admin password and entering the management mode, if there is no operation for a period of time, it will automatically exit.

2. The local management mode is only applicable for emergency key addition. For more function settings, please operate in the APP, which is more convenient.

3. The number of different types of keys (such as fingerprints /passwords, etc.) that can be added under each user varies and there is an upper limit. When a single user has reached the maximum number of added keys, you can create a new user to continue adding.

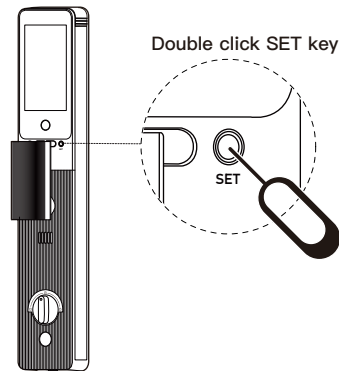

Local Management Mode · Menu

User Settings

Add regular users

in master mode:

1 1

Press 1 to enter user setting, then press 1 to add a PIN code.

in master mode:

1 2

Press 1 to enter user setting, then press 2 to add a fingerprint.

in master mode:

1 3

Press 1 to enter user setting, then press 3 to add a card.

in master mode:

1 4

Press 1 to enter user setting, then press 4 to add a face ID.

Add (modify) the master user

in master mode:

2 1

Press 2 to enter to modify the master pin code, and then press 1 to enter modify master PIN code.

in master mode:

2 2

Press 2 to enter to modify the master pin code, and then press 2 to enter add or modify master fingerprint.

Delete users

in master mode:

3 1

Press 3 to enter delete regular user, and then press 1 to delete a specified user.

in master mode:

3 2

Press 3 to delete a regular user, then press 2 to delete all regular users.

Installation settings

in master mode:

4

Press 4 to enter installation settings, and then press 1 to enter the door opening direction settings.

in master mode:

4 2

Press 4 to enter the installation settings, then press 2 to enter the unlocking force settings.

in master mode:

4 3

Press 4 to enter installation settings, and then press 3 to enter the main latch bolt rebound time setting.

in master mode:

4 4

Press 4 to enter installation settings, and then press 4 to enter the latch tongue rebound time setting.

in master mode:

4 5

Press 4 to enter installation settings, and then press 5 to enter turn on or turn off automatic locking setting.

Note:

Retraction time of the main deadbolt and the latch bolt settings are only used for mechanical lock body. Please subject to the actual menu.

Prior to setting up

This lock system can enable/disable dual-verification. When dual-verification is enabled, it is required to verify two type of credentials at the same time to unlock, while it only needs to verify one type of credential to unlock when dual-verification is disabled.

Dual-verification enabled : dual verification (face-recognition+PIN code, face-recognition+fingerprint, face-recognition+card, PIN code+fingerprint, PIN code+ card, fingerprint+card.)

Dual-verification disabled: single credential verification (face-recognition, PIN code, card or fingerprint).


Credential	Dual-verification enabled	Dual-verification disabled
Master PIN code, fingerprint	Support	Support
PIN code, fingerprint,face recognition, card	Support	Support
Recurring and duration PIN code	Support	Support
One-time PIN code	Not Support	Not Support
Duress PIN code or fingerprint	Support	Support

 User PIN code(master, duress PIN code), user fingerprint(master, duress fingerprint), card, face-recognition, Any two or more unlocking credentials can open.

5 Using your smart lock


Outdoor unlocking(Common Mode)

Face recognition

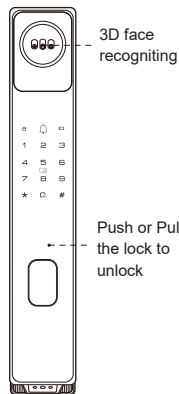


When the user approaches the door lock, the camera lights up automatically starts face recognition, and the recognition is confirmed successfully; Voice prompt "Door opened". prompt push or pull the handle to open the door.

PIN code

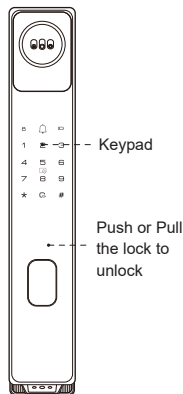


Touch the pad screen by palm to lighten keypad; then entering the registered PIN code ending with [#]. After voice prompt "door opened", push or pull handle to PIN code open the door.

Card

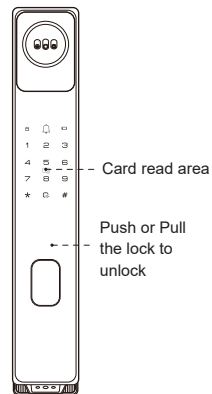

Place the registered card properly on the Card reader area. After voice prompt "door opened", push or pull handle to open the door.

Fingerprint

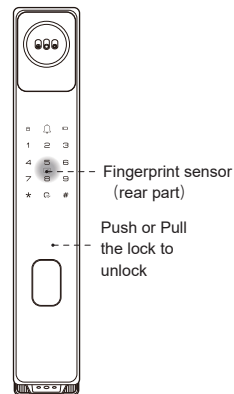


Place the registered finger properly on the fingerprint sensor area. After voice prompt "door opened" push or pull handle to open the door.

 In normal mode, if the wrong password (face/fingerprint/card) is entered 5 times in a short period of time, all functions of the smart lock will be locked for 120 seconds.

Mechanical key unlocking

In case of emergencies such as forgotten passwords, exhausted batteries, or system failure, the backup mechanical key can be used to unlock the door. Insert the mechanical key and turn it 180 degrees, then push or pull the door to unlock it.

Note: Press the bottom of the key cover to open.

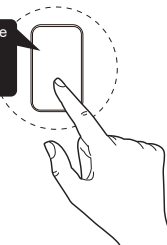

Mechanical key hole




If the door opens to the right,
Please turn the mechanical key
clockwise.

If the door opens to the left,
Please turn the mechanical key
counterclockwise.

Unlocking the door by quickly unlock handle


The quickly unlock handle is mainly used for mechanically locking/unlocking from the indoor side. Whether in daily use or emergency situations, it can be opened with a simple twist, which is convenient and reliable.

Quickly unlock handle




Lock/unlock from in door

1. Lock Button (CLOSE): Click the Lock button (CLOSE) to lock the door.
2. Unlock Button (OPEN): Click the Unlock button (OPEN) to unlock the door.

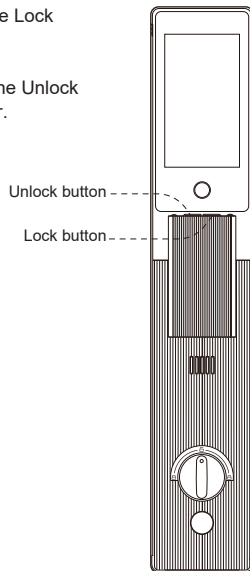


Defense mode

1. Activation: After locking the door, lightly press the arming button on the numeric keypad. A voice prompt will indicate that the system is armed. If someone attempts to open the door from the inside, the lock will sound an alarm.
2. Deactivation: After successful authentication using any key method from the outside, the system will automatically deactivate upon unlocking.

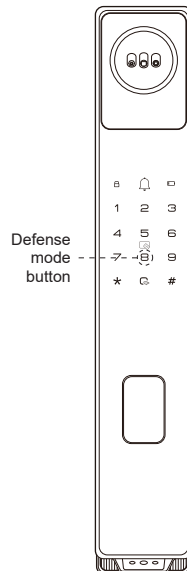


Volume adjustment

When the system is in the voice mode, wake up the door lock from outside, then long press  the key to enter mute mode. When the system is in the mute mode, wake up the door lock from outside, then long press  the key to enter voice mode. In the mobile APP, you also can set the volume of the voice.

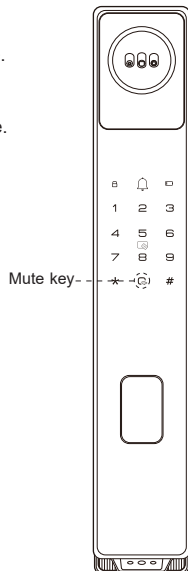

Doorbell function

Touch the doorbell key outside door, a "ding-dong" sound will be emitted inside the door. At the same time, the door lock's camera will take a snapshot and send a doorbell message to your APP. After receiving the push notification, you can view the situation outside the door in real time, support real-time video intercom.

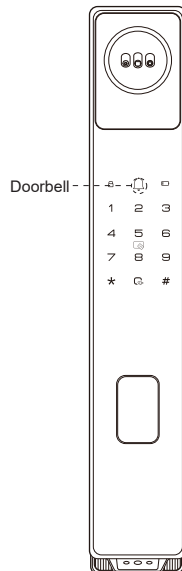

Note:

1. The visual peephole function can only be used after the door lock is connected to the network.
2. Ensure that the APP has been authorized for the relevant notification permissions of the current mobile phone system otherwise, the mobile phone may fail to receive push messages.


Indoor anti-lock

Rotate the Manual knob 90 degrees to complete the indoor mechanical deadbolt locking.

Note:

After mechanical deadbolt locking, no unlocking method can unlock the door from outside (including mechanical keys). Please use it caution.

Manual knob

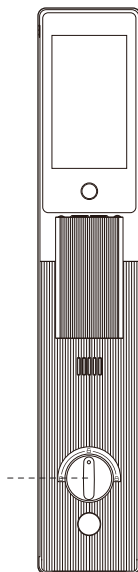


Inside display screen

1. Press display on/off button once, and the screen will light-up, you can see the outside the door in real time. In the main camera screen mode, click to switch to the auxiliary camera screen, and click again to turn off the display.

2. Display light-up time 5/10/15 seconds (default 10 seconds), brightness (high, medium and low) default medium. You can set them in the mobile APP.

3. Display is on by default when you press the doorbell, you can turn on or turn off it in the mobile APP.

Display
on/off
button




6 Other functions

Restore to factory settings

If you forget the master PIN code, you can double click the "RES" button on the back panel by a pin tool, then press "*" key on the front keypad within 15 seconds until the voice prompts" restored to factory setting, please modify pin code immediately. It means reset succeeded.


Note:

After restoring to factory settings, the door lock cannot lock properly, and any fingerprint can unlock the door. It is necessary to use the Kaadas Smart APP to configure the network for the device as soon as possible and complete the key addition.

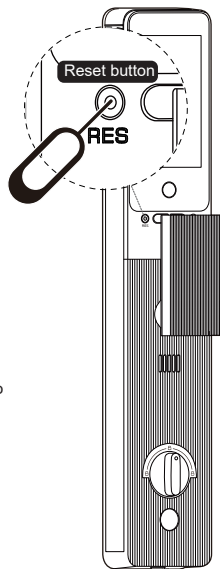


System reboot

If you need to restart the system, you can use a 5V power bank as an emergency power source to supply power to the door via the Type-C interface, and then restart it.

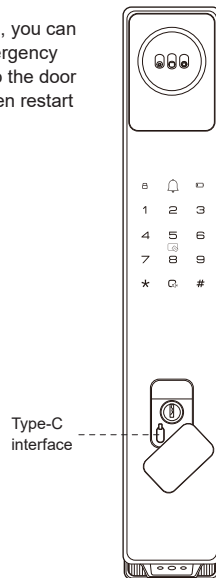

Emergency power supply

When the battery voltage is low and the door cannot be opened from the outside, you can use a 5V power bank as an emergency power source to power the door lock through the Type-C interface. After opening the door lock, please charge the battery immediately.

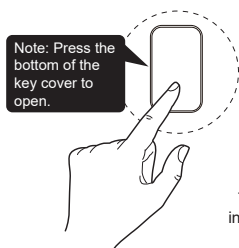

Type-C interface



Note:


When the battery power is low, after successful unlocking, the system voice prompt "low battery, please replace the battery"; please charge the battery in a timely manner at this point.

Charging inside the door

Use a 5V=2A portable power bank or DC power supply, plugged into the Type-C charging port at the bottom of the rear panel, to charge the door lock's lithium battery and extend the device's battery life.


Note:

Please secure the portable power bank to prevent it from falling.

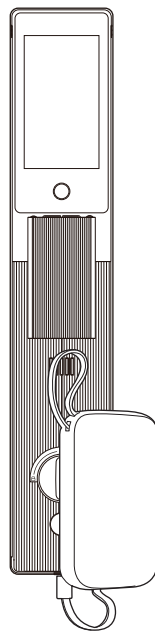

Battery replacement

When the system voice prompt “Low battery, please replace the battery”, you need to charge the battery in time. This lock only supports batteries designated by the official. It can not function properly when other batteries are inserted.

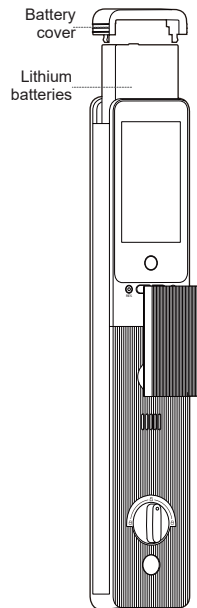

溫馨提示:

尊敬的用戶, 您好!感謝您使用本智能鎖, 在您安裝本產品前請仔細核

對產品清單, 閱讀安裝說明書, 並按照安裝說明安裝產品, 若因未按本說明書安裝, 導致的直

接或間接的產品問題, 及其它危害和損失, 我公司不承擔任何責任, 謝謝!

目錄

1 重要訊息

安全

警告

舊產品和電池處理

2 安裝您的智能鎖

產品清單

安裝立體組裝圖

安裝前須知

斜舌換向

安裝步驟

3 了解您的智能鎖

前面板

後面板

4 設定您的智能鎖

WiFi配網設定

門鎖安裝設置

新增使用者和金鑰

設定須知

5 使用您的智能鎖

室外開鎖

機械鑰匙開鎖

後面板快開把手開鎖

室內開鎖/上鎖

布防模式

音量調節

門鈴功能

機械反鎖

室內顯示屏

6 其它功能

恢復出廠設定

系統重啟

應急供電方法

門內充電

電池更換

1 重要訊息

安全

在使用本智能鎖前, 請閱讀並瞭解所有說明, 因未遵守說明而造成的損壞不在保固範圍內。

建議使用本公司指定的配件。

僅使用本產品配置的電池。

請勿強行拆解本產品, 以免發出警報或損壞產品。

請勿使用尖銳物品刮擦指紋感應器, 否則可能造成永久性損壞。

請勿將產品接觸到腐蝕性物質, 以免破壞外殼保護層。

請勿在執手/手柄上懸掛物件, 以免影響門鎖正常使用。

清潔產品, 請使用柔軟的布擦拭。

請勿在設備操作時拆卸電池。

請您選擇專業的工程師安裝門鎖, 並依照本公司的安裝標準進行操作, 切勿私自拆裝。

門鎖安裝調試合格後, 請第一時間採用凱迪仕智能APP為設備配網操作並妥善保管好機械鑰匙, 不要輕易洩露密碼資訊。

門鎖觸發低電量警報後, 請及時更換充滿電的配套鋰電池。

警告

請勿將電池靠近火源, 以免發生爆炸。

請勿使用不符合安全規定的緊急電源為本產品供電。

請勿用金屬將電池引線的兩極連接短路, 以免造成爆炸。

確保由凱迪仕、凱迪仕授權的服務中心或專業維修人員進行更換。

使用由其它製造商生產的, 或 未經凱迪仕特別推薦的配件或零件, 您的保固可能失效。

舊產品和電池的處理

請自行了解當地的電子產品分類收集系統。

請遵守當地規定, 不要將舊電池丟棄到普通生活垃圾中。


請正確棄置舊電池有助於避免對環境和人類健康造成潛在的負面影響。

電池不可與普通生活垃圾一起處理。


2 安裝您的智能鎖

產品清單本


產品清單僅供參考，一切以實體包裝內容為準。

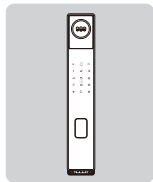


前面板(含砂膠墊)

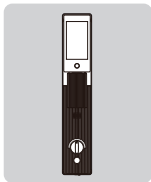


後面板(含砂膠墊)

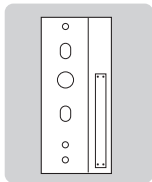


開空孔模板

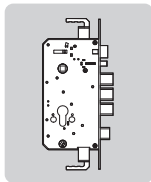


鎖體

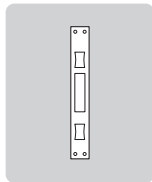

側邊扣板

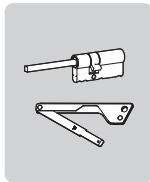

機械鑰匙&鎖芯

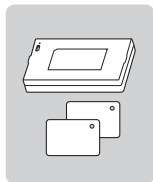


電池&卡片



安裝配件包




使用者手冊

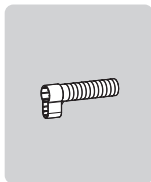


鎖心套管

(註：門較厚時，使用此配件有利於在固定前面板時快速定位鎖心位置)

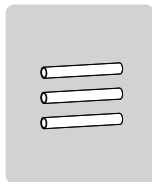

(螺管) 定位套管

(註：門較厚時，使用此配件有利於在固定後面板時快速定位螺管位置)

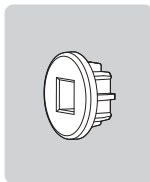


方軸定位套

(註：安裝後封板時，使用此配件有利於校正後封板和方鋼的位置，後封板固定好後需取出配件)

安裝立體組裝圖

了解安裝立體組裝圖，有利於了解鎖的構造。

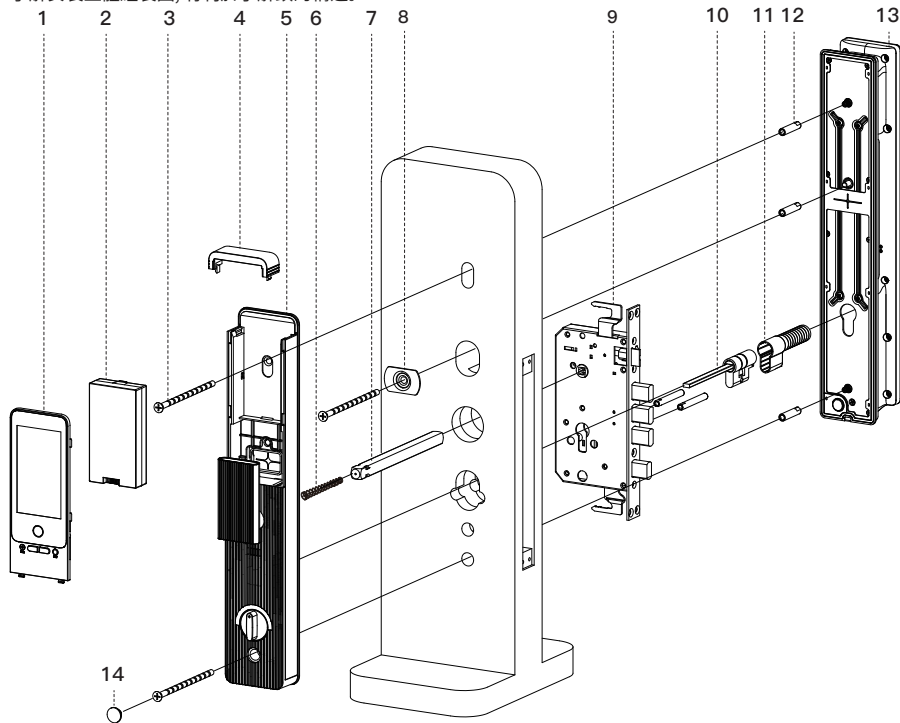


1. 後面板顯示屏
2. 鋰電池
3. 前面板固定螺絲（3個）
4. 電池蓋
5. 後面板組件
6. 壓簧
7. 方軸
8. 固定板
9. 鎖體
10. 鎖芯
11. 鎖心套管
12. 連接螺管（5根）
13. 前面板組件
14. 膠塞


安裝前須知

安裝前確認開門方向


右外開

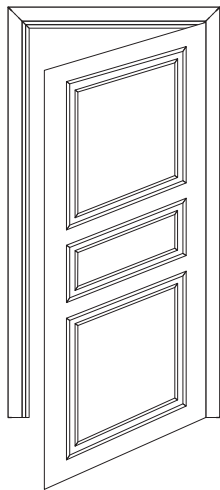


右內開

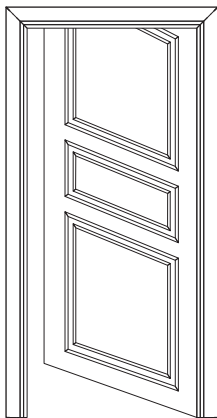


左外開

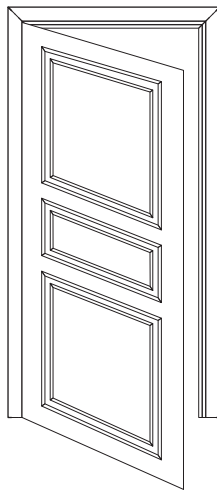


左內開

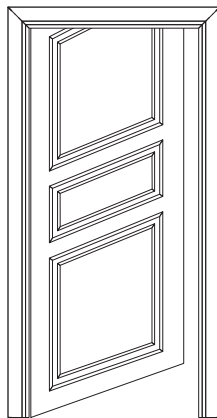


斜舌換向

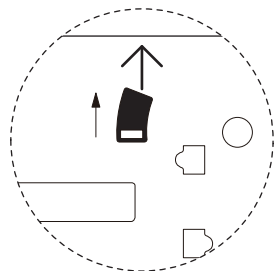


第一步
按箭頭方向撥動撥片。

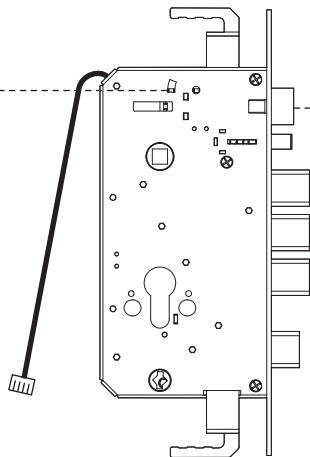


第二步
按箭頭方向彈出鎖舌。

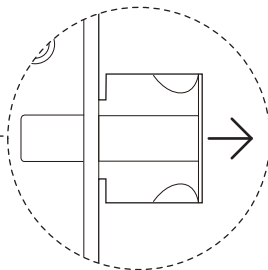


第三步
旋轉鎖舌180°，往裡面按回鎖舌，換向完成。

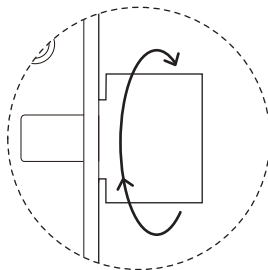

安裝步驟

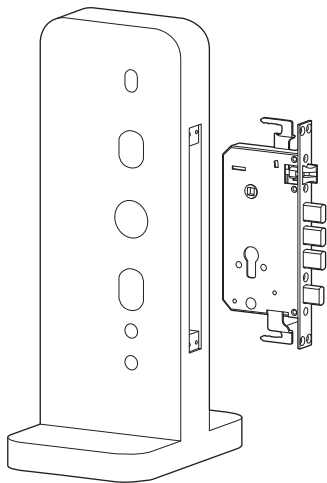


在門上開好鎖孔, 再把鎖體放入鎖孔內, 旋緊螺絲固定鎖體。

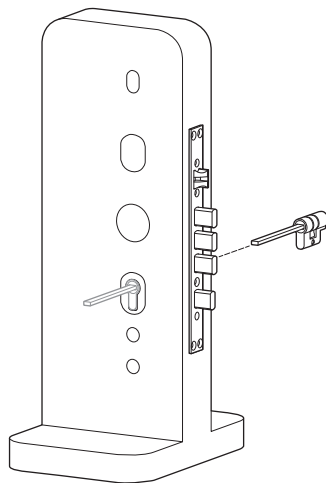


鎖心保持關閉狀態, 將鎖芯套上鎖芯套管放入鎖體對應位置, 然後鎖緊螺絲固定鎖心。

註: 依照門的厚度, 裁切適當長度的鎖心撥片和鎖芯套管, 前面板需要掛住鎖芯套管。

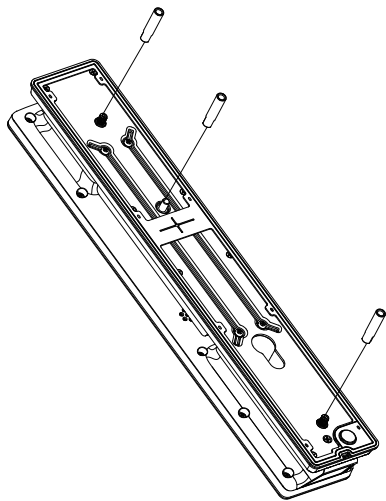


在前面板上裝上連接螺管。

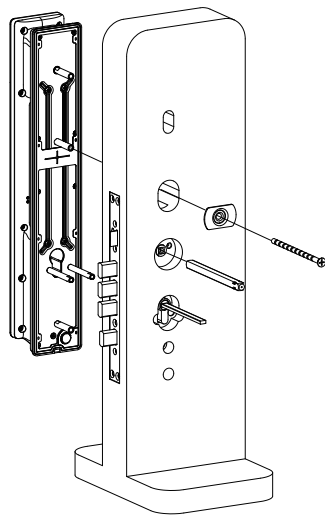


把前面板連接線和鎖體連接線從對應的孔位穿出，對準固定板後，裝入方軸，使鎖體的方軸孔狀態，擰緊竹節螺絲，固定前面板之後取下方軸定位套。

注意：根據門的厚度，裁剪適當長度的方軸和竹節螺絲。

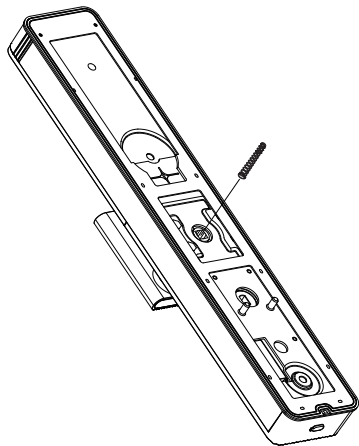


把壓簧放入後面板的方軸孔。(壓簧大頭部分朝向執手方向)。

注意：根據門厚，裁剪適當長度的撥片。


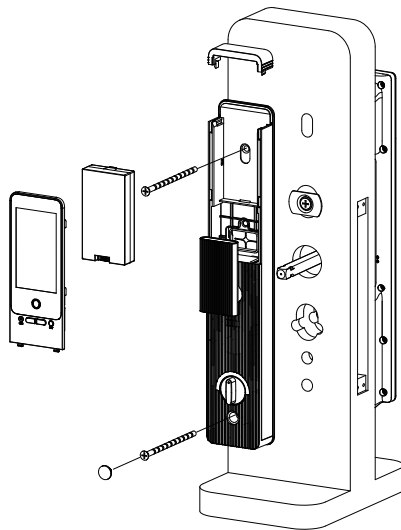


前面板連接線和鎖體連接線插入後面板相應的接口，將冗餘線束透過門孔塞入門內，方形軸、鎖心撥片、反鎖舌撥片對準並裝入對應孔位，使後面板緊貼門面，旋緊螺絲，固定前面板，在後面板上裝上電池，並合上電池蓋。

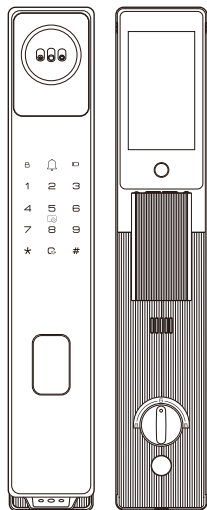

檢查前、後板等, 各部件是否連接完好。

3 了解您的智能鎖

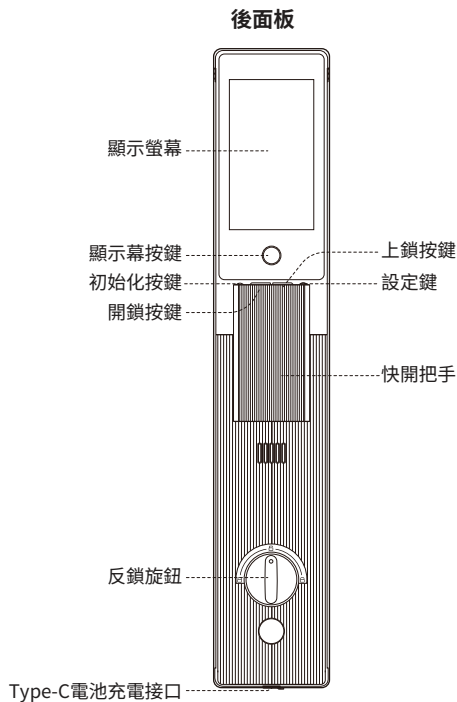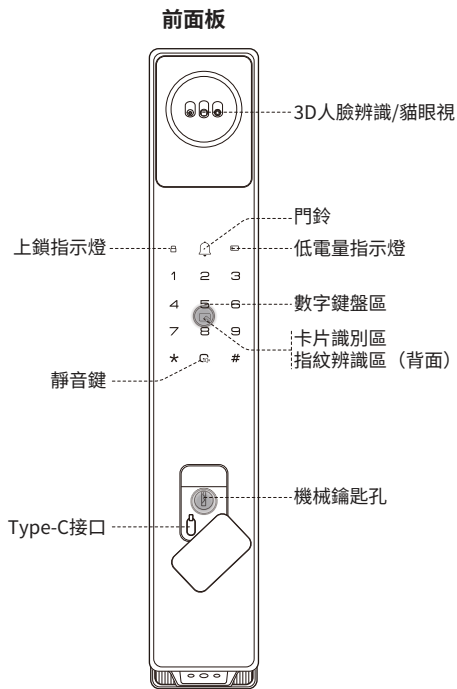

4 設定您的智能鎖

WiFi配網設置

1. 請先掃描二維碼或在應用程式商店搜尋“凱迪仕智能”，下載並安裝APP，首次使用，請完成註冊。
2. 登陸成功後打開APP首頁，在頁面左上角點“+”，選擇“掃碼添加”，掃描門鎖後面板電池蓋位置的二維碼，進行掃碼添加。請依照APP的引導進行配網操作。



若手機已下載凱迪仕智能型APP，請確保APP 版本為最新。若電池蓋位置的二維碼無法掃描，請選擇“手動新增”，在搜尋欄輸入門鎖型號，進入對應的新增引導頁面新增（配網前請裝好電池蓋）。

若手機已下載凱迪仕智能型APP，請確保APP 版本為最新。若電池蓋位置的二維碼無法掃描，請選擇“手動新增”，在搜尋欄輸入門鎖型號，進入對應的新增引導頁面新增（配網前請裝好電池蓋）。


- ① 門鎖僅支援2.4GHz WiFi頻段，不支援5GHz頻段。如WiFi連線失敗，請檢查路由器設定。
- ② 請確保路由離門鎖的可視距離不超過10米，否則會影響訊號連接效果。
- ③ 請保持WiFi網路連線正常且暢通，否則將影響門鎖部分功能。
- ④ 請保證門鎖已正常供電且已啟動。

門鎖安裝設置

為保障門鎖正常使用，安裝門鎖後，需盡快完成配網，在APP設定頁中，進行門鎖【安裝設定】，安裝設定需依門鎖實際安裝情況進行調整，如左開門/右開門等設置。



- ① 門鎖安裝設置，建議由安裝師傅或諮詢安裝師傅進行設置，完成設定後，日常使用中，如無特殊情況請不要隨意調整，避免導致門鎖功能異常。
- ② 如安裝現場無Wi-Fi網絡，可在配網過程中，在APP上跳過Wi-Fi配置，使用手機藍牙完成配網操作，配網後，請先在「APP>設定頁>安裝設定」中完成設定。
- ③ 恢復出廠設置，先前設定的門鎖安裝參數不會被清除，需重複設置，如重新安裝門鎖，則需要根據實際安裝情況，進行調整。

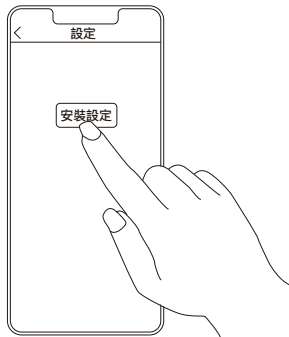

新增用戶和密碼


門鎖處於初始狀態下，點選SET鍵，依照語音提示，可在門鎖中，輸入管理密碼。其它密鑰需要配網後，在APP中，依照APP指引進行新增/刪除等。也可以在本機管理模式進行新增操作。

①APP方式添加

配網完成後，打開APP，靠近門鎖，根據APP提示和指引，進行密鑰添加。

註：

金鑰新增/刪除、門鎖設定等設定功能，請先開啟APP，進行設定。

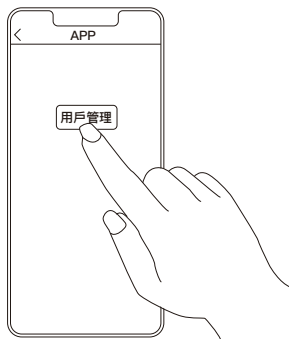


②本地管理模式方式新增

在新增完管理用戶後，在門鎖後面板雙擊【SET】鍵，並驗證管理金鑰後，進入本機管理模式；根據語音提示新增使用者金鑰等。

註：

- 1、驗證管理密碼通過並進入管理模式後，如無操作一段時間，會自動退出；再次進入可重複上述操作。
- 2、本地管理模式僅適用於緊急新增金鑰使用，更多功能設定請在APP中操作，更方便。
- 3、每個使用者下不同類型金鑰（如指紋/密碼等）可新增的數量不同，存在上限，單一使用者新增滿後，可再新建一個使用者繼續新增。

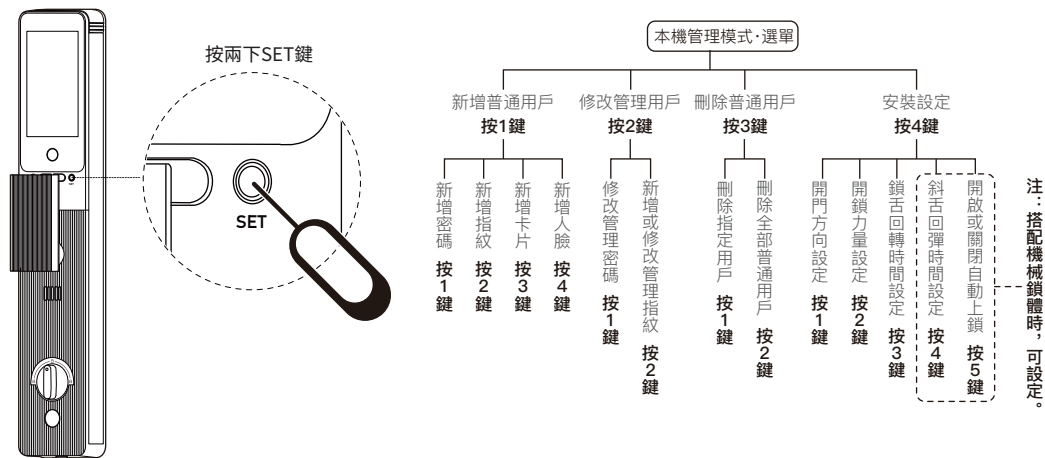

設定須知

本鎖的系統可以選擇設定開啟雙重驗證或關閉雙重驗證，開啟雙重驗證時需要兩種秘鑰同時驗證通過才可開鎖，關閉雙重驗證則只需要驗證一種秘鑰進行開鎖。

開啟雙重驗證：需要雙重驗證（人臉+密碼、人臉+指紋、人臉+卡片、密碼+指紋、密碼+卡片、指紋+卡片）。

關閉雙重驗證：單重驗證（人臉、密碼、卡片、指紋都可驗證）。

金鑰	開啟雙重驗證	開啟雙重驗證
管理密碼、指紋	支援	支援
使用者密碼、指紋、卡片或人臉	支援	支援
週期性或時效性密碼	支援	支援
一次性密碼	不支援	不支援
脅迫密碼或指紋	支援	支援



使用者密碼（管理者、脅迫）、使用者指紋（管理者、脅迫）、使用者卡片、使用者臉部任意兩種以上可開啟。

5 使用您的智能鎖

室外開鎖(常用模式)

人臉開門




當使用者靠近門鎖時，門鎖自動啟動人臉識別，識別確認成功，語音提示已開門，推或拉手柄開門。

密碼開門



在數字鍵盤區域輸入已新增的密碼，按 # 確認，語音提示已開門，推或拉把手開門。

卡片開門

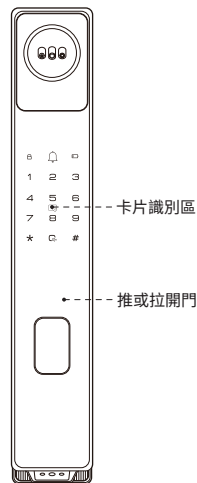

將已經新增的卡片放到卡片識別區，語音提示已開門，推或拉把手開門。

指紋開門




將已經新增的指紋放到指紋感應器上，語音提示已開門，推或拉把手開門。

⚠ 在常用模式下，短時間內連續輸入5次錯誤密碼(人臉/指紋/卡片)時，智能鎖全部功能將被鎖定120秒。

機械鑰匙開鎖


如果出現忘記密碼、電池耗盡或系統無法運作等緊急情況，可使用備用機械鑰匙開鎖。

將機械鑰匙插入轉動180°，即可推或拉動門開鎖。

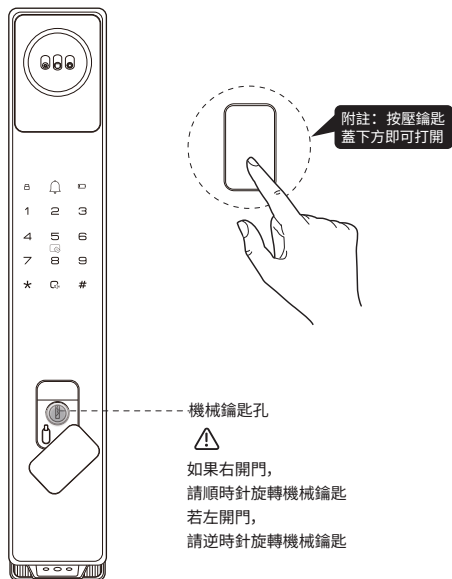


後面板快開把手開鎖

快開把手主要用於從室內機械開/關鎖使用，日常使用/遇到緊急情況，一扭即開，方便又可靠。

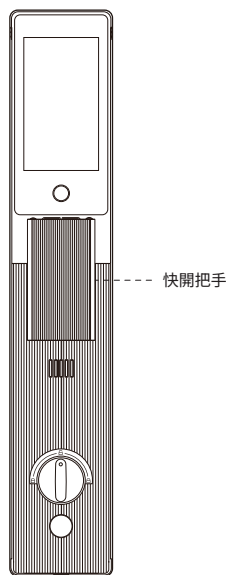


室內開鎖/上鎖

- ①上鎖按鍵（CLOSE）：點選上鎖按鍵(CLOSE)開鎖。
- ②開鎖按鍵（OPEN）：點選開鎖按鍵(OPEN)開鎖。

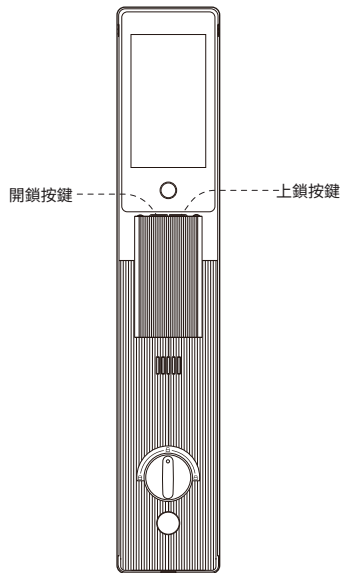

布防模式


- ①啟動：門上鎖後，輕按數字鍵盤區的布防按鍵，語音提示已啟動布防，當有人在室內進行開門時，鎖會發出警報音。
- ②解除：室外任一種金鑰方式驗證成功，開鎖後，布防模式自動解除。

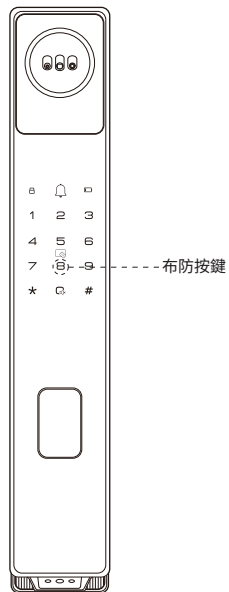

音量調節


系統為語音模式時，當室外喚醒門鎖後，長按  鍵，可進入靜音模式。

系統為靜音模式時，當室外喚醒門鎖後，未輸入數字時，按  鍵可切換成語音模式。可在APP中，設定門鎖音量高/低。

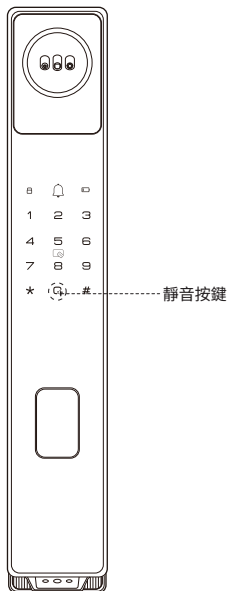

門鈴功能


在門外觸摸門鈴按鍵，門內發出叮咚聲；同時門鎖的攝影機會抓拍，並發送門鈴訊息到關聯的APP上，APP在收到推播訊息後，可以遠端即時查看門外情況，支援在即時視訊對講時，在APP端使用一鍵產生臨時密碼、截圖等功能。

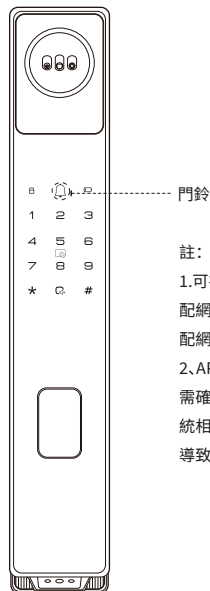

機械反鎖

往內壓住再旋轉反鎖旋鈕90°，即可完成室內機械反鎖。

注意：機械反鎖後，室外任何開鎖方式都無法開鎖（含機械鑰匙），請謹慎使用。

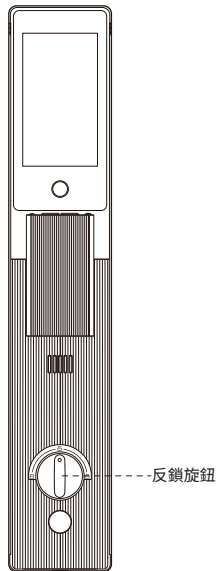


室內顯示幕

① 點選顯示開關按鈕，顯示幕點亮一段時間，可即時觀看門外動態；亮幕狀態下再次按一下，則關閉顯示幕。

② 顯示幕點亮時長可在APP中進行設置，可設定點亮時長5/10/15秒（預設10秒），亮度（高、中、低，預設中）。

③ 顯示幕預設按門鈴時自動開啟，可在APP中設定開啟或關閉。

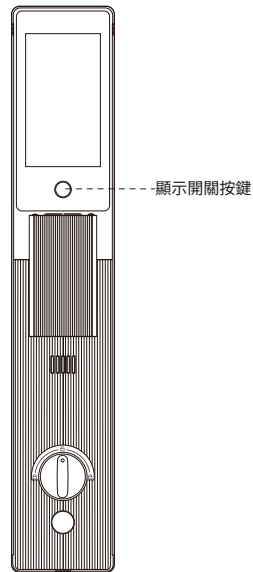


6 其它功能

恢復出廠設定

如果您不慎遺忘管理密碼或更換管理員，可在門鎖後面板找到「RES」鍵，透過卡針，在通電狀態下，雙擊「RES」鍵按鍵。根據語音提示，在15秒內，按門前面板數字鍵盤上的「#」鍵確認操作，待語音提示：已恢復出廠設置，即表示本鎖已初始化成功。


註：

恢復出廠設定後，門鎖無法正常上鎖，任意指紋可開門，需盡快使用凱迪仕智能APP為設備配網操作，完成密鑰新增。

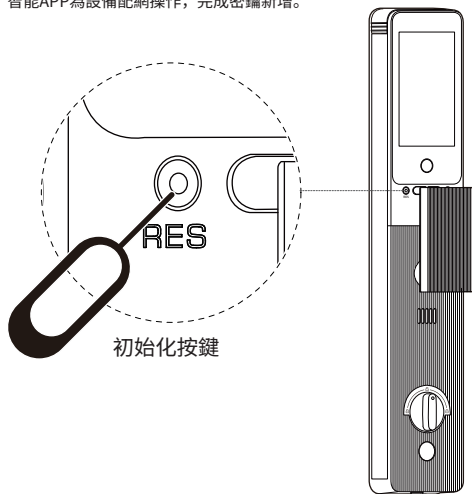

系統重啟


如果需要重啟系統，您可以透過使用 5V 行動電源作為緊急電源，透過Type-C接口給門鎖上電，即可進行重啟。

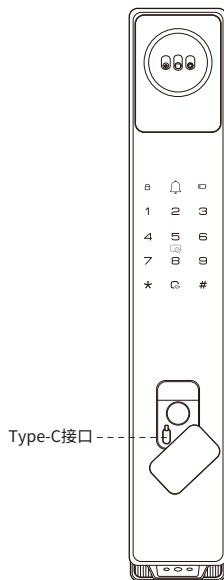

應急供電方法

當電池電壓不足，無法從外部開啟時，您可以透過使用 5V 行動電源作為緊急電源，透過Type-C接口為門鎖上電，打開門鎖後，請立即為電池充電。

附註：按壓鑰匙蓋下方即可打開

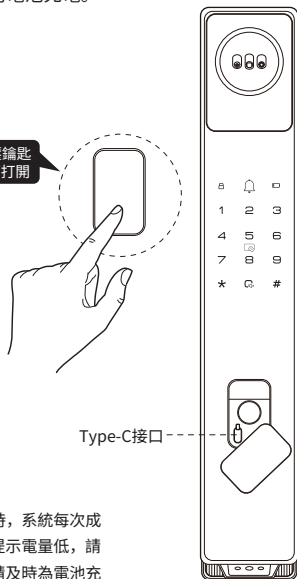


註：

當電池電量過低時，系統每次成功開鎖後，語音提示電量低，請更換電池，此時請及時為電池充電。

門內充電

使用5V $\pm$ 2A的行動電源或直流電源，插入後面板底部Type-C充電接口，為門鎖鋰電池充電，為設備增加續航時間。

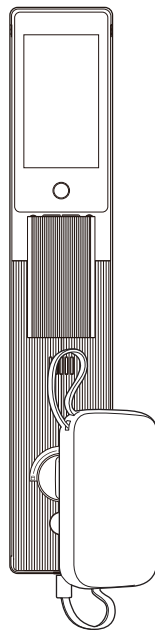


註：請

固定好行動電源，以防跌落。

電池更換

當系統語音提示「電量低，請更換電池」時，需要及時為電池充電。本鎖只支援官方指定的電池，插入其它電池時，不能正常使用。

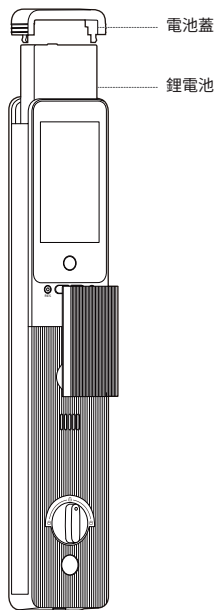

佳迪數位有限公司

KS DIGITAL COMPANY LIMITED

地址: 新界火炭坳背灣街57-59號利達工業中心6樓622室

Address: FLAT/RM 622, 6/F, Leader Industrial Centre, 57-59 Au Pui Wan Street, Fo Tan, N.T., Hong Kong

聯絡電話 / TEL: 38455613 官方網站 / Website: hk.kaadas.com