

Battery – Power path

File: sheet_power.kicad_sch

Battery – Peripherals & comms

File: sheet_periph.kicad_sch

Battery – Supervisor

File: sheet_super.kicad_sch

Battery – USB maintenance power

File: sheet_usb.kicad_sch

Battery – Isolated RS-485 read (ch.1)

File: sheet_isors485_1.kicad_sch

Battery – Isolated RS-485 read (ch.2)

File: sheet_isors485_2.kicad_sch

Battery – MCU (ESP32-S3)

File: sheet_mcu.kicad_sch

Battery – Connectors & I/O

File: sheet_conn.kicad_sch

Volthium reader

Sheet: /

File: volthium_reader.kicad_sch

Title: Volthium reader – battery-side (root)






Size: USLetter

Date:

Rev:

KiCad E.D.A. 10.0.5

Id: 1/9

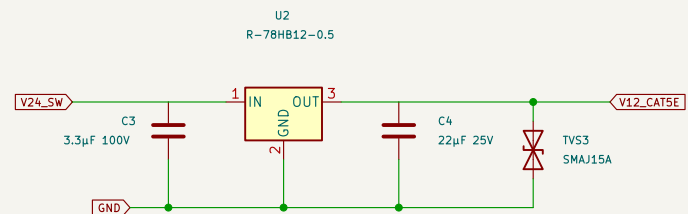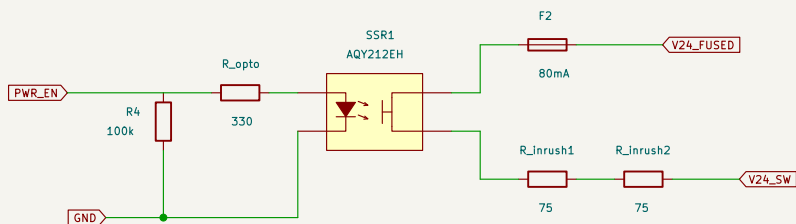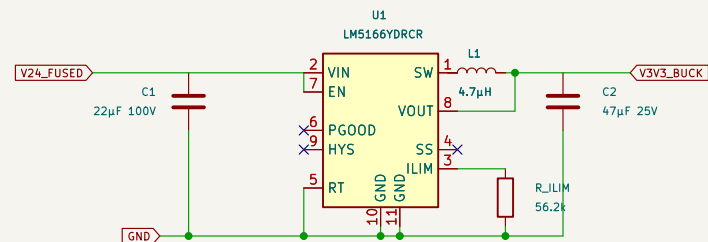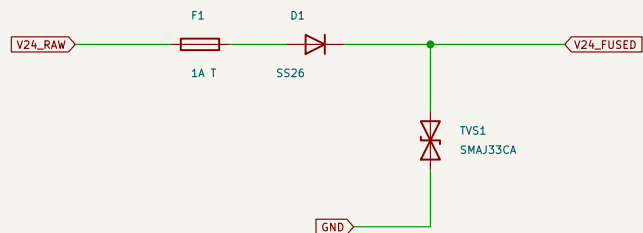



Volthium reader

Sheet: /Battery – Power path/
File: sheet_power.kicad_sch

Title: Battery – Power path

Size: USLetter
KiCad E.D.A. 10.0.5

Rev:
Id: 2/9

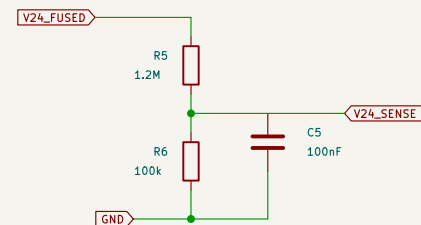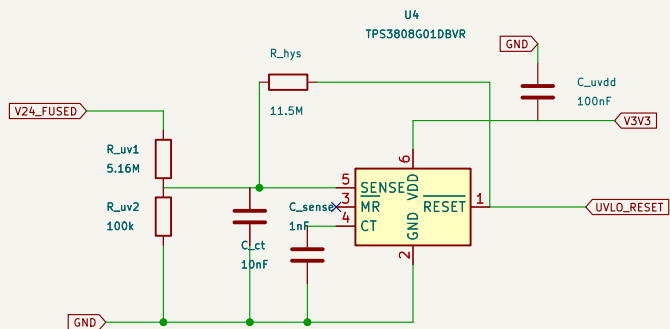

Volthium reader




Sheet: /Battery – Supervisor/
File: sheet_super.kicad_sch

Title: Battery – Supervisor

Size: USLetter Date:
KiCad E.D.A. 10.0.5

Rev:
Id: 3/9

Rev:
Id: 5/9

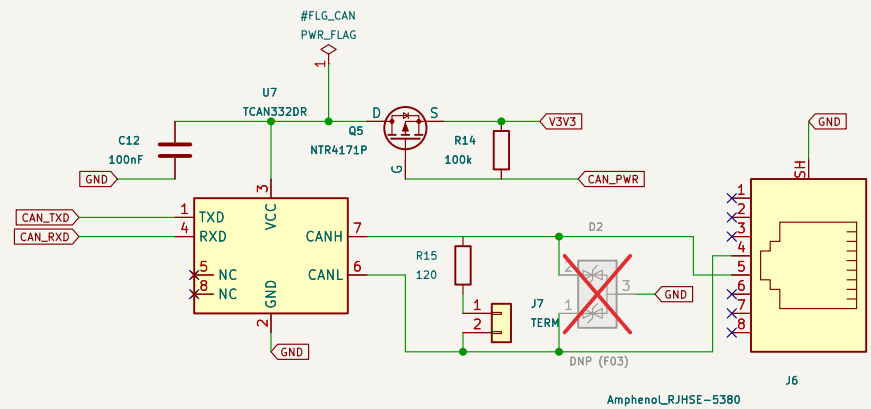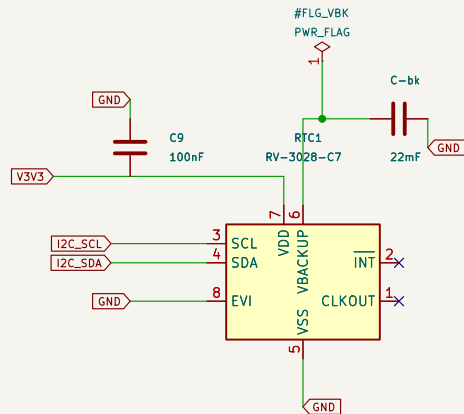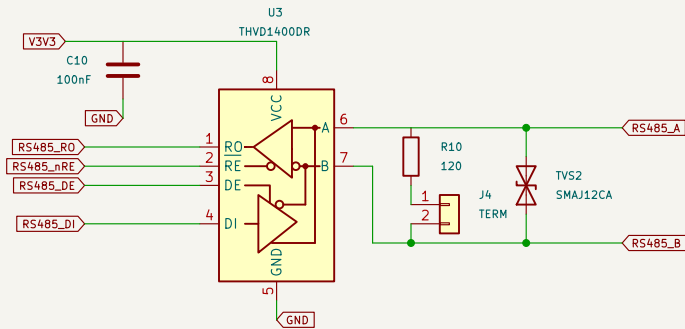



Volthium reader

Sheet: /Battery - Peripherals & comms/
File: sheet_periph.kicad_sch

Title: Battery - Peripherals & comms

Size: USLetter
KiCad E.D.A. 10.0.5

Rev:
Id: 6/9

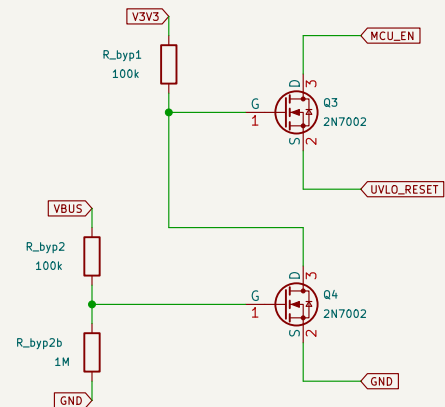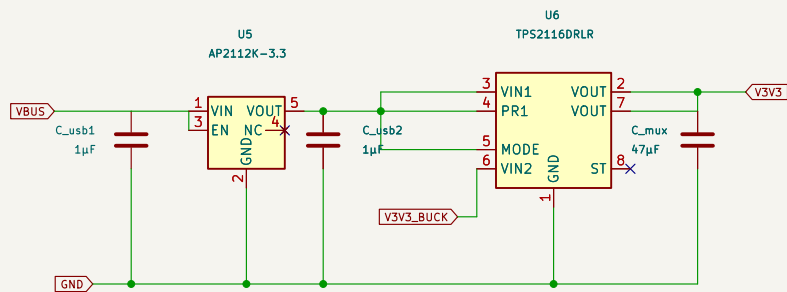

Volthium reader

Sheet: /Battery – USB maintenance power/
File: sheet_usb.kicad_sch

Title: Battery – USB maintenance power

Size: USLetter Date:
KiCad E.D.A. 10.0.5

Rev:
Id: 7/9

