

Battery — Power path

File: sheet_power.kicad_sch

Battery — Peripherals & comms

File: sheet_periph.kicad_sch

Battery — Supervisor

File: sheet_super.kicad_sch

Battery — USB maintenance power

File: sheet_usb.kicad_sch

Battery — Isolated RS-485 read (ch.1)

File: sheet_isors485_1.kicad_sch

Battery — Isolated RS-485 read (ch.2)

File: sheet_isors485_2.kicad_sch

Battery — MCU (ESP32-S3)

File: sheet_mcu.kicad_sch

Battery — Connectors & I/O

File: sheet_conn.kicad_sch

Volthium reader

Sheet: /

File: volthium_reader.kicad_sch

Title: Volthium reader — battery-side (root)






Size: USLetter

Date:

Rev:

KiCad E.D.A. 10.0.3

Id: 1/9

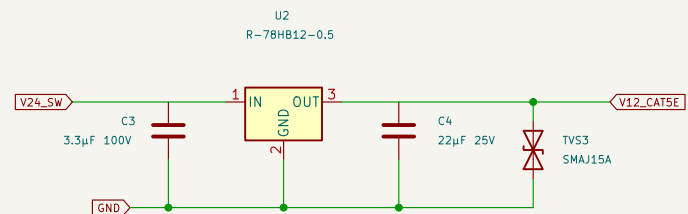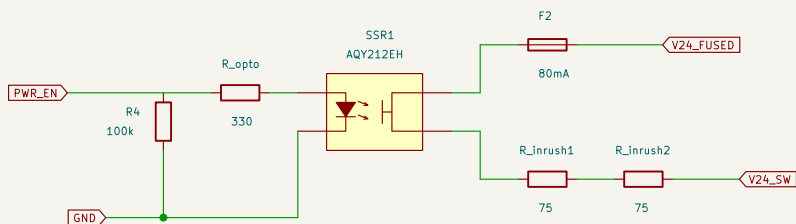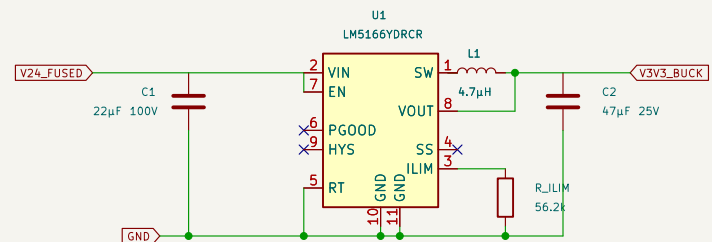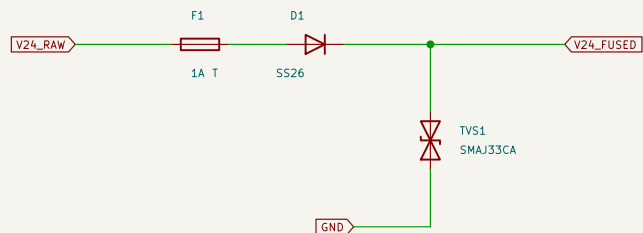



Volthium reader

Sheet: /Battery – Power path/
File: sheet_power.kicad_sch

Title: Battery – Power path

Size: USLetter
KiCad E.D.A. 10.0.3

Rev:
Id: 2/9

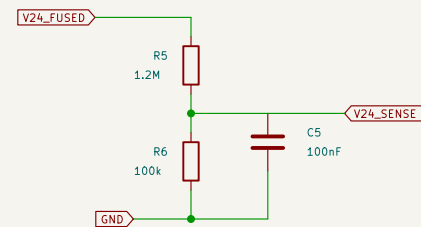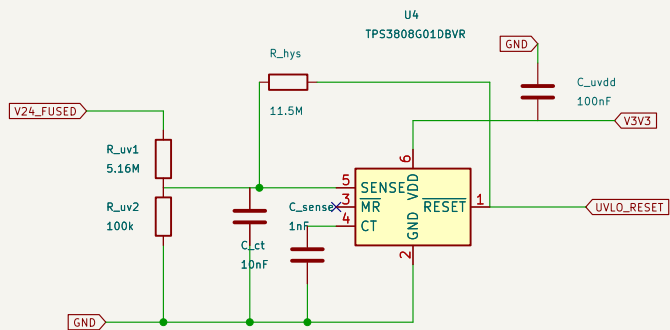


Volthium reader

Sheet: /Battery – Supervisor/
File: sheet_super.kicad_sch

Title: Battery – Supervisor

Size: USLetter Date:
KiCad E.D.A. 10.0.3

Rev:
Id: 3/9

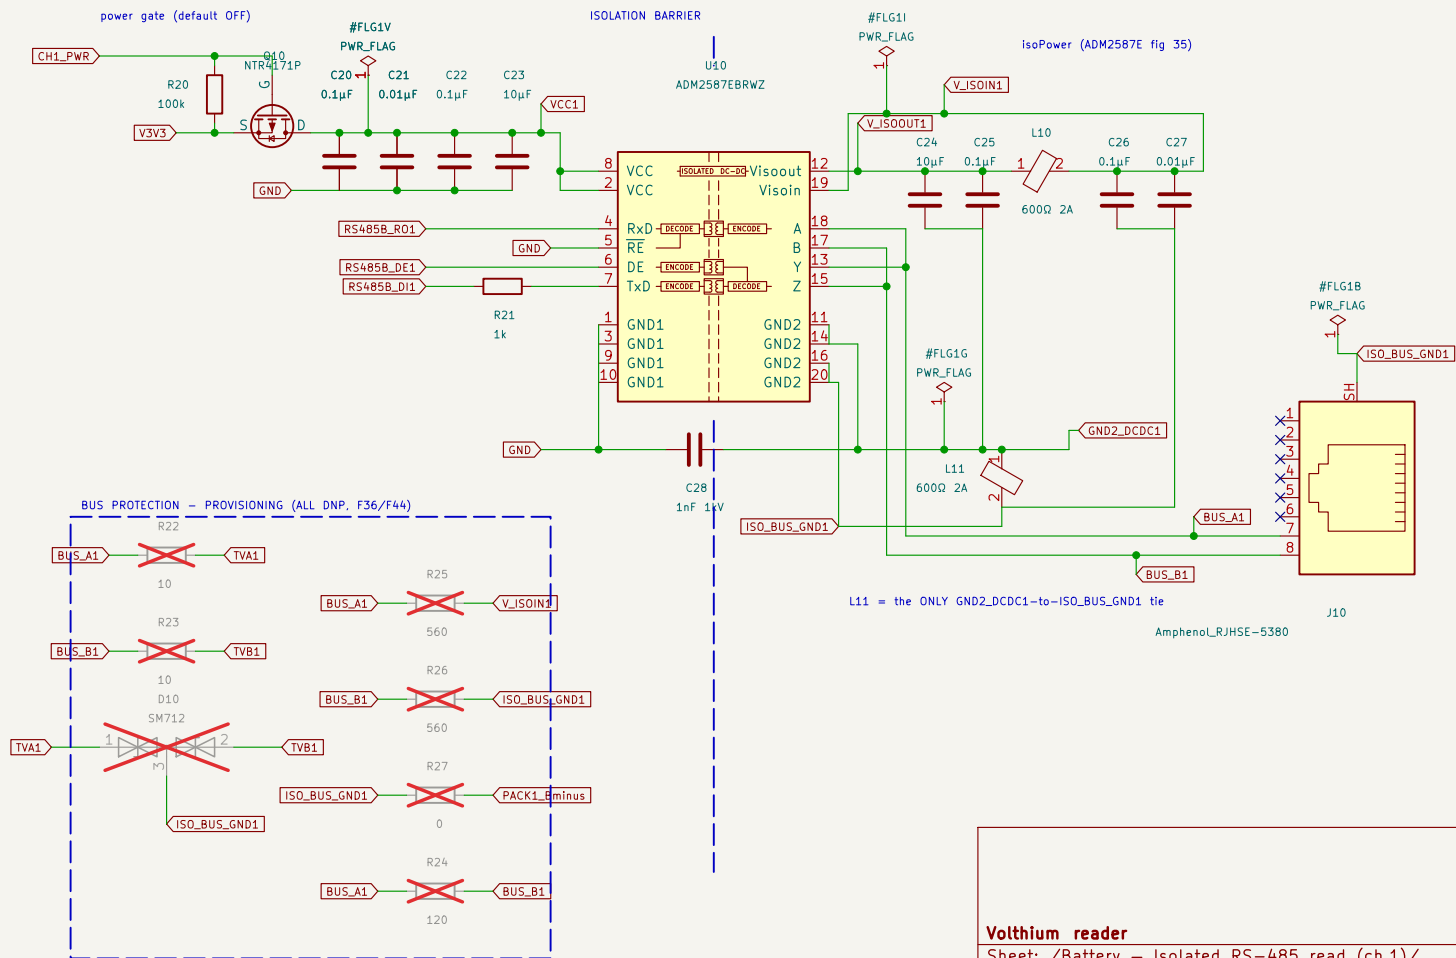

Volthium reader

Sheet: /Battery - Isolated RS-485 read (ch.1)/
File: sheet_isors485_1.kicad_sch




Title: Battery - Isolated RS-485 read (ch.1)

Size: USLetter
KiCad E.D.A. 10.0.3

Date:

Rev:
Id: 4/9

Rev:
Id: 5/9

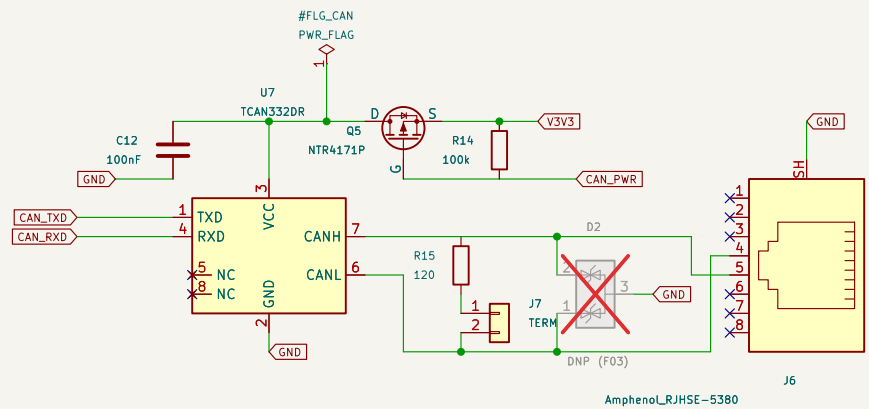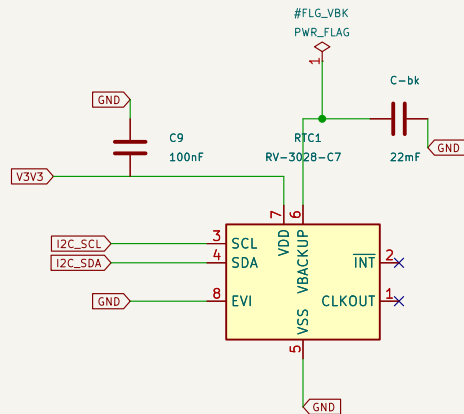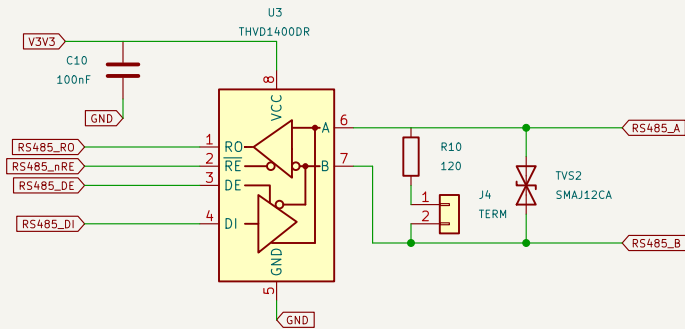



Volthium reader

Sheet: /Battery – Peripherals & comms/
File: sheet_periph.kicad_sch

Title: Battery – Peripherals & comms

Size: USLetter
KiCad E.D.A. 10.0.3

Rev:
Id: 6/9

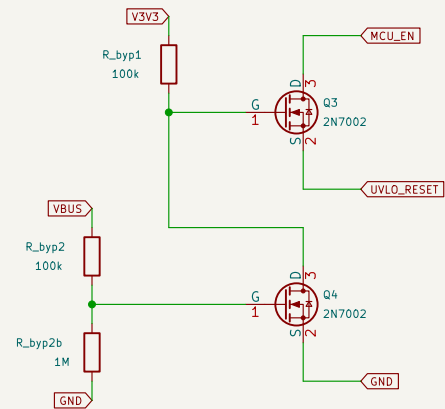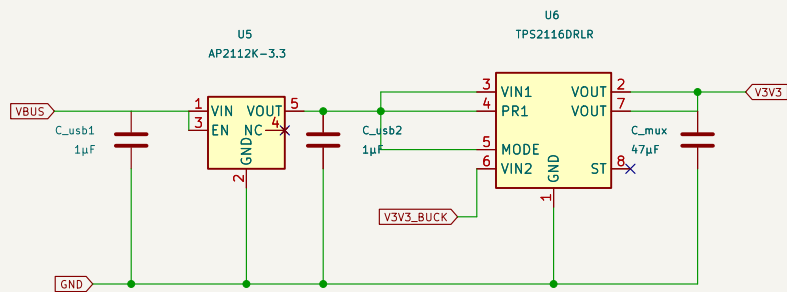


Volthium reader

Sheet: /Battery – USB maintenance power/
File: sheet_usb.kicad_sch

Title: Battery – USB maintenance power

Size: USLetter Date:
KiCad E.D.A. 10.0.3

Rev:
Id: 7/9

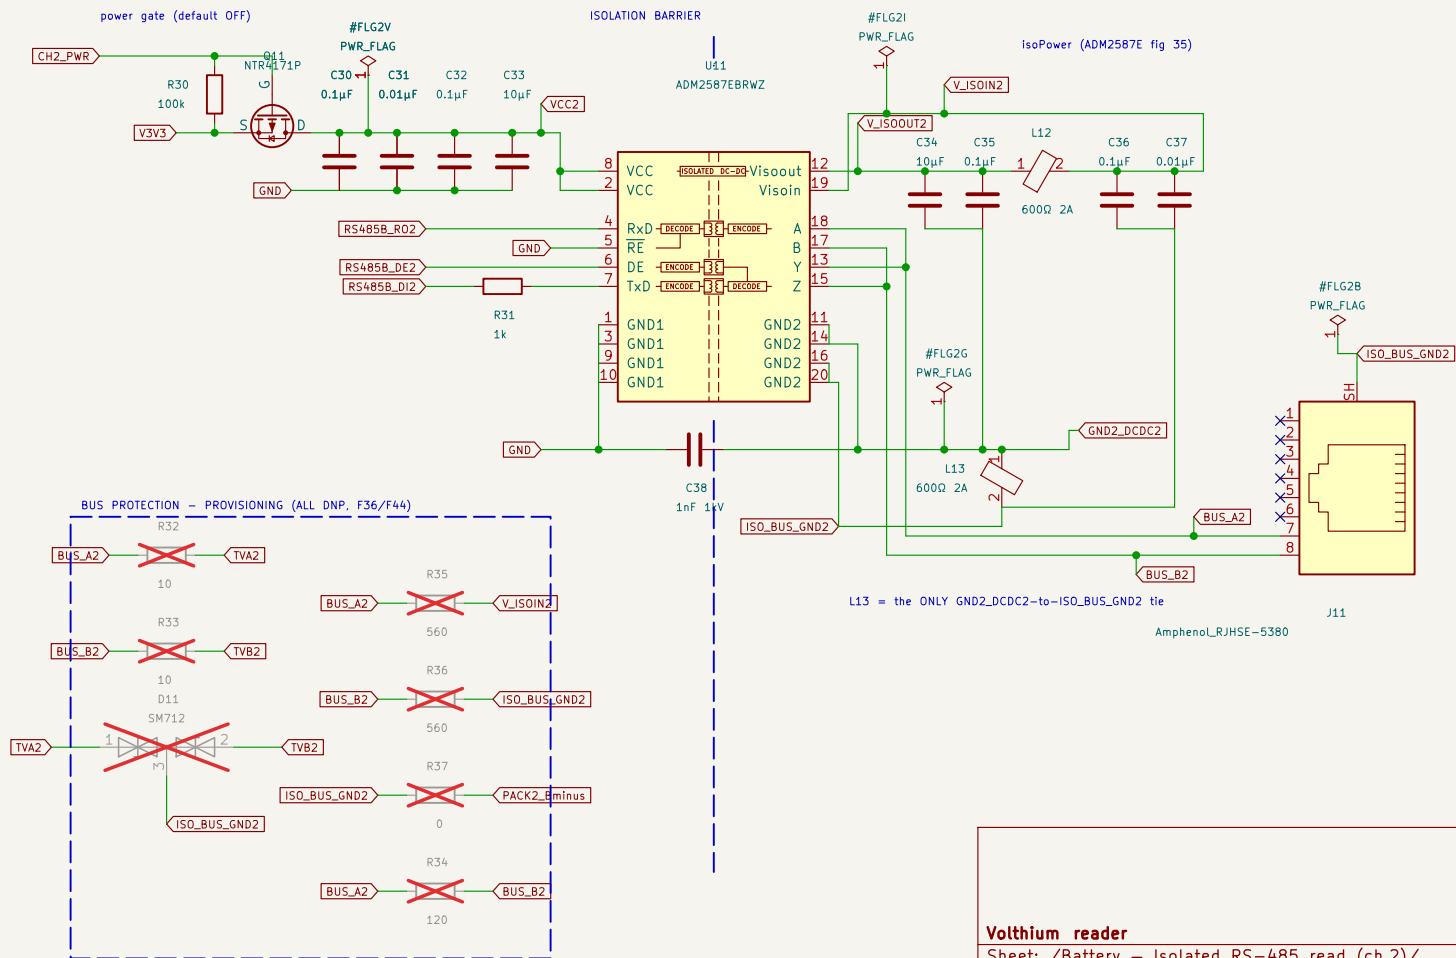

Volthium reader

Sheet: /Battery - Isolated RS-485 read (ch.2)/
File: sheet_isors485_2.kicad_sch

Title: Battery - Isolated RS-485 read (ch.2)

Size: USLetter
KiCad E.D.A. 10.0.3

Date:
Rev:
Id: 8/9

