VECTOR

MICROSAR CSM

Technical Reference

Cryptographic Service Manager

Version 5.01.00

Authors	Markus Schneider, Anant Gupta, Mathias Waldenburger, Matthias Weniger, Elvan Caliskan, Eckart Witzel, Max Engelhardt, Philipp Ritter
Status	Released

Document Information

History

Author	Date	Version	Remarks
Schneider, Markus	2017-03-14	1.01.00	Initial Creation for ASR 4.3
Gupta, Anant	2017-03-17	1.01.00	Add configurational details
Schneider, Markus	2017-05-08	1.02.00	3.1.1 Added backward compatible static definition limitation 5 Adapted to Specification
Schneider, Markus	2017-06-07	1.03.00	Adapted chapter 4.2 Added information about SecureCounter Removed API description for SecureCounter
Waldenburger, Mathias	2018-08-27	3.01.00	Added information about Pre-and PostJob Callouts Added API description for Csm_MainFunction
Weniger, Matthias	2018-10-23	3.01.01	Change E_PENDING to CSM_E_PENDING
Waldenburger, Mathias	2019-03-12	4.01.00	Added Csm_KeyElementCopyPartial Added Redirection
Caliskan, Elvan Witzel, Eckart Engelhardt, Max	2019-11-11	5.00.00	Added Csm_JobKeySetValid Added Csm_JobRandomSeed Added Csm_JobKeyGenerate Added Csm_JobKeyDerive Added Csm_JobKeyExchangeCalcPubVal Added Csm_JobKeyExchangeCalcSecret. Added parameter descriptions in 6.5. Added chapter 5.5.
Witzel, Eckart	2020-03-12	5.00.02	Added Table 3-5.
Ritter, Philipp	2020-07-08	5.01.00	Changed chapter 5.2.5

Reference Documents

No.	Source	Title	Version
[1]	AUTOSAR	AUTOSAR_SWS_CryptoServiceManager.pdf	4.3.0
[2]	AUTOSAR	AUTOSAR_SWS_DET.pdf	4.3.0
[3]	AUTOSAR	AUTOSAR_SWS_CryptoServiceManager.pdf	4.4.0

Contents

1 Component History 8

2 Introduction 9
2.1 Architecture Overview 9

3 Functional Description 11
3.1 Features 11
3.1.1 Deviations 11
3.2 Initialization 13
3.3 Main Functions 13
3.4 Error Handling 13
3.4.1 Development Error Reporting 13
3.5 Pre-and Post-Job Callouts 15

4 Integration 16
4.1 Scope of Delivery 16
4.1.1 Static Files 16
4.1.2 Dynamic Files 16
4.2 Critical Sections 16

5 API Description 18
5.1 Type Definitions 18
5.2 Services provided by CSM 19
5.2.1 Csm_Init 19
5.2.2 Csm_InitMemory 19
5.2.3 Csm_MainFunction 20
5.2.4 Csm_GetVersionInfo 20
5.2.5 Csm_CancelJob 21
5.2.6 Csm_KeyElementSet 21
5.2.7 Csm_KeySetValid 22
5.2.8 Csm_KeyElementGet 23
5.2.9 Csm_KeyElementCopy 24
5.2.10 Csm_KeyElementCopyPartial 25
5.2.11 Csm_KeyCopy 26
5.2.12 Csm_RandomSeed 27
5.2.13 Csm_KeyGenerate 27
5.2.14 Csm_KeyDerive 28
5.2.15 Csm_KeyExchangeCalcPubVal 28
5.2.16 Csm_KeyExchangeCalcSecret 29
5.2.17 Csm_CertificateParse 30

© 2020 Vector Informatik GmbH

5.2.18 Csm_CertificateVerify ... 30
5.2.19 Csm_Hash ... 31
5.2.20 Csm_MacGenerate ... 32
5.2.21 Csm_MacVerify ... 33
5.2.22 Csm_Encrypt ... 34
5.2.23 Csm_Decrypt ... 35
5.2.24 Csm_AEADEncrypt ... 36
5.2.25 Csm_AEADDecrypt ... 37
5.2.26 Csm_SignatureGenerate ... 38
5.2.27 Csm_SignatureVerify ... 39
5.2.28 Csm_RandomGenerate ... 40
5.2.29 Csm_JobKeySetValid ... 41
5.2.30 Csm_JobRandomSeed ... 41
5.2.31 Csm_JobKeyGenerate ... 42
5.2.32 Csm_JobKeyDerive ... 43
5.2.33 Csm_JobKeyExchangeCalcPubVal ... 44
5.2.34 Csm_JobKeyExchangeCalcSecret ... 45
5.3 Services used by CSM ... 46
5.4 Callback Functions Provided by CSM ... 47
5.4.1 Csm_CallbackNotification ... 47
5.5 Callback Functions Invoked by CSM ... 47
5.5.1 CallbackFunc ASR 4.3 ... 47
5.5.2 CallbackFunc ASR 4.4 ... 48
5.5.3 CallbackFunc ASR R19-11 ... 48
5.6 Service Ports ... 49
5.6.1 Client Server Interface ... 49
5.6.1.1 Provide Ports on CSM Side ... 49

6 Configuration ... 50
6.1 Overview ... 50
6.2 Configuration of a cryptographic operation ... 51
6.3 Configuration Variants ... 52
6.4 Backward Compatibility ... 53
6.5 Configuration with DaVinci Configurator 5 Pro ... 53
6.5.1 General Properties ... 53
6.5.2 Key Properties ... 54
6.5.3 Primitives Properties ... 54
6.5.4 Queue Properties ... 55
6.5.5 Callback Properties ... 55
6.5.6 Callout Properties ... 56
6.5.7 Job Properties ... 57

6.5.8 Redirection Properties 58

7 Glossary and Abbreviations 59
7.1 Glossary 59
7.2 Abbreviations 59

8 Contact 60

Illustrations

Figure 2-1 AUTOSAR 4.3 Architecture Overview 9
Figure 2-2 Interfaces to adjacent modules of the CSM 10
Figure 6-1 Structural overview and basic workflow 50
Figure 6-2 Configuration CsmPrimitive 51
Figure 6-3 Configuration CryptoPrimitive 52
Figure 6-4 Configuration CryptoDriverObject 52

Tables

Table 1-1 Component history 8
Table 3-1 Supported AUTOSAR standard conform features according to version 4.3.x 11
Table 3-2 Supported AUTOSAR standard conform features according to version 4.4.x 11
Table 3-3 Not supported AUTOSAR standard conform features 11
Table 3-4 Not supported AUTOSAR standard conform features 12
Table 3-5 Deviations from AUTOSAR Standard Conform Features 12
Table 3-6 Service IDs 14
Table 3-7 Errors reported to DET 14
Table 4-1 Static files 16
Table 4-2 Generated files 16
Table 5-1 Type definitions 18
Table 5-2 Csm_Init 19
Table 5-3 Csm_InitMemory 19
Table 5-4 Csm_MainFunction 20
Table 5-5 Csm_GetVersionInfo 20
Table 5-6 Csm_CancelJob 21
Table 5-7 Csm_KeyElementSet 22
Table 5-8 Csm_KeySetValid 22
Table 5-9 Csm_KeyElementGet 23
Table 5-10 Csm_KeyElementCopy 24
Table 5-11 Csm_KeyElementCopyPartial 25
Table 5-12 Csm_KeyCopy 26
Table 5-13 Csm_RandomSeed 27
Table 5-14 Csm_KeyGenerate 27
Table 5-15 Csm_KeyDerive 28
Table 5-16 Csm_KeyExchangeCalcPubVal 29
Table 5-17 Csm_KeyExchangeCalcSecret 29
Table 5-18 Csm_CertificateParse 30
Table 5-19 Csm_CertificateVerify 31
Table 5-20 Csm_Hash 31
Table 5-21 Csm_MacGenerate 32
Table 5-22 Csm_MacVerify 33
Table 5-23 Csm_Encrypt 34
Table 5-24 Csm_Decrypt 35
Table 5-25 Csm_AEADEncrypt 36
Table 5-26 Csm_AEADDecrypt 37
Table 5-27 Csm_SignatureGenerate 38
Table 5-28 Csm_SignatureVerify 39
Table 5-29 Csm_RandomGenerate 40
Table 5-30 Csm_JobKeySetValid 41

© 2020 Vector Informatik GmbH

Table 5-31 Csm_JobRandomSeed 42
Table 5-32 Csm_JobKeyGenerate 42
Table 5-33 Csm_JobKeyDerive 43
Table 5-34 Csm_JobKeyExchangeCalcPubVal 44
Table 5-35 Csm_JobKeyExchangeCalcSecret 45
Table 5-36 Services used by the CSM 46
Table 5-37 Csm_CallbackNotification 47
Table 5-38 CallbackFunc ASR 4.3 48
Table 5-39 CallbackFunc ASR 4.4 48
Table 5-40 CallbackFunc ASR R19-11 48
Table 6-1 General Properties 54
Table 6-2 Key Properties 54
Table 6-3 Primitives Properties 55
Table 6-4 Queue Properties 55
Table 6-5 Callback Properties 56
Table 6-6 Callout Properties 56
Table 6-7 Job Properties 57
Table 6-8 Redirection Properties 58
Table 7-1 Glossary 59
Table 7-2 Abbreviations 59

1 Component History

The component history gives an overview over the important milestones that are supported in the different versions of the component.

Component Version	New Features
1.00	Initial beta release
1.01	Adaptions to the specification; several improvements and bugfixes
1.02	Serial Production Release
1.03	SafeBsw Release
3.01	Introduce pre-and post-job callouts
4.01	Redirection of in-output buffers Partial Key Element Copy
5.00	JobKey primitives for Asynchronous Key Handling Enhanced compatibility to different AUTOSAR versions
5.01	Introduced Job Sharing Job Cancelation according ASR 4.4

Table 1-1 Component history

2 Introduction

This document describes the functionality, API and configuration of the AUTOSAR BSW module CSM as specified in [1].

Supported AUTOSAR Release*:	4.3	
Supported Configuration Variants:	pre-compile	
Vendor ID:	CSM_VENDOR_ID	30 decimal (= Vector-Informatik, according to HIS)
Module ID:	CSM_MODULE_ID	110 decimal

* For the detailed functional specification please also refer to the corresponding AUTOSAR SWS.

The CSM provides synchronous and asynchronous services to enable a unique access to basic cryptographic functionalities for software components (SWC) and basic software (BSW). The CSM offers a standardized interface to higher software layers to access these functionalities.

2.1 Architecture Overview

The following figure shows where the CSM is located in the AUTOSAR architecture.

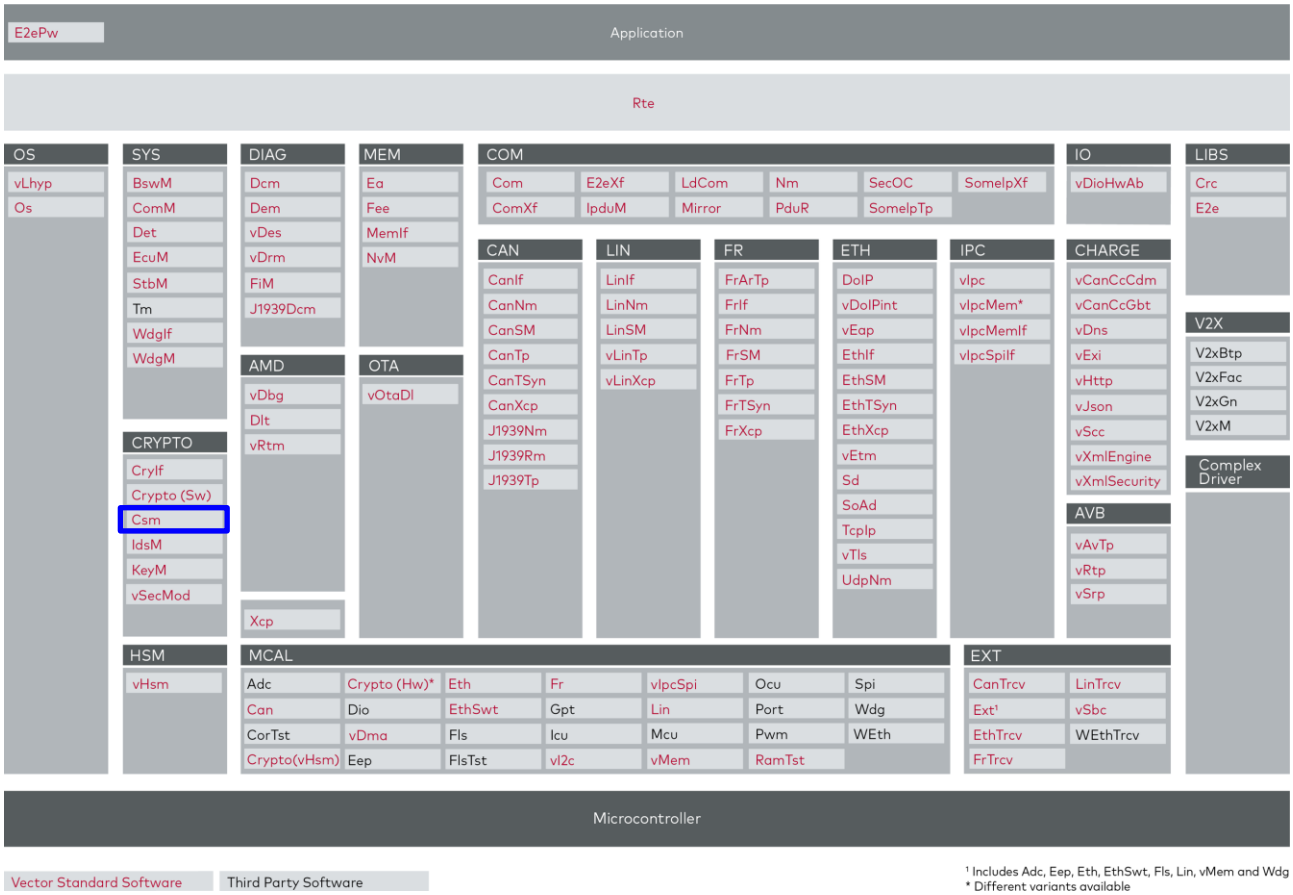


Figure 2-1 AUTOSAR 4.3 Architecture Overview

The next figure shows the interfaces to adjacent modules of the CSM. These interfaces are described in chapter 5.

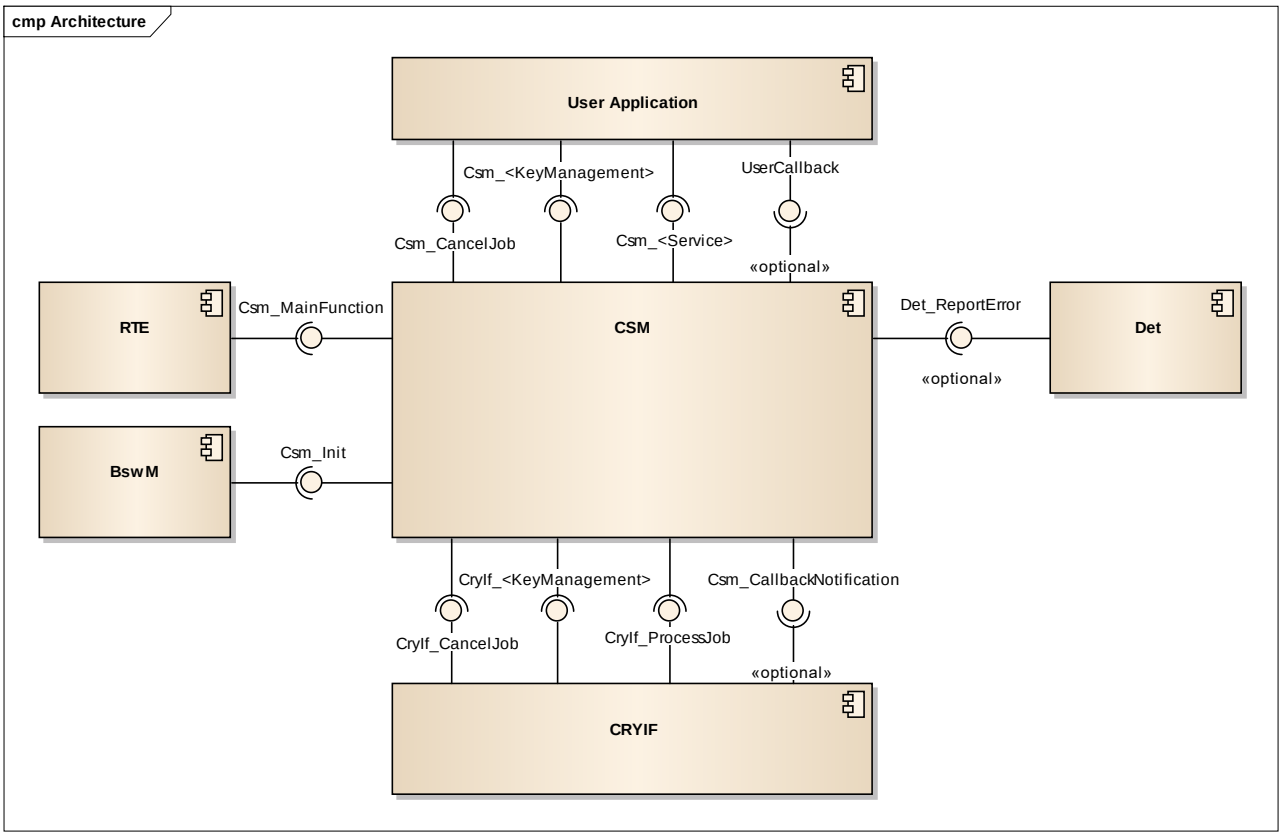


Figure 2-2 Interfaces to adjacent modules of the CSM

3 Functional Description

3.1 Features

The features listed in the following tables cover the complete functionality specified for the CSM.

The AUTOSAR standard functionality is specified in [1], the corresponding features are listed in the tables

> Table 3-1 Supported AUTOSAR standard conform features

> Table 3-3 Not supported AUTOSAR standard conform features

The following features specified in [1] are supported:

Supported AUTOSAR Standard Conform Features
Queueing and cancellation of jobs
Job prioritization
Synchronous and asynchronous job handling
Key management APIs

Table 3-1 Supported AUTOSAR standard conform features according to version 4.3.x

The following features specified in [3] are supported:

Supported AUTOSAR Standard Conform Features
Redirection of key elements
JobKey primitives for Asynchronous Key Handling

Table 3-2 Supported AUTOSAR standard conform features according to version 4.4.x

3.1.1 Deviations

The following features specified in [1] are not supported:

Not Supported AUTOSAR Standard Conform Features
4.x backward compatible API and Client-Server Interface
4.x backward compatible definitions are static and will be removed in the next release
Secure Counter Increment and Secure Counter Read are not supported
The CallbackNotification service interface does not have the parameter job of type Crypto_JobType

Table 3-3 Not supported AUTOSAR standard conform features

The following features specified in [3] are not supported:

Not Supported AUTOSAR Standard Conform Features
The primitives Csm_JobCertificateParse and Csm_JobCertificateVerify are not supported

Table 3-4 Not supported AUTOSAR standard conform features

There are the following deviations from [3]:

Deviations from AUTOSAR Standard Conform Features
Using additionally introduced types Csm_const_DataPtr, Csm_LengthPtr and Csm_VerifyResultPtr and setting all parameters' directions to IN for operations of the Client-Server-Interfaces (DATA_REFERENCES) and the Client-Server-Interfaces (Key Management) of the service interface
Using Csm_KeyDataType_{Crypto} instead of Csm_DataPtr for the operations KeyExchangeCalcPubVal, KeyExchangeCalcSecret and RandomSeed of the Client-Server-Interfaces (Key Management) of the service interface

Table 3-5 Deviations from AUTOSAR Standard Conform Features

3.2 Initialization

Before any other functionality of the CSM module can be used the initialization function `Csm_Init()` has to be called by the BSWM.

For manual null initialization of RAM variables the CSM offers the function `Csm_InitMemory()` which can be called before the `Csm_Init()`.

3.3 Main Functions

The CSM module implementation provides one main function. When the usage of asynchronous job processing is enabled, this main function has to be called cyclically on task level. The main function is responsible to dispatch new jobs to the underlying CRYIF respectively CRYPTO driver.

3.4 Error Handling

3.4.1 Development Error Reporting

By default, development errors are reported to the DET using the service `Det_ReportError()` as specified in [2], if development error reporting is enabled (i.e. pre-compile parameter `CSM_DEV_ERROR_DETECT==STD_ON`).

If another module is used for development error reporting, the function prototype for reporting the error can be configured by the integrator, but must have the same signature as the service `Det_ReportError()`.

The reported CSM ID is 110.

The reported service IDs identify the services which are described in 5.2. The following table presents the service IDs and the related services:

Service ID	Service
0x00	Csm_Init
0x01	Csm_MainFunction
0x3B	Csm_GetVersionInfo
0x5D	Csm_Hash
0x60	Csm_MacGenerate
0x61	Csm_MacVerify
0x5E	Csm_Encrypt
0x5F	Csm_Decrypt
0x62	Csm_AEADEncrypt
0x63	Csm_AEADDecrypt
0x76	Csm_SignatureGenerate
0x64	Csm_SignatureVerify
0x65	Csm_SecureCounterIncrement
0x66	Csm_SecureCounterRead
0x72	Csm_RandomGenerate
0x78	Csm_KeyElementSet

Service ID	Service
0x67	Csm_KeySetValid
0x68	Csm_KeyElementGet
0x71	Csm_KeyElementCopy
0x73	Csm_KeyCopy
0x69	Csm_RandomSeed
0x6A	Csm_KeyGenerate
0x6B	Csm_KeyDerive
0x6C	Csm_KeyExchangeCalcPubVal
0x6D	Csm_KeyExchangeCalcSecret
0x6E	Csm_CertificateParse
0x74	Csm_CertificateVerify
0x6F	Csm_CancelJob
0x70	Csm_CallbackNotification
0x7A	Csm_JobKeySetValid
0x7B	Csm_JobRandomSeed
0x7C	Csm_JobKeyGenerate
0x7D	Csm_JobKeyDerive
0x7E	Csm_JobKeyExchangeCalcPubVal
0x7F	Csm_JobKeyExchangeCalcSecret

Table 3-6 Service IDs

The errors reported to DET are described in the following table:

Error Code	Description
0x01	API request called with invalid parameter (Nullpointer)
0x05	API request called before initialization of CSM module
0x07	Initialization of CSM module failed
0x09	Requested service is not initialized
0x03	API request called with invalid parameter (invalid method for selected service)
0x11	The service Csm_Init() is called while the module is already initialized

Table 3-7 Errors reported to DET

3.5 Pre-and Post-Job Callouts

This feature can be enabled or disabled individually for each job. If enabled, a prejob callout is called before the corresponding job is processed. The signature for the prejob callout looks like that:

```
Std_ReturnType Csm_PreJobCalloutFunc)(
Crypto_JobType *job,
Csm_JobCalloutStateType state);
```

The first parameter is a pointer to the corresponding job which shall be processed, the second parameter is only used for asynchronous jobs. If the job is asynchronous, the behavior of the prejob callout might also be asynchronous. Therefore, it is possible to signalize the Csm that the processing of the prejob callout has not finished yet by returning CSM_E_PENDING. If CSM_E_PENDING is returned, the Csm delays the processing of the job and calls the prejob callout again until the return value is different. The parameter state indicates whether the prejob was called for the first time (INITIAL) or not (PENDING). Furthermore, the application implementing the prejob callout has the possibility to suppress processing of the job by returning E_NOT_OK. Then, only the postjob callout will be called.

The postjob callout will be called after the processing of a job. Its signature looks like that:

```
Std_ReturnType  Csm_PostJobCalloutFunc)(
Crypto_JobType *job,
Csm_JobCalloutStateType state,
Std_ReturnType *jobReturnValue);
```

The first parameter is once again the pointer to the corresponding job. The second pointer is the state in which the postjob callout is currently in. Up to now, the postjob callout does not have the possibility to be called more than once, so the state will always have the same value. Last, a pointer to the return value of the job processing is given. The postjob callout is able to manipulate the return value to an arbitrary value, which than is given to the application which originally triggered the job. Like the state parameter, the return value is given for future use, up to now the Csm will ignore it.



Caution
Both, the pre- and postjob callouts have a pointer to the corresponding job. It is possible to manipulate the job object (e.g. adapt buffers, adjust lengths, and so on). Beware that the Csm is not able to check later on whether the buffers are set up accordingly.

4 Integration

This chapter gives necessary information for the integration of the MICROSAR CSM into an application environment of an ECU.

4.1 Scope of Delivery

The delivery of the CSM contains the files which are described in the chapters 4.1.1 and 4.1.2:

4.1.1 Static Files

File Name	Description
Csm.c	This is the source file of the CSM.
Csm_Rte.c	This is the source file of the CSM providing interfaces used by RTE.
Csm.h	This is the header file of the CSM.
Csm_Rte.h	This is the header file of the CSM describing interfaces used by RTE.
Csm_Cbk.h	This is the header file which contains the callback function declaration.
Csm_Types.h	This is the common header file used within the crypto stack.

Table 4-1 Static files

4.1.2 Dynamic Files

The dynamic files are generated by the configuration tool DaVinci Configurator 5 Pro.

File Name	Description
Csm_Cfg.c	This is configuration source file.
Csm_Cfg.h	This is configuration header file.

Table 4-2 Generated files

4.2 Critical Sections

The CSM has critical code sections which must not be interrupted. The sections are related to the queue handling, job sorting and job queuing.

The CSM module calls the following function when entering a critical section:

> SchM_Enter_Csm_CSM_EXCLUSIVE_AREA_0

When the critical section is left the following function is called by the CSM module:

> SchM_Exit_Csm_CSM_EXCLUSIVE_AREA_0

This critical section is needed to ensure consistency of global RAM variables regarding the queue handling. The runtime and length of the critical section depends on the configured queue size.



Note
The critical section is only needed when asynchronous jobs are configured.

5 API Description

For an interfaces overview please see Figure 2-2.

5.1 Type Definitions

Application related types defined by the CSM are described in this chapter. All types not described here are defined by the CSM as described in [1].

Type Name	C-Type	Description	Value Range
Crypto_OperationModeType	uint8	Indicator of the mode(s)/operation(s) to be performed.	CRYPTO_OPERATIONMODE_START Perform start operation
			CRYPTO_OPERATIONMODE_UPDATE Perform update operation
			CRYPTO_OPERATIONMODE_FINISH Perform finish operation
			CRYPTO_OPERATIONMODE_STREAMSTART Perform start and update operation
			CRYPTO_OPERATIONMODE_SINGLECALL Perform start, update and finish operation
Crypto_VerifyResultType	uint8	Enumeration of the result type of verification operations.	CRYPTO_E_VER_OK The result of the verification is "true", i.e. the two compared elements are identical. This return code shall be given as value "0"
			CRYPTO_E_VER_NOT_OK The result of the verification is "false", i.e. the two compared elements are not identical. This return code shall be given as value "1".

Table 5-1 Type definitions

5.2 Services provided by CSM

5.2.1 Csm_Init

Prototype	
`void Csm_Init (void)`	
Parameter	
void	none
Return code	
void	none
Functional Description	
Initializes the CSM module.	
Particularities and Limitations	
Set all service states to initial idle.	
Call context	
> TASK > This function is Synchronous > This function is reentrant	

Table 5-2 Csm_Init

5.2.2 Csm_InitMemory

Prototype	
`void Csm_InitMemory (void)`	
Parameter	
void	none
Return code	
void	none
Functional Description	
Power-up memory initialization.	
Particularities and Limitations	
Use this function in case these variables are not initialized by the startup code. Module is uninitialized. Initialize component variables at power up.	
Call context	
> TASK > This function is Synchronous > This function is Non-Reentrant	

Table 5-3 Csm_InitMemory

5.2.3 Csm_MainFunction

Prototype	
`void Csm_MainFunction ( void )`	
Parameter	
void	none
Return code	
void	none
Functional Description	
Main function of the module. It is called cyclically and handles asynchronous jobs.	
Particularities and Limitations	
> Declared and called by SchM > Is called cyclically.	
Call context	
> TASK > This function is synchronous > This function is non-reentrant	

Table 5-4 Csm_MainFunction

5.2.4 Csm_GetVersionInfo

Prototype	
`void Csm_GetVersionInfo (Std_VersionInfoType *versioninfo)`	
Parameter	
versioninfo [out]	Pointer where the version info data shall be stored.
Return code	
void	none
Functional Description	
Implements the API to be called cyclically to process the requested services. Calls the configured main function of the specific Cry service if requested.	
Particularities and Limitations	
> Csm is initialized.GetVersionInfo API is enabled via pre-compile configuration.	
Call context	
> TASK > This function is Synchronous > This function is Non-Reentrant	

Table 5-5 Csm_GetVersionInfo

5.2.5 Csm_CancelJob

Prototype	
`Std_ReturnType **Csm_CancelJob** (uint32 jobId, Crypto_OperationModeType mode)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
mode [in]	Not used, just for interface compatibility provided
Return code	
Std_ReturnType	CSM_E_OK Request successful – Job was cancelled or was already Idle
Std_ReturnType	CSM_E_NOT_OK Request failed – Job could not be cancelled
Std_ReturnType	CRYPTO_E_JOB_CANCELED Request pending - Job will be cancelled with next callback notification
Functional Description	
Cancels the given job.	
Particularities and Limitations	
Cancels the job processing from asynchronous or streaming jobs. Removes the job in the Csm Queue and calls the job's callback with the result CRYPTO_E_JOB_CANCELED. It also passes the cancellation command to the CryIf to try to cancel the job in the Crypto Driver.	
Call context	
> TASK > This function is Synchronous > This function is Non-Reentrant	

Table 5-6 Csm_CancelJob

5.2.6 Csm_KeyElementSet

Prototype	
`Std_ReturnType **Csm_KeyElementSet** (uint32 keyId, uint32 keyElementId, const uint8 *keyPtr, uint32 keyLength)`	
Parameter	
keyId [in]	Holds the identifier of the job using the CSM service.
keyElementId [in]	Holds the identifier of the key element to be written.
keyPtr [in]	Holds the pointer to the key element bytes to be processed.
keyLength [in]	Contains the number of key element bytes.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, service is busy

	CRYPTO_E_KEY_WRITE_FAIL Request failed because write access was denied
	CRYPTO_E_KEY_NOT_AVAILABLE Request failed because the key is not available
	CRYPTO_E_KEY_SIZE_MISMATCH Request failed because key element size does not match size of provided data
Functional Description	
Sets the given key element bytes to the key identified by keyId.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is Synchronous > This function is Non-Reentrant	

Table 5-7 Csm_KeyElementSet

5.2.7 Csm_KeySetValid

Prototype	
`Std_ReturnType` **`Csm_KeySetValid`** `(uint32 keyId)`	
Parameter	
keyId [in]	Holds the identifier of the key for which a new material shall be validated.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, service is busy
Functional Description	
Sets the key state of the key identified by keyId to valid.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is Synchronous > This function is reentrant	

Table 5-8 Csm_KeySetValid

5.2.8 Csm_KeyElementGet

Prototype	
`Std_ReturnType` **`Csm_KeyElementGet`** `(uint32 keyId, uint32 keyElementId, uint8 *keyPtr, uint32 *keyLengthPtr)`	
Parameter	
keyId [in]	Holds the identifier of the key from which a key element shall be extracted.
keyElementId [in]	Holds the identifier of the key element to be extracted.
keyPtr [out]	Holds the pointer to the memory location where the key shall be copied to.
inout] [out]	keyLengthPtr Holds a pointer to the memory location in which the output buffer length in bytes is stored. On calling this function, this parameter shall contain the buffer length in bytes of the keyPtr. When the request has finished, the actual size of the written input bytes shall be stored.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, service is busy
	CRYPTO_E_KEY_READ_FAIL Request failed because read access was denied
	CRYPTO_E_KEY_NOT_AVAILABLE Request failed because the key is not available
	CRYPTO_E_SMALL_BUFFER The provided buffer is too small to store the result
Functional Description	
Retrieves the key element bytes from a specific key element of the key identified by the keyId and stores the key element in the memory location pointed by the key pointer.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is Synchronous > This function is reentrant	

Table 5-9 Csm_KeyElementGet

5.2.9 Csm_KeyElementCopy

Prototype	
`Std_ReturnType` **`Csm_KeyElementCopy`** `(uint32 keyId, uint32 keyElementId, uint32 targetKeyId, uint32 targetKeyElementId)`	
Parameter	
keyId [in]	Holds the identifier of the key whose key element shall be the source element.
keyElementId [in]	Holds the identifier of the key element which shall be the source for the copy operation.
targetKeyId [in]	Holds the identifier of the key whose key element shall be the destination element.
targetKeyElementId [in]	Holds the identifier of the key element which shall be the destination for the copy operation.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, Crypto Driver Object is busy
	CRYPTO_E_KEY_READ_FAIL Request failed because read access was denied
	CRYPTO_E_KEY_WRITE_FAIL Request failed because write access was denied
	CRYPTO_E_KEY_NOT_AVAILABLE Request failed because the key is not available
	CRYPTO_E_KEY_SIZE_MISMATCH Request failed because key element sizes are not compatible
Functional Description	
This function shall copy a key elements from one key to a target key.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is Synchronous > This function is reentrant	

Table 5-10 Csm_KeyElementCopy

5.2.10 Csm_KeyElementCopyPartial

Prototype	
`Std_ReturnType` **`Csm_KeyElementCopyPartial`** `(uint32 keyId, uint32 keyElementId, uint32 keyElementSourceOffset, uint32 keyElementTargetOffset, uint32 keyElementCopyLength, uint32 targetKeyId, uint32 targetKeyElementId)`	
Parameter	
keyId [in]	Holds the identifier of the key whose key element shall be the source element.
keyElementId [in]	Holds the identifier of the key element which shall be the source for the copy operation.
keyElementSourceOffset[in]	This is the offset of the source key element indicating the start index of the copy operation.
keyElementTargetOffset[in]	This is the offset of the destination key element indicating the start index of the copy operation.
keyElementCopyLength[in]	Specifies the number of bytes that shall be copied.
targetKeyId [in]	Holds the identifier of the key whose key element shall be the destination element.
targetKeyElementId [in]	Holds the identifier of the key element which shall be the destination for the copy operation.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, Crypto Driver Object is busy
	CRYPTO_E_KEY_READ_FAIL Request failed because read access was denied
	CRYPTO_E_KEY_WRITE_FAIL Request failed because write access was denied
	CRYPTO_E_KEY_NOT_AVAILABLE Request failed because the key is not available
	CRYPTO_E_KEY_SIZE_MISMATCH Request failed because key element sizes are not compatible
	CRYPTO_E_KEY_EMPTY Request failed because of uninitialized source key element.
Functional Description	
This function shall copy a key elements from one key to a target key partially.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is Synchronous > This function is reentrant	

Table 5-11 Csm_KeyElementCopyPartial

5.2.11 Csm_KeyCopy

Prototype	
`Std_ReturnType` **`Csm_KeyCopy`** `(uint32 keyId, uint32 targetKeyId)`	
Parameter	
keyId [in]	Holds the identifier of the key whose key element shall be the source element.
targetKeyId [in]	Holds the identifier of the key whose key element shall be the destination element.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, Crypto Driver Object is busy
	CRYPTO_E_KEY_READ_FAIL Request failed because read access was denied
	CRYPTO_E_KEY_WRITE_FAIL Request failed because write access was denied
	CRYPTO_E_KEY_NOT_AVAILABLE Request failed because the key is not available
	CRYPTO_E_KEY_SIZE_MISMATCH Request failed because key element sizes are not compatible
Functional Description	
This function shall copy all key elements from the source key to a target key.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is Synchronous > This function is reentrant	

Table 5-12 Csm_KeyCopy

5.2.12 Csm_RandomSeed

Prototype	
`Std_ReturnType **Csm_RandomSeed** (uint32 keyId, const uint8 *seedPtr, uint32 seedLength)`	
Parameter	
keyId [in]	Holds the identifier of the key for which a new material shall be generated.
seedPtr [in]	Holds a pointer to the memory location containing the data to feed the seed.
seedLength [in]	Contains the length of the seed in bytes.
Return code	
Std_ReturnType	CSM_E_OK Request successful
Std_ReturnType	CSM_E_NOT_OK Request failed
Functional Description	
This function shall dispatch the random seed function to the configured crypto driver object. Feeds the key element CRYPTO_KE_RANDOM_SEED with a random seed.	
Particularities and Limitations	
Call context	
> TASK > This function is Synchronous > This function is reentrant	

Table 5-13 Csm_RandomSeed

5.2.13 Csm_KeyGenerate

Prototype	
`Std_ReturnType **Csm_KeyGenerate** (uint32 keyId)`	
Parameter	
keyId [in]	Holds the identifier of the key for which a new material shall be generated.
Return code	
Std_ReturnType	CSM_E_OK Request successful
Std_ReturnType	CSM_E_NOT_OK Request failed
Functional Description	
Generates new key material and store it in the key identified by keyId.	
Particularities and Limitations	
Call context	
> TASK > This function is Synchronous > This function is reentrant	

Table 5-14 Csm_KeyGenerate

5.2.14 Csm_KeyDerive

Prototype	
`Std_ReturnType **Csm_KeyDerive** (uint32 keyId, uint32 targetKeyId)`	
Parameter	
keyId [in]	Holds the identifier of the key used for key derivation.
targetKeyId [in]	Holds the identifier of the key which is used to store the derived key.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, Crypto Driver Object is busy
Functional Description	
Derives a new key by using the key elements in the given key identified by the keyId. The given key contains the key elements for the password and salt. The derived key is stored in the key element with the id 1 of the key identified by targetCryptoKeyId.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is Synchronous > This function is reentrant	

Table 5-15 Csm_KeyDerive

5.2.15 Csm_KeyExchangeCalcPubVal

Prototype	
`Std_ReturnType **Csm_KeyExchangeCalcPubVal** (uint32 keyId, uint8 *publicValuePtr, uint32 *publicValueLengthPtr)`	
Parameter	
keyId [in]	Holds the key identifier of the key to be used for the key exchange protocol.
publicValuePtr [out]	Contains the pointer to the data where the public value shall be stored.
inout] [out]	publicValueLengthPtr Holds a pointer to the memory location in which the public value length in bytes is stored. On calling this function, this parameter shall contain the size of the buffer in bytes provided by publicValuePtr. When the request has finished, the actual length of the returned value shall be stored.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_KEY_NOT_VALID Request failed because the key's state is "invalid"

	CRYPTO_E_SMALL_BUFFER The provided buffer is too small to store the result
Functional Description	
Calculates the public value of the current user for the key exchange and stores the public key in the memory location pointed by the public value pointer.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is Synchronous > This function is reentrant	

Table 5-16 Csm_KeyExchangeCalcPubVal

5.2.16 Csm_KeyExchangeCalcSecret

Prototype	
`Std_ReturnType` **`Csm_KeyExchangeCalcSecret`** `(uint32 keyId, const uint8 *partnerPublicValuePtr, uint32 partnerPublicValueLength)`	
Parameter	
keyId [in]	Holds the key identifier of the key to be used for the key exchange protocol.
partnerPublicValuePtr [in]	Holds the pointer to the memory location containing the partner's public value.
partnerPublicValueLength [in]	Contains the number of bytes of the partner public value.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, Crypto Driver Object is busy
	CRYPTO_E_SMALL_BUFFER The provided buffer is too small to store the result
Functional Description	
Calculates the shared secret key for the key exchange with the key material of the key identified by the keyId and the partner public key. The shared secret key is stored as a key element in the same key.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is Synchronous > This function is reentrant	

Table 5-17 Csm_KeyExchangeCalcSecret

5.2.17 Csm_CertificateParse

Prototype	
`Std_ReturnType` **`Csm_CertificateParse`** `(uint32 keyId)`	
Parameter	
keyId [in]	Holds the identifier of the key to be used for the certificate parsing.
Return code	
Std_ReturnType	CSM_E_OK Request successful
Std_ReturnType	CSM_E_NOT_OK Request failed
Std_ReturnType	CRYPTO_E_BUSY Request failed, Crypto Driver Object is busy
Functional Description	
This function shall dispatch the certificate parse function to the CRYIF.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is Synchronous > This function is reentrant	

Table 5-18 Csm_CertificateParse

5.2.18 Csm_CertificateVerify

Prototype	
`Std_ReturnType` **`Csm_CertificateVerify`** `(uint32 keyId, uint32 verifyKeyId, Crypto_VerifyResultType *verifyPtr)`	
Parameter	
keyId [in]	Holds the identifier of the key to be used to validate the certificate.
verifyKeyId [in]	Holds the identifier of the key containing the certificate to be verified.
verifyPtr [out]	Holds a pointer to the memory location, which will contain the result of the certificate verification.
Return code	
Std_ReturnType	CSM_E_OK Request successful
Std_ReturnType	CSM_E_NOT_OK Request failed
Std_ReturnType	CRYPTO_E_BUSY Request failed, Crypto Driver Object is busy
Functional Description	
Verifies the certificate stored in the key referenced by verifyKeyId with the certificate stored in the key referenced by keyId. Note: Only certificates stored in the same Crypto Driver can be verified against each other. If the key element CRYPTO_KE_CERTIFICATE_CURRENT_TIME is used for the verification of the validity period of the certificate identified by verifyKeyId, it shall have the same format as the timestamp in the certificate.	

Particularities and Limitations
-
Call context
> TASK > This function is Synchronous > This function is reentrant

Table 5-19 Csm_CertificateVerify

5.2.19 Csm_Hash

Prototype	
`Std_ReturnType Csm_Hash (uint32 jobId, Crypto_OperationModeType mode, const uint8 *dataPtr, uint32 dataLength, uint8 *resultPtr, uint32 *resultLengthPtr)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
mode [in]	Indicates which operation mode(s) to perfom.
dataPtr [in]	Contains the pointer to the data for which the hash shall be computed.
dataLength [in]	Contains the number of bytes to be hashed.
resultPtr [out]	Contains the pointer to the data where the hash value shall be stored.
resultLengthPtr [in,out]	Holds a pointer to the memory location in which the output length in bytes is stored. On calling this function, this parameter shall contain the size of the buffer provided by resultPtr. When the request has finished, the actual length of the returned value shall be stored.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, service is busy
	CRYPTO_E_QUEUE_FULL Request failed, the queue is full
	CRYPTO_E_SMALL_BUFFER The provided buffer is too small to store the result
Functional Description	
Uses the given data to perform the hash calculation and stores the hash.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is reentrant	

Table 5-20 Csm_Hash

5.2.20 Csm_MacGenerate

Prototype	
`Std_ReturnType` **`Csm_MacGenerate`** `(uint32 jobId, Crypto_OperationModeType mode, const uint8 *dataPtr, uint32 dataLength, uint8 *macPtr, uint32 *macLengthPtr)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
mode [in]	Indicates which operation mode(s) to perfom.
dataPtr [in]	Contains the pointer to the data for which the MAC shall be computed.
dataLength [in]	Contains the number of bytes for the MAC generation.
macPtr [out]	Contains the pointer to the data where the MAC shall be stored.
macLengthPtr [in,out]	Holds a pointer to the memory location in which the output length in bytes is stored. On calling this function, this parameter shall contain the size of the buffer provided by macPtr. When the request has finished, the actual length of the returned MAC shall be stored.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, service is busy
	CRYPTO_E_QUEUE_FULL Request failed, the queue is full
	CRYPTO_E_SMALL_BUFFER The provided buffer is too small to store the result
Functional Description	
Uses the given data to perform a MAC generation and stores the MAC in the memory location pointed to by the MAC pointer.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is reentrant	

Table 5-21 Csm_MacGenerate

5.2.21 Csm_MacVerify

Prototype	
`Std_ReturnType **Csm_MacVerify** (uint32 jobId, Crypto_OperationModeType mode, const uint8 *dataPtr, uint32 dataLength, const uint8 *macPtr, uint32 macLength, Crypto_VerifyResultType *verifyPtr)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
mode [in]	Indicates which operation mode(s) to perfom.
dataPtr [in]	Contains the pointer to the data for which the MAC shall be verified.
dataLength [in]	Contains the number of data bytes for which the MAC shall be verified.
macPtr [in]	Holds a pointer to the MAC to be verified.
macLength [in]	Contains the MAC length in BITS to be verified.
verifyPtr [out]	Holds a pointer to the memory location, which will hold the result of the MAC verification.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, service is busy
	CRYPTO_E_QUEUE_FULL Request failed, the queue is full
	CRYPTO_E_SMALL_BUFFER The provided buffer is too small to store the result
Functional Description	
Verifies the given MAC by comparing if the MAC is generated with the given data.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is reentrant	

Table 5-22 Csm_MacVerify

5.2.22 Csm_Encrypt

Prototype	
`Std_ReturnType **Csm_Encrypt** (uint32 jobId, Crypto_OperationModeType mode, const uint8 *dataPtr, uint32 dataLength, uint8 *resultPtr, uint32 *resultLengthPtr)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
mode [in]	Indicates which operation mode(s) to perfom.
dataPtr [in]	Contains the pointer to the data to be encrypted.
dataLength [in]	Contains the number of bytes to encrypt.
resultPtr [out]	Contains the pointer to the data where the encrypted data shall be stored.
resultLengthPtr [in,out]	Holds a pointer to the memory location in which the output length information is stored in bytes. On calling this function, this parameter shall contain the size of the buffer provided by resultPtr. When the request has finished, the actual length of the returned value shall be stored.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, service is busy
	CRYPTO_E_QUEUE_FULL Request failed, the queue is full
	CRYPTO_E_SMALL_BUFFER The provided buffer is too small to store the result
Functional Description	
Encrypts the given data and stores the ciphertext in the memory location pointed by the result pointer.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is reentrant	

Table 5-23 Csm_Encrypt

5.2.23 Csm_Decrypt

Prototype	
`Std_ReturnType` **`Csm_Decrypt`** `(uint32 jobId, Crypto_OperationModeType mode, const uint8 *dataPtr, uint32 dataLength, uint8 *resultPtr, uint32 *resultLengthPtr)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
mode [in]	Indicates which operation mode(s) to perfom.
dataPtr [in]	Contains the pointer to the data to be decrypted.
dataLength [in]	Contains the number of bytes to decrypt.
resultPtr [out]	Contains the pointer to the data where the decrypted data shall be stored.
resultLengthPtr [in,out]	Holds a pointer to the memory location in which the output length information is stored in bytes. On calling this function, this parameter shall contain the size of the buffer provided by resultPtr. When the request has finished, the actual length of the returned value shall be stored.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, service is busy
	CRYPTO_E_QUEUE_FULL Request failed, the queue is full
	CRYPTO_E_SMALL_BUFFER The provided buffer is too small to store the result
Functional Description	
Decrypts the given encrypted data and stores the decrypted plaintext in the memory location pointed by the result pointer.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is reentrant	

Table 5-24 Csm_Decrypt

5.2.24 Csm_AEADEncrypt

Prototype	
`Std_ReturnType` **`Csm_AEADEncrypt`** `(uint32 jobId, Crypto_OperationModeType mode, const uint8 *plaintextPtr, uint32 plaintextLength, const uint8 *associatedDataPtr, uint32 associatedDataLength, uint8 *ciphertextPtr, uint32 *ciphertextLengthPtr, uint8 *tagPtr, uint32 *tagLengthPtr)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
mode [in]	Indicates which operation mode(s) to perfom.
plaintextPtr [in]	Contains the pointer to the data to be encrypted.
plaintextLength [in]	Contains the number of bytes to encrypt.
associatedDataPtr [in]	Contains the pointer to the associated data.
associatedDataLength [in]	Contains the number of bytes of the associated data.
ciphertextPtr [out]	Contains the pointer to the data where the encrypted data shall be stored.
ciphertextLengthPtr [in,out]	Holds a pointer to the memory location in which the output length in bytes of the ciphertext is stored. On calling this function, this parameter shall contain the size of the buffer in bytes provided by resultPtr. When the request has finished, the actual length of the returned value shall be stored.
tagPtr [out]	Contains the pointer to the data where the Tag shall be stored.
tagLengthPtr [in,out]	Holds a pointer to the memory location in which the output length in bytes of the Tag is stored. On calling this function, this parameter shall contain the size of the buffer in bytes provided by resultPtr. When the request has finished, the actual length of the returned value shall be stored.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, service is busy
	CRYPTO_E_QUEUE_FULL Request failed, the queue is full
	CRYPTO_E_SMALL_BUFFER The provided buffer is too small to store the result
Functional Description	
Uses the given input data to perform a AEAD encryption and stores the ciphertext and the MAC in the memory locations pointed by the ciphertext pointer and Tag pointer.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is reentrant	

Table 5-25 Csm_AEADEncrypt

5.2.25 Csm_AEADDecrypt

Prototype	
`Std_ReturnType` **`Csm_AEADDecrypt`** `(uint32 jobId, Crypto_OperationModeType mode, const uint8 *ciphertextPtr, uint32 ciphertextLength, const uint8 *associatedDataPtr, uint32 associatedDataLength, const uint8 *tagPtr, uint32 tagLength, uint8 *plaintextPtr, uint32 *plaintextLengthPtr, Crypto__VerifyResultType *verifyPtr)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
mode [in]	Indicates which operation mode(s) to perfom.
ciphertextPtr [in]	Contains the pointer to the data to be decrypted.
ciphertextLength [in]	Contains the number of bytes to decrypt.
associatedDataPtr [in]	Contains the pointer to the associated data.
associatedDataLength [in]	Contains the number of bytes of the associated data.
tagPtr [in]	Contains the pointer to the data where the Tag shall be stored.
tagLength [in]	Contains the length in bytes of the Tag to be verified.
plaintextPtr [out]	Contains the pointer to the data where the encrypted data shall be stored.
plaintextLengthPtr [in,out]	Holds a pointer to the memory location in which the output length in bytes of the ciphertext is stored. On calling this function, this parameter shall contain the size of the buffer in bytes provided by resultPtr. When the request has finished, the actual length of the returned value shall be stored.
verifyPtr [out]	Contains the pointer to the result of the verification.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, service is busy
	CRYPTO_E_QUEUE_FULL Request failed, the queue is full
	CRYPTO_E_SMALL_BUFFER The provided buffer is too small to store the result
Functional Description	
Uses the given data to perform an AEAD decryption and stores the plaintext and the result of in the memory locations pointed by the plaintext pointer and verifyPtr pointer.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is reentrant	

Table 5-26 Csm_AEADDecrypt

5.2.26 Csm_SignatureGenerate

Prototype	
`Std_ReturnType` **`Csm_SignatureGenerate`** `(uint32 jobId, Crypto_OperationModeType mode, const uint8 *dataPtr, uint32 dataLength, uint8 *resultPtr, uint32 *resultLengthPtr)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
mode [in]	Indicates which operation mode(s) to perfom.
dataPtr [in]	Contains the pointer to the data to be signed.
dataLength [in]	Contains the number of bytes to sign.
resultPtr [out]	Contains the pointer to the data where the signature shall be stored.
resultLengthPtr [in,out]	Holds a pointer to the memory location in which the output length in bytes is stored. On calling this function, this parameter shall contain the size of the buffer in bytes provided by resultPtr. When the request has finished, the actual length of the returned value shall be stored.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, service is busy
	CRYPTO_E_QUEUE_FULL Request failed, the queue is full
	CRYPTO_E_SMALL_BUFFER The provided buffer is too small to store the result
Functional Description	
Uses the given data to perform the signature calculation and stores the signature in the memory location pointed by the result pointer.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is reentrant	

Table 5-27 Csm_SignatureGenerate

5.2.27 Csm_SignatureVerify

Prototype	
`Std_ReturnType` **`Csm_SignatureVerify`** `(uint32 jobId, Crypto_OperationModeType mode, const uint8 *dataPtr, uint32 dataLength, const uint8 *signaturePtr, uint32 signatureLength, Crypto_VerifyResultType *verifyPtr)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
mode [in]	Indicates which operation mode(s) to perfom.
dataPtr [in]	Contains the pointer to the data to be verified.
dataLength [in]	Contains the number of bytes to be verified.
signaturePtr [in]	Holds a pointer to the signature to be verified.
signatureLength [in]	Contains the signature length in bytes.
verifyPtr [out]	Holds a pointer to the memory location, which will hold the result of the signature verification.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, service is busy
	CRYPTO_E_QUEUE_FULL Request failed, the queue is full
	CRYPTO_E_SMALL_BUFFER The provided buffer is too small to store the result
Functional Description	
Verifies the given MAC by comparing if the signature is generated with the given data.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is reentrant	

Table 5-28 Csm_SignatureVerify

5.2.28 Csm_RandomGenerate

Prototype	
`Std_ReturnType` **`Csm_RandomGenerate`** `(uint32 jobId, uint8 *resultPtr, uint32 *resultLengthPtr)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
resultPtr [out]	Holds a pointer to the memory location which will hold the result of the random number generation.
resultLengthPtr [in,out]	Holds a pointer to the memory location in which the result length in bytes is stored. On calling this function, this parameter shall contain the number of random bytes, which shall be stored to the buffer provided by resultPtr. When the request has finished, the actual length of the returned value shall be stored.
Return code	
Std_ReturnType	CSM_E_OK Request successful
	CSM_E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, service is busy
	CRYPTO_E_QUEUE_FULL Request failed, the queue is full
	CRYPTO_E_ENTROPY_EXHAUSTION Request failed, entropy of random number generator is exhausted
	CRYPTO_E_SMALL_BUFFER The provided buffer is too small to store the result
Functional Description	
Generate a random number and stores it in the memory location pointed by the result pointer.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is reentrant	

Table 5-29 Csm_RandomGenerate

5.2.29 Csm_JobKeySetValid

Prototype	
`Std_ReturnType` **`Csm_JobKeySetValid`** `(uint32 jobId, uint32 keyId)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
keyId [in]	Holds the identifier of the key for which a new material shall be validated.
Return code	
Std_ReturnType	E_OK: Request successful
	E_NOT_OK: Request failed
	CRYPTO_E_BUSY: Request failed, Crypro Driver Object is busy
Functional Description	
Stores the key if necessary and sets the key state of the key identified by keyId to valid.	
Particularities and Limitations	
-	
Call context	
TASK This function is reentrant	

Table 5-30 Csm_JobKeySetValid

5.2.30 Csm_JobRandomSeed

Prototype	
`Std_ReturnType` **`Csm_JobRandomSeed`** `(uint32 jobId, uint32 keyId, const uint8 *seedPtr, uint32 seedLength)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
keyId [in]	Holds the identifier of the key for which a new seed shall be generated.
seedPtr [in]	Holds a pointer to the memory location which contains the data to feed the seed.
seedLength [in]	Contains the length of the seed in bytes.
Return code	
Std_ReturnType	E_OK Request successful
	E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, Crypto Driver Object is busy
	CRYPTO_E_QUEUE_FULL Request failed, the queue is full
	CRYPTO_E_KEY_NOT_VALID Request failed, the key's state is "invalid"
Functional Description	
This function shall dispatch the random seed function to the configured crypto driver object.	

Particularities and Limitations
-
Call context
TASK This function is reentrant

Table 5-31 Csm_JobRandomSeed

5.2.31 Csm_JobKeyGenerate

Prototype	
`Std_ReturnType` **`Csm_JobKeyGenerate`** `(uint32 jobId, uint32 keyId)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
keyId [in]	Holds the identifier of the key for which a new material shall be generated.
Return code	
Std_ReturnType	E_OK Request successful
	E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, Crypto Driver Object is busy
	CRYPTO_E_QUEUE_FULL Request failed, the queue is full
	CRYPTO_E_KEY_NOT_VALID Request failed, the key's state is "invalid"
	CRYPTO_E_KEY_EMPTY Request failed because of uninitialized source key element
Functional Description	
Generates new key material and stores it in the key identified by keyId.	
Particularities and Limitations	
-	
Call context	
TASK This function is reentrant	

Table 5-32 Csm_JobKeyGenerate

5.2.32 Csm_JobKeyDerive

Prototype	
`Std_ReturnType` **`Csm_JobKeyDerive`** `(uint32 jobId, uint32 keyId, uint32 targetKeyId)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
keyId [in]	Holds the identifier of the key which is used for key derivation.
targetKeyId [in]	Holds the identifier of the key which is used to store the derived key.
Return code	
Std_ReturnType	E_OK Request successful
	E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, Crypto Driver Object is busy
	CRYPTO_E_KEY_READ_FAIL Request failed, not allowed to extract key element
	CRYPTO_E_KEY_WRITE_FAIL Request failed, not allowed to write key element
	CRYPTO_E_KEY_NOT_VALID Request failed, the key's state is "invalid"
	CRYPTO_E_KEY_SIZE_MISMATCH Request failed, key element sizes are not compatible
	CRYPTO_E_KEY_EMPTY Request failed because of uninitialized source key element
Functional Description	
Derives a new key by using the key elements in the given key identified by the keyId. The given key contains the key elements for the password and salt. The derived key is stored in the key element with the id 1 of the key identified by targetCryptoKeyId.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is reentrant	

Table 5-33 Csm_JobKeyDerive

5.2.33 Csm_JobKeyExchangeCalcPubVal

Prototype	
`Std_ReturnType` **`Csm_JobKeyExchangeCalcPubVal`** `(uint32 jobId, uint32 keyId, uint8 *publicValuePtr, uint32 *publicValueLengthPtr)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
keyId [in]	Holds the identifier of the key which shall be used for the key exchange protocol.
publicValueLengthPtr [in, out]	Holds a pointer to the memory location in which the public value length information is stored. On calling this function, this parameter shall contain the size of the buffer provided by publicValuePtr. When the request has finished, the actual length of the returned value shall be stored.
publicValuePtr [out]	Contains the pointer to the data where the public value shall be stored.
Return code	
Std_ReturnType	E_OK Request successful
	E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, Crypto Driver Object is busy
	CRYPTO_E_KEY_NOT_VALID Request failed, the key's state is "invalid"
	CRYPTO_E_KEY_EMPTY Request failed because of uninitialized source key element
Functional Description	
Calculates the public value of the current user for the key exchange and stores the public key in the memory location pointed by the public value pointer.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is reentrant	

Table 5-34 Csm_JobKeyExchangeCalcPubVal

5.2.34 Csm_JobKeyExchangeCalcSecret

Prototype	
`Std_ReturnType` **`Csm_JobKeyExchangeCalcSecret`** `(uint32 jobId, uint32 keyId, const uint8 *partnerPublicValuePtr, uint32 partnerPublicValueLength)`	
Parameter	
jobId [in]	Holds the identifier of the job using the CSM service.
keyId [in]	Holds the identifier of the key which shall be used for the key exchange protocol.
partnerPublicValuePtr [in]	Holds the pointer to the memory location which contains the partner's public value.
partnerPublicValueLength [in]	Contains the length of the partner's public value in bytes.
Return code	
Std_ReturnType	E_OK Request successful
	E_NOT_OK Request failed
	CRYPTO_E_BUSY Request failed, Crypto Driver Object is busy
	CRYPTO_E_KEY_NOT_VALID Request failed, the key's state is "invalid"
	CRYPTO_E_KEY_EMPTY Request failed because of uninitialized source key element
Functional Description	
Calculates the shared secret key for the key exchange with the key material of the key identified by the keyId and the partner public key. The shared secret key is stored as a key element in the same key.	
Particularities and Limitations	
-	
Call context	
> TASK > This function is reentrant	

Table 5-35 Csm_JobKeyExchangeCalcSecret



Note
The Csm provides APIs with the suffixes

- DataRef e.g. Csm_HashDataRef
- 43x e.g. Csm_MacGenerate43x
- NoOpMode e.g. Csm_CancelJobNoOpMode

These APIs are used only by RTE/SWCs. These API functions wrap existing API functions and do not add functionality. These APIs are used to enable backward compatibility to older ASR versions.

5.3 Services used by CSM

In the following table services provided by other components, which are used by the CSM are listed. For details about prototype and functionality refer to the documentation of the providing component.

Component	API
DET	Det_ReportError

Table 5-36 Services used by the CSM

5.4 Callback Functions Provided by CSM

This chapter describes the callback functions that are implemented by the CSM and can be invoked by other modules. The prototypes of the callback functions are provided in the header file `Csm_Cbk.h` by the CSM.

5.4.1 Csm_CallbackNotification

Prototype	
`void` **`Csm_CallbackNotification`** `( Crypto_JobType *job, Std_ReturnType result )`	
Parameter	
`job`	Points to the completed job's information structure. It contains a callbackID to identify which job is finished.
`result`	Contains the result of the cryptographic operation.
Return code	
`void`	none
Functional Description	
Notifies the CSM about the completion of the request with the result of the cryptographic operation.	
Particularities and Limitations	
> This function is synchronous. > This function is non-reentrant.	

Table 5-37 Csm_CallbackNotification

5.5 Callback Functions Invoked by CSM

This chapter describes the callback functions that are implemented by other BSW modules and that can be invoked by the CSM. The signature can be individually configured per callback function, see 6.5.5.

5.5.1 CallbackFunc ASR 4.3

Prototype	
`void` **`<CallbackFunc>`** `( Crypto_JobType *job, Std_ReturnType result )`	
Parameter	
`job`	Points to the completed job's information structure. It contains a callbackID to identify which job is finished.
`result`	Contains the result of the cryptographic operation.
Return code	
`void`	none
Functional Description	
Notifies the CSM about the completion of the request with the result of the cryptographic operation.	

Particularities and Limitations
> This function is synchronous. > This function is non-reentrant.

Table 5-38 CallbackFunc ASR 4.3

5.5.2 CallbackFunc ASR 4.4

Prototype	
`void <CallbackFunc> ( const uint32 jobID, Csm_ResultType result )`	
Parameter	
`jobID`	Identifies the job which is finished and caused the callback.
`result`	Contains the result of the cryptographic operation.
Return code	
`void`	none
Functional Description	
Notifies the CSM about the completion of the request with the result of the cryptographic operation.	
Particularities and Limitations	
> This function is synchronous. > This function is non-reentrant.	

Table 5-39 CallbackFunc ASR 4.4

5.5.3 CallbackFunc ASR R19-11

Prototype	
`void <CallbackFunc> ( const Crypto_JobType *job, Crypto_ResultType result )`	
Parameter	
`job`	Points to the completed job's information structure. It contains a callbackID to identify which job is finished.
`result`	Contains the result of the cryptographic operation.
Return code	
`void`	none
Functional Description	
Notifies the CSM about the completion of the request with the result of the cryptographic operation.	
Particularities and Limitations	
> This function is synchronous. > This function is non-reentrant.	

Table 5-40 CallbackFunc ASR R19-11

5.6 Service Ports

5.6.1 Client Server Interface

A client server interface is related to a Provide Port at the server side and a Require Port at client side.

5.6.1.1 Provide Ports on CSM Side

At the Provide Ports of the CSM the API functions described in 5.2 are available as Runnable Entities. The Runnable Entities are invoked via Operations. The mapping from a SWC client call to an Operation is performed by the RTE. In this mapping the RTE adds Port Defined Argument Values to the client call of the SWC, if configured.

6 Configuration

6.1 Overview

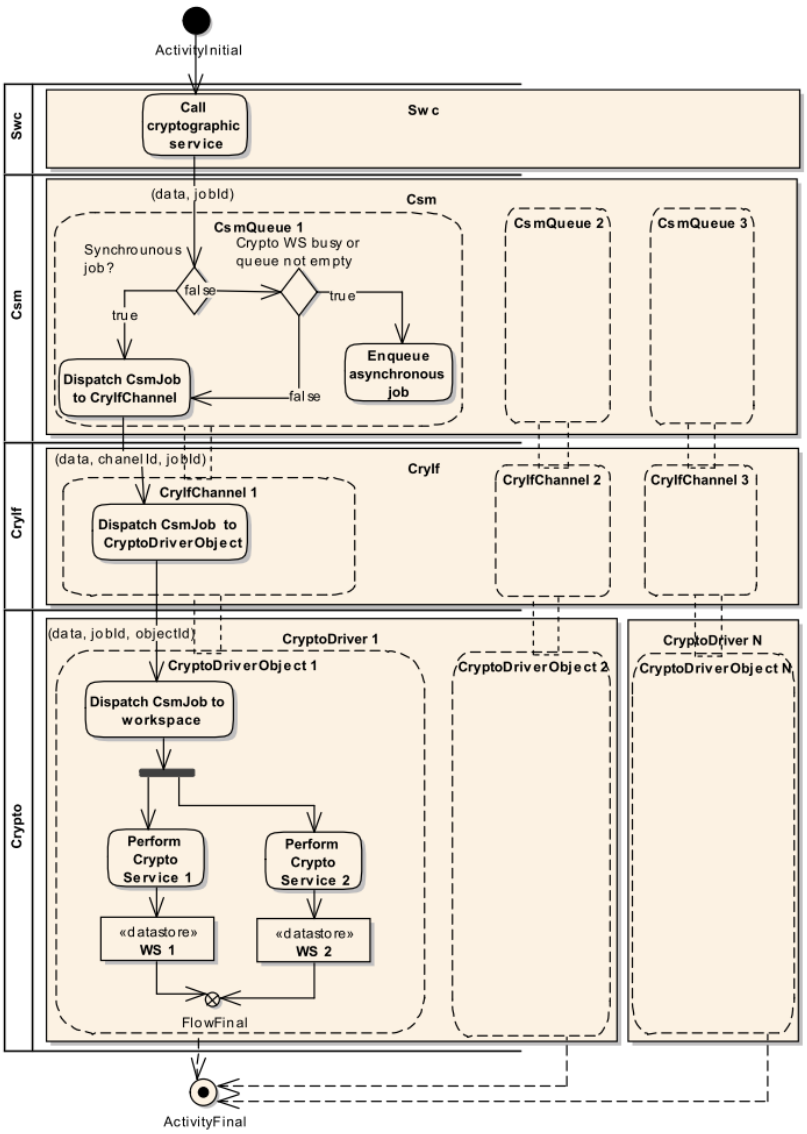


Figure 6-1 Structural overview and basic workflow

Figure 6-1 gives a structural overview and shows the basic workflow of the crypto stack. The Swc requests a cryptographic service of the CSM providing the necessary data and the id of the CsmJob which will be performed in the underlying CryptoDriverObject. The CsmJob contains all computational parameters for performing the cryptographic operation (see chapter 6.2 and 6.5.7).

At configuration time, each CsmJob is assigned to a CsmQueue, regardless of processing type (synchronous or asynchronous) of the job. Each CsmQueue is mapped to CryIfQueue and a CryIfQueue itself is mapped to a CryptoDriverObject of a crypto driver. At the crypto layer, N crypto drivers may coexist and do not interfere each other.

The CryptoDriverObject must allocate the required workspace and support the cryptographic operational in general. A job in computation occupies the cryptographic workspace of the

cryptographic service; therefore jobs running in the same crypto driver object are processed in serialized fashion, whereas jobs running in different crypto driver objects or jobs of different cryptographic type may run in parallel.

All CSM attributes can be configured with the following tools:

> Configuration in DaVinci Configurator 5 Pro for a detailed description see 6.5

6.2 Configuration of a cryptographic operation

A cryptographic algorithm is mostly configurable and must be parametrized to operate in specific mode. A CsmJob encapsulates all these information and can be considered as an instance of a cryptographic algorithm realized in a CryptoDriverObject. The cryptographic operation and the operational mode are configured in a CsmPrimitive and is referred by a concrete CsmJob. A CsmPrimitive can be of following primitive service types:

- MacGenerate
- MacVerifiy
- SignatureGenerate
- SignatureVerify
- Encrypt
- Decrypt
- Hash
- Random Generate
- AEADEncrypt
- AEADDecrypt
- Secure Counter Read
- Secure Counter Increment
- KeySetValid
- RandomSeed
- KeyGenerate
- KeyDerive
- KeyExchangeCalcPubVal
- KeyExchangeCalcSecret

Further, each CsmPrimitive defines the algorithm family, mode and secondary family. The user has to ensure that the underlying destination crypto driver object supports the configured combination of these three parameters. The CryptoDriverObject itself must refer at least one CryptoPrimitive which matches in primitive service type, family, mode and secondary family (compare Figure 6-2, Figure 6-3 and Figure 6-4).

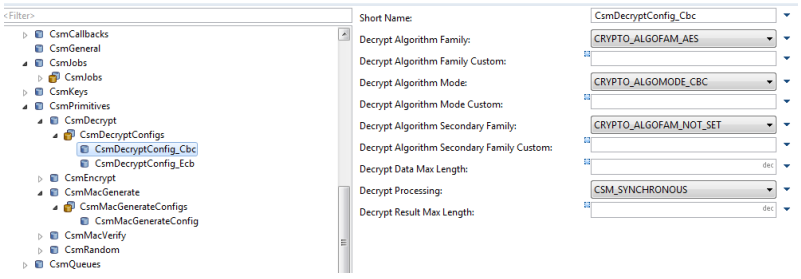


Figure 6-2 Configuration CsmPrimitive

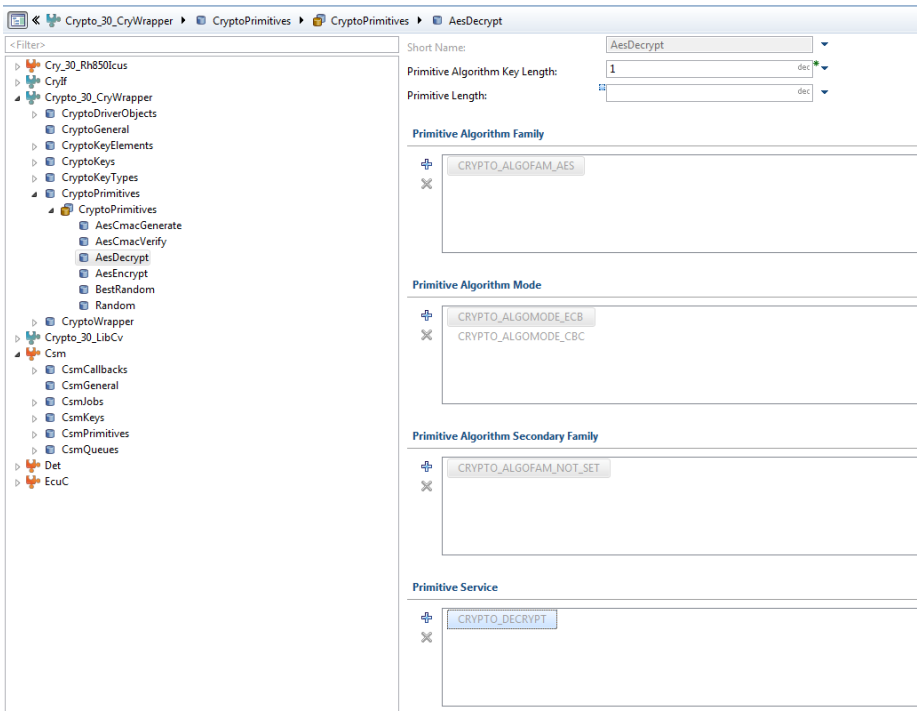


Figure 6-3 Configuration CryptoPrimitive

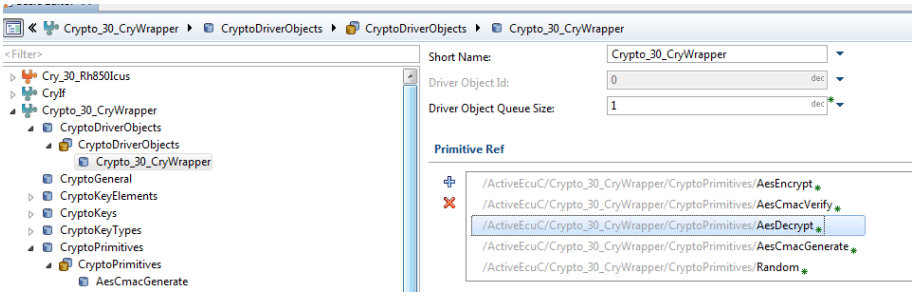


Figure 6-4 Configuration CryptoDriverObject

6.3 Configuration Variants

The CSM supports the configuration variants

> VARIANT-PRE-COMPILE

The configuration classes of the CSM parameters depend on the supported configuration variants. For their definitions please see the Csm_bswmd.arxml file.

The CSM does not support backward compatible interfaces to AUTOSAR 4.2.x, but offers old standard definitions within the `Csm_Types.h`. However, these definitions are not configurable and must be adapted manually if needed.

The CSM supports backward compatible interfaces to AUTOSAR 4.3.x. Use the parameters CsmKeySwcInterfaceVersion and CSM<Service>SwcInterfaceVersion to configure either AUTOSAR 4.3.x or AUTOSAR 4.4.x. If not configured the latest AUTOSAR version is used.

6.4 Backward Compatibility

6.5 Configuration with DaVinci Configurator 5 Pro

The CSM is configured with the help of the configuration tool DaVinci Configurator 5 Pro.

6.5.1 General Properties

Attribute Name	Values Default value is typed bold	Description
CsmDevErrorDetect	**TRUE** FALSE	Pre-processor switch to enable and disable development error detection.
CsmVersionInfoApi	**TRUE** FALSE	Pre-processor switch to enable and disable availability of the API Csm_GetVersionInfo(). - True: API Csm_GetVersionInfo() is available. - False: API Csm_GetVersionInfo() is not available.
CsmCustomIncludeFiles	**-**	Include custom header file
CsmMainFunctionPeriod	0 - 3600 **0.01**	Specifies the period of main function Csm_MainFunction in seconds.
CsmAsymPublicKeyMaxLength	1 - 4294967295	Maximum length in bytes of an asymmetric public key for all algorithms
CsmAsymPrivateKeyMaxLength	1 - 4294967295	Maximum length in bytes of an asymmetric private key for all algorithms
CsmSymKeyMaxLength	1 - 4294967295	Maximum length in bytes of a symmetric key for all algorithms
CsmUseDeprecated	TRUE **FALSE**	Currently not supported Decides if the deprecated interfaces shall be used (Backwards compatibility). - True: use deprecated interfaces. - False: use normal interfaces.
CsmCallbackStartNotification	**TRUE** FALSE	In ASR 4.3.0, only callbacks for Update (if CsmJobPrimitiveCallbackUpdateNotification is enabled) and Finish shall be forwarded to application. If this switch is enabled, Callback is also notified if Start was handled and every Update is notified too (CsmJobPrimitiveCallbackUpdateNotification is ignored).
CsmEnforce430JobTypeCompatibility	**TRUE** FALSE	If CsmEnforce430JobTypeCompatibility is enabled, the Crypto_JobType is extended by the fields 'state' and 'PrimitiveInputOutput' as they are named in AUTOSAR 4.3.0. If disabled, these fields are not contained in the definition of the Crypto_JobType and the Crypto_JobType is defined as specified in AUTOSAR 4.3.1.
CsmEnableVarMembersOfJobType	**TRUE** FALSE	The Crypto_JobType has - according to Autosar- certain fields (e.g. jobId) which are defined as const fields. If a variable of this type shall be used in different use cases, these fields might be overwritten. This could be a requirement of an underlying Crypto Driver.

Attribute Name	Values Default value is typed bold	Description
		If enabled, the const members of Crypto_JobType are defined as non-const members If disabled, the Crypto_JobType stays as defined according to Autosar.

Table 6-1 General Properties

6.5.2 Key Properties

Attribute Name	Values Default value is typed bold	Description
CsmKeyId	0 - 4294967295	Identifier of the CsmKey
CsmKeyUsePort	**TRUE** FALSE	Does the key need RTE interfaces? - True: RTE interfaces used for this key - False: No RTE interfaces used for this key
CsmKeyRef	**-**	This parameter refers to the used CryIfKey. The underlying CryIfKey refers to a specific CryptoKey in the Crypto Driver.
CsmKeySwcInterfaceVersion	CSM_ASR_VERSION_4_03 CSM_ASR_VERSION_4_04	Specifies the AUTOSAR version that the Client-Server-Interfaces of this key should adhere to.

Table 6-2 Key Properties

6.5.3 Primitives Properties

Attribute Name	Values Default value is typed bold	Description
Csm<Service>AlgorithmMode	Service depending literals	Determines the algorithm mode used for the crypto service
Csm<Service>Processing	CSM_ASYNCHRONOUS CSM_SYNCHRONOUS	Determines how the interface shall be used for that primitive
Csm<Service>DataMaxLength	1 - 4294967295	Max size of the input data length in bytes.
Csm<Service>AlgorithmFamilyCustom	String	Set algorithm family which is not defined by AUTOSAR
Csm<Service>AlgorithmModeCustom	String	Set algorithm mode which is not defined by AUTOSAR

Attribute Name	Values Default value is typed bold	Description
Csm<Service> AlgorithmSecondaryFamily	Service depending literals	Determines the secondary algorithm family used for the crypto service e.g. The hash algorithm for RSA Signatures
Csm<Service> AlgorithmSecondaryFamilyCustom	String	Set secondary algorithm family which is not defined by AUTOSAR
Csm<Service>AlgorithmFamily	Service depending literals	Determines the algorithm family used for the crypto service
Csm<Service><Type>Length	1 - 4294967295	Service type specific length (Service dependent parameter)
CSM<Service>SwcInterfaceVersion	CSM_ASR_VERSION_4_03 CSM_ASR_VERSION_4_04	Specifies the AUTOSAR version that the Client-Server-Interfaces of this primitive should adhere to.

Table 6-3 Primitives Properties

6.5.4 Queue Properties

Attribute Name	Values Default value is typed bold	Description
CsmQueueSize	1 - 4294967295	Size of the CsmQueue. If jobs cannot be processed by the underlying hardware since the hardware is busy, the jobs stay in the prioritized queue. If the queue is full, the next job will be rejected.
CsmChannelRef	-	This parameter refers to the used CryIfChannel.
CsmTriggerAsynchJobsInCallback	TRUE FALSE	If enabled, jobs will be triggered (given to the CryIf for processing) directly if the CryIf notifies the Csm that the last job was finished. Both is handled in the Csm_CallbackNotification(). If not enabled, the next job will be given to the CryIf for processing in the next mainfunction cycle.

Table 6-4 Queue Properties

6.5.5 Callback Properties

Attribute Name	Values Default value is typed bold	Description
BswCallbackAsrVersion	CSM_ASR_VERSION_4_03 CSM_ASR_VERSION_4_04	Determines the signature of the configured callback when it is used as BSW callback.

Attribute Name	Values Default value is typed bold	Description
	CSM_ASR_VERSION_R19_11	
CsmCallbackFunc	-	Callback function to be called if an asynchronous operation has finished
CsmCallbackId	0 - 4294967295	Identifier of the callback function.

Table 6-5 Callback Properties

6.5.6 Callout Properties

Attribute Name	Values Default value is typed bold	Description
CsmPostJobCalloutFunc	-	Callout function which will be called after the corresponding job is executed.
CsmPreJobCalloutFunc	-	Callout function which will be called before the corresponding job is executed.

Table 6-6 Callout Properties

6.5.7 Job Properties

Attribute Name	Values Default value is typed bold	Description
CsmJobPriority	0 - 4294967295	Priority of the job. The higher the value, the higher the job's priority.
CsmJobId	0 - 4294967295	Identifier of the CSM job
CsmJobUsePort	**TRUE** FALSE	Does the job need RTE interfaces? - True: the job needs RTE interfaces - False: the job needs no RTE interfaces
CsmJobPrimitiveCallbackUpdateNotification	TRUE **FALSE**	This parameter indicates, whether the callback function shall be called, if the UPDATE operation has finished.
CsmJobUseOldPort	TRUE **FALSE**	Does the user needs old RTE interfaces?
CsmJobPrimitiveRef	-	This parameter refers to the used CsmPrimitive. Different jobs may refer to one CsmPrimitive. The referred CsmPrimitive provides detailed information on the actual cryptographic routine.
CsmJobPrimitiveCallbackRef	-	This parameter refers to the used CsmCallback. The referred CsmCallback is called when the crypto job has been finished.
CsmJobQueueRef	-	This parameter refers to the queue. The queue is used if the underlying crypto driver object is busy. The queue refers also to the channel which is used.
CsmProcessing Mode	CRYPTO_PROCESSING_SYNC CRYPTO_PROCESSING_ASYNC	Determines how the interface shall be used for that job. Synchronous processing returns with the result while asynchronous processing returns without processing the job. The caller will be notified by the corresponding callback.
CsmJobKeyRef	-	This parameter refers to the key which shall be used for the CsmPrimitive. It's possible to use a CsmKey for different jobs

Table 6-7 Job Properties

6.5.8 Redirection Properties

Attribute Name	Values Default value is typed bold	Description
CsmInputKeyElementId	0 - 4294967295	Identifier of the key element used as input.
CsmInputKeyRef	-	This parameter refers to the key used as input,
CsmOutputKeyElementId	0 - 4294967295	Identifier of the key element used as output.
CsmOutputKeyRef	-	This parameter refers to the key used as output,
CsmSecondaryInputKeyElementId	0 - 4294967295	Identifier of the key element used as secondary input.
CsmSecondaryInputKeyRef	-	This parameter refers to the key used as secondary input,
CsmSecondaryOutputKeyElementId	0 - 4294967295	Identifier of the key element used as secondary output.
CsmSecondaryOutputKeyRef	-	This parameter refers to the key used as secondary output.
CsmTertiaryInputKeyElementId	0 - 4294967295	Identifier of the key element used as tertiary input.
CsmTertiaryInputKeyRef	-	This parameter refers to the key used as tertiary input,

Table 6-8 Redirection Properties

7 Glossary and Abbreviations

7.1 Glossary

Term	Description
CSM	Crypto Service Manager
CRYIF	Crypto Interface
CRYPTO	Crypto Driver

Table 7-1 Glossary

7.2 Abbreviations

Abbreviation	Description
API	Application Programming Interface
AUTOSAR	Automotive Open System Architecture
BSW	Basis Software
DEM	Diagnostic Event Manager
DET	Development Error Tracer
EAD	Embedded Architecture Designer
ECU	Electronic Control Unit
HIS	Hersteller Initiative Software
ISR	Interrupt Service Routine
MICROSAR	Microcontroller Open System Architecture (the Vector AUTOSAR solution)
PPORT	Provide Port
RPORT	Require Port
RTE	Runtime Environment
SRS	Software Requirement Specification
SWC	Software Component
SWS	Software Specification

Table 7-2 Abbreviations

8 Contact

Visit our website for more information on

- News
- Products
- Demo software
- Support
- Training data
- Addresses

www.vector.com