

4000 Frymaster Fryers

This guide provides step-by-step instructions for adding or editing products in 4000 Frymaster Fryers. It covers various settings such as temperature, hold time, shake timers, and filter settings. It also includes instructions for quick filtration, cleaning and filtering, filling the vat from bulk, and pan to waste processes. If you need to learn how to manage and operate a Frymaster Fryer, this guide is a valuable resource.

1

Press the Home button.

2

Press the Recipes button.



4

Choose the product icon to edit or press the + to add a new product.




5

Press the pencil icon at the bottom of the screen to edit an existing product.



6

Enter or change the name of the product using the keyboard.

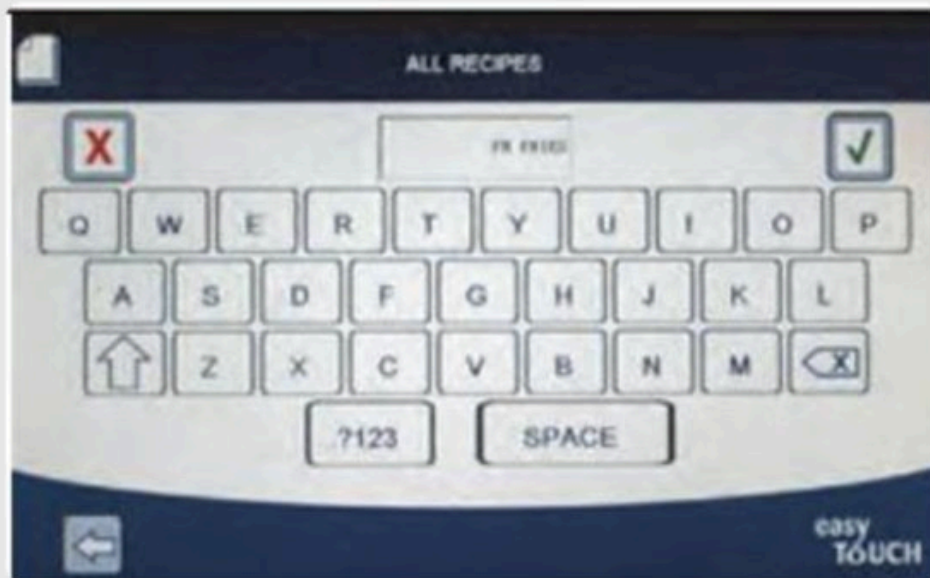


7

Press the ✓ (check) button.




8

This screen displays the current setpoint, cook time, sensitivity, hold timer, shake timers and filter settings. To edit a parameter, press the item to edit.

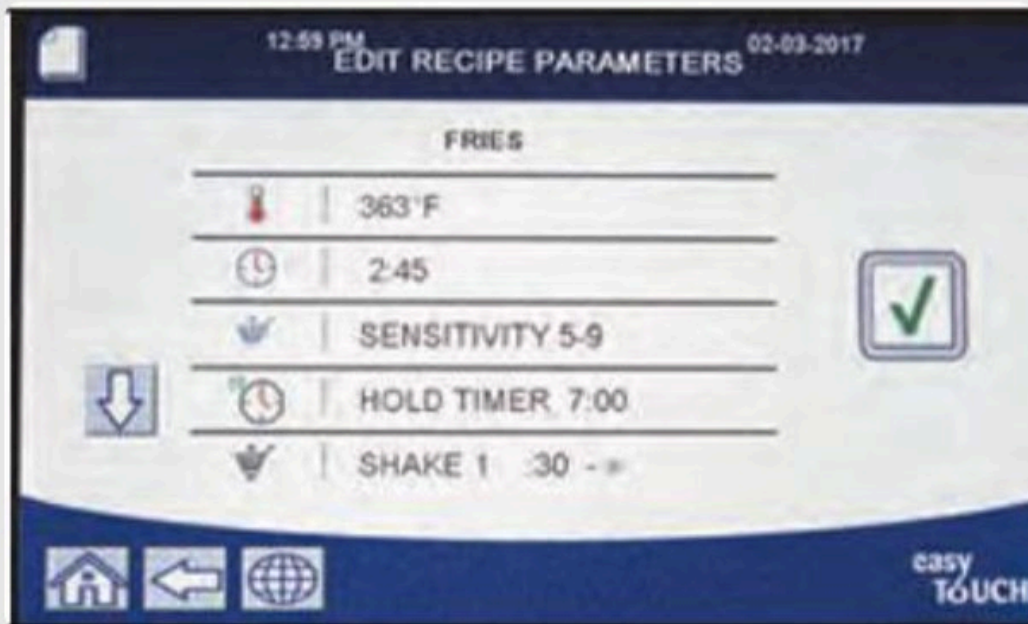

9

To edit temperature, press the temp button.

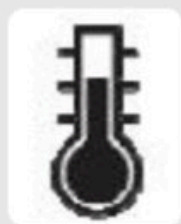

10

Use the keypad to enter or edit the cook temperature for the product.



11

Press the ✓ (check) button.



12

Press the load compensation or sensitivity button.



13

Use the up and down arrows to change the load compensation or sensitivity setting recommended for this product. This setting allows the product compensation (sensitivity) to be changed. Some menu items may need an adjustment, depending on their cooking characteristics.



14

Press the ✓ (check) button.



15

Press the Hold Timer button.



16

Enter the time in minutes and seconds for the product hold time.

NEW RECIPE

07:00

1 2 3 4 5

6 7 8 9 0 C

✓

✗

easy TOUCH

17

Press the ✓ (check) button.



18

Press the Shake Timer 1 button.



19

Enter the time in minutes and seconds for the first shake to be performed.



20

Press the ✓ (check) button.



21

Press the Shake Timer 2 button if an additional shake is needed, otherwise skip next 2 steps.



22

Press the down arrow to scroll to more settings.



23

Enter the time in minutes and seconds for the second to be performed.

NEW RECIPE

00,30

1 2 3 4 5

6 7 8 9 0 C

✓

✗

easy TOUCH


24

Press the ✓ (check) button.



25

Press the Filter button.

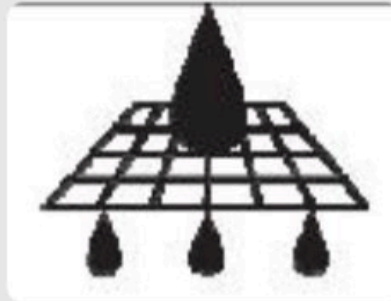

26

Ensure that the filter button is ON to enable auto filtration for this product. This setting is used to prevent co-mingling of product specific oils.



27

Press the ✓ (check) button.





29

Press the ✓ (check) button.



30

Choose the menu(s) to associate with the product recipe that is being entered or edited.




31

Press the ✓ (check) button.



32

The controller displays saved.

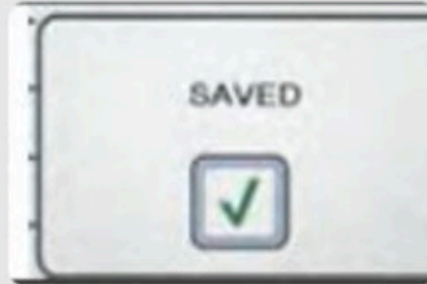

33

Press the ✓ (check) button.



34

Select another product to edit or press the + key to add additional products.

If finished press the home button.



35

Press the Crew Mode button to return to main screen.



FILTRATION REQUIRED FILTER NOW?

Press the √ (check - YES) button to start filtration.

If the X (NO) button is selected, filtering is cancelled and the fryer resumes normal operation. The controller will prompt again soon to filter the oil. This sequence repeats until a filter is completed.

37

REMOVE FILTER PAN

Carefully pull the filter pan from the fryer.

If the filter pan is empty ✓ (check - YES) button and proceed to the next step.

If the pan is not empty, press the X (NO) button. Filtering is cancelled and the fryer resumes normal operation. Remove the oil from the pan and after inserting the filter pan, retry the function.

39

SKIM DEBRIS FROM VAT

Press the ✓ (check - YES) button when complete.

40

START FILTRATION

Press the BLUE button to start filtration.

41

INSERT PAN

Push the filter pan fully into place. Displayed if the filter pan is not fully engaged.

42

DRAINING

No action required as oil drains into filter pan.

No action required while the return valve opens and the vat is flushed with oil from the filter pan.

No action required while the vat is refilled.

45

ALERT DRAIN CLOSING REMOVE TOOLS

Ensure that all tools are removed from the frypot prior to the drain closing to prevent damage to the drain.

46

IS VAT FULL?

Press the √ (check - YES) button if the vat is full to continue. The controller returns to idle cook mode.

Press X (NO) if the vat is not filled completely and the pump will run again.

47

PREHEAT


No action required as the fryer heats to setpoint.

48

START

Fryer is ready for use. Displayer once fryer reaches setpoint.



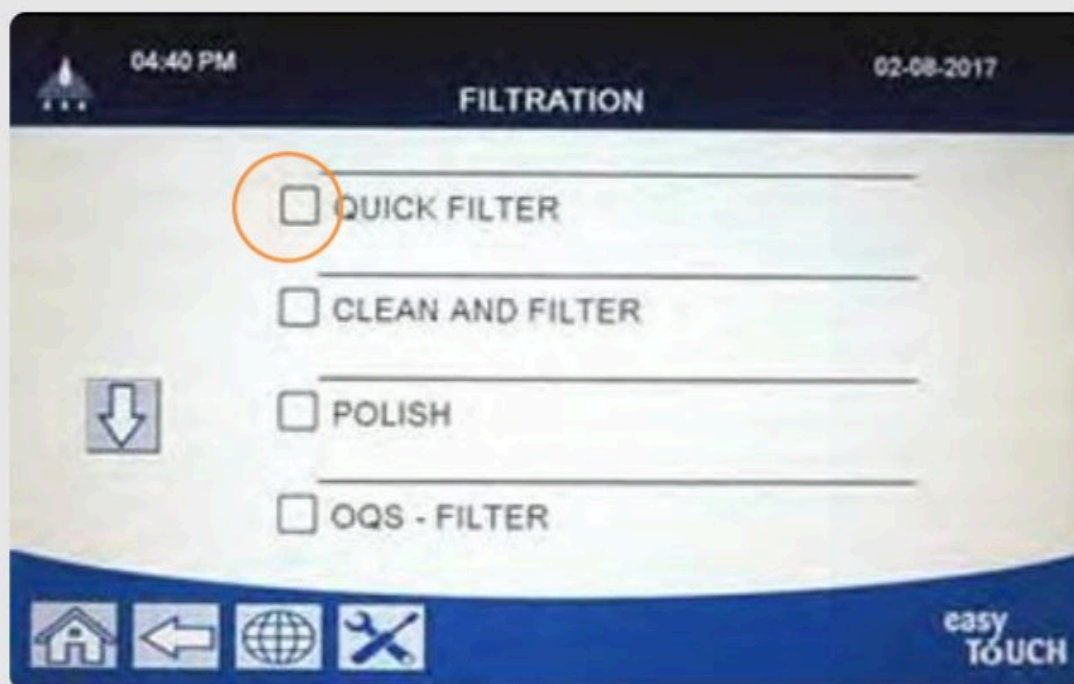

Press the √ (check - YES) button to start filtration.

If the X (NO) button is selected, filtering is cancelled and the fryer resumes normal operation.

52

REMOVE FILTER PAN

Carefully pull the filter pan from the fryer.

If the filter pan is empty ✓ (check - YES) button and proceed to the next step.

If the pan is not empty, press the X (NO) button. Filtering is cancelled and the fryer resumes normal operation. Remove the oil from the pan and after inserting the filter pan, retry the function.

If the filter pan is empty ✓ (check - YES) button and proceed to the next step.

If the pan is not empty, press the X (NO) button. Filtering is cancelled and the fryer resumes normal operation. Remove the oil from the pan and after inserting the filter pan, retry the function.

54

SKIM DEBRIS FROM VAT

Press the ✓ (check - YES) button when complete.

55

START FILTRATION

Press the BLUE button to start filtration.

56

INSERT PAN

Push the filter pan fully into place. Displayed if the filter pan is not fully engaged.

57

DRAINING

No action required as oil drains into filter pan.

No action required while the return valve opens and the vat is flushed with oil from the filter pan.

No action required while the vat is refilled.

Ensure that all tools are removed from the frypot prior to the drain closing to prevent damage to the drain.

61

IS VAT FULL?

Press the ✓ (check - YES) button if the vat is full to continue. The controller returns to idle cook mode.

Press X (NO) if the vat is not filled completely and the pump will run again.

62

PREHEAT


No action required as the fryer heats to setpoint.

No action required as the fryer heats to setpoint.

63


START

Fryer is ready for use. Displayer once fryer reaches setpoint.

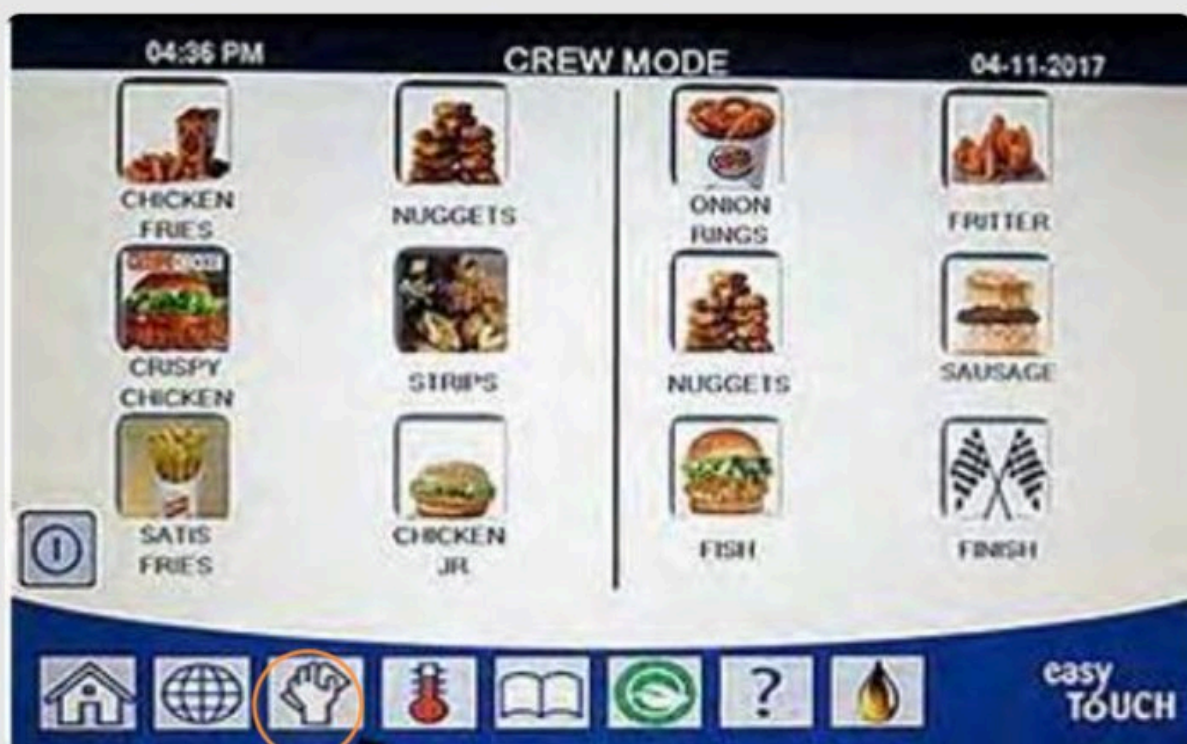

65

Select "CLEAN AND FILTER"

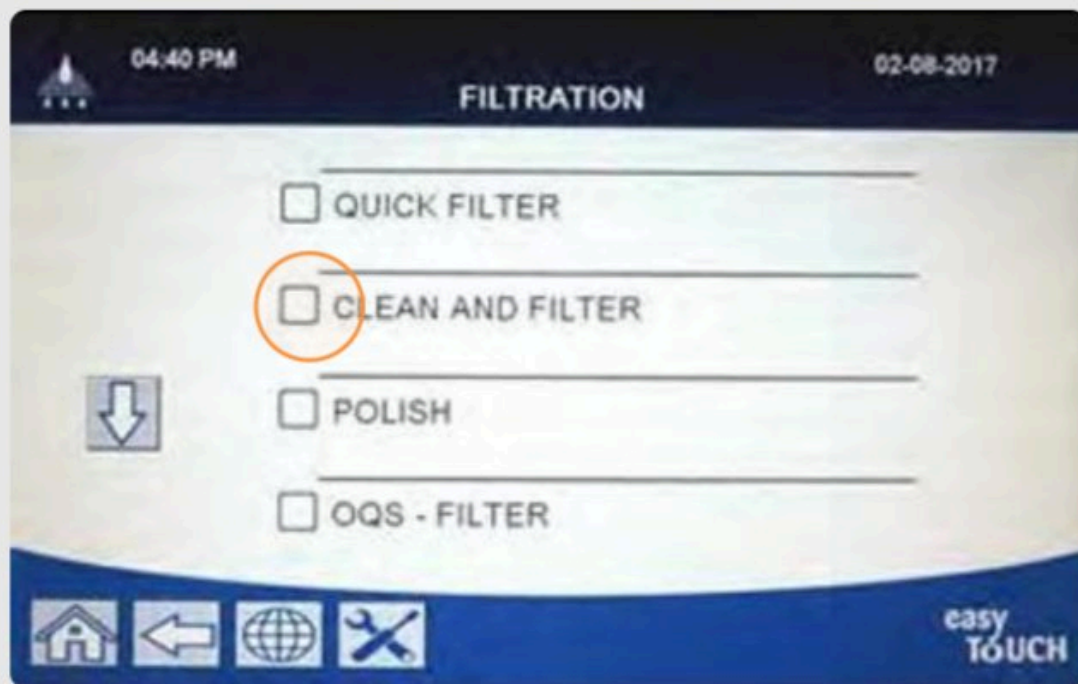

Press the √ (check - YES) button to start filtration.

If the X (NO) button is selected, filtering is cancelled and the fryer resumes normal operation.

67

REMOVE FILTER PAN

Carefully pull the filter pan from the fryer.

If the filter pan is empty ✓ (check - YES) button and proceed to the next step.

If the pan is not empty, press the X (NO) button. Filtering is cancelled and the fryer resumes normal operation. Remove the oil from the pan and after inserting the filter pan, retry the function.

69

SKIM DEBRIS FROM VAT

Press the ✓ (check - YES) button when complete.

70

START FILTRATION

Press the BLUE button to start filtration.

71

INSERT PAN

Push the filter pan fully into place. Displayed if the filter pan is not fully engaged.

No action required as oil drains into filter pan.

73

SCRUB INSIDE VAT

Press the ✓ (check - YES) button when complete.

Press the ✓ (check - YES) button when complete.

Clean the oil level sensor with a no scratch pad. Clean around AIF and ATO sensors with a screwdriver or similar object to remove any sediment from around the sensors.

No action required while the return valve opens and the vat is flushed with oil from the filter pan.

If the vat is clean of debris, press the X (NO) button to continue.

If crumbs are still present, press the √ (check - YES) button and the filter pump runs again. This cycle repeats until the X (NO) button is pressed.

77


ALERT DRAIN CLOSING REMOVE TOOLS

Ensure that all tools are removed from the frypot prior to the drain closing to prevent damage to the drain.

No action required while the drain valve closes and the filter pump refills the vat.
The drain valve opens and rinses the vat.

65

Select "CLEAN AND FILTER"

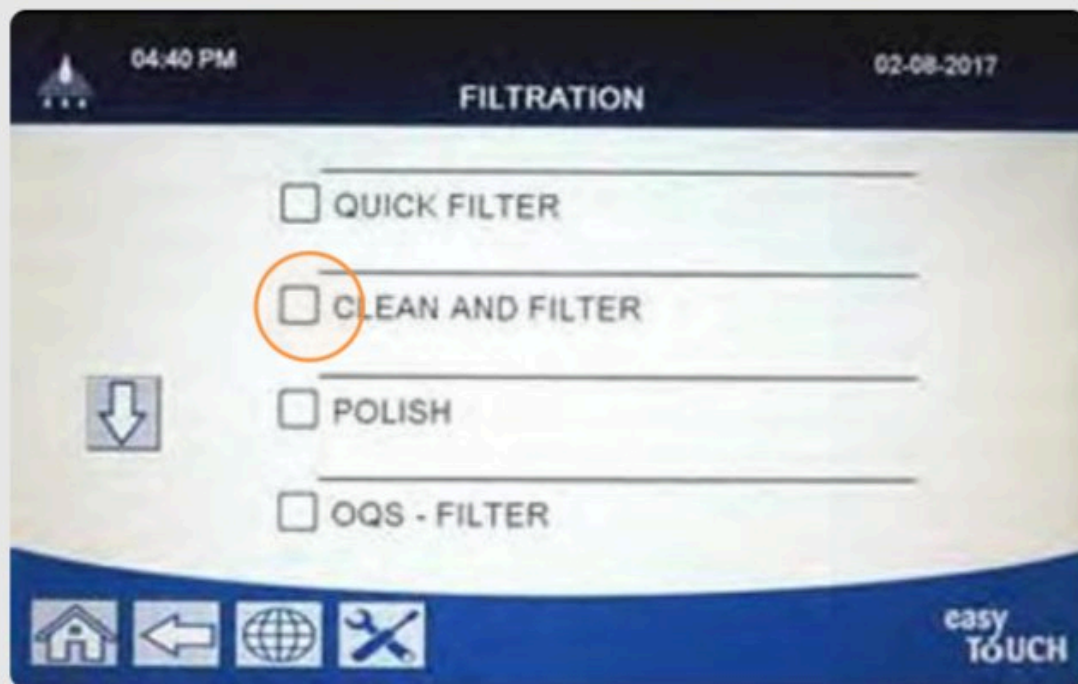

Press the X (NO) button to run the pump again if the oil level is below the top oil level full line. * Press the √ (check -YES) button once the oil level is at the top oil level full line. If the vat oil level is not completely filled, check the filter pan to see if most of the oil has returned. The pan may have a small amount of oil. Press the √ (check -YES) button once no oil remains in the filter pan.


85


Turn the fryer off.



87

Scroll down.

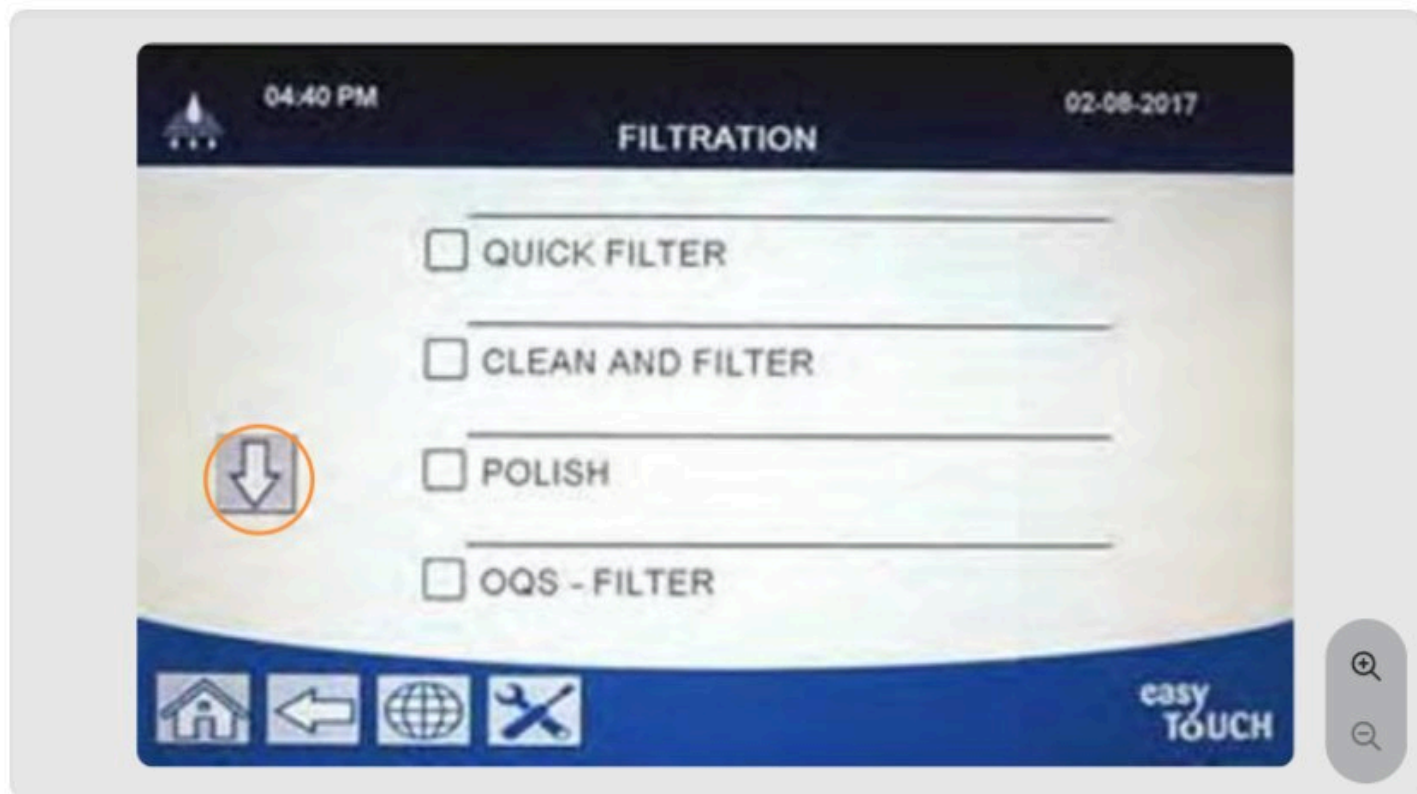

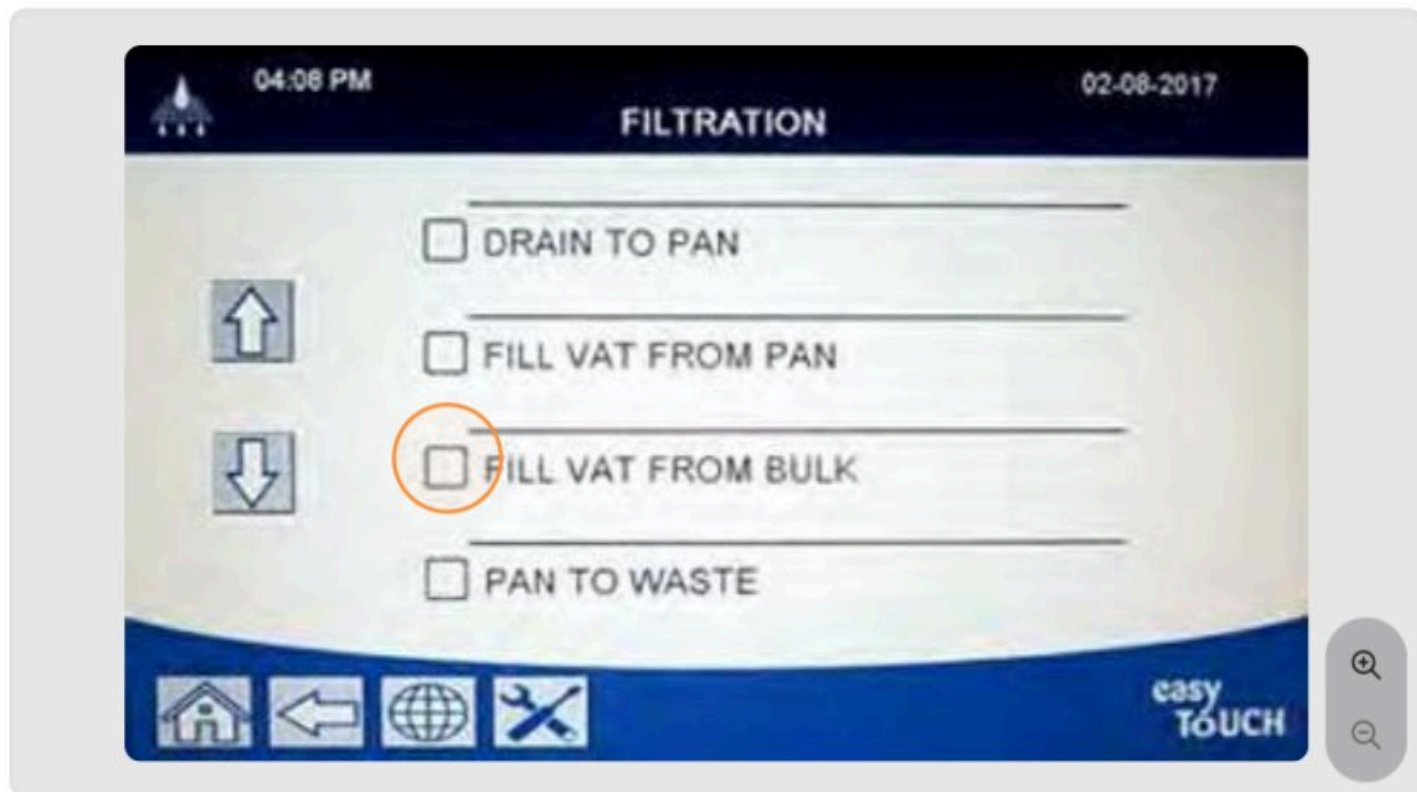

75

FLUSHING


No action required while the return valve opens and the vat is flushed with oil from the filter pan.


Press the X (NO) button once the vat is full to exit and return to OFF.


Press the √ (check - YES) button to continue filling.

93

Turn the fryer back on.

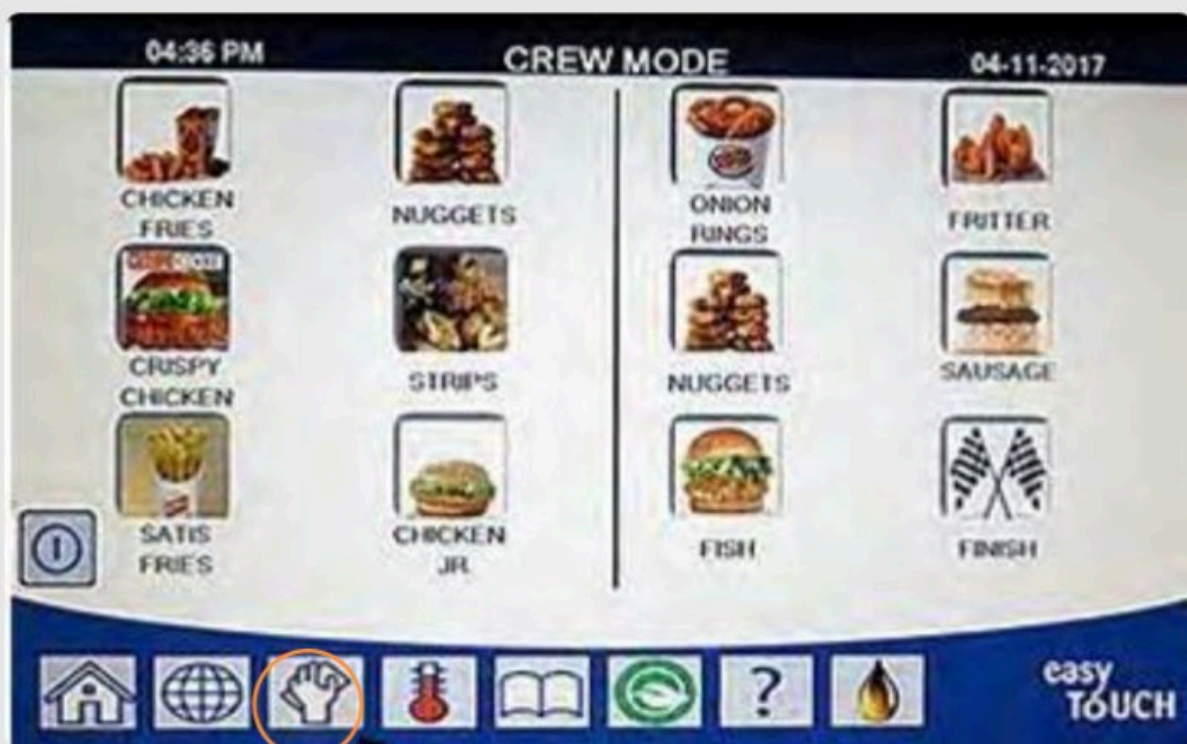

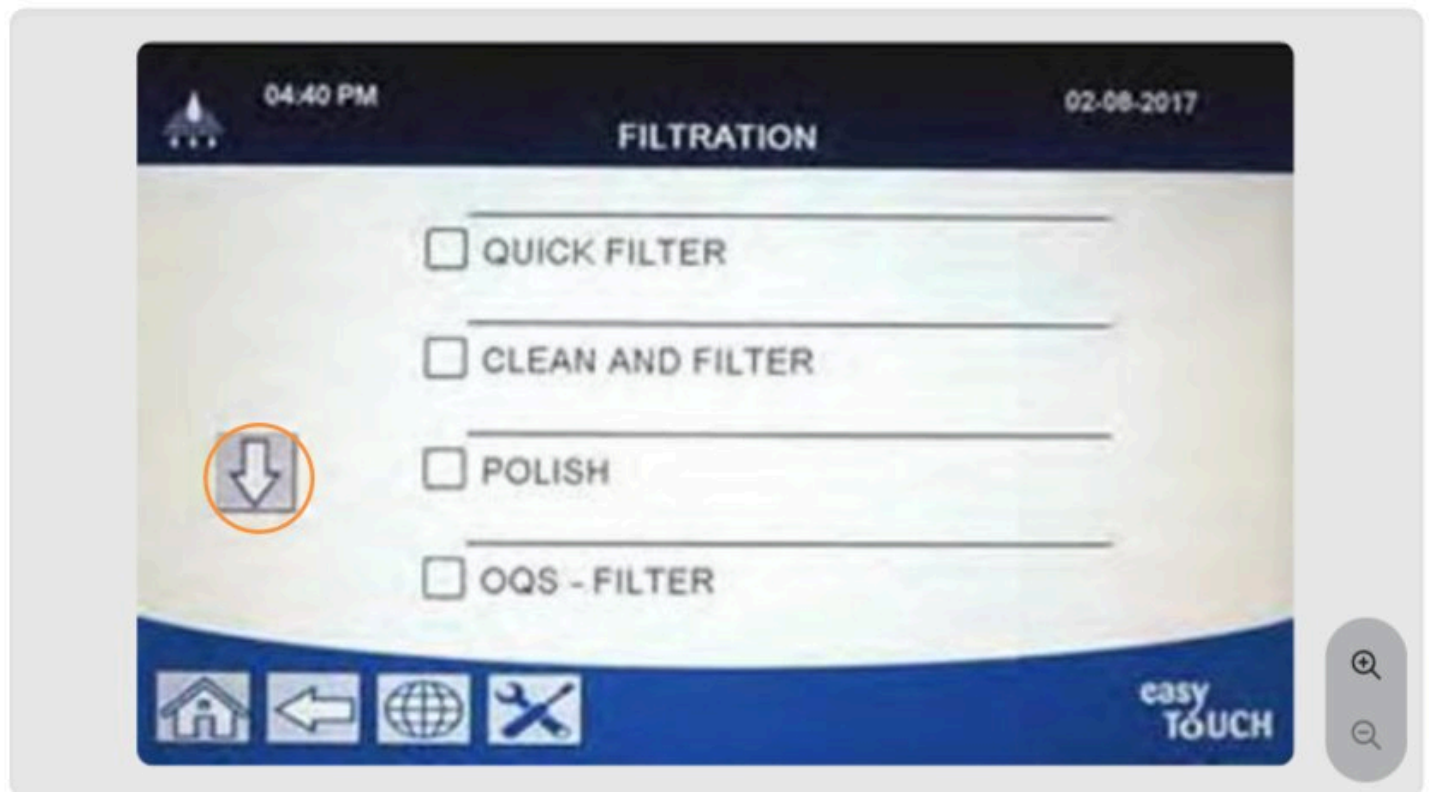

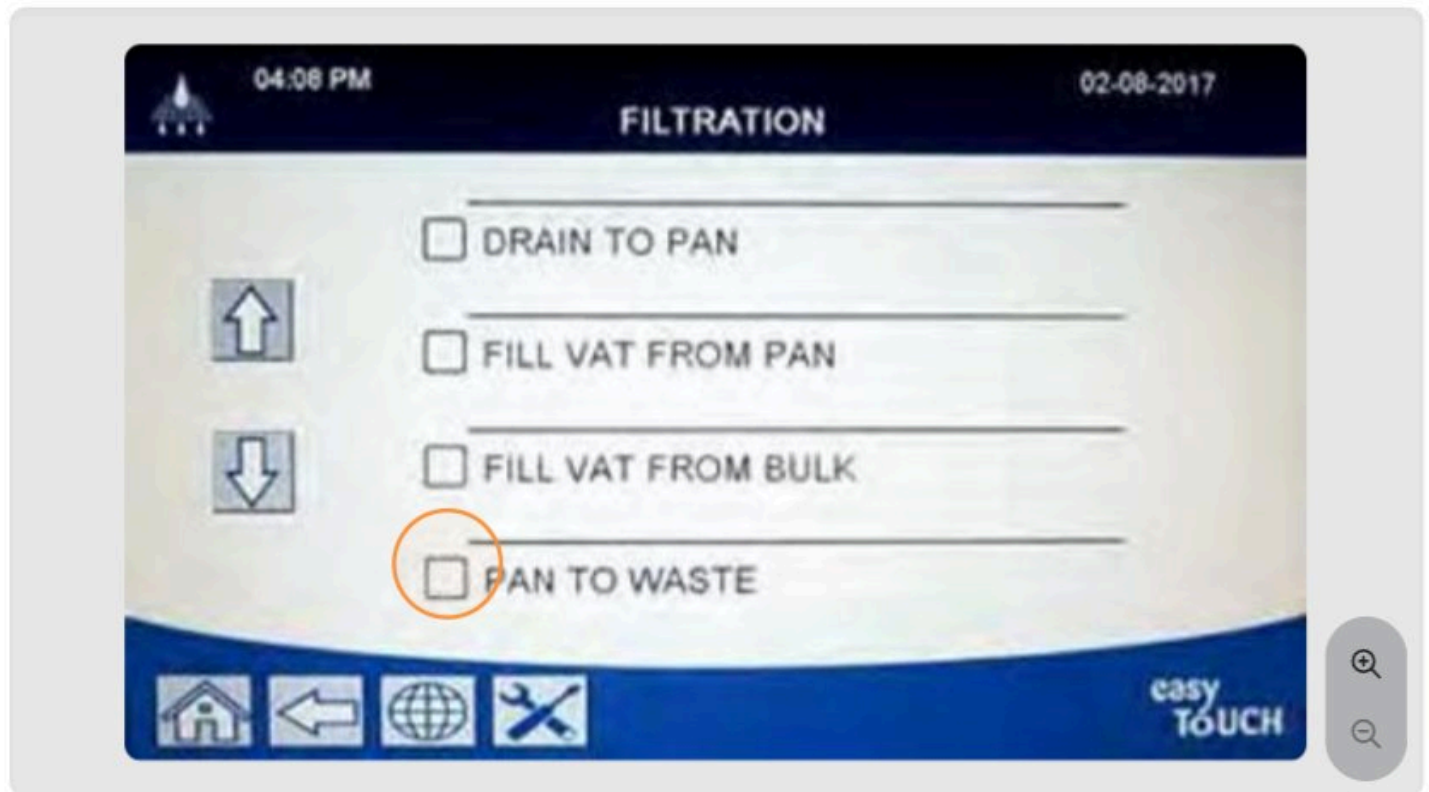

Press the √ (check - YES) button to continue.

If the X (NO) button is selected, the user returns to the filtration menu. If no pan is detected, the controller displays INSERT PAN until the pan is detected.

98

BULK TANK FULL?

Press the ✓ (check - YES) button to acknowledge and call the bulk oil waste provider.
The display returns to OFF.

99**OPEN DISPOSE VALVE**

Open the left cabinet door and unlock the valve if necessary. Pull the dispose valve completely forward to start disposal.



100

DISPOSING

No action is required while the pump transfers the waste oil from the pan to the bulk oil waste tanks for four (4) minutes.

101

REMOVE PAN

Carefully pull the filter pan from the fryer.

If the filter pan is empty press the √ (check - YES) button. If the pan is not empty, press the X (NO) button and return to the previous step.

103

INSET PAN

Insert the pan.

Close the dispose valve by pushing the valve handle toward the rear of the fryer until it stops. Relock the valve if required by your manager.



