DATASHEET

SmartZone-4

4 Zone Smart Conventional Fire Alarm Panel

Smart conventional. The SmartZone-4 is wired like a simple conventional panel, but when a SmartZone Smart Conventional Smoke Sensor detects fire the display shows **the zone and the address of that sensor** - for example **ZONE 1 SENS: 03** - so the fire is found at once.



Highlights

- **Shows the sensor address** zone + sensor address (01-40) on the display in fire.
- **4 zones** simple two-wire zones; each zone named and switched on/off.
- **Mix of devices** smart sensors, manual call points and conventional detectors on the same zone.
- **Several fires** shown one after another with their count.
- **Always checking** zone wire break and short, mains, battery.
- **Battery backup** automatic changeover and charging.
- **100-event log** with date and time, kept without power.
- **Address setting at the panel** no programming tool needed.
- **Easy to use** 2-line display, 24 lights, 5 buttons, simple menu.

How it works

1	A smart sensor detects smoke, checks it again, and goes into fire - its red light stays on.
2	The panel sounds the hooters and buzzer, lights the zone FIRE light and switches the FIRE output.
3	The display shows the zone and sensor address. Other devices show the zone name.

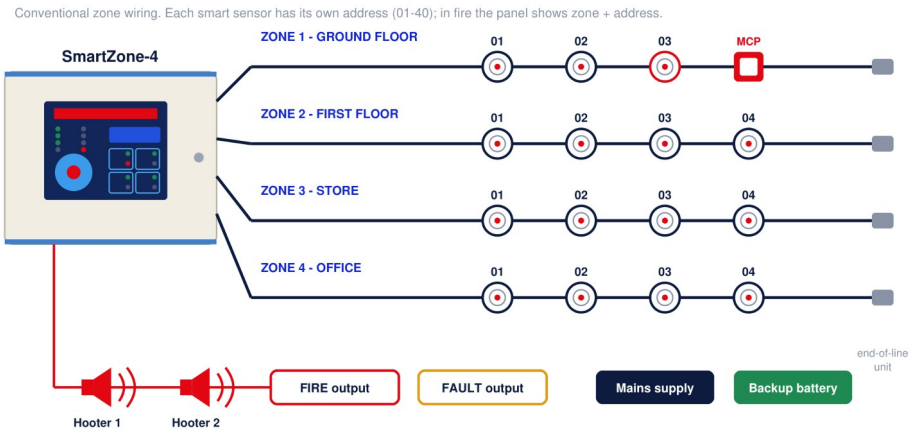


Figure 1 Typical system


© 2026 Stake. All rights reserved.

Panel data - SmartZone-4

ZONES AND DEVICES	
Zones	4, each can be switched on/off and given a 16-character name
Zone wiring	Two wires per zone, end-of-line unit at the end of each zone
Devices per zone	SmartZone Smart Conventional Smoke Sensors - addresses 01 to 40 Manual call points and conventional detectors
Fire shown as	Zone + sensor address (smart sensors), zone name (other devices) Several fires shown in turn with their count
Zone checking	Wire break (can be switched off), short circuit (as fault, or as fire if chosen)
DISPLAY AND CONTROLS	
Display	2 lines x 16 characters, contrast adjustable, clock shown in normal
Lights	24 - four per zone and eight for power and status; brightness adjustable
Buttons	MENU/ENTER, RESET, ACK (silence), LAMP (lamp test), ALARM - round keypad
Panel buzzer	On-off beep, sweep tone or off
Memory	100 events with date and time; settings and zone names - all kept without power
OUTPUTS	
Hooter outputs	2, rating _____
FIRE output	Switches on in fire, rating _____
FAULT output	Switches on in fault (when there is no fire), rating _____
POWER	
Mains supply / system voltage	_____ / 24 V
Backup battery	24 V (2 x 12 V), _____ Ah, charged by the panel
Warnings	Mains failure, battery low, battery not connected
PHYSICAL AND ENVIRONMENT	
Mounting / housing	Wall mounted, indoor use / _____
Size (W x H x D) / weight	_____ mm / _____ kg
Operating temperature / humidity	_____ / _____ (no condensation)

Sensor data - SmartZone Smart Conventional Smoke Sensor

- **Smoke sensing** optical; checks the smoke again before going into fire.
- **Address** 01 to 40 in its zone, set from the panel, kept without power.
- **Power** from the zone wires - no battery.
- **Lights** green blink = working; red = fire (stays on until reset); short red flashes = smoke or dust.
- **Dust** adjusts itself to slow dust build-up.
- **Size / base / temperature** _____ / _____ / _____

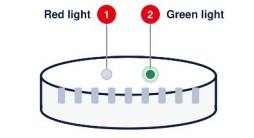

SmartZone Smart Conventional Smoke Sensor

Ordering information

Product	Description
SmartZone-4	4 Zone Smart Conventional Fire Alarm Panel
SmartZone Smart Conventional Smoke Sensor	Optical smoke sensor with address, for the SmartZone-4

Data may change without notice as part of product improvement.

© 2026 Stake. All rights reserved.