
STAKE | SMARTZONE RANGE

SmartZone-4

User Reference Manual

USER REFERENCE MANUAL

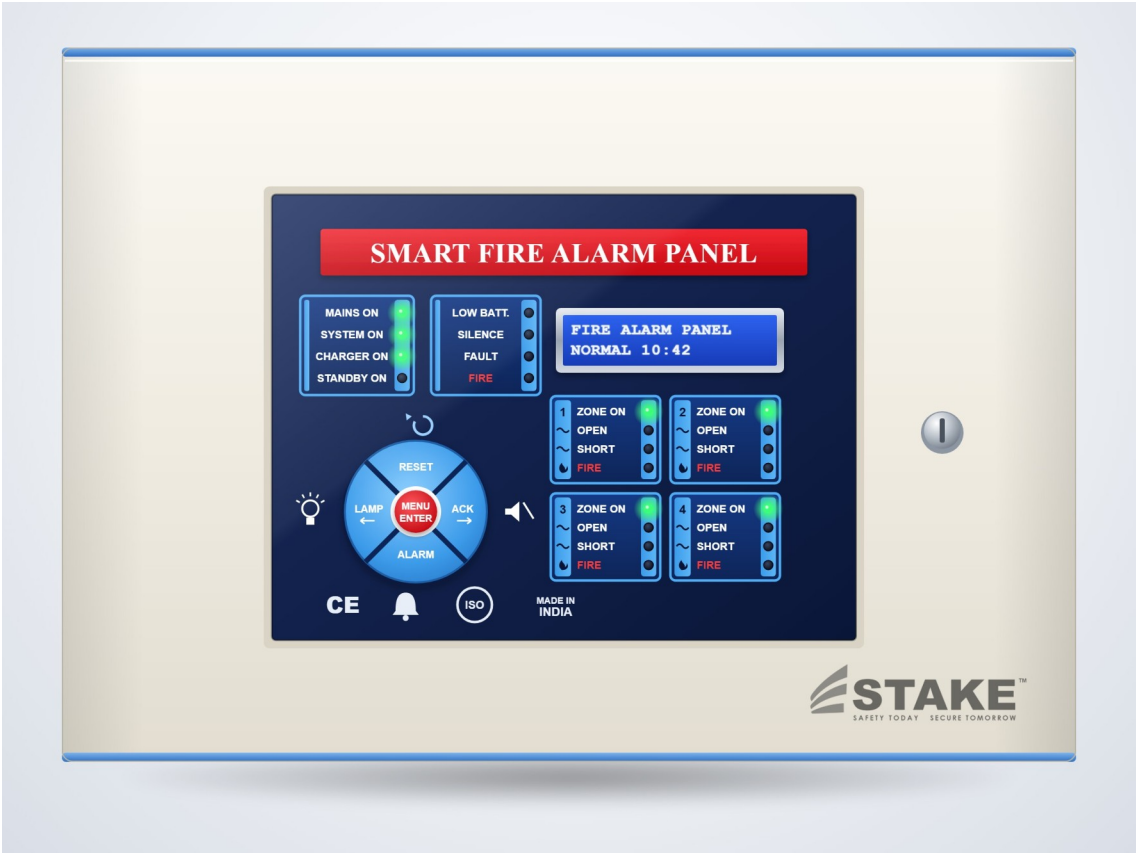

SMART CONVENTIONAL **Simple conventional wiring, and the panel shows the address of the sensor in fire.**

Important Notices

About this manual

This manual explains how the Stake SmartZone-4 and its SmartZone Smart Conventional Smoke Sensors work, and how to operate, set up, test and look after them.

Chapters 2 to 7 are for owners and users. Chapter 8 is mainly for installers. Technical data is in the product datasheet.

Copyright and trademarks

© 2026 Stake. All rights reserved. No part of this document may be reproduced, copied or transmitted in any form without the written permission of Stake. Stake and SmartZone-4 are brand names used by Stake.

Disclaimer

The information in this manual is believed to be accurate at the time of publication. Stake reserves the right to change product features and this document without notice as part of continuous product improvement. Illustrations are representative; the appearance of your product may differ. A fire alarm system is a life-safety system: its design, installation, commissioning and maintenance must be carried out by trained, competent persons in line with the fire codes and the requirements of the local authority having jurisdiction.

Symbols used in this manual

Symbol	Meaning
WARNING	Risk to life or of serious injury, or a fire alarm that may not work. Always follow.
CAUTION	Risk of damage to the equipment or of false alarms.
NOTE	Useful information for correct operation.
GOOD PRACTICE	Recommendation from Stake for the best results.

Revision history

Revision	Date	Description
1.0	October 2026	First edition.

Contents

1 Safety Information....4
2 Product Overview....5
3 How the System Works....6
4 The Front Panel....7
5 Everyday Operation....9
6 Menu and Settings....10
7 Smart Sensors....12
8 Installation and Commissioning....13
9 Maintenance and Troubleshooting....14
10 Records....15
11 Warranty....16
12 Interactive Demo....17

© 2026 Stake. All rights reserved.

1 Safety Information

Read this manual before using the SmartZone-4. Keep it near the panel.

General safety

! **WARNING** The SmartZone-4 is part of a life-safety system. It must be installed, commissioned and serviced only by trained persons authorised by Stake or its approved partners.

The system design (number and position of sensors, call points and hooters) must follow the fire code and the requirements of the local fire authority.

! **WARNING** Never switch off a zone, silence the alarm or remove power except for authorised testing, service or a confirmed false alarm. Restore normal operation immediately afterwards. A zone that is switched off does **not** report fire.

! **WARNING** The ALARM button starts a real fire alarm on all hooters. Inform the occupants before any test.

! **CAUTION** Do not open the panel: there are no user-serviceable parts inside and mains voltage is present.

Use only Stake sensors and accessories approved for this panel.

Install the panel and sensors indoors, in a dry place, away from water, steam, cooking fumes, heavy dust and direct heat.

Disposal

Do not dispose of the panel, sensors or batteries with household waste. Hand them over to an authorised e-waste collection centre or recycler in accordance with the E-Waste (Management) Rules.

© 2026 Stake. All rights reserved.

2 Product Overview

Introduction

The **Stake SmartZone-4** is a **smart conventional** fire alarm panel with 4 zones. It is wired like a normal conventional system - simple two-wire zones - but when a **SmartZone Smart Conventional Smoke Sensor** detects fire, the panel shows **which sensor** it is: the zone and the sensor address, for example **ZONE 1 SENS: 03**.

✓ **WHY SMART CONVENTIONAL** **Smart conventional** = the easy wiring and low cost of a conventional system, with the exact location of the fire on the display. No more searching a whole floor to find the sensor in alarm.

Key features

Shows the sensor address
In fire, the display shows the zone and the address (01-40) of the sensor.

4 zones, simple wiring
Two wires per zone. Each zone can be named and switched on or off.

Works with other devices
Manual call points and conventional detectors on the same zones - the display then shows the zone name.

Several fires
Fires in different zones are shown one after another, with their count.

Wiring checked all the time
A broken or shorted zone wire is shown as a fault on its zone.

Battery backup
Changes over to the battery automatically when mains power fails.

Event log
The last 100 events with date and time, kept without power.

Address setting at the panel
Give each sensor its address from the panel - no programming tool.

Clear lights and display
24 lights and a 2-line display. Brightness and contrast adjustable.

Settings kept
Zone names and settings are kept when power is removed.

System parts

Table 1 **System parts**

Part	What it does
SmartZone-4	The control panel: watches the 4 zones, shows alarms and faults, sounds the hooters.
SmartZone Smart Conventional Smoke Sensor	Smoke sensor with its own address. Powered from the zone wires - no battery.
Manual call points, conventional detectors	Other fire devices can be connected to the same zones.
Hooters	Two hooter outputs for the building alarm.
End-of-line unit	Fitted at the end of each zone so that the panel can check the wiring.
Backup battery	Keeps the system working during a mains power cut.

© 2026 Stake. All rights reserved.

3 How the System Works

Normal

All is well: the display shows **FIRE ALARM PANEL / NORMAL** with the time. The green **ZONE ON** light of every zone in use and the **MAINS ON**, **SYSTEM ON** and **CHARGER ON** lights are on. Each sensor blinks its green light about every 10 seconds.

Fire

1	A sensor detects smoke. It checks the smoke again for about a second and then goes into fire: its **red light stays on**.
2	At the panel the zone **FIRE** light and the **FIRE** status light come on, the **hooters** and the panel **buzzer** sound and the **FIRE output** switches on.
3	The display shows **ZONE n SENS: aa** - zone **n**, sensor address **aa**. A manual call point, a conventional detector or a sensor without an address shows the **zone name** instead.
4	Fires in other zones are added and shown in turn every 2 seconds: **FIRE ALM (1/2)**, **FIRE ALM (2/2)**.

i **NOTE** The panel shows the **first** sensor in fire in each zone. If more sensors in the same zone go into fire later, they are not shown separately - check the whole area of that zone.

Fault

A fault means that part of the system needs attention; it is **not** a fire. The **FAULT** light comes on, the display shows the fault and the **FAULT output** switches on. Faults do not sound the buzzer, so check the panel lights every day.

Table 2 Faults

Fault	What you see
Zone wire broken or end-of-line unit missing	Zone **OPEN** light
Zone wires touching	Zone **SHORT** light
Mains power cut	**MAINS ON** off, **STANDBY ON** on; display: **MAINS: FAULT**
Battery low	**LOW BATT.** light; display: **BATTERY: LOW!**
Battery not connected	**CHARGER ON** off; display: **BATTERY: MISSING**
Internal fault	Only the **FAULT** light on; display: **STATUS: LINK LOST** - call service.

Power cut

When mains power fails the panel continues to work from its backup battery and shows a mains fault. When mains power returns it changes back and recharges the battery automatically.

© 2026 Stake. All rights reserved.

4 The Front Panel

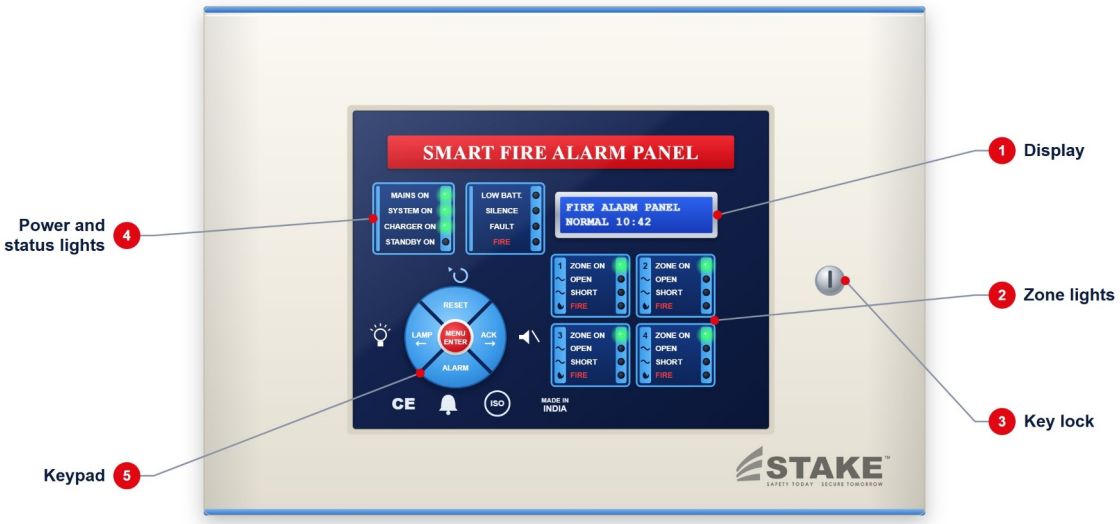


Figure 1 SmartZone-4 front panel (illustration)

Lights

Table 3 Lights

Light	Meaning when on
ZONE ON (green)	The zone is switched on and watched.
OPEN (yellow)	Zone wire broken, or end-of-line unit missing.
SHORT (yellow)	Zone wires touching.
FIRE (red)	Fire in this zone.
MAINS ON	Mains power is present.
SYSTEM ON	The panel is working.
CHARGER ON	The battery is connected and being charged.
STANDBY ON	The panel is running on its backup battery.
LOW BATT.	The backup battery is low.
SILENCE	The alarm has been silenced.
FAULT	There is a fault - see the display.
FIRE	Fire alarm - from a zone or from the ALARM button.

Buttons

Table 4 Buttons

Button	Normal use	In the menu
MENU / ENTER (red, centre)	Opens the menu.	Select / change / save.
RESET (top)	Clears alarms and faults and restarts the zones.	Cancel / back / leave the menu.

© 2026 Stake. All rights reserved.

Button	Normal use	In the menu
ACK (right, →)	Silences the hooters and buzzer. Press again to sound them again.	Next item / increase.
LAMP (left, ←)	Hold: all lights on, to check them.	Previous item / decrease.
ALARM (bottom)	Sounds the fire alarm on all hooters.	Name editing: change the letter.

Display messages



Figure 2 What the display shows

When there is no fire but something needs attention, the display shows these pages in turn:

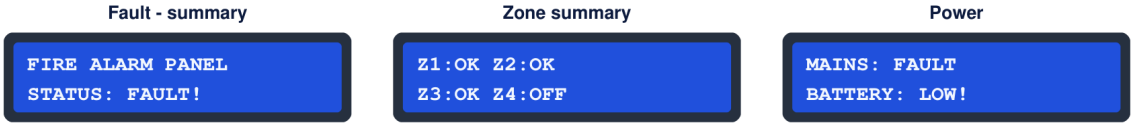


Figure 3 Status pages (shown in turn every 2-3 seconds)

In the zone page, each zone shows **OK**, **FIRE** or **OFF** (switched off).

© 2026 Stake. All rights reserved.

5 Everyday Operation

In case of fire

1	Read the display: **ZONE n SENS: aa** tells you the zone and the sensor. Find its location in the records (chapter 'Records').
2	Follow the fire plan: call the fire brigade (**101**), leave the building and help others to leave. Never put anyone at risk.
3	Only when it is safe, press **ACK** to stop the hooters if needed.
4	When the cause has been removed, press **RESET**. The display shows **SYSTEM RESET...** and the panel returns to normal.

False alarm

1	Confirm that there is no fire.
2	Find the cause (cooking, steam, dust, insects, a call point pressed by mistake), remove it and let the smoke clear.
3	Press **RESET**. If the alarm comes back, smoke is still in the sensor - wait and reset again.
4	If the same sensor gives repeated false alarms, call your service provider.

Silence, reset and manual alarm

Table 5 Everyday actions

Action	Press	Result
Silence the alarm	ACK	Hooters and buzzer stop; SILENCE light on; display **SYSTEM SILENCED**. FIRE lights stay on. Works only while there is an alarm.
Sound again	ACK (again)	Hooters sound again; display **ALARM RESOUNDED**.
Reset	RESET	Alarms clear, zones restart. If smoke is still present the alarm returns.
Manual alarm	ALARM	All hooters sound; display **MANUAL TRIGGER**. Stop with RESET.
Check the lights	Hold LAMP	All lights on; display **LAMP TEST ACTIVE**. Release to end.

Faults

Read the display and the lights (see 'Fault' in chapter 3), then call your service provider. A fault clears itself when the cause is repaired; press **RESET** if a zone fault light stays on afterwards.

Switching on

When the panel is switched on it gives a short rising tone (self-check) and is ready after a few seconds. The very first time, it first asks you to set the display contrast (chapter 6).

© 2026 Stake. All rights reserved.

6 Menu and Settings

> **!** **CAUTION** Settings change how the system reports fire and faults. Only the installer or a trained, responsible person should change them.

Using the menu

1	Press **MENU**. The first item, **ZONE 1 ON/OFF**, is shown with its present setting.
2	Press **ACK (→ next)** or **LAMP (← previous)** to find the item.
3	Press **MENU** to change it. Use **LAMP / ACK** to choose the new setting.
4	Press **MENU** to save, or **RESET** to cancel.
5	Press **RESET** to leave the menu. The menu also closes by itself after 30 seconds without a key press; unsaved changes are then cancelled.

Menu items

Table 6 Menu items

Item on display	Choices	Factory	What it does
ZONE 1 ON/OFF ... ZONE 4 ON/OFF	ON / OFF	ON	Switches a zone on or off. Switch off only zones that are not used.
ZONE TEXT EDIT	16 characters	ZONE 1 ...	Gives each zone a name, e.g. GROUND FLOOR.
SMART ADDR SCAN	-	-	Sets a sensor's address (chapter 7).
WALK TEST	-	-	For service engineers only.
LCD CONTRAST	0-100 %	55 %	Makes the display text clearer.
LED BRIGHTNESS	10-100 %	80 %	Brightness of the lights.
EOL DETECTION	ENABLED / DISABLED	ENABLED	Checks the zone wiring for breaks. Keep enabled.
SHORT AS FIRE	ENABLED / DISABLED	DISABLED	Treats touching zone wires as fire instead of fault. Only if the installer's devices need it.
BUZZER MODE	ON-OFF / SWEEP TONE / OFF	ON-OFF	Sound of the panel buzzer in fire. The hooters are not affected.
BATT MONITORING	ENABLED / DISABLED	DISABLED	Warns when the backup battery is low. Enable it when the battery is fitted.
SET DATE & TIME	date and time	-	Sets the clock used on the display and in the event log.
VIEW EVENT LOG	-	-	Shows the last 100 events.
CLEAR EVENT LOG	-	-	Deletes all events (press MENU twice).
FACTORY RESET	-	-	Returns all settings and zone names to factory values (press MENU twice).

© 2026 Stake. All rights reserved.

Naming a zone

1	Select **ZONE TEXT EDIT** and press **MENU**. Choose the zone with **LAMP / ACK**, press **MENU**.
2	Move the blinking cursor with **ACK** (right) and **LAMP** (left).
3	Change the letter with **ALARM** (forward) and **RESET** (back); hold the button to go faster. Letters, numbers, space and . - / : & _ # are available.
4	Press **MENU** to save. The display shows **ZONE TEXT SAVED**.

Setting the date and time

Select **SET DATE & TIME** and press **MENU**. The blinking field (day, month, year, hour, minute) is changed with **LAMP / ACK**; **MENU** moves to the next field and, after the minutes, saves. If the panel has been switched off completely (mains and battery), set the date and time again.

Event log

Select **VIEW EVENT LOG** and press **MENU**. The newest event is shown first, with its number, date and time. **ACK** shows older events, **LAMP** newer ones; **MENU** or **RESET** returns. When 100 events are stored, the oldest is replaced.

Table 7 Event log messages

Event	Meaning
FIRE ALARM	Fire in a zone (zone number shown).
OPEN FAULT / SHORT CIRCUIT	Zone wiring fault (zone number shown).
ZONE RESTORED	The zone is back to normal.
PANEL RESET / ALARM SILENCE / EVACUATE	RESET, ACK or ALARM button pressed.
MAINS FAIL / MAINS RESTORE	Mains power lost / back.
BATTERY LOW / BATTERY OK / BATTERY MISSING	Backup battery state.
COMM LOST / COMM RESTORED	Internal panel fault / cleared.
DATE/TIME SET	The clock was set.

Display contrast set-up

On first switch-on (or when **ACK** is held while switching on), the display slowly changes its contrast. Press any button when the text is clearest, fine-tune with **LAMP / ACK**, then press **MENU** to save.

© 2026 Stake. All rights reserved.

7 Smart Sensors

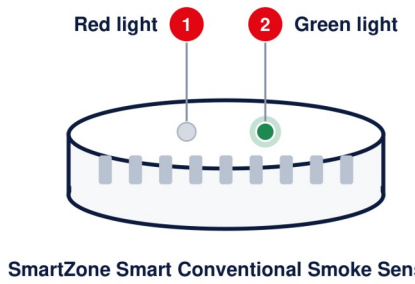


Figure 4 SmartZone Smart Conventional Smoke Sensor

Sensor lights

Table 8 **Sensor lights**

Sensor light	Meaning
Green blink about every 10 s	The sensor is working.
Short red flashes	Some smoke or dust in the sensor. If it continues without smoke, have the sensor cleaned.
Red on steadily	Fire. Stays on until the panel is RESET.
5 quick red flashes	Address button pressed - address setting starts.
Red on for several seconds, then a short off, repeated	Address setting in progress.

Setting a sensor's address

Each sensor needs its own address (**01 to 40**) in its zone, so that the panel can show it. The address is kept by the sensor, also without power. Set the sensors one at a time.

1	The sensor is fitted on its zone and the panel shows normal. (You may first select **SMART ADDR SCAN** in the menu; the panel also starts by itself.)
2	Press the **address button** on the sensor. Its red light flashes 5 times.
3	The panel shows **SCANNING ADDRESS** and **ZONE:n ADDR: 01**. The address goes up by one about every 7 seconds. The hooters stay quiet during this time.
4	When the address you want is shown, press **RESET** on the panel. The sensor keeps that address and the zone restarts.
5	Test the sensor with test smoke: the display must show **ZONE n SENS:** and the new address. Write the address and location in the records.

NOTE If RESET is not pressed, the sensor stops after address 40 and has no address. It still detects fire, but the panel then shows only the zone name. Press the address button again to repeat.

Do not give two sensors in the same zone the same address.

© 2026 Stake. All rights reserved.

8 Installation and Commissioning

For installers. Follow the fire code and the installation sheet supplied with the products.

Where to install

- Panel: indoors, on a wall at eye level, near the main entrance or where it is watched; dry and dust-free.
- Mains supply: a separate supply with its own isolating switch, clearly labelled 'FIRE ALARM - DO NOT SWITCH OFF'.
- Sensors: on the ceiling, away from kitchens, bathrooms, air-conditioner outlets, fans and corners.
- Manual call points: at exits and escape routes, easy to see and reach.
- Hooters: so that the alarm can be heard everywhere in the building.

Commissioning

1	Wire the zones, fit the end-of-line unit at the end of each zone, connect hooters, mains and battery.
2	Switch on. Set the display contrast if asked. Set the date and time.
3	Switch **off** any zone that is not used. Enable **BATT MONITORING**.
4	Name each zone (**ZONE TEXT EDIT**).
5	Set the address of every sensor (chapter 7) and record it.
6	Test every sensor and call point: the correct zone and address must be shown and the hooters heard everywhere. Press RESET after each test.
7	Check that the panel shows **NORMAL**, then hand over: show the users chapter 5 and fill in the records.

© 2026 Stake. All rights reserved.

9 Maintenance and Troubleshooting

Regular testing proves that the system will work when it is needed. Record every test in the log (chapter 'Records'). Inform the occupants before any test that sounds the hooters.

Table 9 Testing and maintenance

When	What to do
Daily	Check that the display shows normal (FIRE ALARM PANEL / NORMAL 10:42) and only green lights are on.
Weekly	Test one sensor or call point, in turn, so that all are tested over time. Check the display and the hooters, then RESET. Hold **LAMP** to check all lights.
Monthly	Check the event log for faults or unexplained alarms. Check sensors for dust, paint, covers or damage.
Every 6 months	Service by a competent engineer: every sensor, call point, hooter, the battery and a mains power cut test.
Every year	Full system test and service report.

NOTE These are recommendations. The fire code, the local fire authority and your service provider set the intervals that apply to your building.

Cleaning

Clean the panel and sensors with a soft, dry cloth. Do not use water, sprays or solvents. Never paint a sensor. Cover sensors during building work and remove the covers afterwards.

Troubleshooting

Table 10 Troubleshooting

What you see	Likely cause	What to do
Fire shows the zone name, not the address	Call point, other detector, or sensor without address	Check the area of the zone. Set the sensor's address if needed.
Alarm returns after RESET	Smoke still in the sensor, or call point still pressed	Clear the smoke or reset the call point, then RESET again.
Repeated false alarms from one sensor	Dust, steam, cooking, insects	Have the sensor cleaned or moved.
Zone OPEN light on	Zone wire broken, end-of-line unit missing	Call service. Switch off unused zones.
Zone SHORT light on	Zone wires touching	Call service.
MAINS: FAULT	Mains power cut or switched off	Check the supply and its isolating switch.
BATTERY: LOW! / MISSING	Battery flat, old or disconnected	Wait for mains to recharge; else call service.
STATUS: LINK LOST	Internal panel fault	Call service at once.
Wrong time on the display	Panel was switched off completely	Set the date and time.
Display hard to read	Contrast	Adjust LCD CONTRAST in the menu.

© 2026 Stake. All rights reserved.

10 Records

Keep these records with the manual. Your installer fills them in at handover.

Installation record

Item	Details
Site / building	
Address	
Installed by	
Date of handover	
Responsible person (site)	
Service provider and phone	
Panel location	

Zones and sensors

Zone	Zone name	Sensor address	Sensor location

Test and maintenance log

Date	Test / work carried out	Result	Name and signature

© 2026 Stake. All rights reserved.

11 Warranty

Certifications

Standard / approval	Certificate number	Issued by	Valid until

Warranty

Warranty terms

© 2026 Stake. All rights reserved.

12 Interactive Demo

Try the SmartZone-4 right here in this document. The next pages are an interactive copy of the panel: click its buttons and watch the lights, the display, the hooters and the outputs respond exactly as on the real panel.



Figure 5 The SmartZone-4 - the demo starts on the next page

1	Click a button **on the panel picture** - MENU / ENTER, RESET, ACK, LAMP, ALARM. A **red ring** shows a good next step.
2	Click a dark **SIMULATE** button to make something happen: smoke at a sensor, a call point, a power cut, setting a sensor address.
3	Use the **SCENARIOS** row at the bottom of every demo page to jump to any example.


Scenario	What you will see
Fire	Zone and sensor address on the display, hooters, silencing with ACK, reset.
Two fires	Both fires shown in turn, with their count.
Call point	A fire from a device without an address - shown by zone name.
Manual alarm	The ALARM button sounding all hooters.
Power cut	Running on the backup battery, low battery warning.
Set address	Giving a sensor its address from the panel.
Menu	Every menu item and the event log.

START THE INTERACTIVE DEMO ▶

The interactive demo is part of the PDF edition of this manual. It works in Chrome, Edge, Firefox, Adobe Acrobat Reader and most phone PDF viewers.

© 2026 Stake. All rights reserved.

Normal

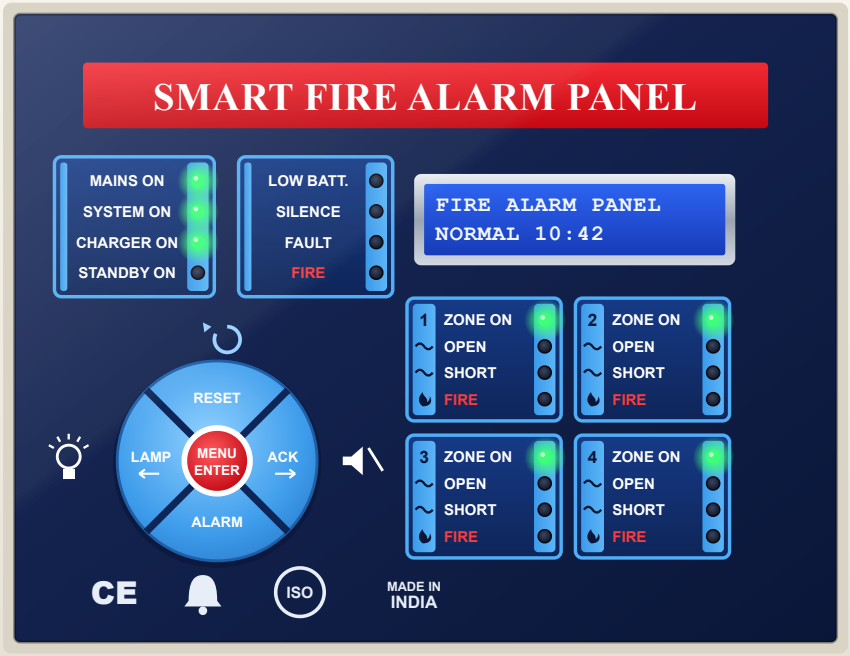



HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

All is well. The green ZONE ON lights show the 4 zones are watched; MAINS ON, SYSTEM ON and CHARGER ON show power is fine. The display shows the time.

- Hold **LAMP** to test all lights
- Press **ALARM** to sound a manual alarm
- Press **MENU** to open the menu
- Or simulate an event below

SIMULATE AN EVENT

Smoke at Zone 1, sensor 03

Call point pressed in Zone 2

Mains power cut


Sensor address button pressed

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Lamp test

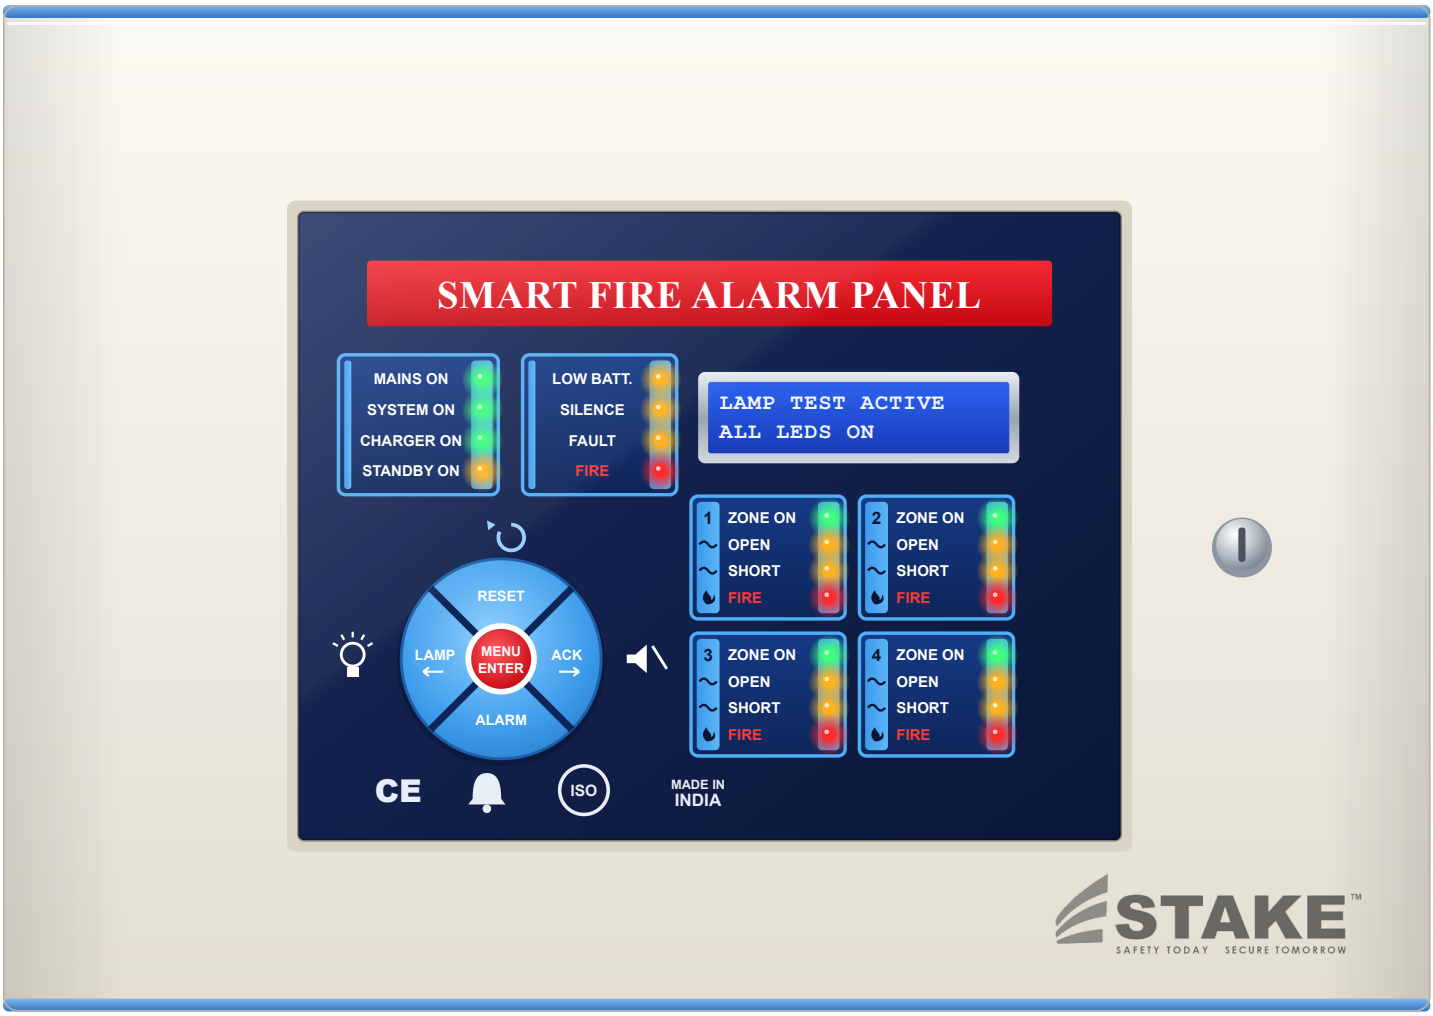

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

While LAMP is held, every light comes on so that you can check that none is broken. Release LAMP to end.


- Press any key to release LAMP

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Fire - sensor 03 in Zone 1

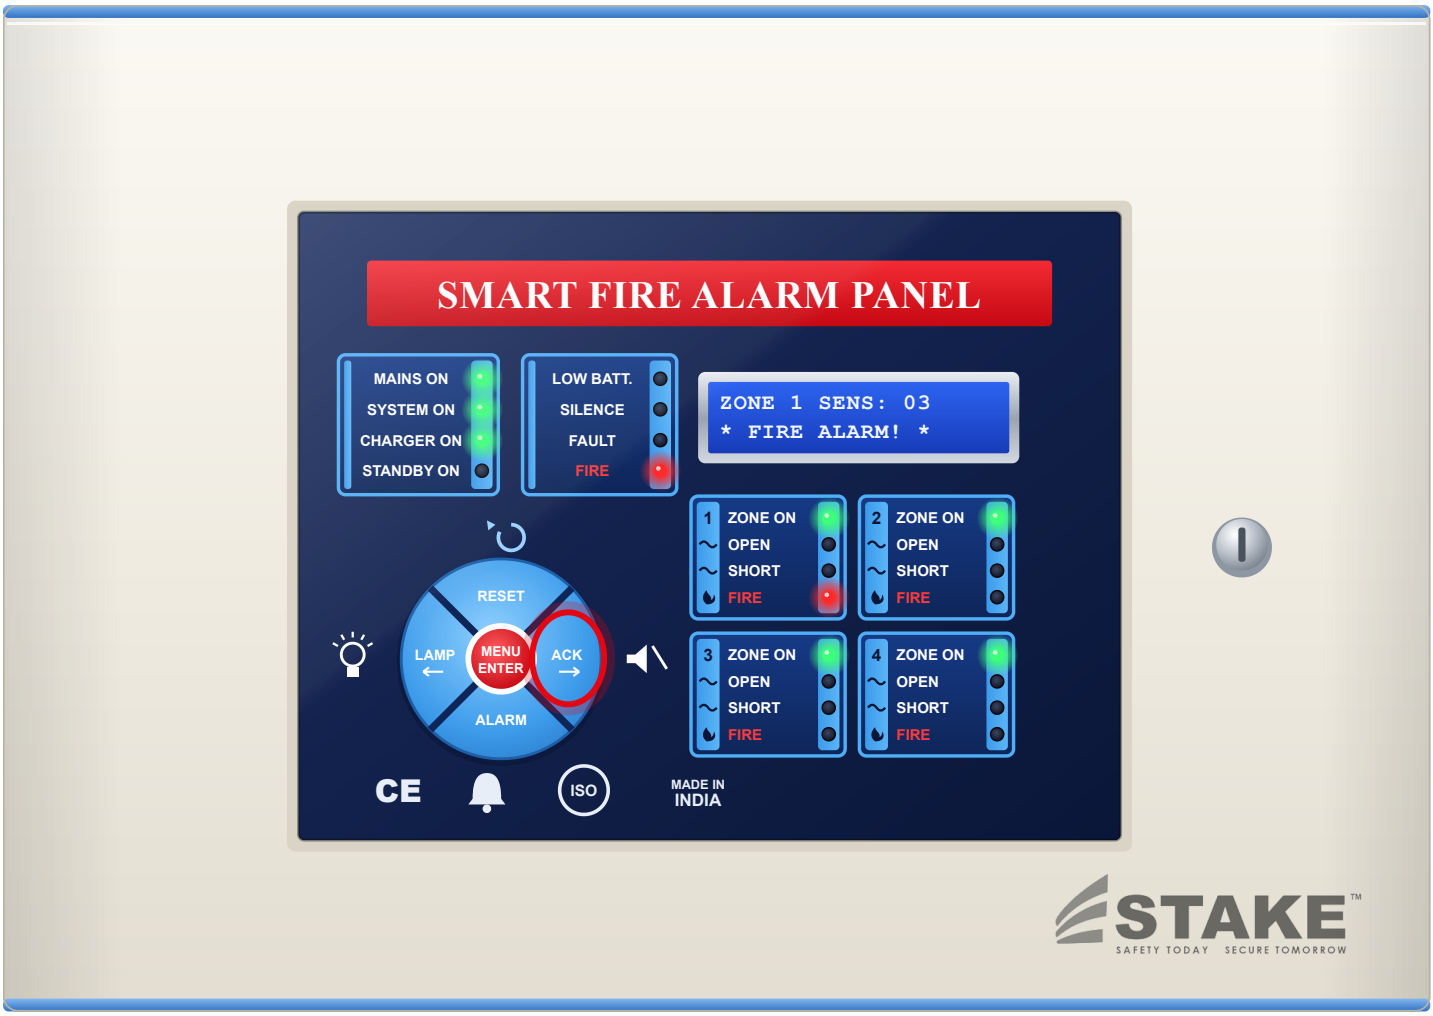

HOOTERS: SOUNDING | PANEL BUZZER: SOUNDING | FIRE OUTPUT: ON | FAULT OUTPUT: OFF

What is happening

A smart sensor detected smoke. The display shows the zone and the **sensor address**: Zone 1, sensor 03. The Zone 1 FIRE and the FIRE lights are on, the hooters and the panel buzzer sound, the FIRE output is on.

- Press **ACK** to silence the hooters
- Press **RESET** when the cause is removed
- Or let a second fire start below

SIMULATE AN EVENT


Smoke at Zone 3, sensor 12

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Fire - silenced

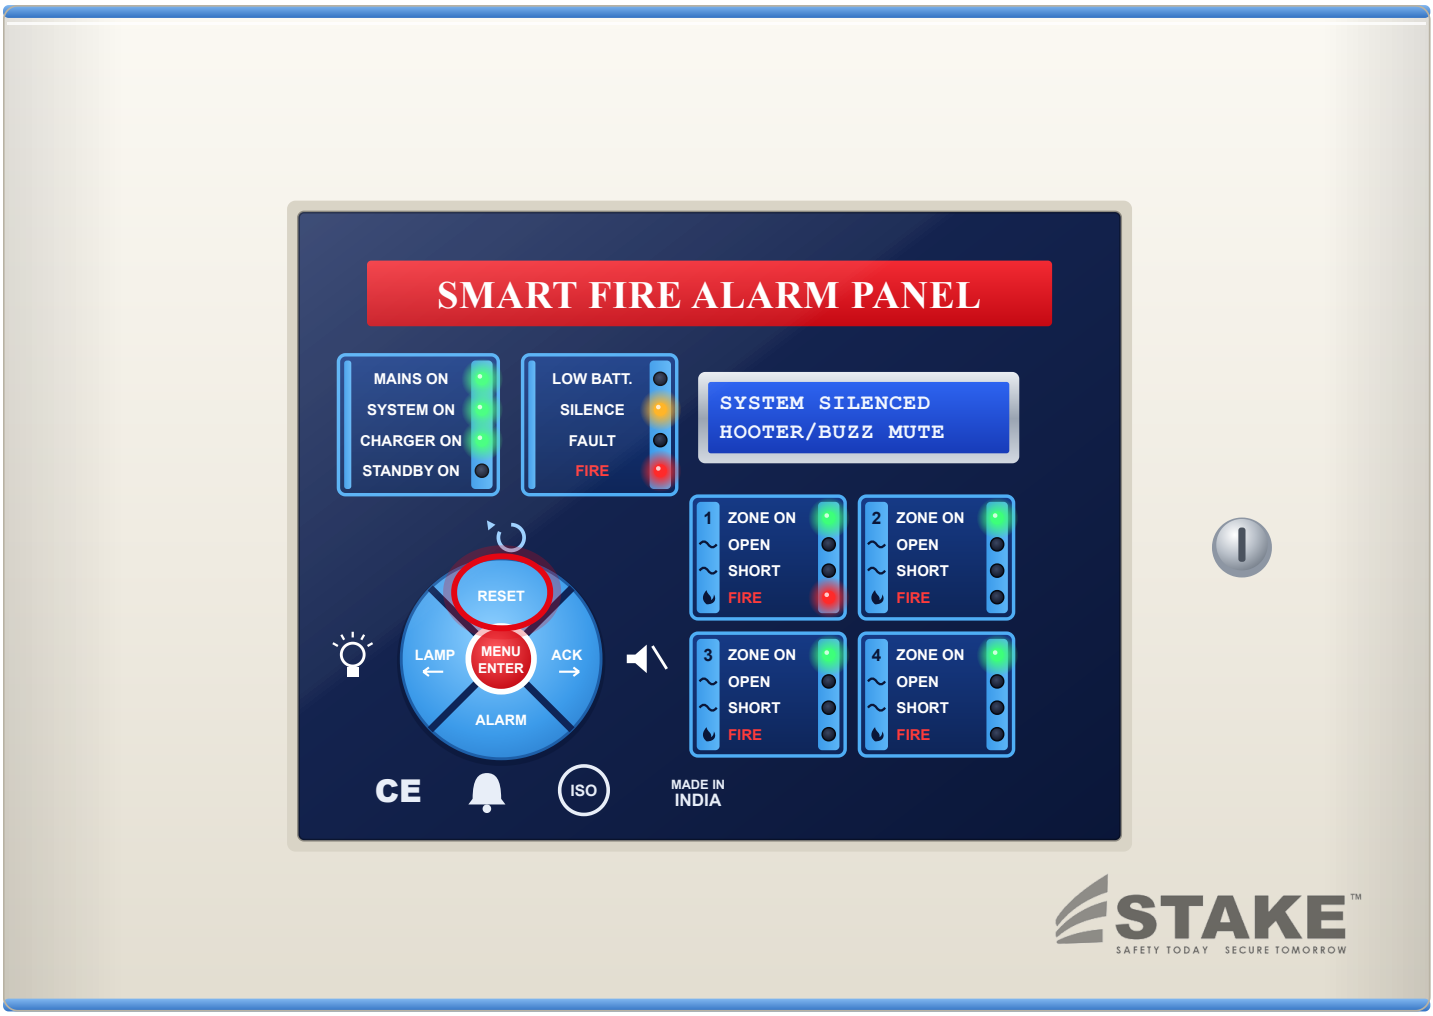

HOOTERS: SILENT | PANEL BUZZER: SILENT | **FIRE OUTPUT: ON** | FAULT OUTPUT: OFF

What is happening

ACK silenced the hooters and buzzer. The SILENCE light is on. The FIRE lights and the FIRE output stay on, and after 2 seconds the display shows the fire again.


- Press **ACK** again to sound the hooters again
- Press **RESET** when the cause is removed

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Two fires (1 of 2)

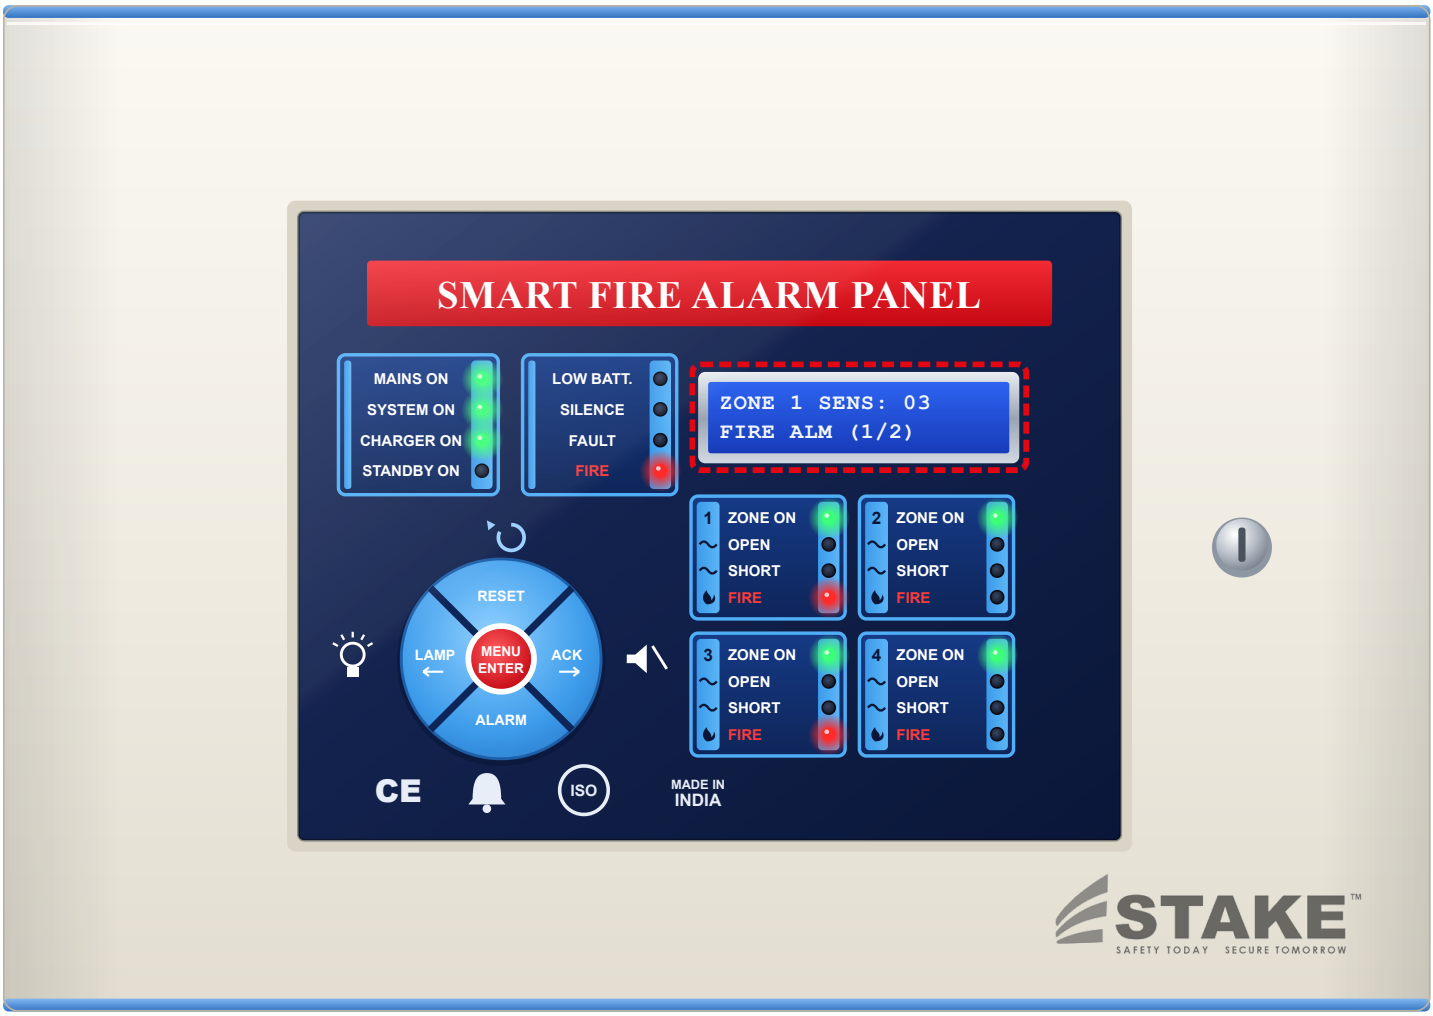

HOOTERS: SOUNDING | PANEL BUZZER: SOUNDING | FIRE OUTPUT: ON | FAULT OUTPUT: OFF

What is happening

A second sensor - Zone 3, sensor 12 - is now in fire too. The display shows both fires in turn, every 2 seconds, with their count.


- Click the **display** to see the next fire
- Press **ACK** to silence
- Press **RESET** to reset

SCENARIOS

Start | Fire | **Two fires** | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Two fires (2 of 2)

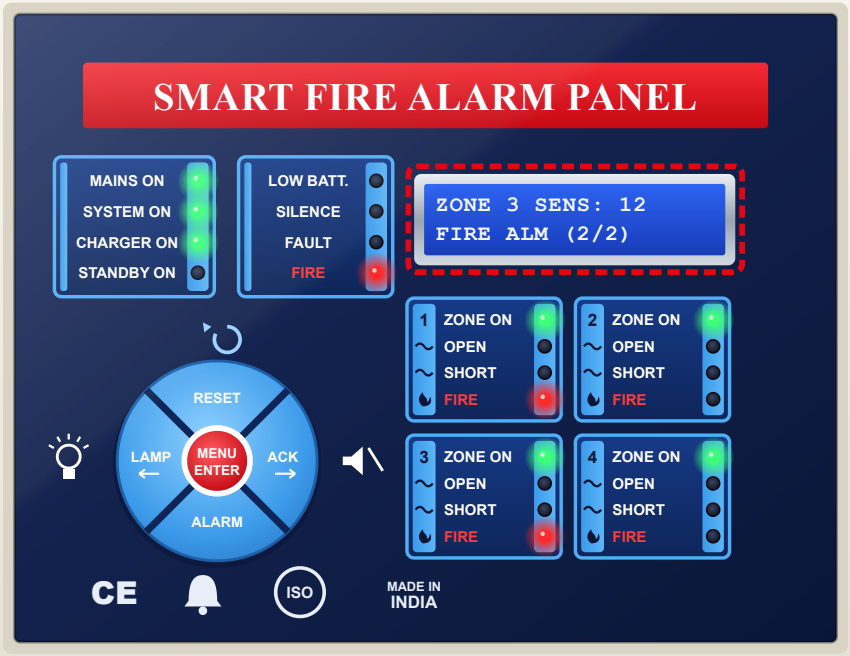

HOOTERS: SOUNDING | PANEL BUZZER: SOUNDING | FIRE OUTPUT: ON | FAULT OUTPUT: OFF

What is happening

The second fire: Zone 3, sensor 12.


- Click the **display** to see the first fire
- Press **ACK** to silence
- Press **RESET** to reset

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Two fires - silenced

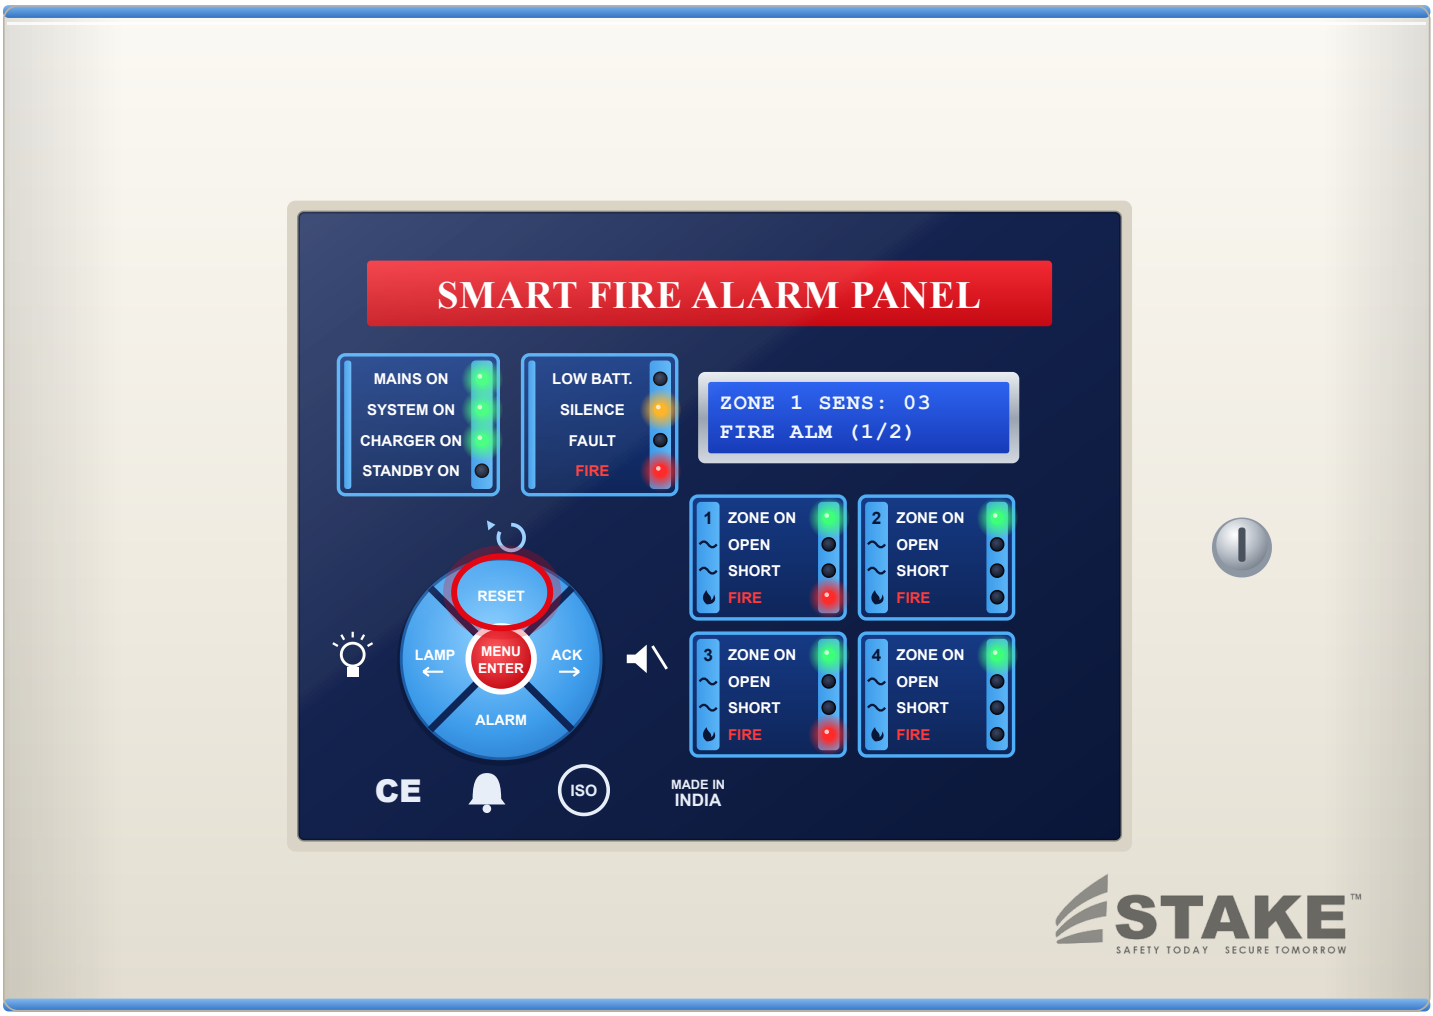

HOOTERS: SILENT | PANEL BUZZER: SILENT | **FIRE OUTPUT: ON** | FAULT OUTPUT: OFF

What is happening

Hooters and buzzer are silenced; both fires are still shown in turn.


- Press **ACK** to sound again
- Press **RESET** to reset

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Fire - call point in Zone 2

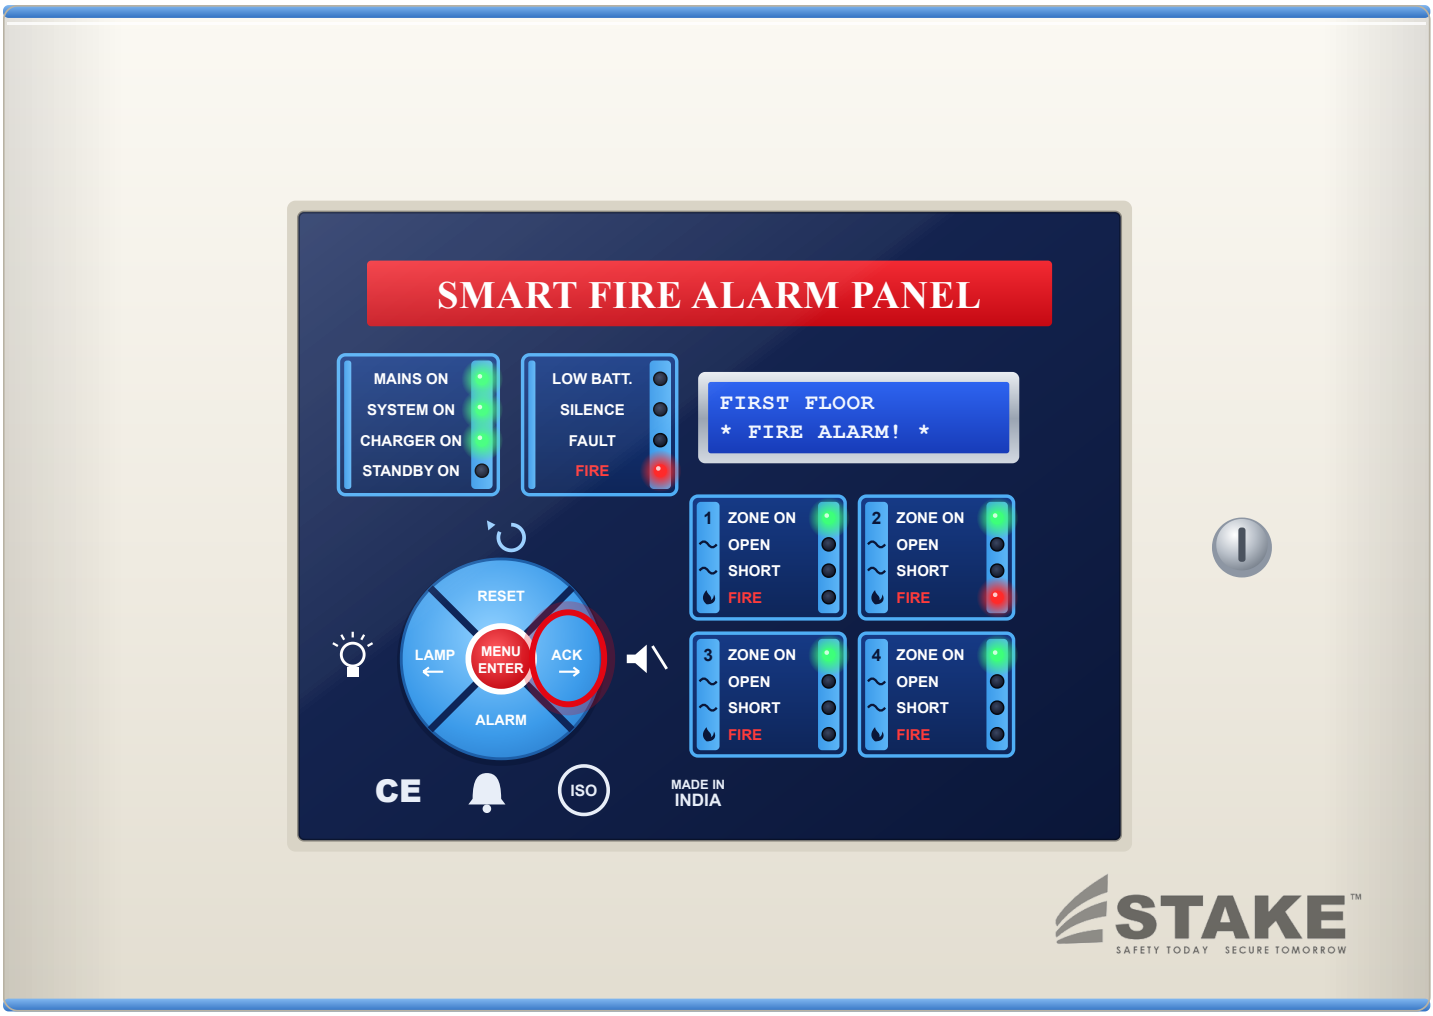

HOOTERS: SOUNDING | PANEL BUZZER: SOUNDING | FIRE OUTPUT: ON | FAULT OUTPUT: OFF

What is happening

A manual call point (or another device without an address) raised the alarm. The display shows the **zone name** - here FIRST FLOOR - so check the whole zone.


- Press **ACK** to silence
- Reset the call point, then press **RESET**

SCENARIOS

Start | Fire | Two fires | **Call point** | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Call point fire - silenced

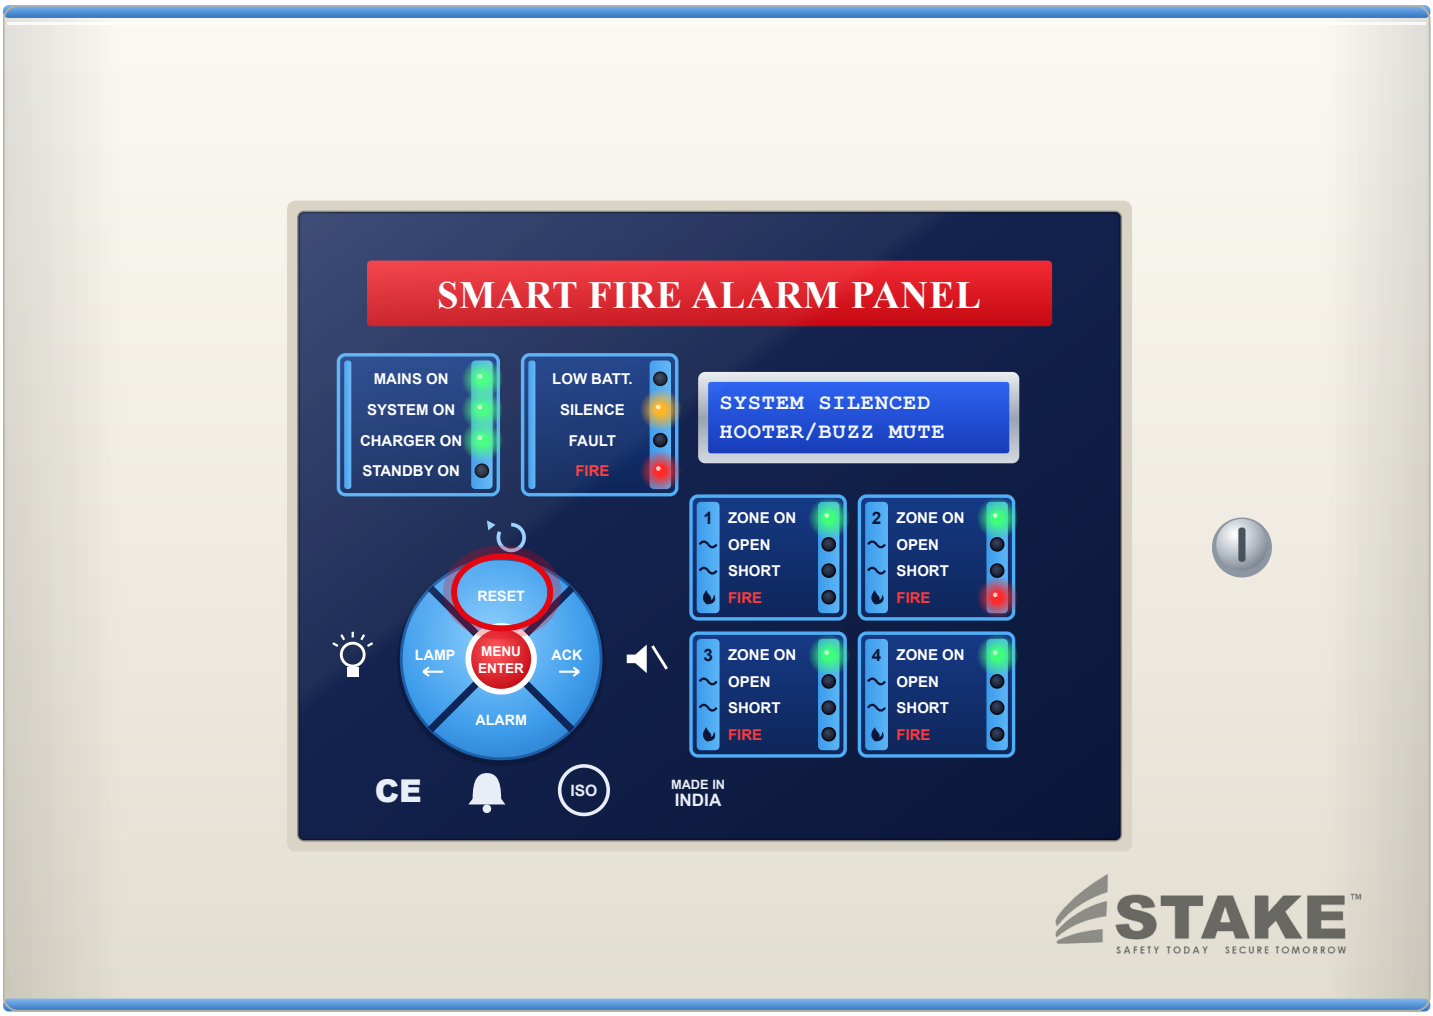

HOOTERS: SILENT | PANEL BUZZER: SILENT | **FIRE OUTPUT: ON** | FAULT OUTPUT: OFF

What is happening

Hooters and buzzer are silenced; the FIRE lights stay on.


- Press **ACK** to sound again
- Press **RESET** to reset

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Manual alarm (ALARM button)

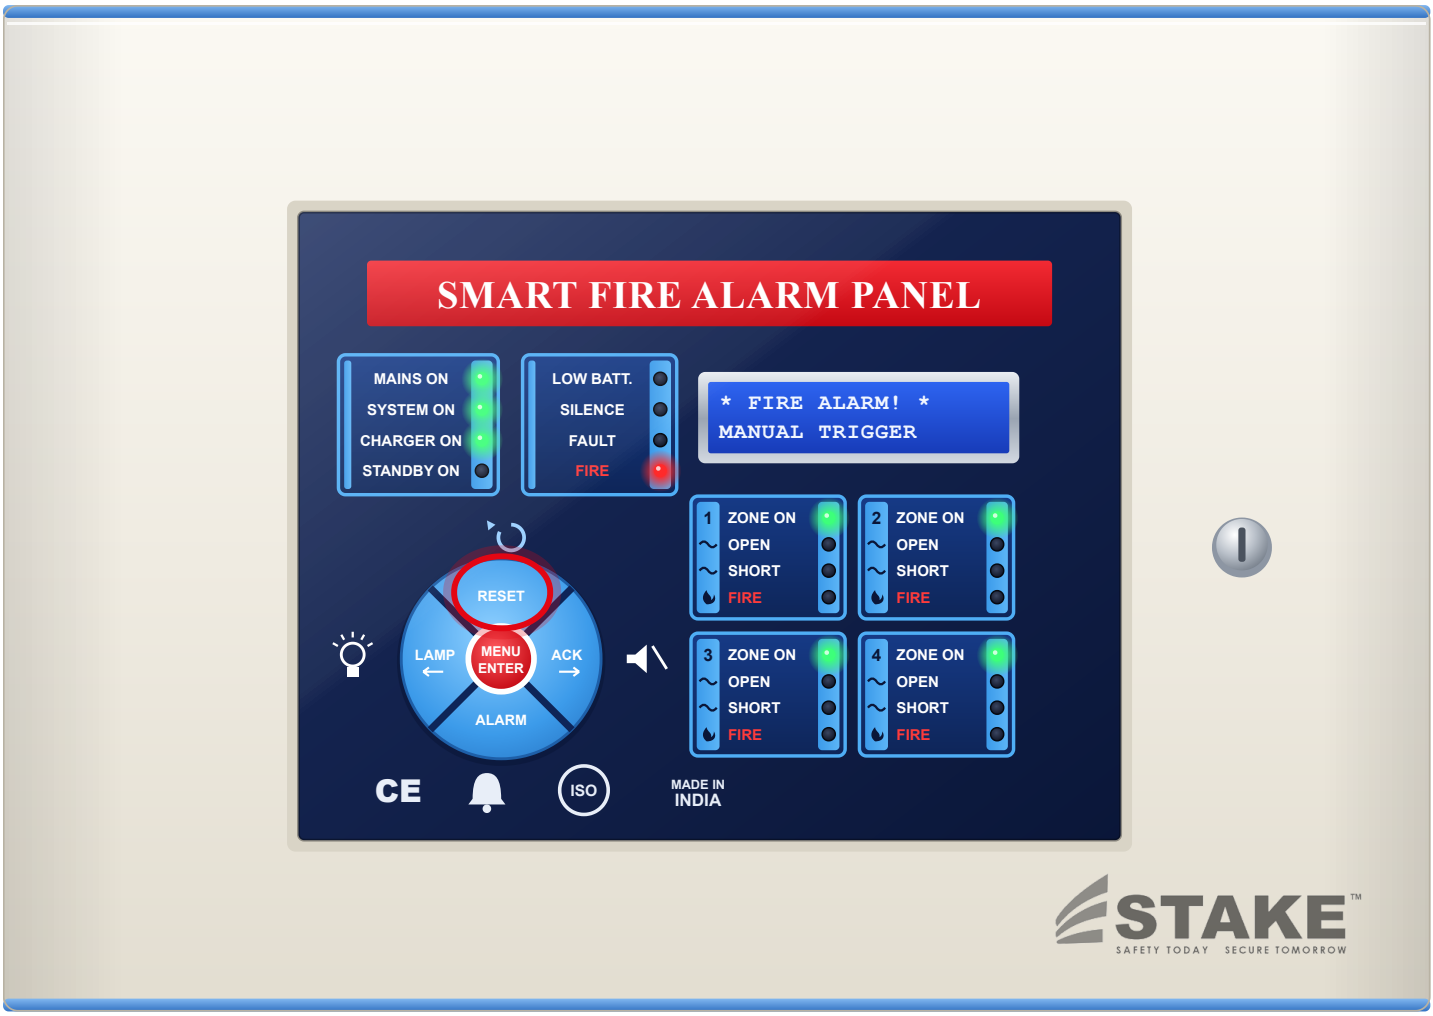

HOOTERS: SOUNDING | PANEL BUZZER: SOUNDING | FIRE OUTPUT: ON | FAULT OUTPUT: OFF

What is happening

ALARM sounds the fire alarm on all hooters - to warn everyone at once.


- Press **ACK** to silence
- Press **RESET** to end the alarm

SCENARIOS

Start | Fire | Two fires | Call point | **Manual alarm** | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Manual alarm - silenced

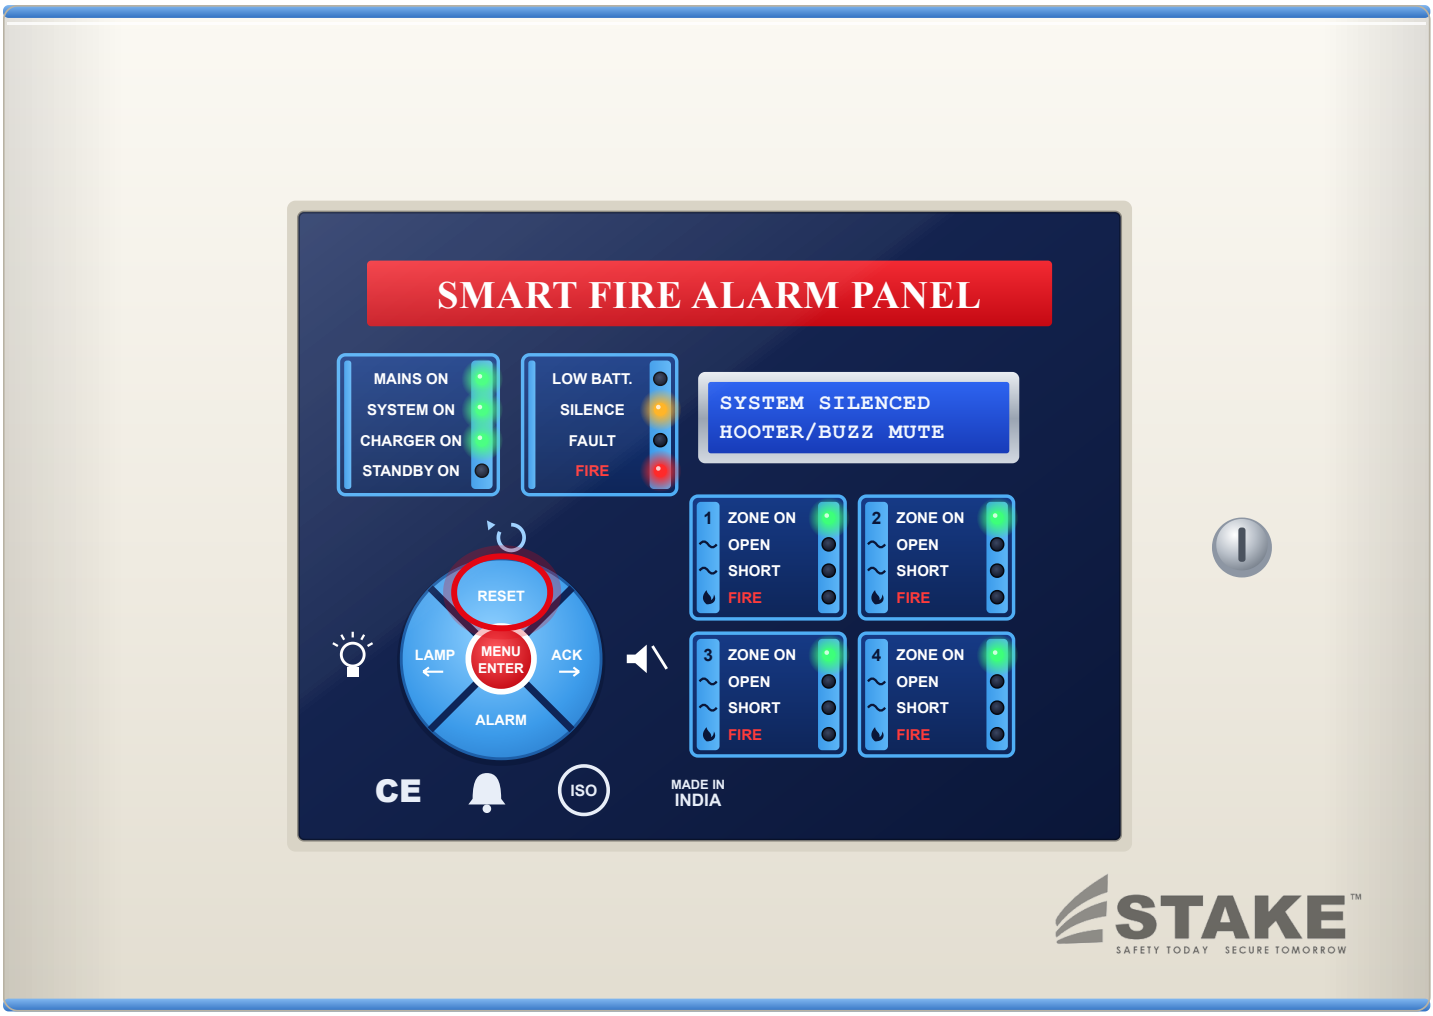

HOOTERS: SILENT | PANEL BUZZER: SILENT | **FIRE OUTPUT: ON** | FAULT OUTPUT: OFF

What is happening

The hooters are silenced. The FIRE light stays on until RESET.


- Press **ACK** to sound again
- Press **RESET** to end the alarm

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Reset

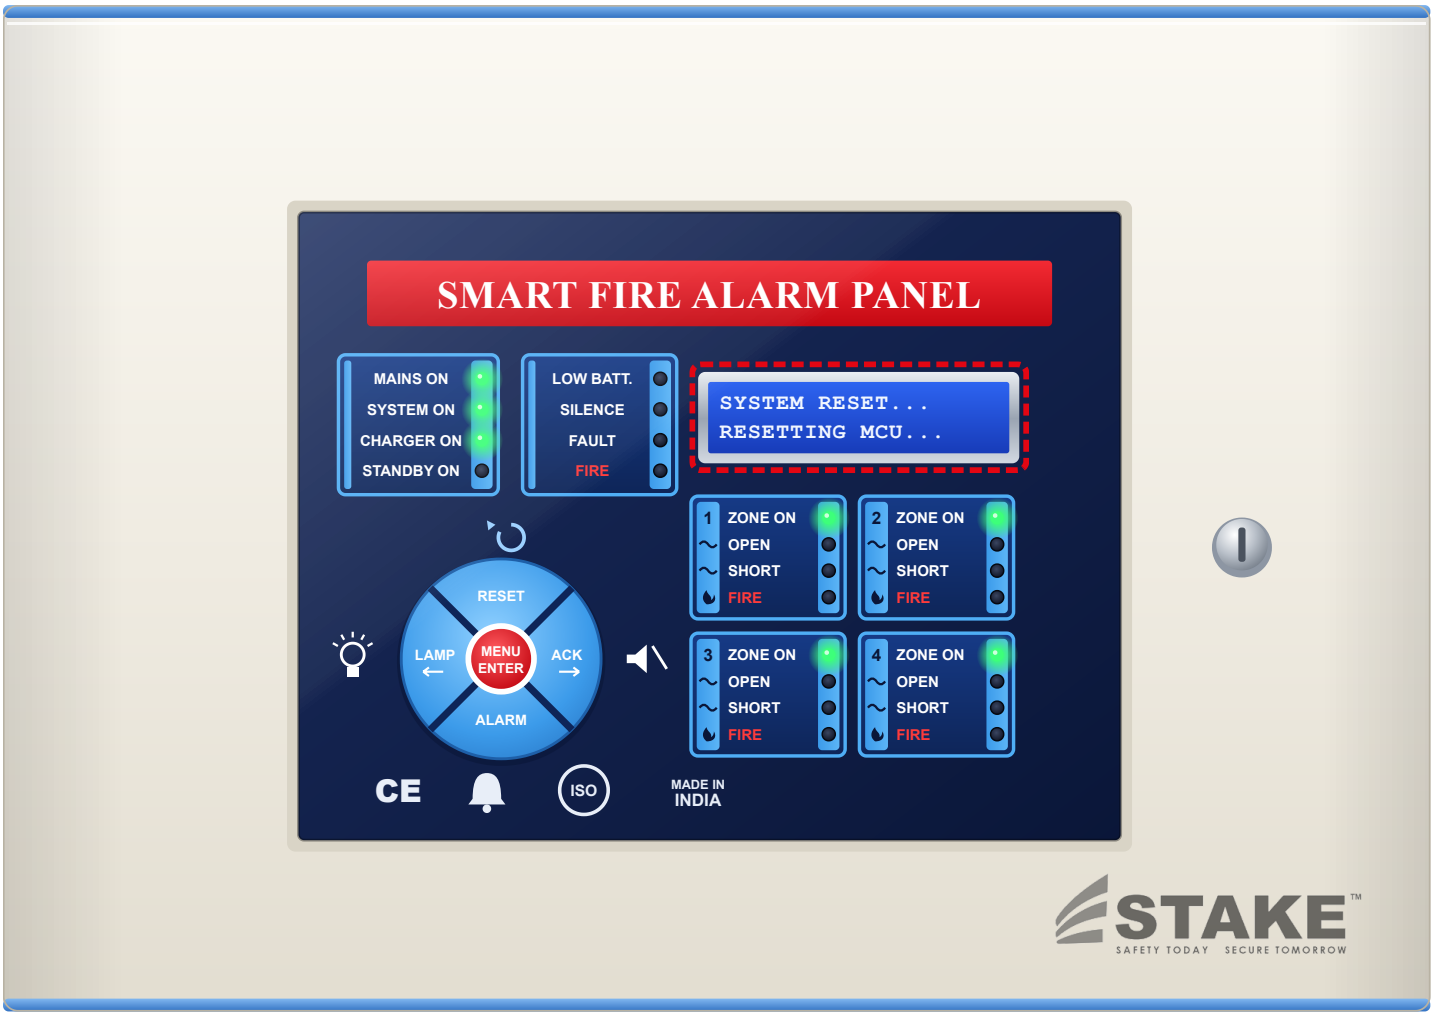

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

RESET clears the alarm and restarts the zones; after a moment the panel is back to normal. If smoke is still in a sensor, the alarm comes back - remove the cause first.


- Click the **display** to continue

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Mains power cut

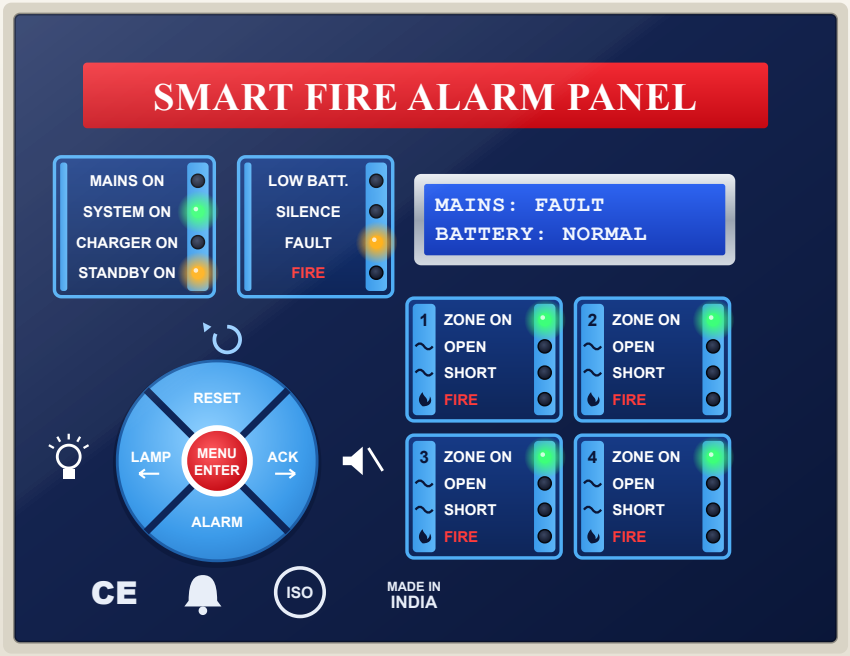

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | **FAULT OUTPUT: ON**

What is happening

Mains power has failed. The panel keeps working on its backup battery: MAINS ON is off, STANDBY ON and FAULT are on, and the FAULT output is on. The display shows the power pages in turn.

- Simulate the power returning, or a low battery, below

SIMULATE AN EVENT


Mains power returns | **Battery becomes low**

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | **Power cut** | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Mains cut - battery low

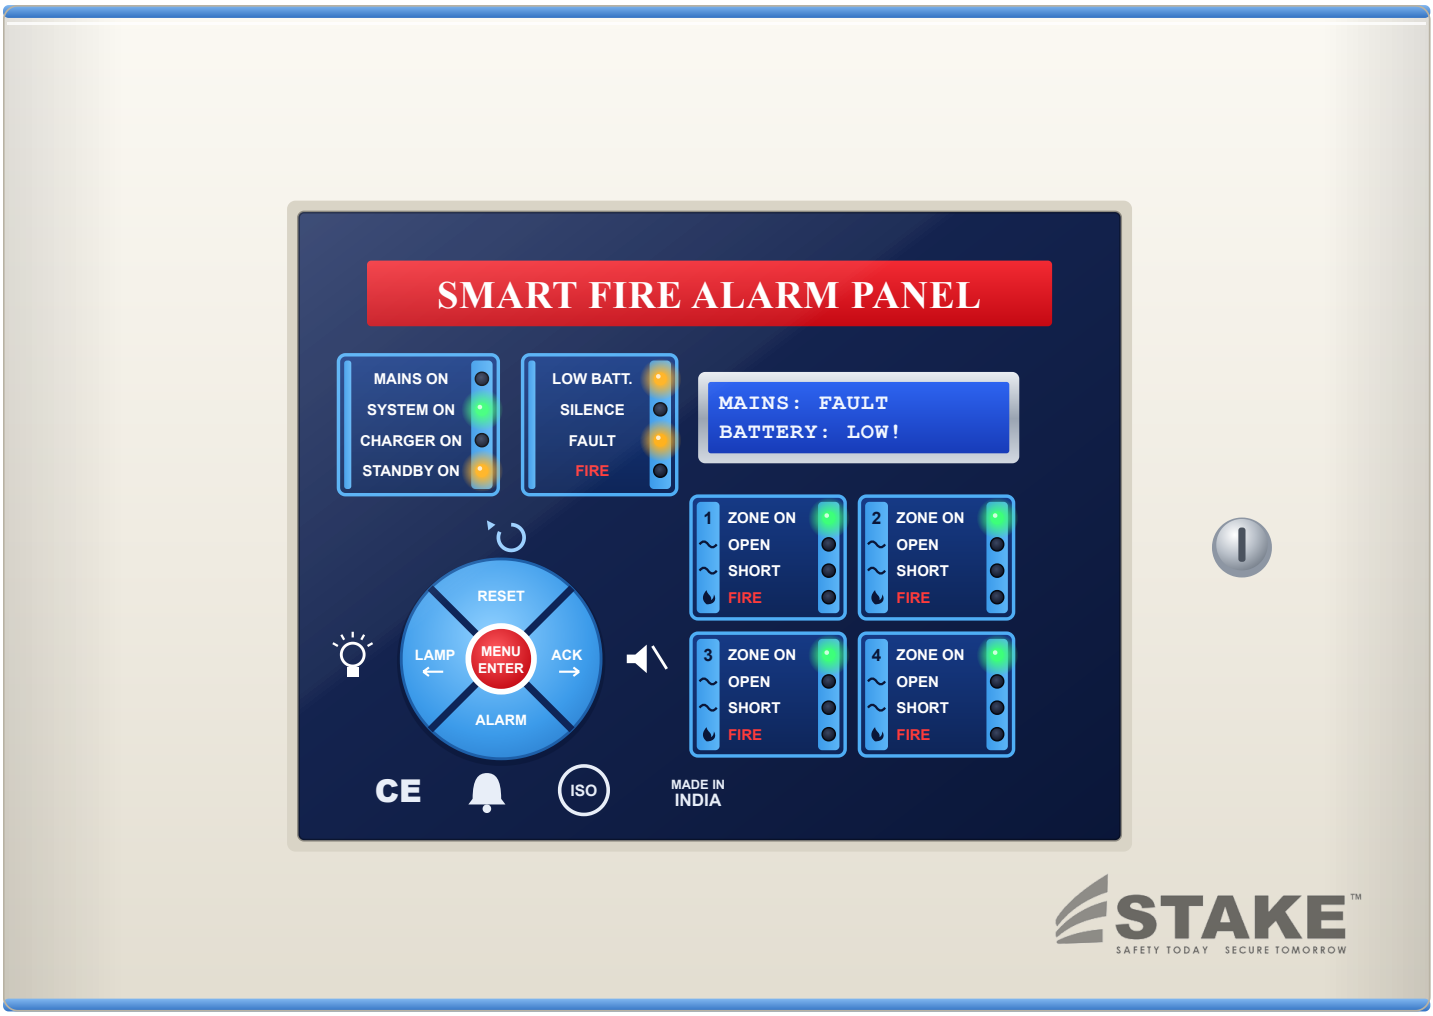

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: ON

What is happening

The battery is running low: LOW BATT. is on. Restore the mains supply quickly - call your service provider.

- Simulate the power returning below

SIMULATE AN EVENT


Mains power returns

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Setting a sensor address - 01

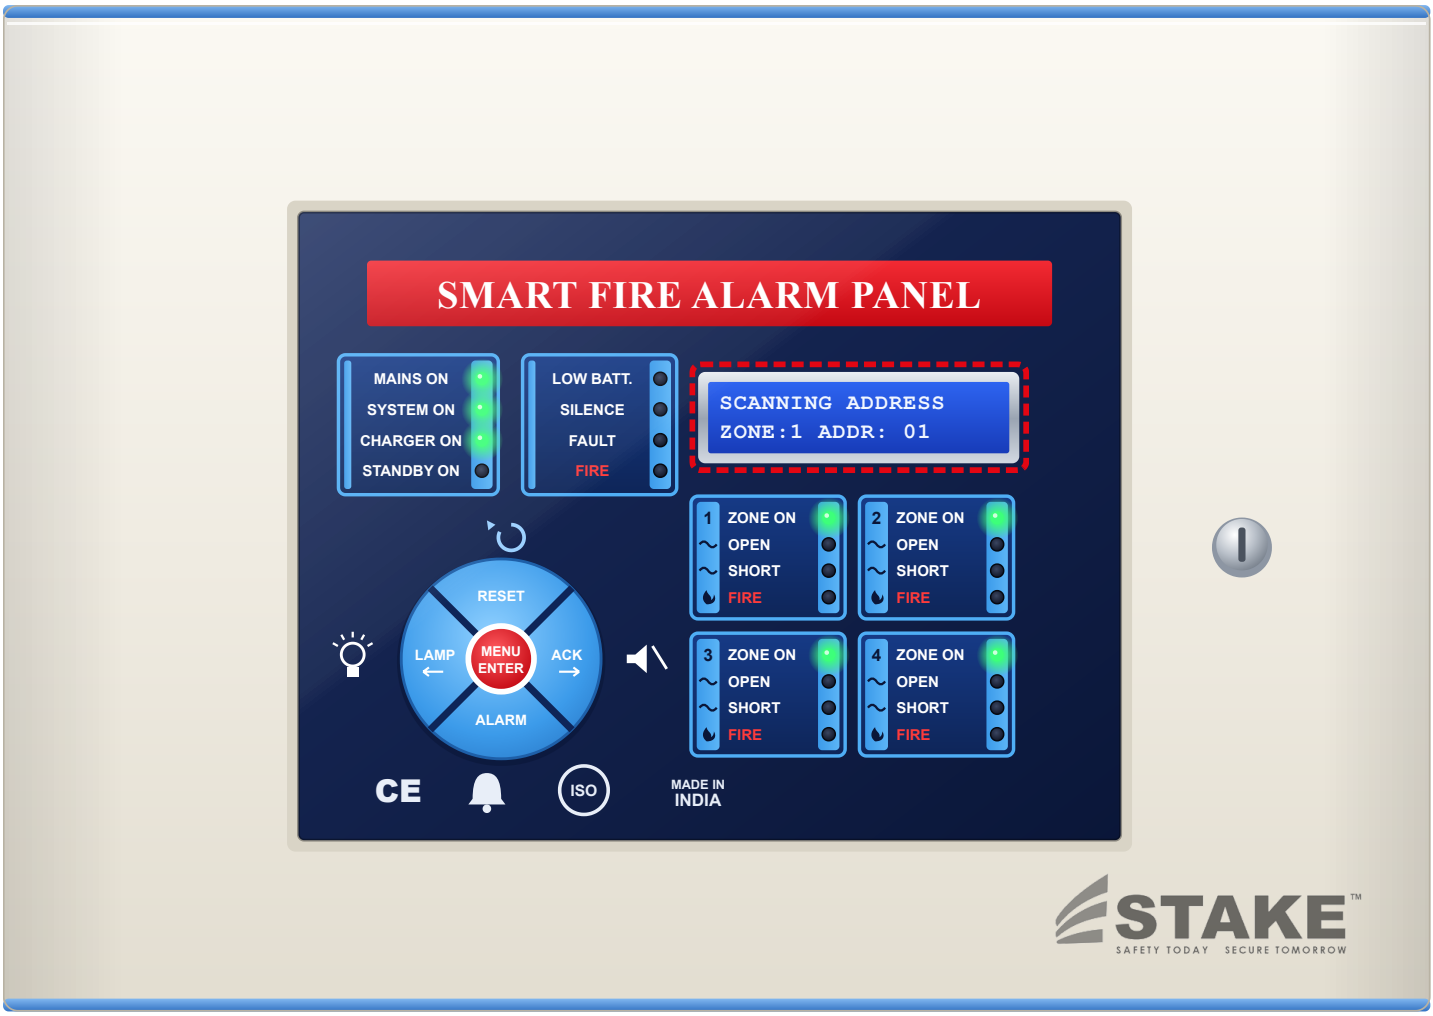

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

The address button on a sensor in Zone 1 was pressed. The sensor counts 01, 02, 03 ... about every 7 seconds and the panel shows the number. The hooters stay quiet.


- Click the **display** to wait 7 seconds

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Setting a sensor address - 02

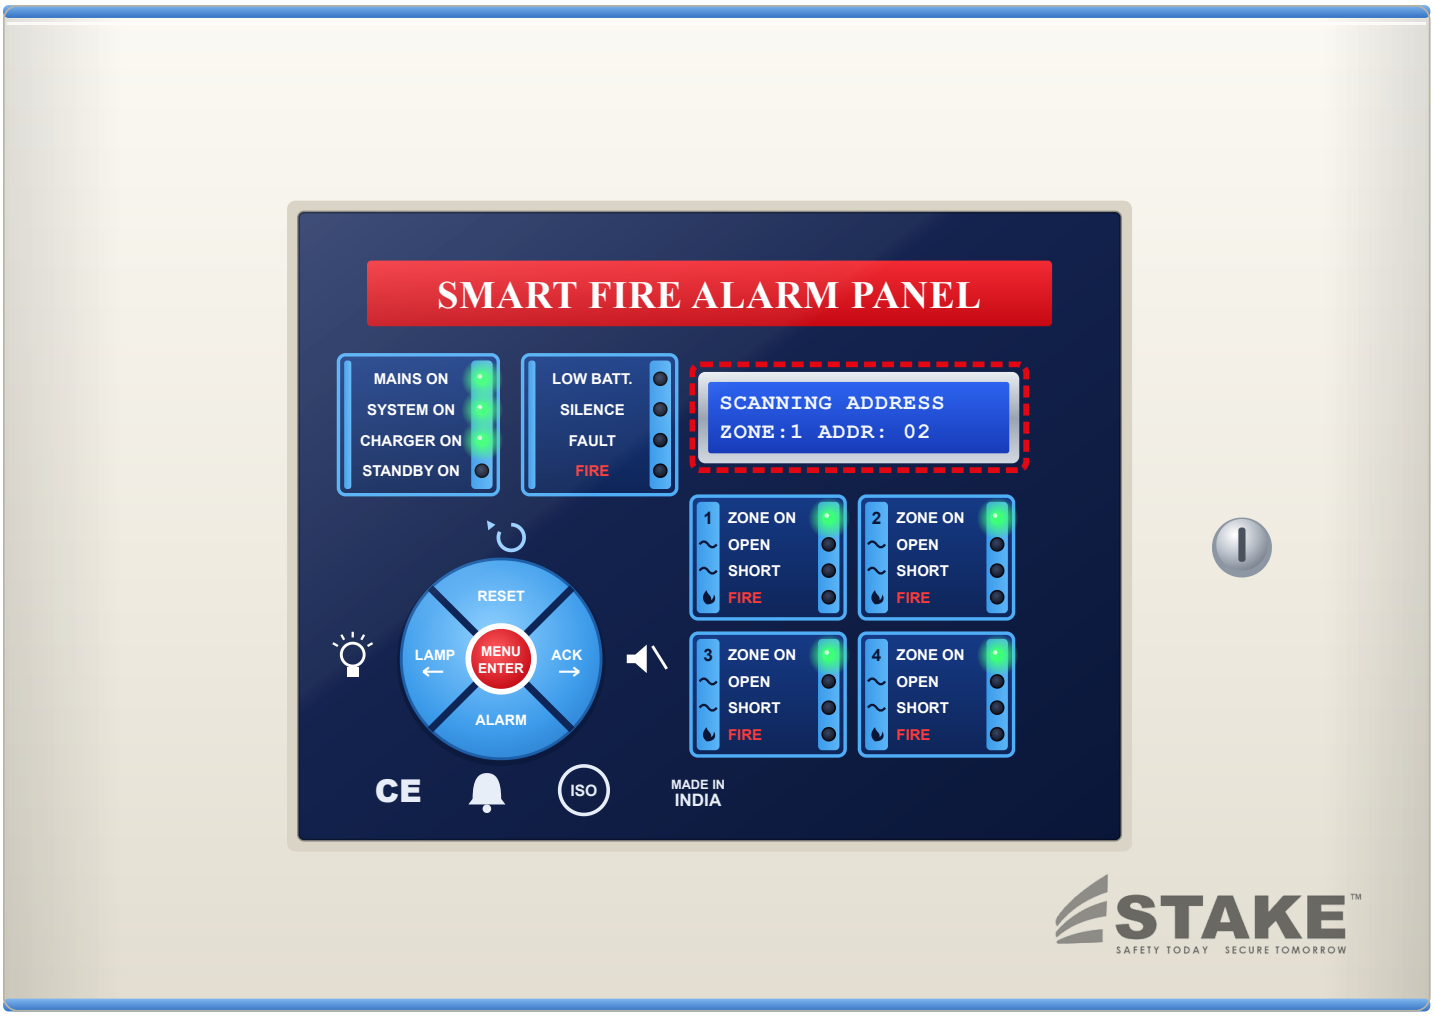

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

The address button on a sensor in Zone 1 was pressed. The sensor counts 01, 02, 03 ... about every 7 seconds and the panel shows the number. The hooters stay quiet.


- Click the **display** to wait 7 seconds

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Setting a sensor address - 03

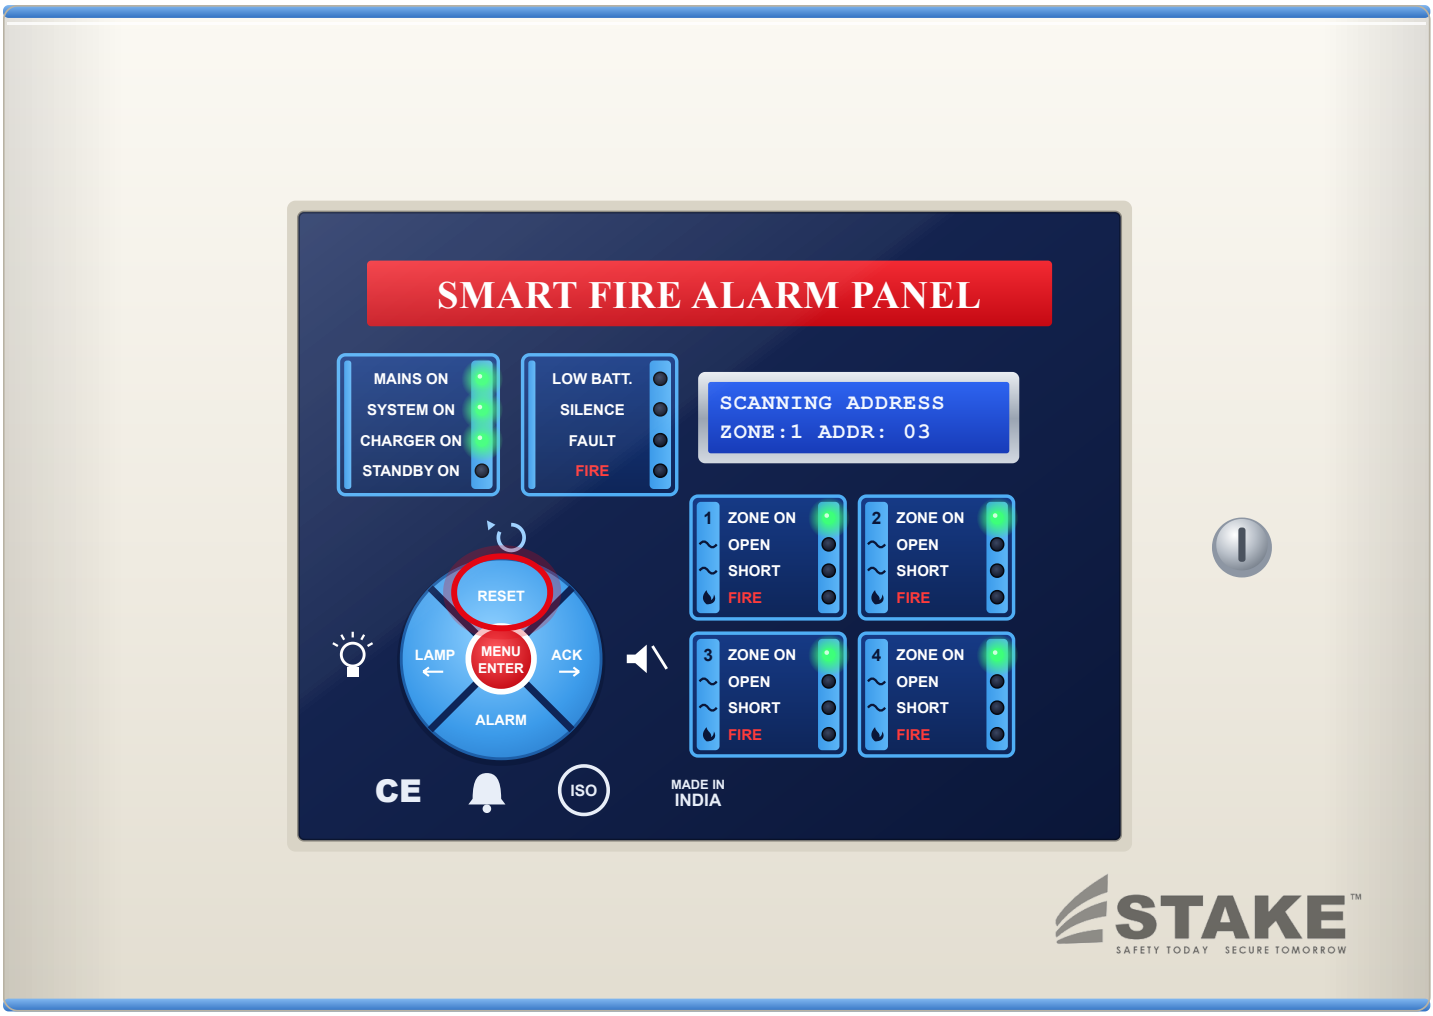

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Address 03 is the one we want. Press RESET now - the sensor keeps address 03.


- Press **RESET** to keep address 03

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Address set

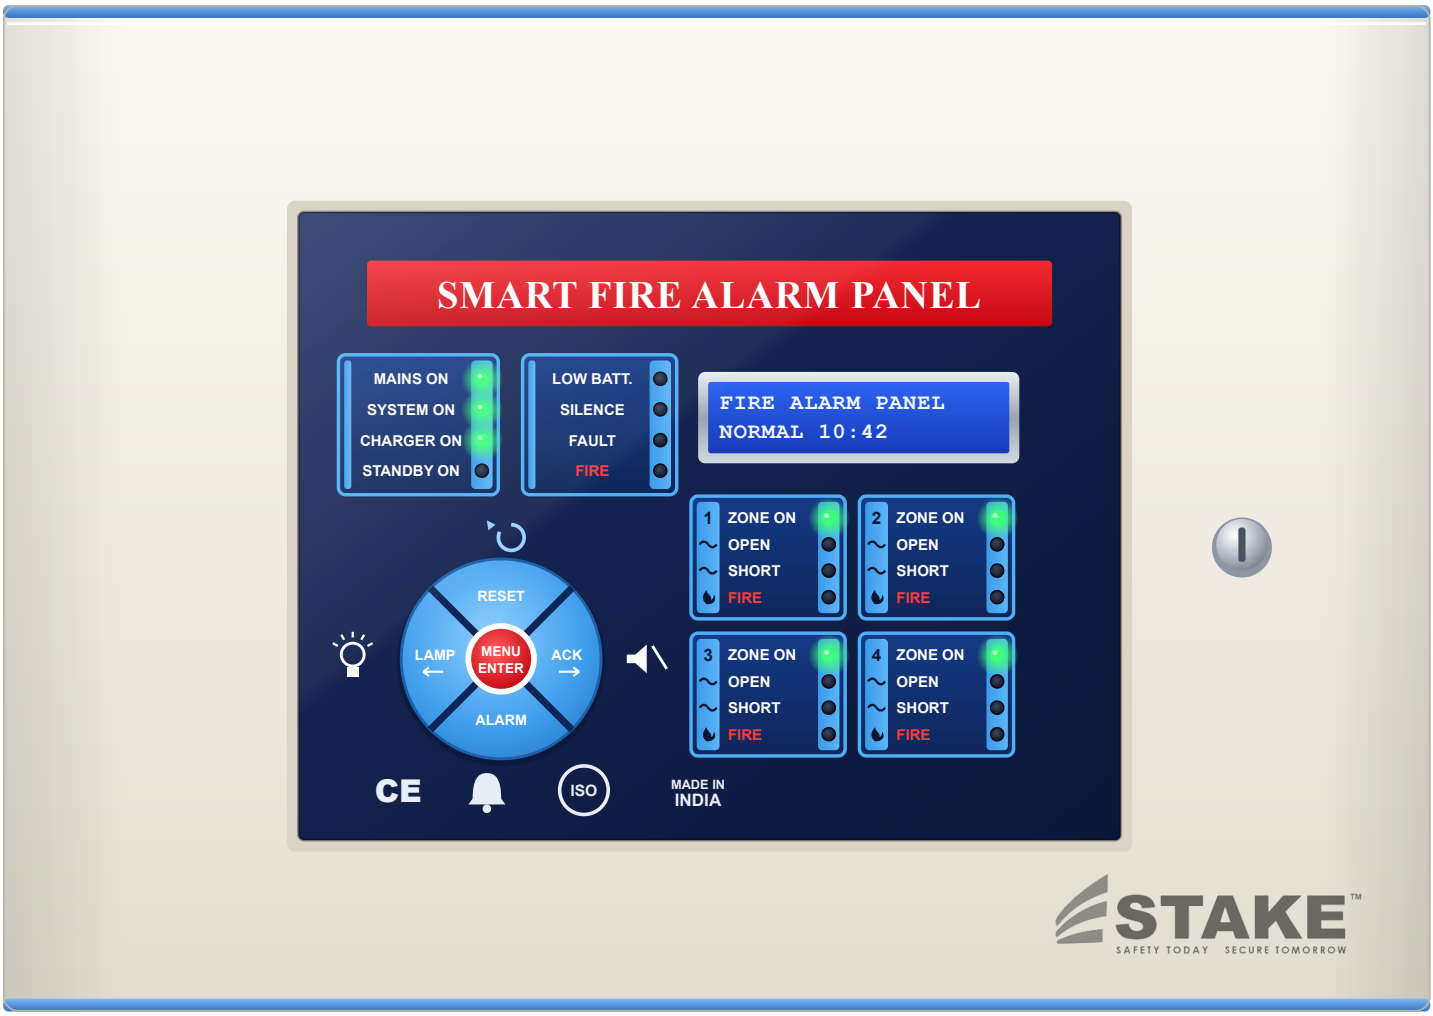

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Done: this sensor now has address 03 and keeps it, also without power. Test it with test smoke - the panel must show ZONE 1 SENS: 03. Write the address and location in the records.

- Simulate the smoke test below

SIMULATE AN EVENT


Test smoke on this sensor

SCENARIOS

Start | **Fire** | **Two fires** | **Call point** | **Manual alarm** | **Power cut** | **Set address** | **Menu**

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 1 of 17 - ZONE 1 ON/OFF

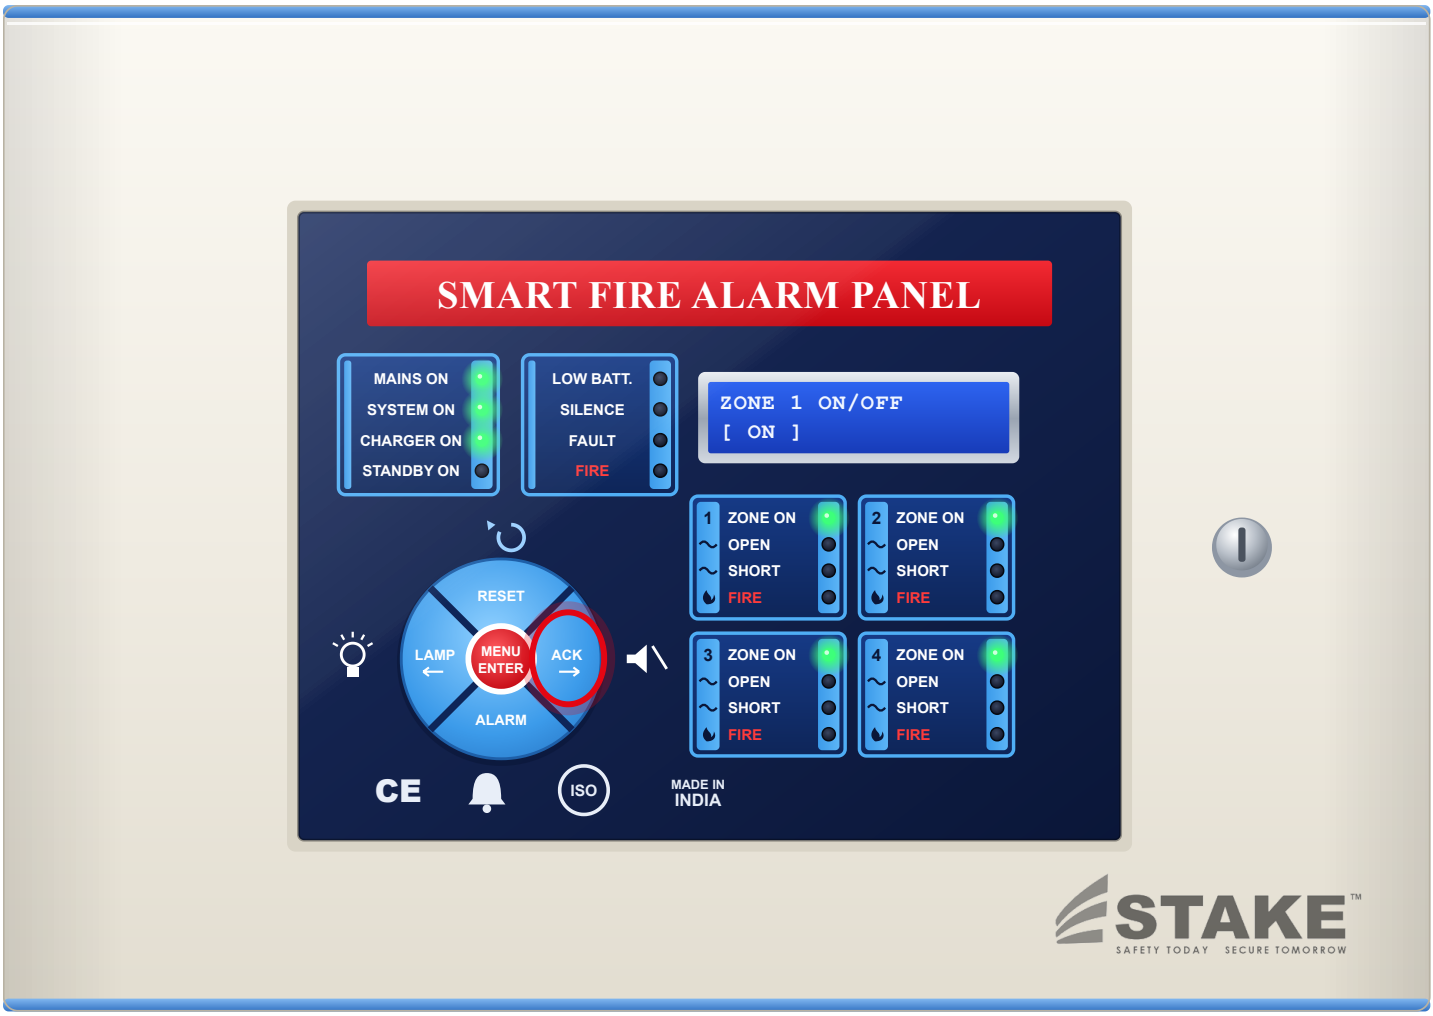

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Switches zone 1 on or off. The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | **Menu**

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 2 of 17 - ZONE 2 ON/OFF

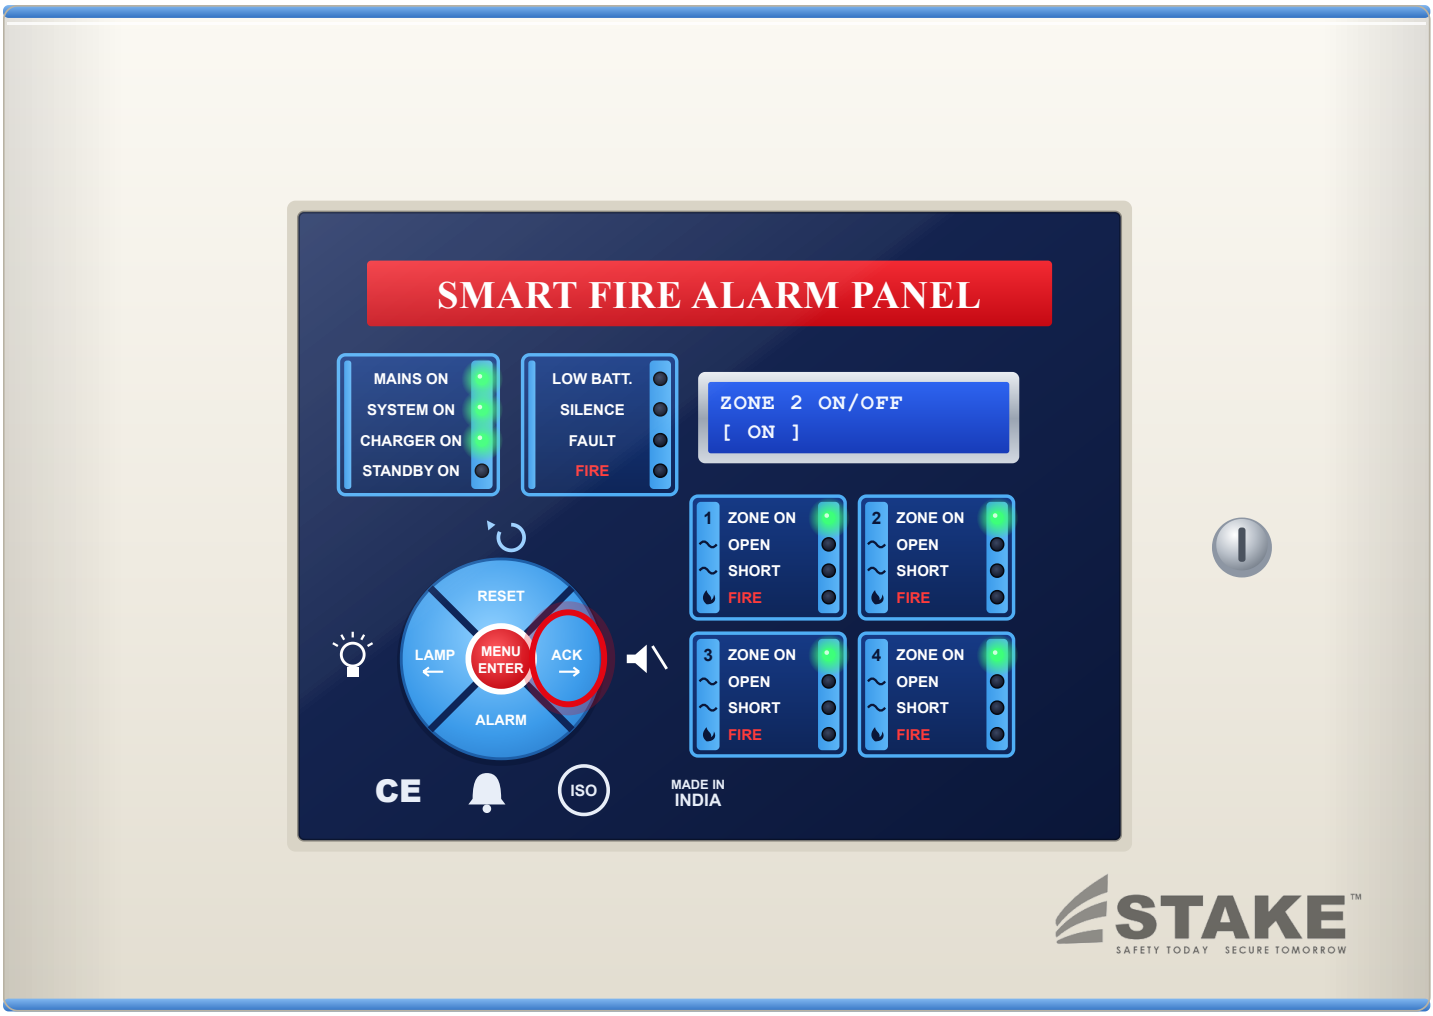

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Zone 2 on or off. The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 3 of 17 - ZONE 3 ON/OFF

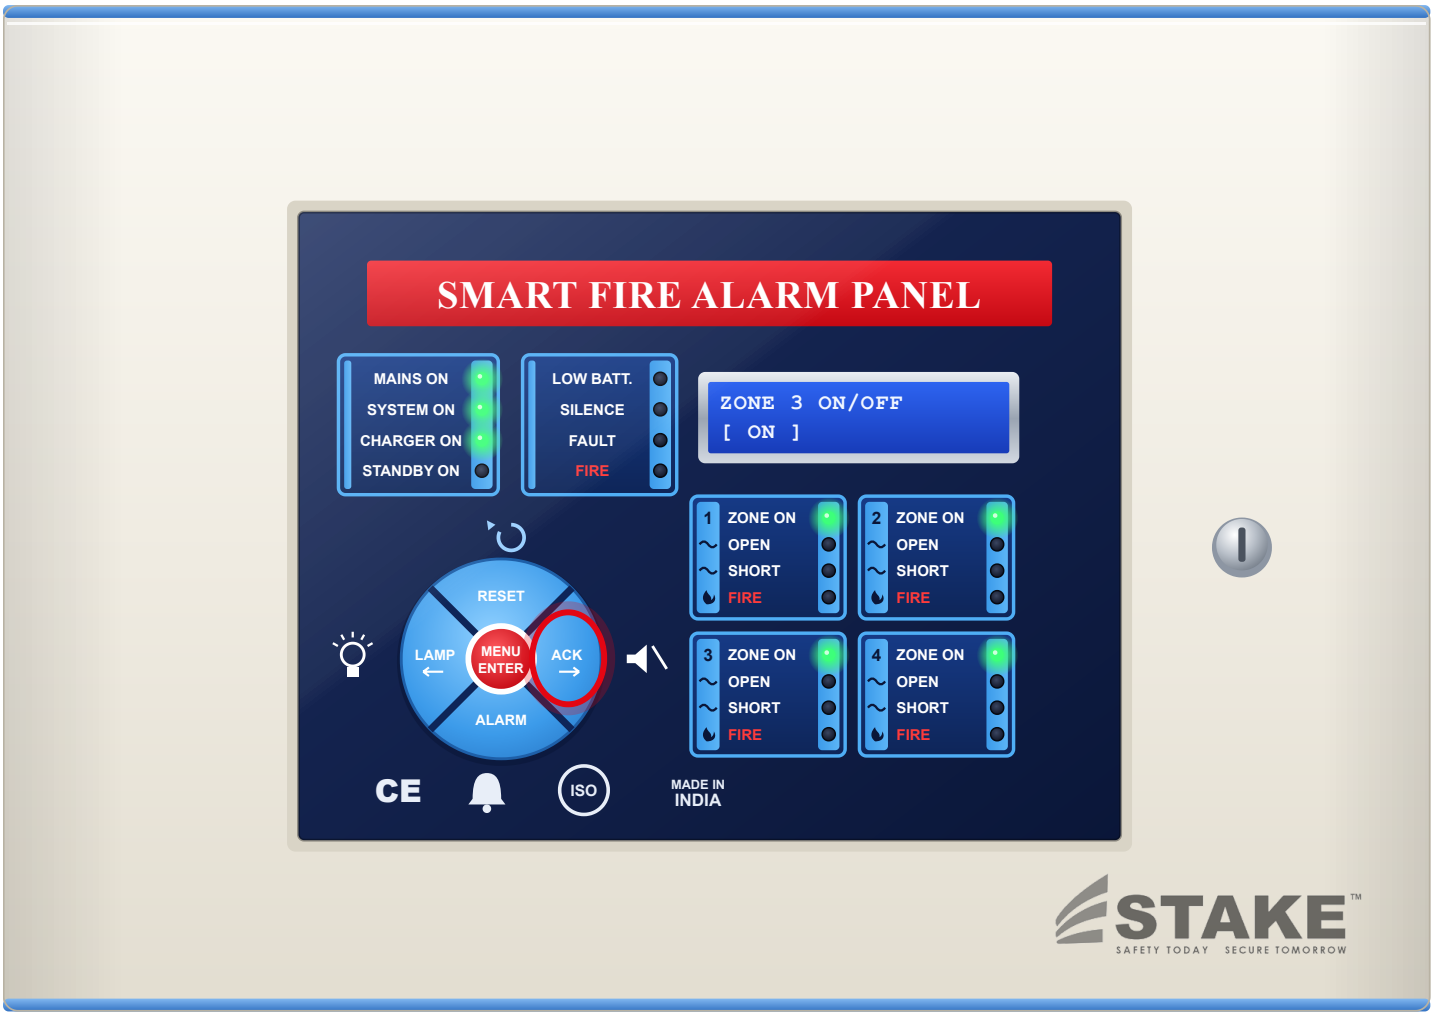

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Zone 3 on or off. The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 4 of 17 - ZONE 4 ON/OFF

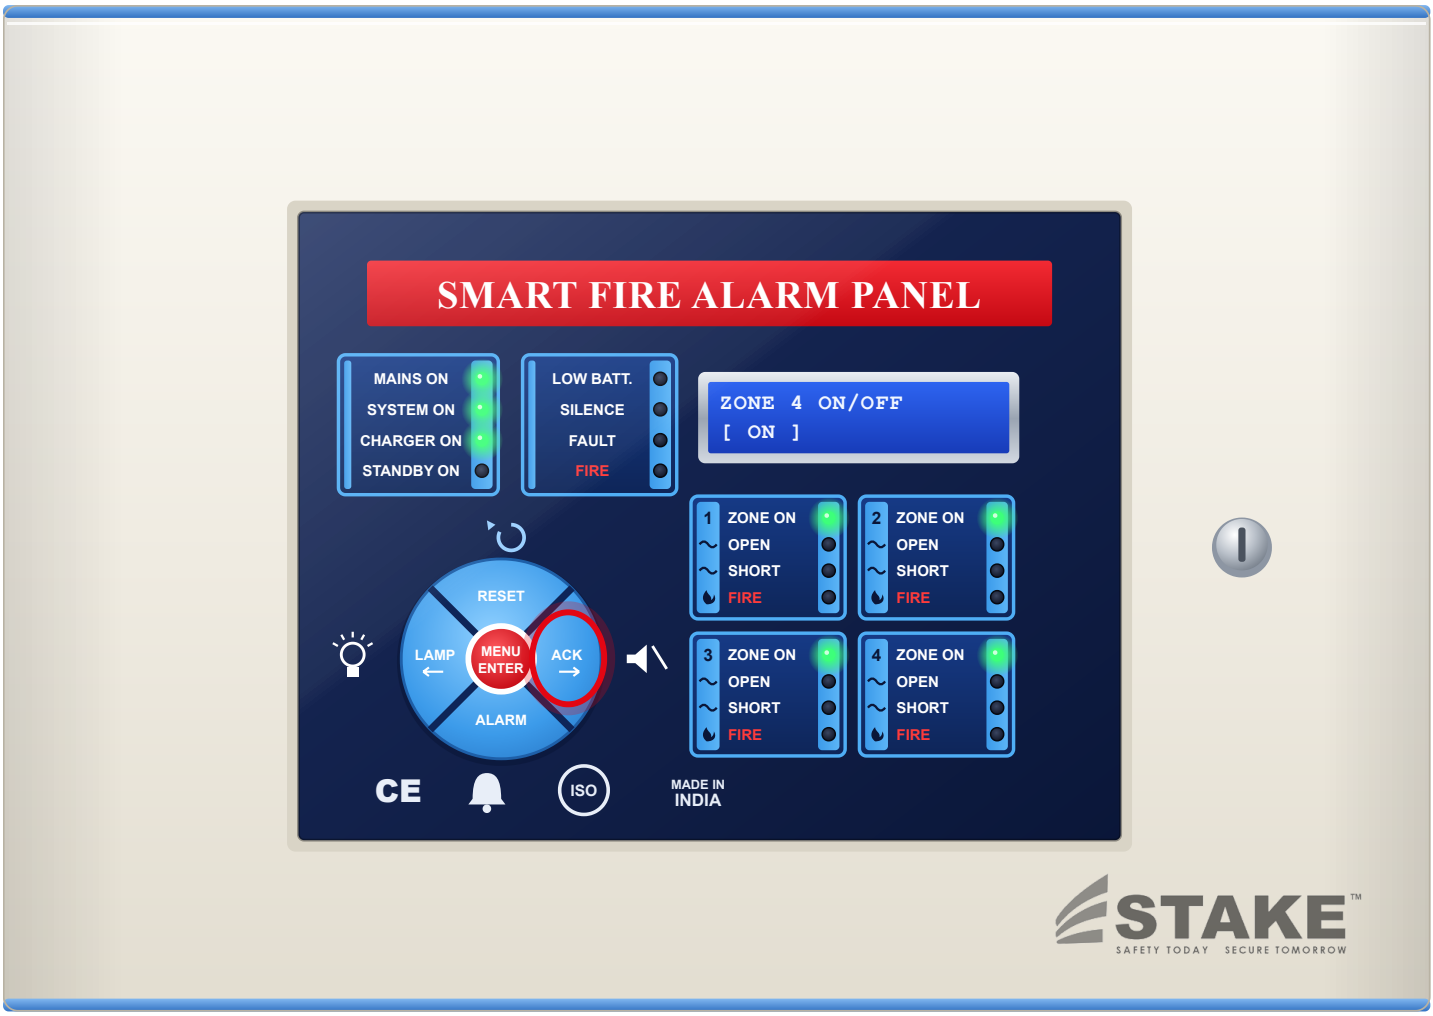

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Zone 4 on or off. The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 5 of 17 - ZONE TEXT EDIT

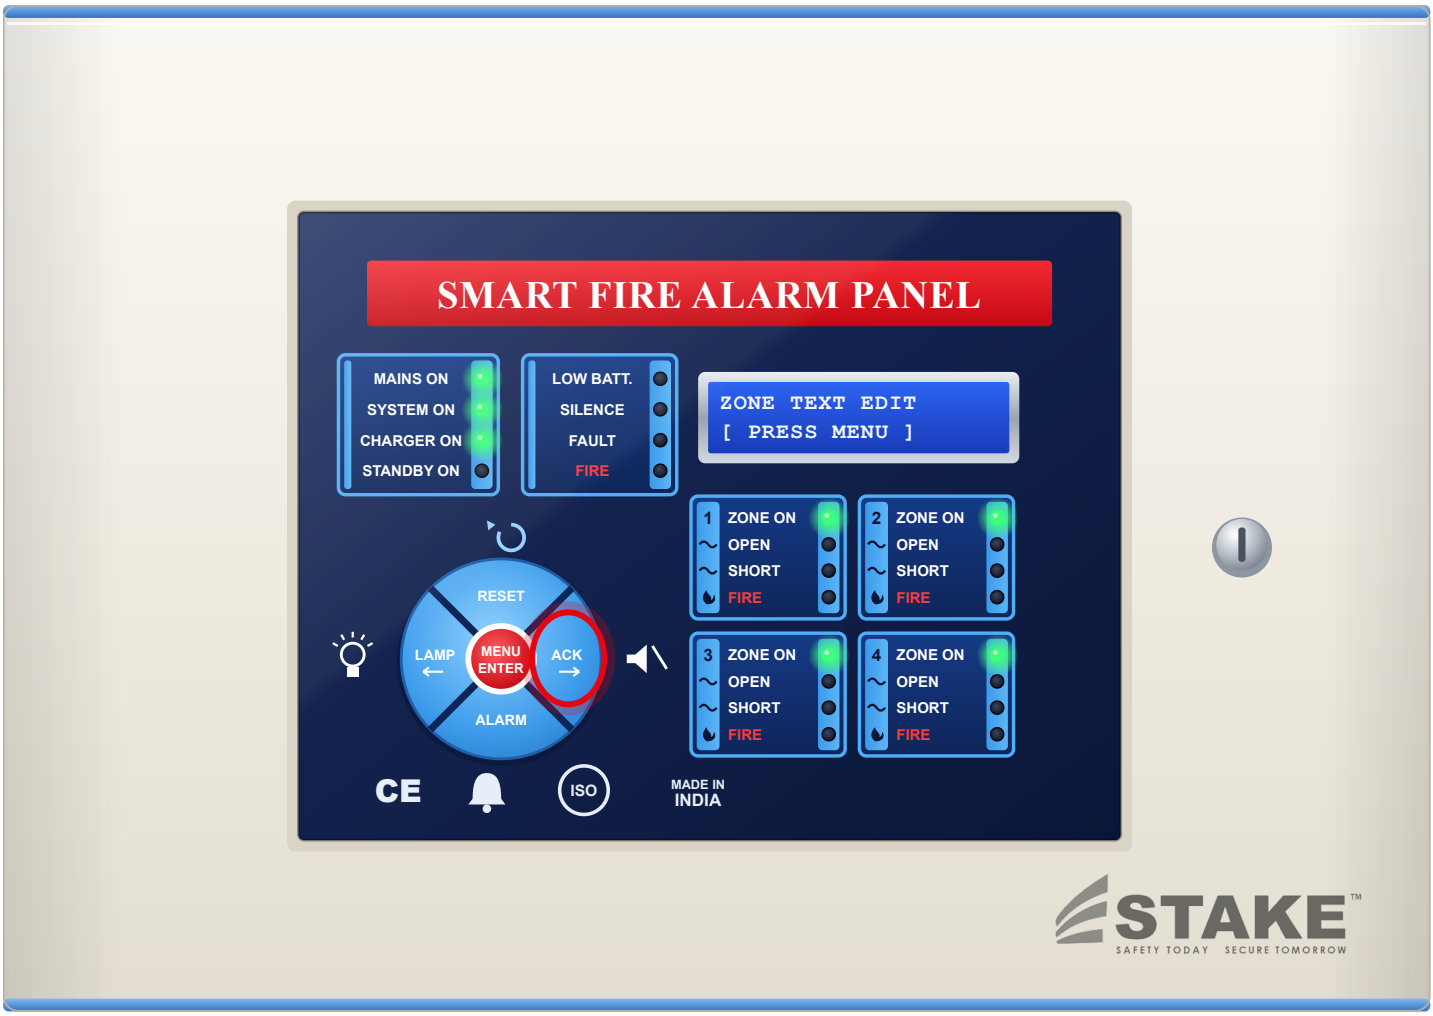

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Gives each zone a name of up to 16 characters. The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 6 of 17 - SMART ADDR SCAN

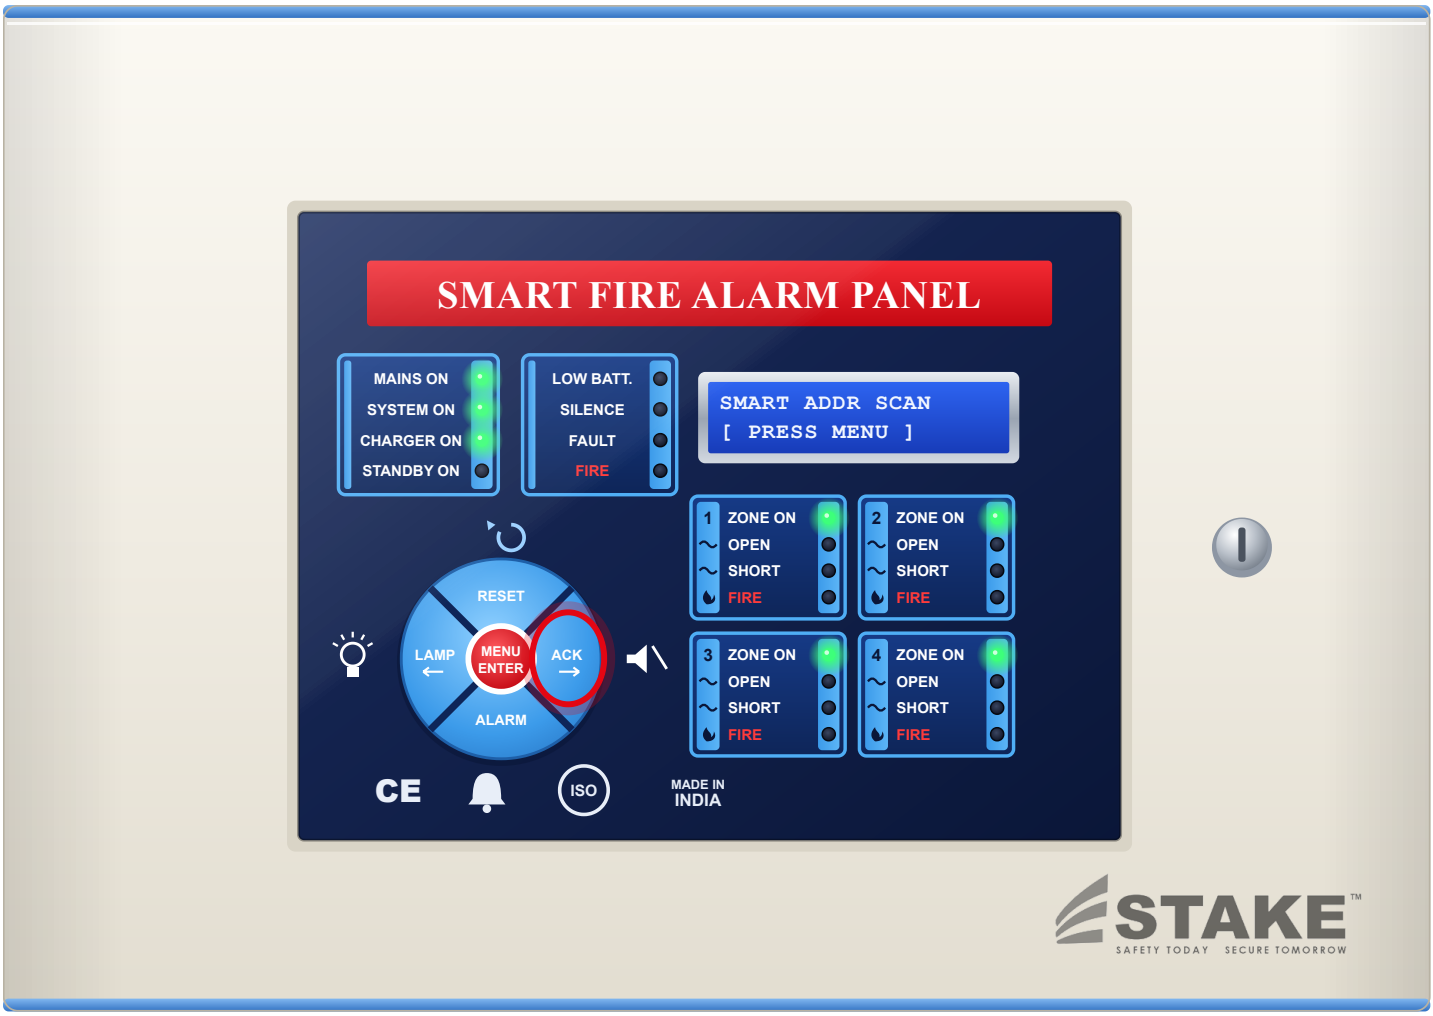

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Sets a sensor's address. The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 7 of 17 - WALK TEST

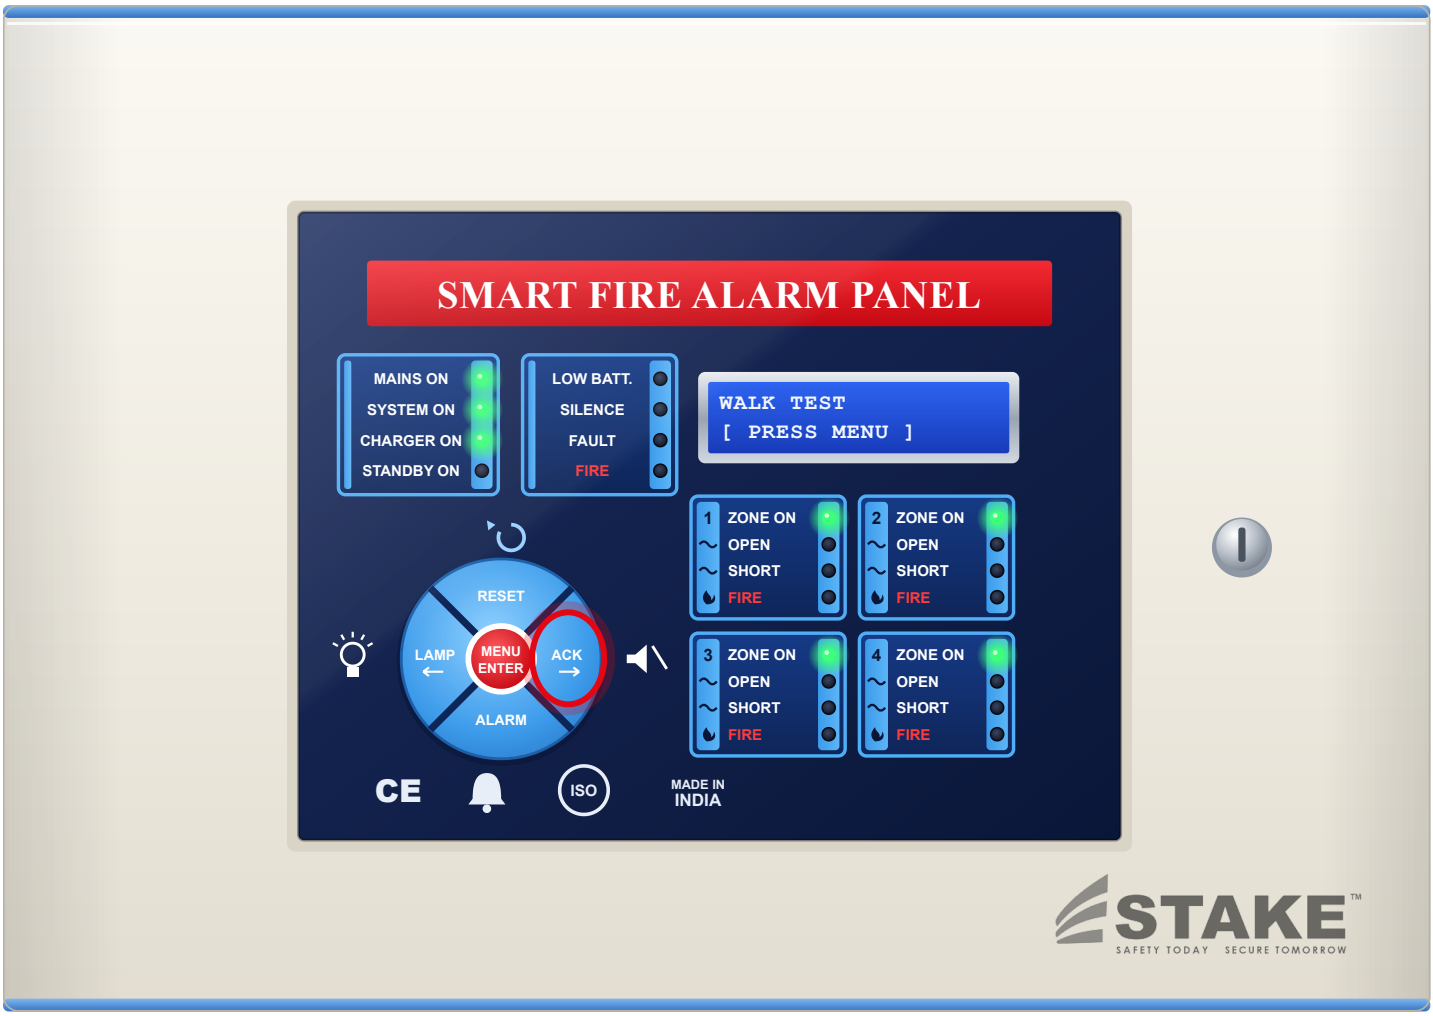

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

For service engineers only. The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 8 of 17 - LCD CONTRAST

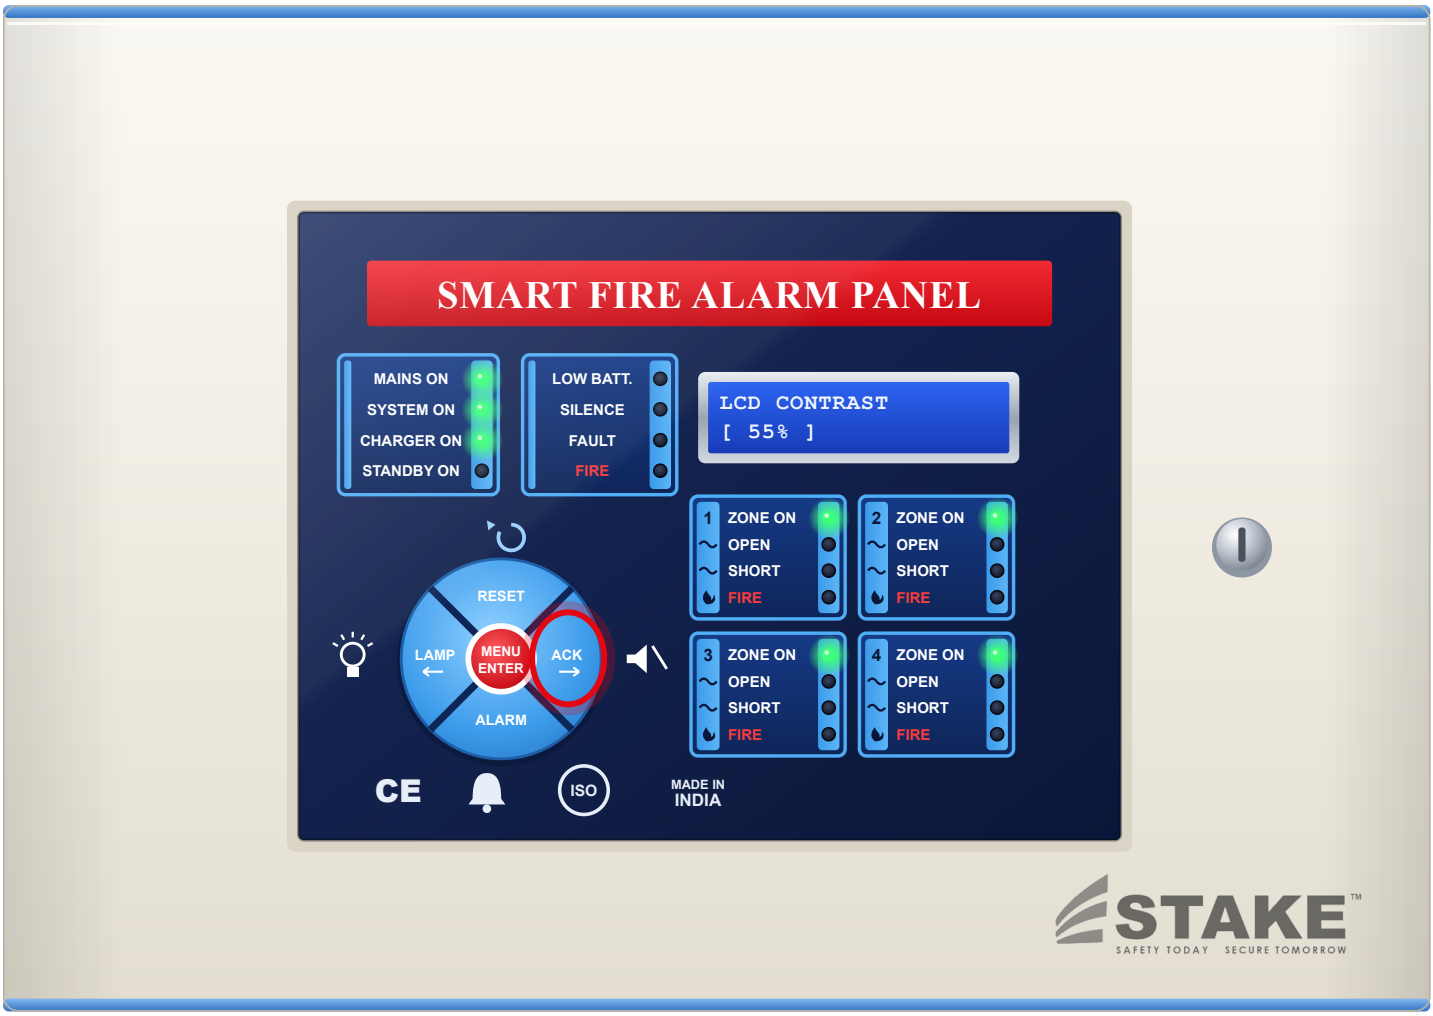

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Makes the display text clearer. The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 9 of 17 - LED BRIGHTNESS

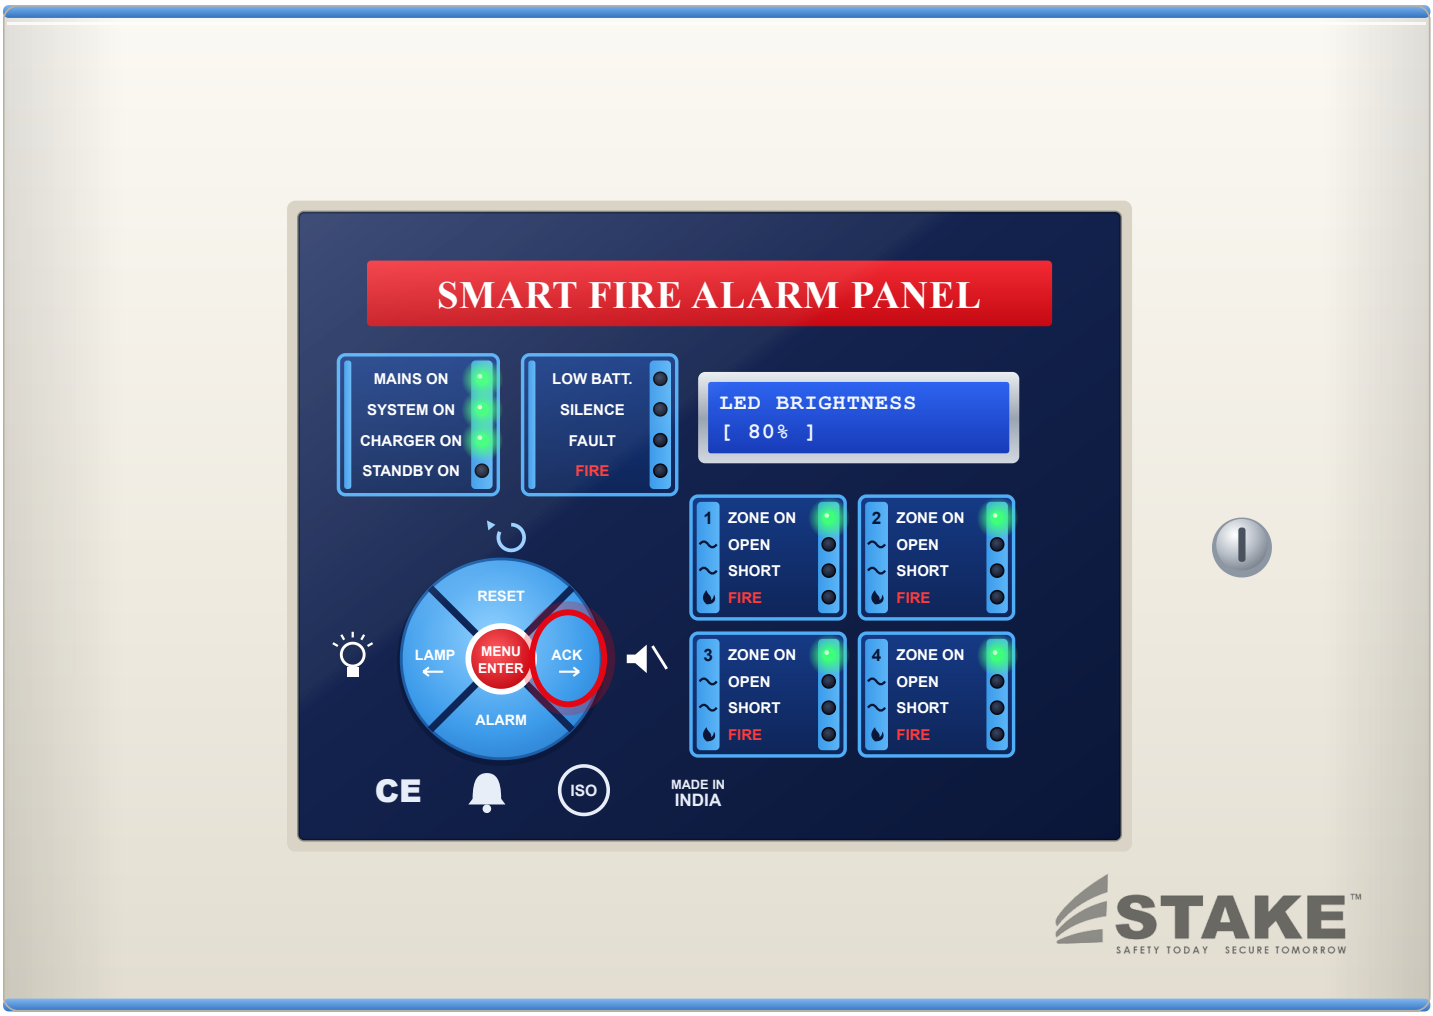

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Brightness of the lights. The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 10 of 17 - EOL DETECTION

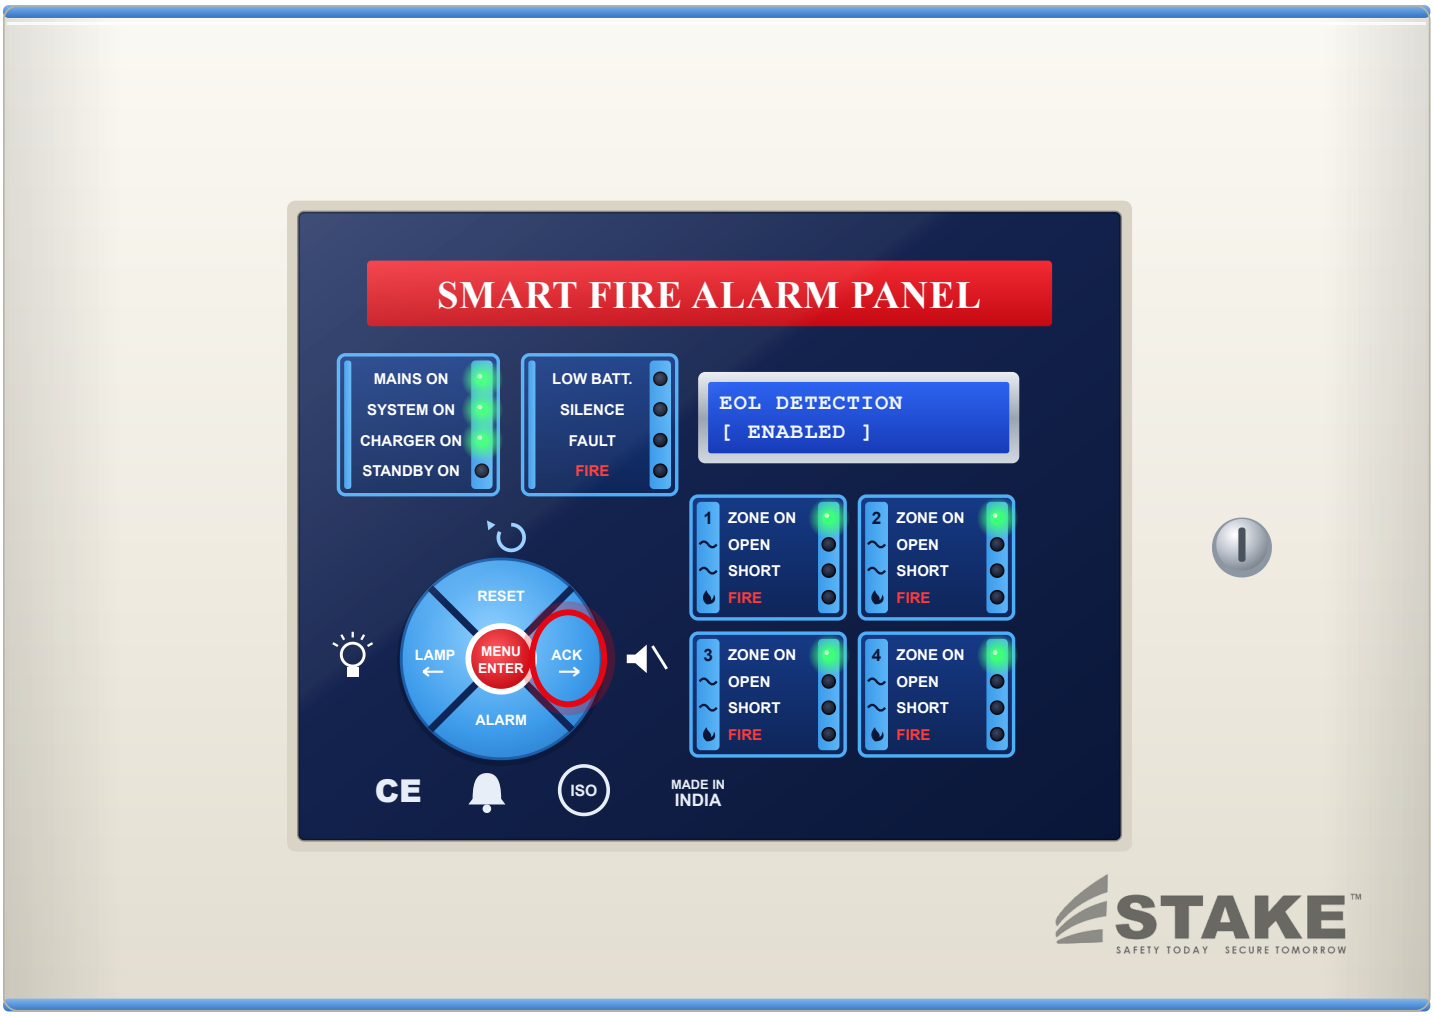

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Checks the zone wiring for breaks. The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 11 of 17 - SHORT AS FIRE

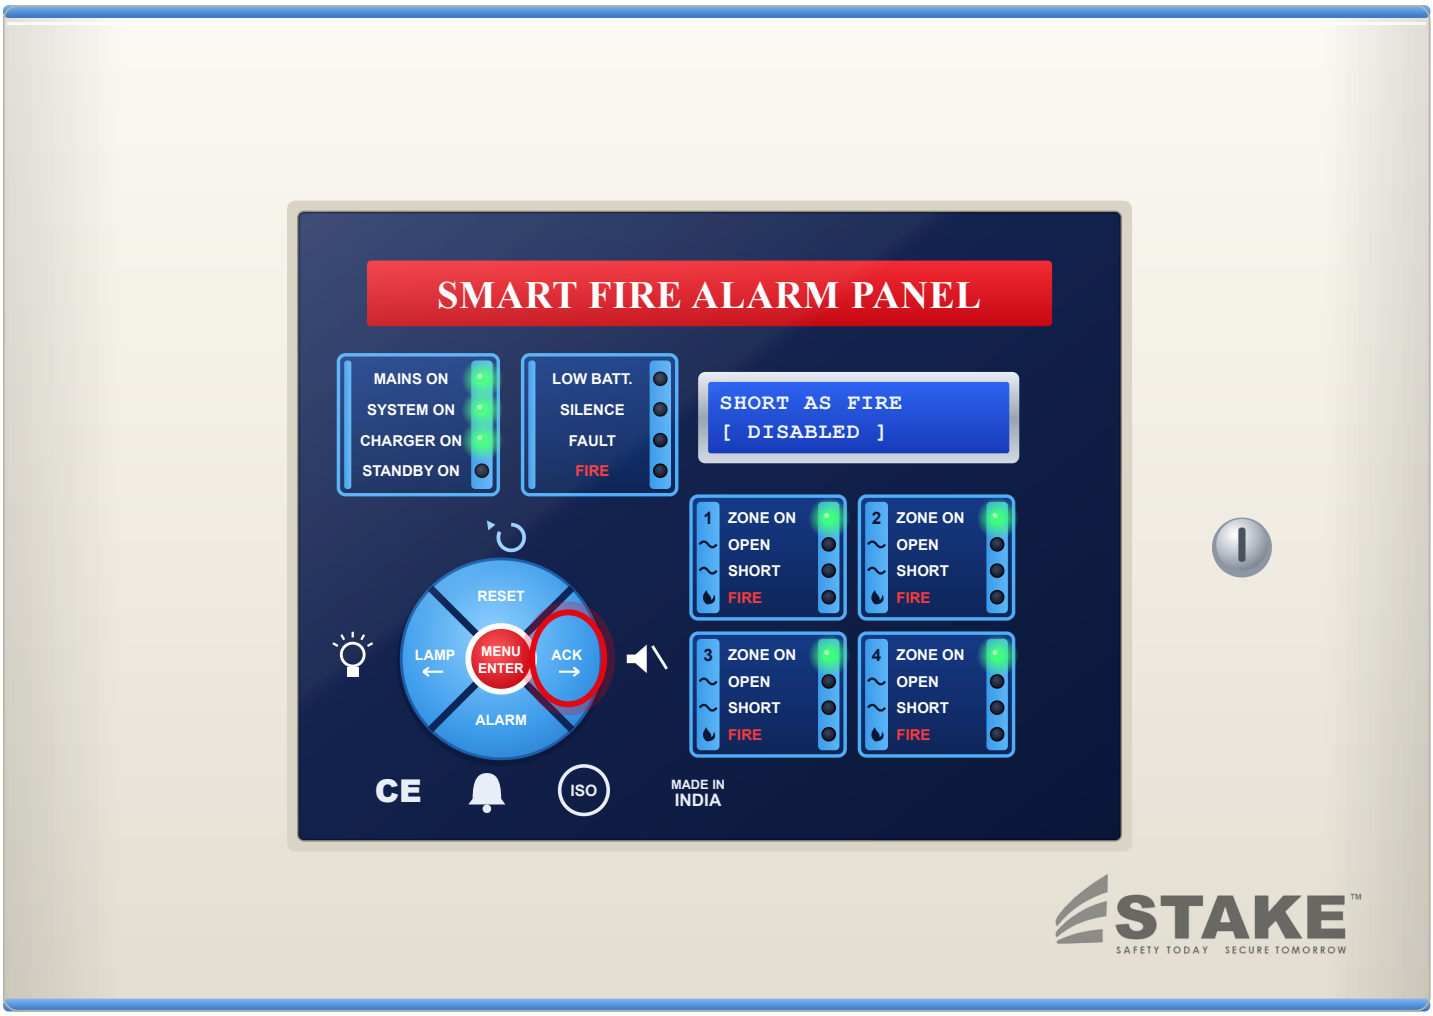

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Touching zone wires as fire instead of fault. The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 12 of 17 - BUZZER MODE

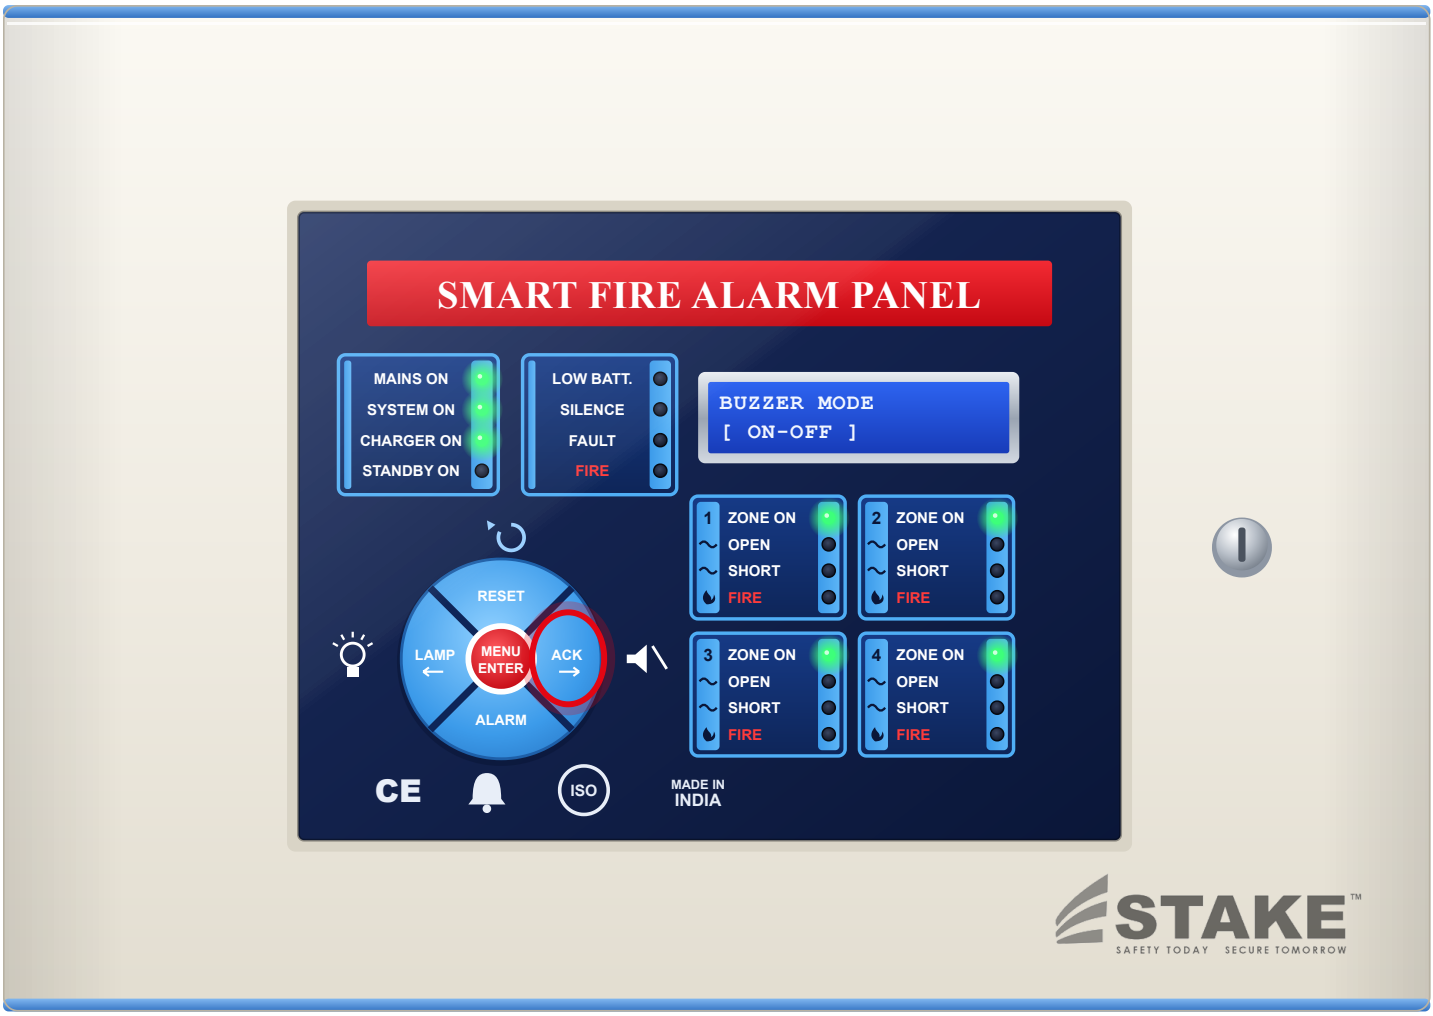

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Sound of the panel buzzer: ON-OFF, SWEEP TONE or OFF. The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 13 of 17 - BATT MONITORING

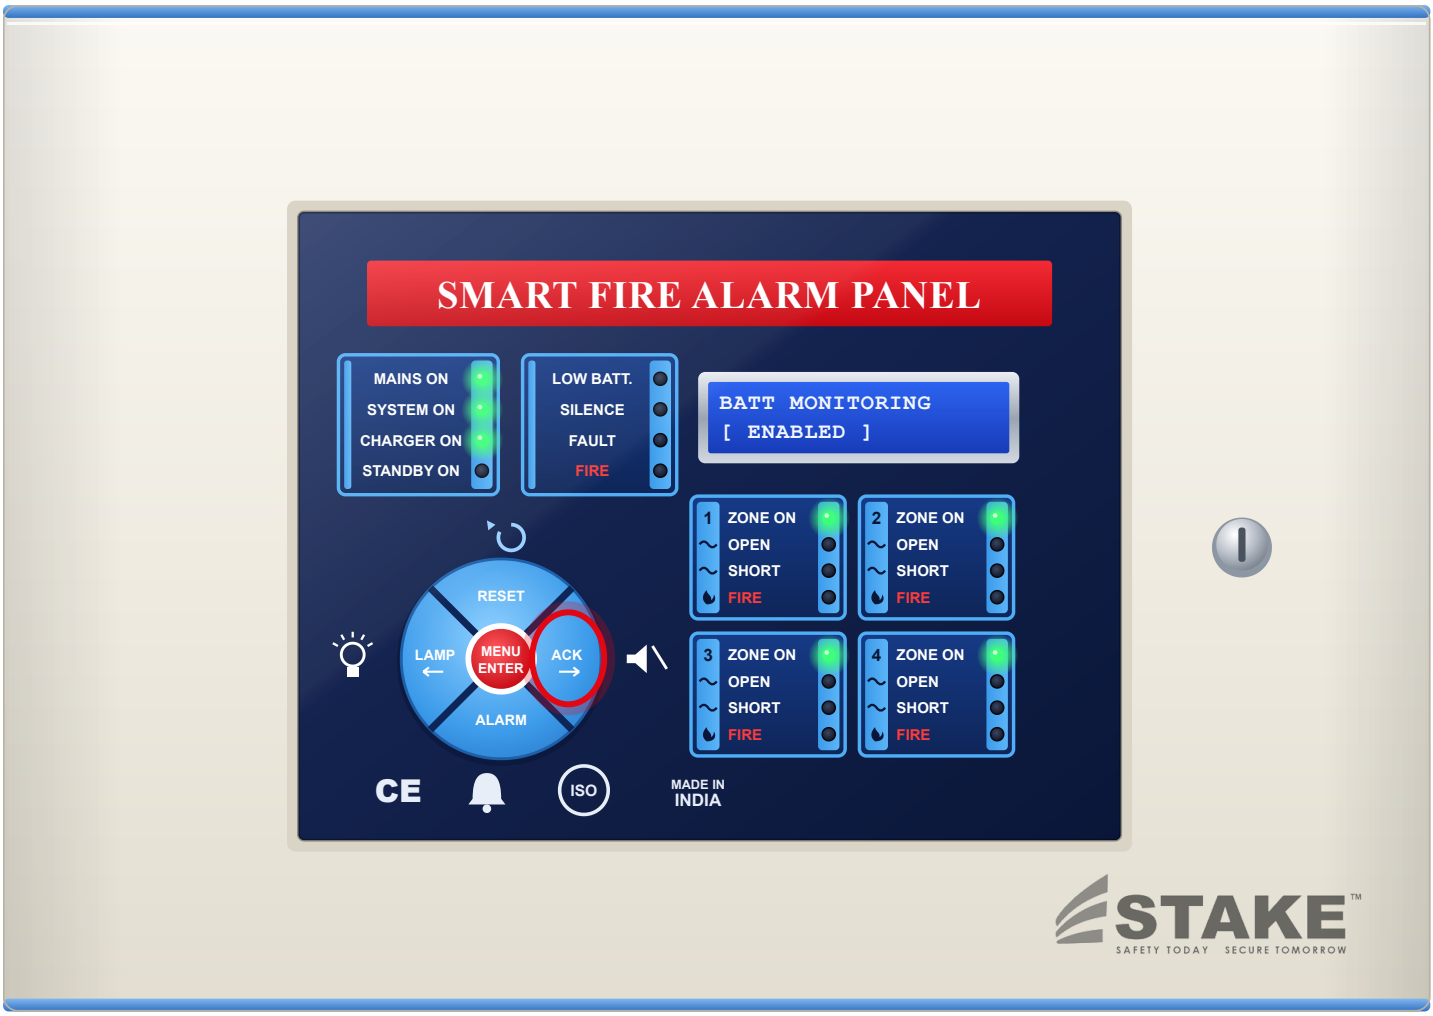

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Warns when the backup battery is low. The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 14 of 17 - SET DATE & TIME

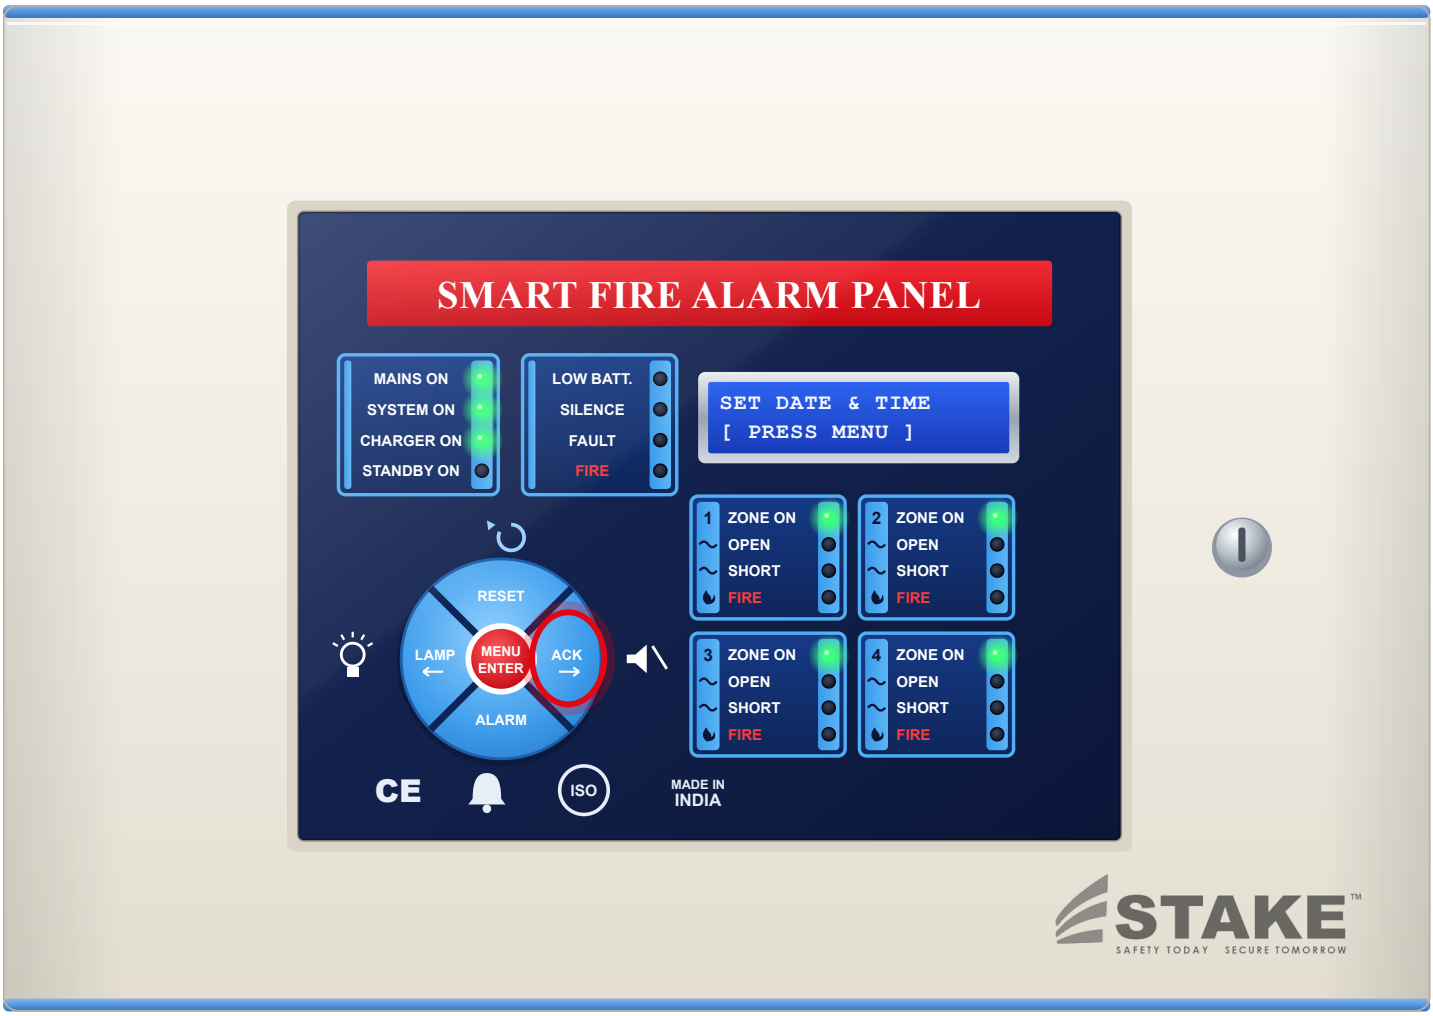

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Sets the clock. The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 15 of 17 - VIEW EVENT LOG

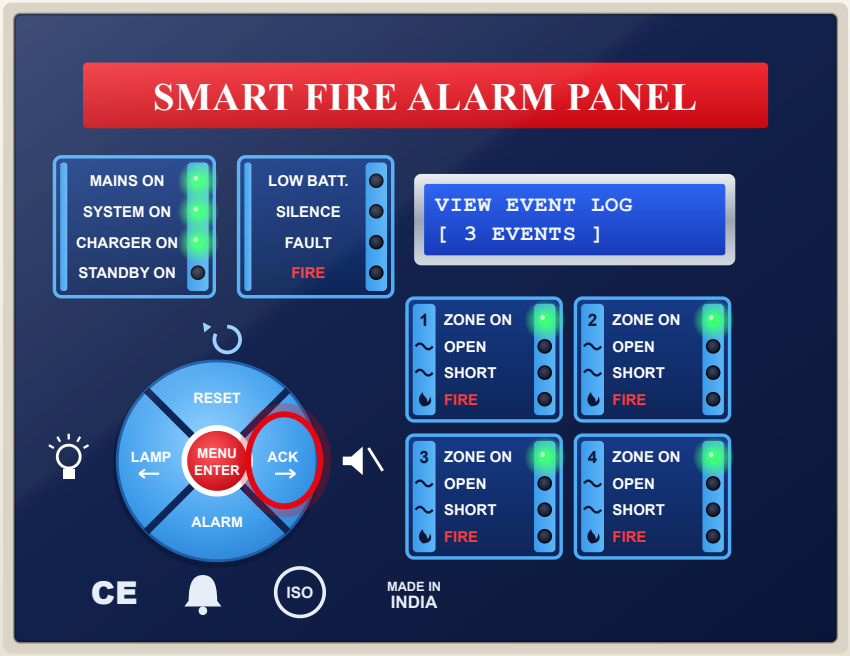



HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Shows the last 100 events. Press MENU to open it. The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 16 of 17 - CLEAR EVENT LOG

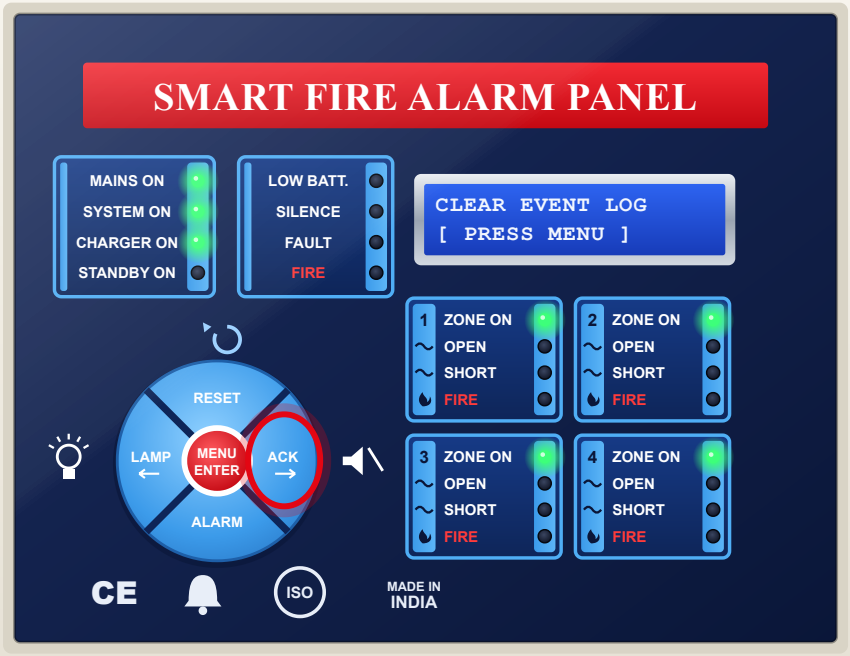

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Deletes all events (MENU twice). The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Menu 17 of 17 - FACTORY RESET

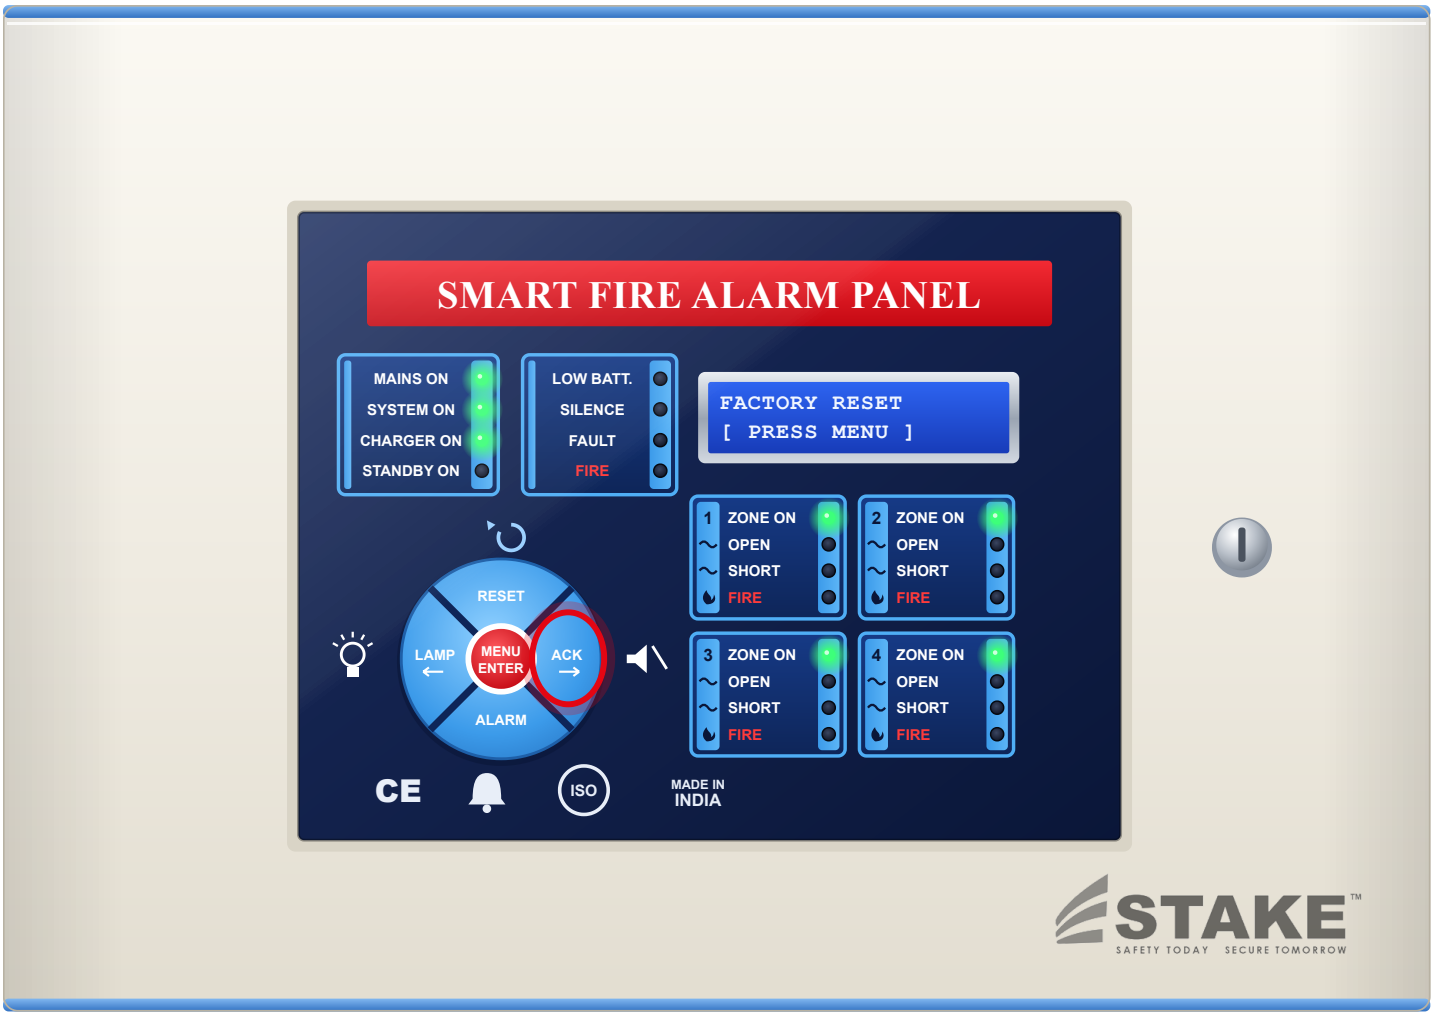

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

Back to factory settings (MENU twice). The menu closes by itself after 30 seconds without a key press.


- **ACK (→ next)**, **LAMP (← previous)** item
- **MENU** selects, **RESET** leaves the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Event log - event 1 of 3

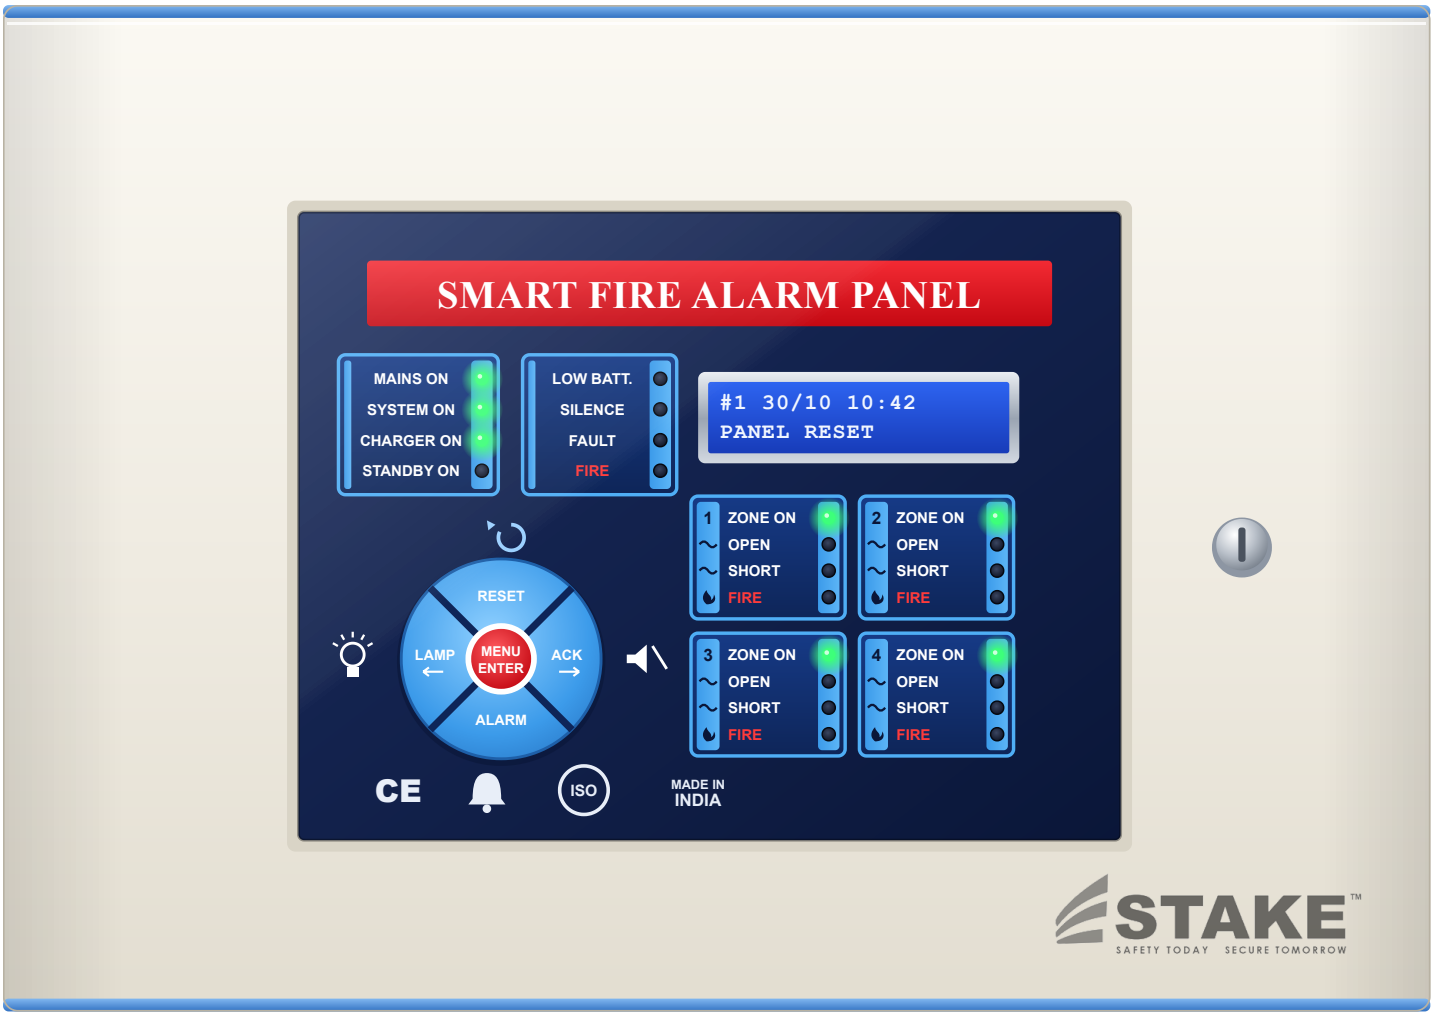

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

The newest event is shown first, with its number, date and time.


- **ACK** older event, **LAMP** newer event
- **MENU** or **RESET** returns to the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Event log - event 2 of 3

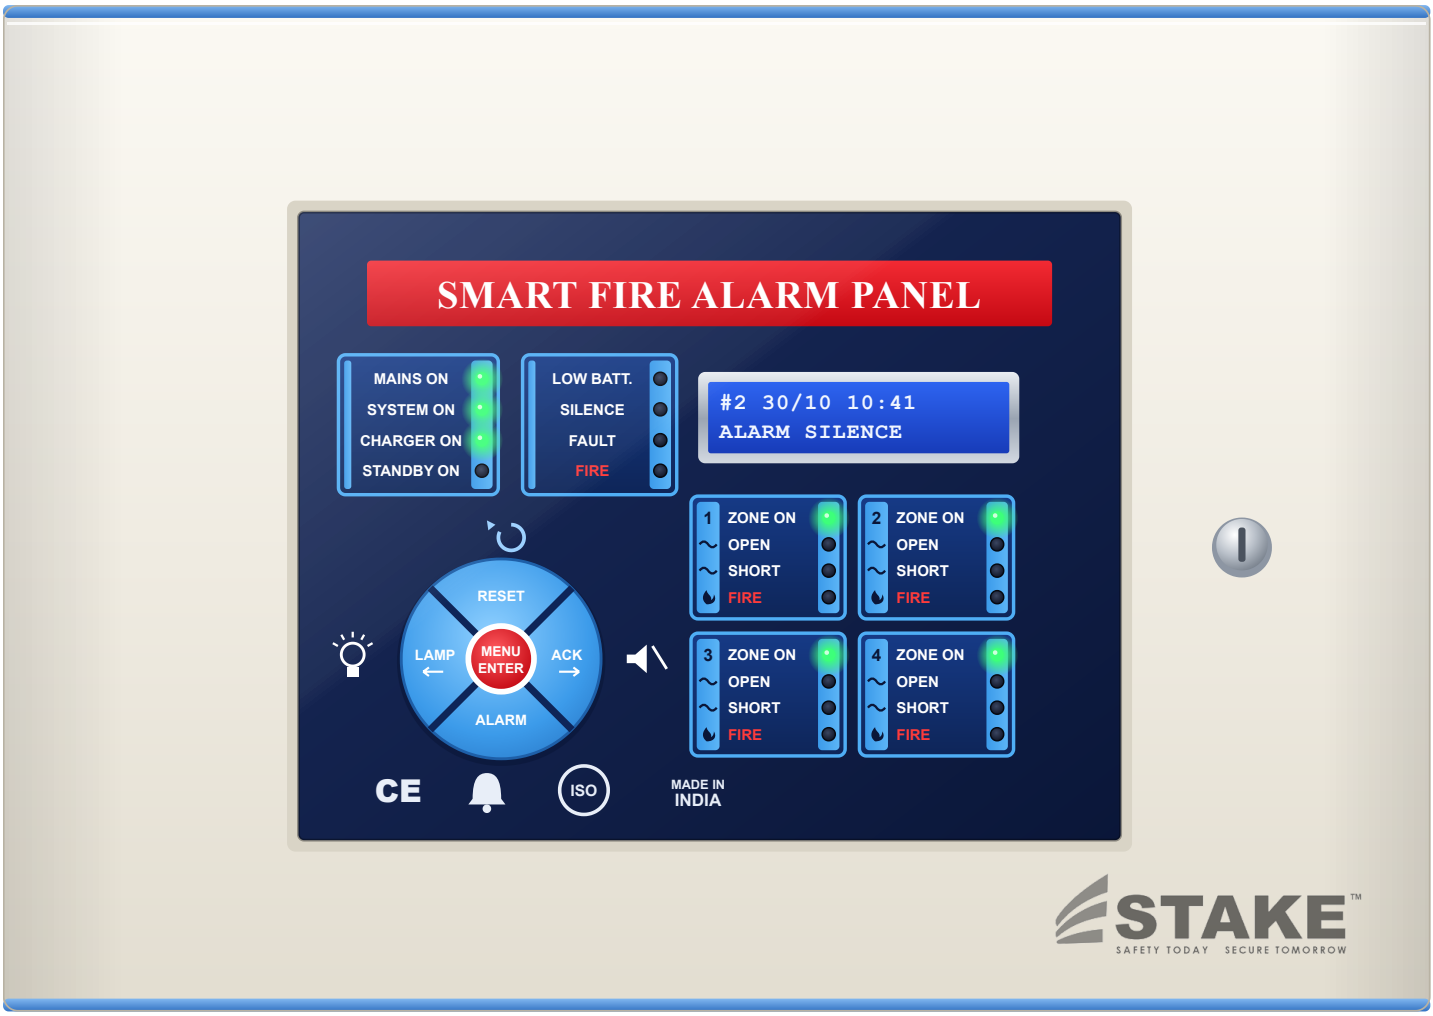

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

The newest event is shown first, with its number, date and time.


- **ACK** older event, **LAMP** newer event
- **MENU** or **RESET** returns to the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

Event log - event 3 of 3

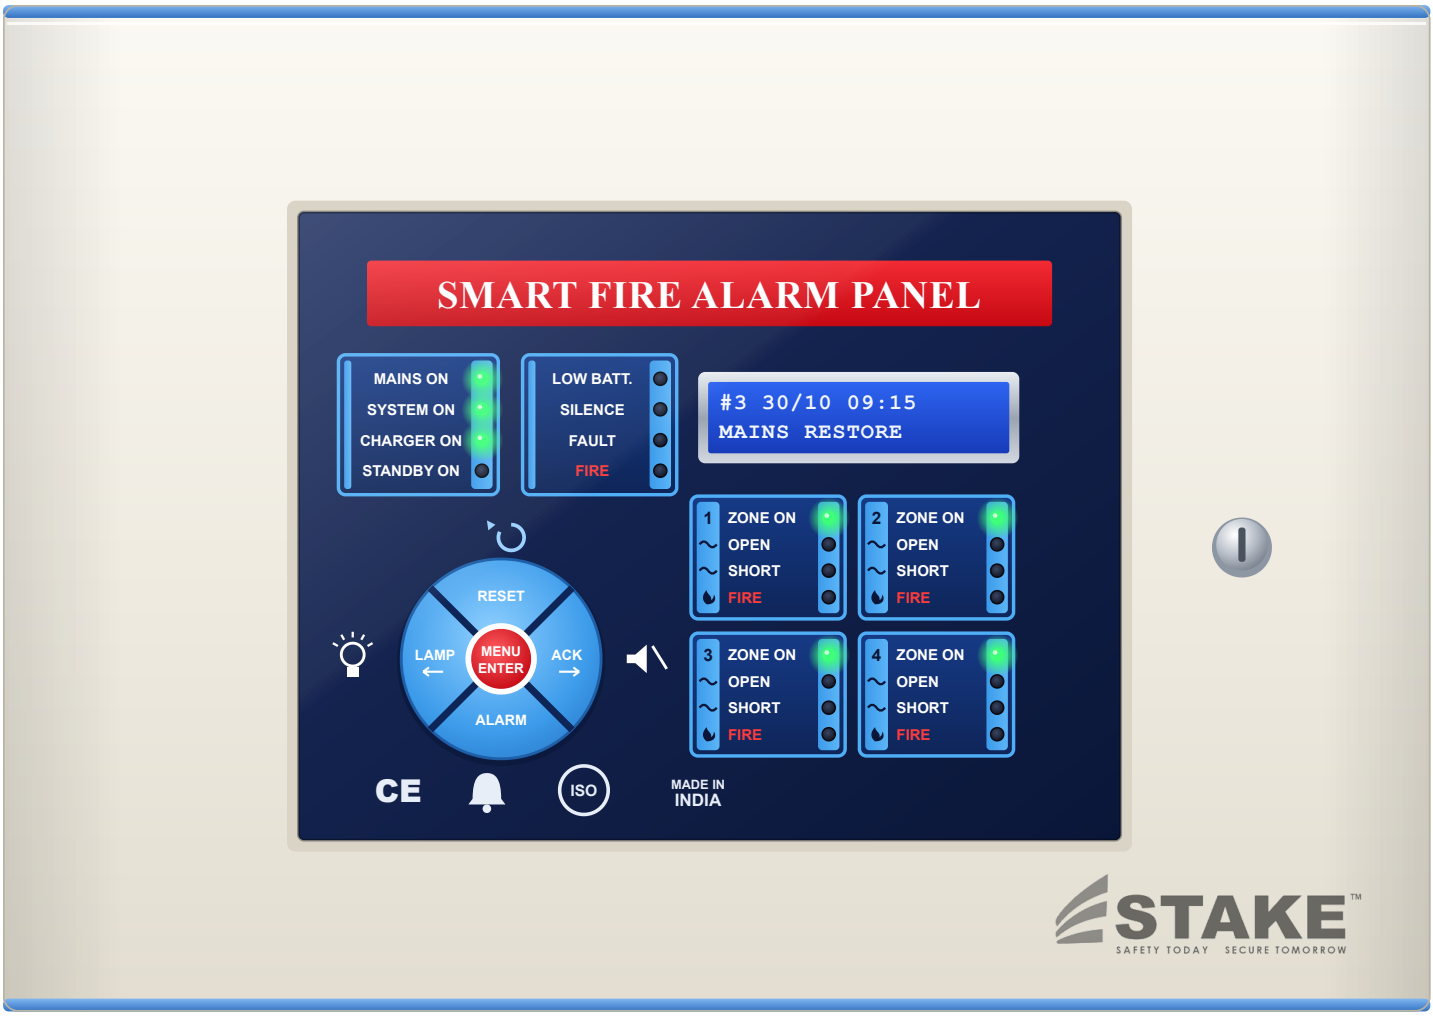

HOOTERS: SILENT | PANEL BUZZER: SILENT | FIRE OUTPUT: OFF | FAULT OUTPUT: OFF

What is happening

The newest event is shown first, with its number, date and time.

- **ACK** older event, **LAMP** newer event
- **MENU** or **RESET** returns to the menu

SCENARIOS

Start | Fire | Two fires | Call point | Manual alarm | Power cut | Set address | Menu

How to use: click the buttons on the panel picture (the red ring shows a good next step) or the buttons below. Lights, display and outputs show what the real panel does.

STAKE™

SAFETY TODAY SECURE TOMORROW

SmartZone-4 - 4 Zone Smart Conventional Fire Alarm Panel

ST-SZ4-UM | Revision 1.0 | October 2026