

# FS-1370DN ECOSYS P2135dn

# PARTS LIST

Published in January 2014 2L0PL072 Rev.2

# —— CONTENTS ——

FIG. 1	Covers	2
FIG. 2	Frames	4
FIG. 3	Paper Cassette	6
FIG. 4	Paper Feed Section 1	8
FIG. 5	Paper Feed Section 2	10
FIG. 6	Image Formation Section	12
FIG. 7	Developing Section	14
FIG. 8	Fuser Section	16
FIG. 9	Drive Section	18
FIG. 10	Duplex Section	20
FIG. 11	Electrical Components	22
FIG. 12	Maintenance Kits	24
	• INDEX	25

# <Notation of products>

For the purpose of this parts list, products are identified as following.

FS-1370DN: (A)

ECOSYS P2135dn: (B)

FIG. 1 Covers 2L0/2PJ-2

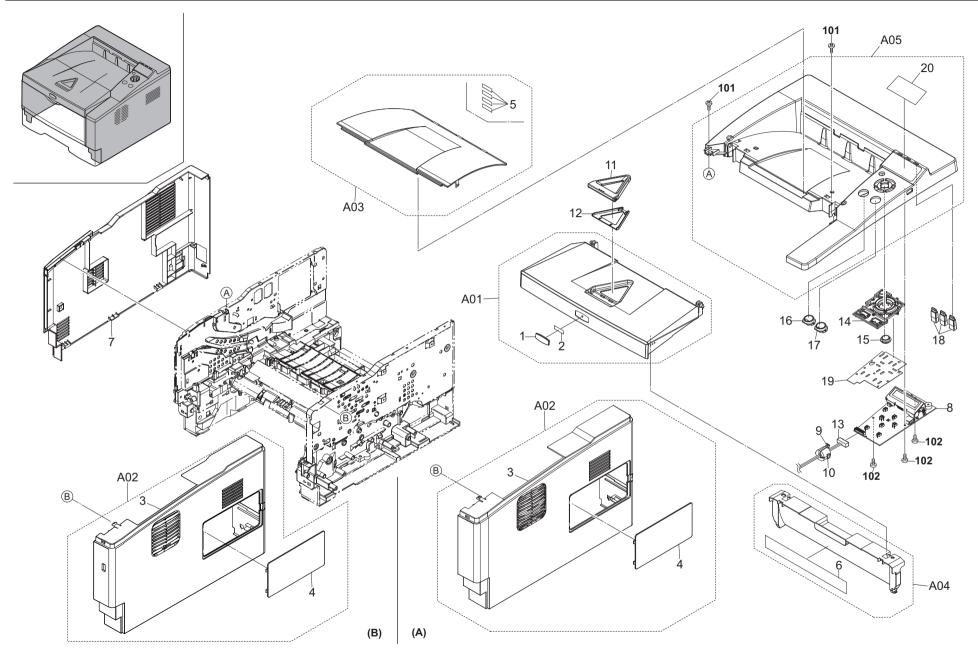


FIG. 1 Covers 2L0/2PJ-2

•	. •																_	
		Ref. No.	Part.No.	Alternative.	Description	Notes		uant 230	,	Ref No.		Part.No.	Alternative.	Description	Notes	Qu 120	anti 230 2	•
4 4 4 4 4 4	A A A A A A A A A A A A A A A A A A A	A01 1 2 A02 A02 3 3 4	302HS94020 *302F904120 *302F904130 302L000010 302PJ00020 *302L004010 *302L704030 302H494010 *302HS94121 *302HS94121 *302HS94121 *302HS94121 *302HS94050 302PJ94070 7YZM420002++H01 7YBEJ0J0D001H01 302HS04160 302H404070 302H405010 302H405080 302L994010 *302H404061	2HS94020 2F904120 2F904130 2L000010 2PJ00020 2L004010 2PJ04010 2LZ04030 2H494010 2HS94121 2HS34080 2LZ04011 2LO94050 2PJ94070 YZ045260 YB045400 2HS04070 2HS04160 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405010 2H405080 2L994030 2PJ94010 2H404061	LID TOP ASSY EMBLEM KYOCERA TAPE EMBLEM COVER RIGHT ASSY COVER RIGHT ASSY COVER RIGHT COVER DIMM COVER TOP B(N) KIT SP SHEET TOP COVER COVER FRONT ASSY (2HS) SP LABEL JAM TK OPERATION COVER LEFT PARTS PWB LCD SP PARTS PWB ASSY PANEL SP ACCESS.BAND FERRITE CORE COVER RACK COVER RACK COVER RACK B CONN.CORD ASSY LCD-RELAY S03394 CONN.CORD ASSY S03863 BUTTON A BUTTON B BUTTON C BUTTON D BUTTON D BUTTON D SHEET BUTTON PARTS COVER TOP ASSY SP SHEET LCD	(A) (B) (A) (B) (A) (B) (A) (B)	12C	1	240 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1011102	1	7BB200410H 7BB200308H	BB105700 BB105660	+BIND T.T P SCREW 4X10 +BIND T.T P SCREW 3X8		1200	230 2	40

<sup>•</sup> Parts with "⊙" indicate regular maintenance parts.

Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

<sup>•</sup> Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 2 Frames 2L0/2PJ-1

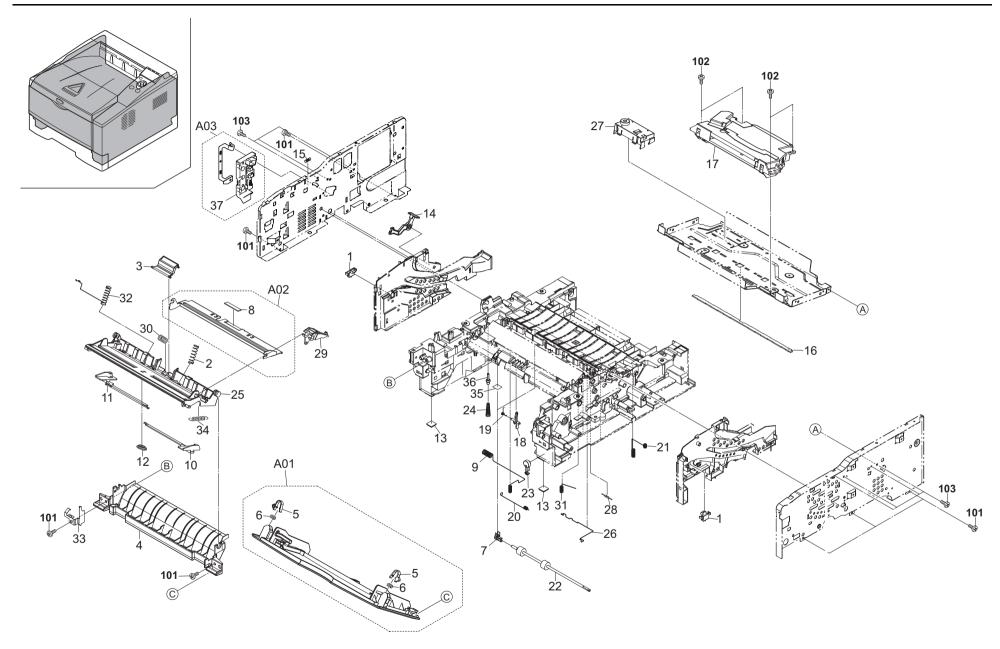


FIG. 2 Frames 2L0/2PJ-1

•																		
		Ref. No.	Part.No.	Alternative.	Description	Notes		uant 230	,	Ref No.		Part.No.	Alternative.	Description	Notes	Qua 120 2	antit	•
		1 2	302F902420 302F908270	2F902420 2F908270	LOCK COVER TOP R SP BOTTOM MPF L		2	2	2	101 102	2 7	7BB200410H 7BB600308H	BB105700 BB055190	+BIND T.T P SCREW 4X10 +BIND SCREW M3X8 CRFREE SR				
	•	3	302HS94040 302LZ08020	2HS94040 2LZ08020	SEPARATOR MPF ASSY GUIDE TURN MPF		1	1	1	103	3 7	7BB100306H1	BB105820	+BIND T.T S SCREW 3X6				
	•	A01	302LZ94090	2LZ94090	PARTS TRAY MPF ASSY SP		1	1	1									
		5 6	*302F908200 *302HS08320	2F908200 2HS08320	LOCK COVER SPRING COVER MPF		2	2	2									
	• I	7 A02	302HS24130 302HS94050	2HS24130 2HS94050	BUSH 4 DU ROLL PLATE BOTTOM MPF ASSY		2	2	2									
	•	AU2 8	*302F908310	2F908310	PAD FRICTION MPF		1	1	1									
		9	302HS02160	2HS02160	SPRING MC		1	1	1									
		10 11	302HS08241 302HS08251	2HS08241 2HS08251	GUIDE MPF R GUIDE MPF L		1	1	1									
		12	5MVG137DN032	2A806720	GEAR MPF /A-49 MPF A4		1	1	1									
	⊙ ⊙	13 14	302J002010 302HS02090	2J002010 2HS02090	FOOT LEVER STOPPER DLP		1	2	2									
		15	302HS02100	2HS02100	SPRING STOPPER DLP		1	1	1									
	⊙ ⊙	16 17	302LZ94010 302LZ93030	2LZ94010 2LZ93030	PARTS PWB ERASER SP LK-170		1	1	1									
		18 19	302LZ24030 302HS24070	2LZ24030 2HS24070	ACTUATOR REGIST SPRING ACTUATOR REG		1	1	1									
		20	302H324070 302H402060	2H402060	SPRING ACTUATOR REG SPRING EARTH DU FEED		1	1	1									
	•	21 22	302HS02330 302HS24160	2HS02330 2HS24160	SPRING EARTH DU PLATE ROLLER DU		1 2	1 2	1 2									
	⊙ ⊙	23	302HS02650	2HS02650	HOOK PF		1	1	1									
		24 25	302HS02470 302HS08050	2HS02470 2HS08050	SPRING PIN BIAS BASE MPF		1	1	1									
		26	302H402040	2H402040	SPRING REG GND		1	1	1									
	•	27 28	302H994360 7RHA2H10701+H01	2H994360 RH043740	PARTS FULL SENSOR ASSY SP M.GLAZE R. 100MJ 1/2W		1	1	1									
		29	302HS08100	2HS08100	BRACKET BOTTOM		1	1	1									
		30 31	302HS08170 302HS24300	2HS08170 2HS24300	SPRING SEPARATOR SPRING CONTACT TC		1	1	1									
		32	302HS08210	2HS08210	SPRING EARTH MPF		1	1	1									
		33 34	302HS08230 302HS08270	2HS08230 2HS08270	PLATE EARTH BOTTOM SPRING BRACKET		1	1	1									
		35	302HS02700	2HS02700	SHEET BUSH DU		1	1	1									
	$_{\odot}$	36 A03	302HS02461 302HS94281	2HS02461 2HS94281	PIN CONTACT BIAS HOLDER MCH ASSY		1	1	1									
		37	*302HS02132	2HS02132	HOLDER MC		1	1	1									
J	- 1			1		1	1	1 1	- 1	1	1			İ	ı	1 1		

<sup>•</sup> Parts with "⊙" indicate regular maintenance parts.

Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

<sup>•</sup> Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

<sup>•</sup> Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 3 Paper Cassette 2L0/2PJ

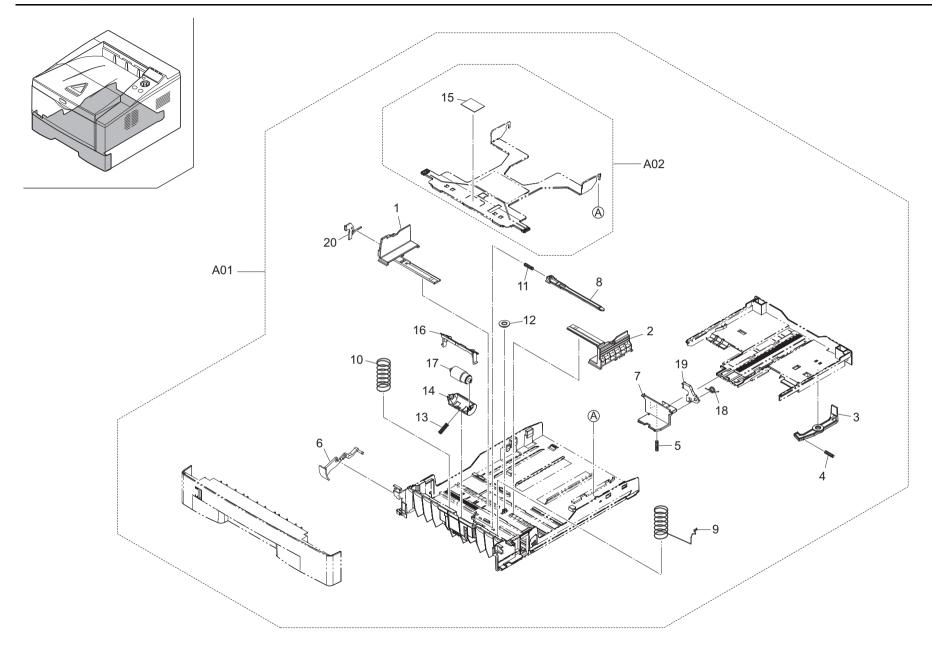


FIG. 3 Paper Cassette 2L0/2PJ-1

	o i apoi oaccon	-												
Re No		Alternative.	Description	Notes		uan 0 230		Ref No	Part.No.	Alternative.	Description	Notes	Quant 120 230	_
) A0	1 302LZ93071 1 *2FM06010 2 *2FM06020 3 *302F909031 4 *302F909040 5 *302HN09190 6 *302HS09070 7 *302HS09100 9 *302HS09120 0 *302HS09140 2 *302HS09140 2 *302HS09180 4 *302HS09180 4 *302HS09180 4 *302HS09180 5 *302HS09180 6 *302HS09180 7 *302HS09180 8 *302HS09180 9 *302HS09180 1 *302HS09180 1 *302HS09180 2 *302HS09180 3 *302HS09180 4 *302HS09180 5 *302HS0910 6 *302LZ09030 7 *302BR06521 8 *5MWW171LD006 9 *5MVX541DG002	2LZ93071 5MVX765SH004 5MVX765SH005 2F909031 2F909040 2HN09190 2HS09070 2HS09100 2HS09130 2HS09140 2HS09140 2HS09160 2HS09180 2HS09160 2HS09161 2HS09210 2LZ09030 2BR06521 2A807530 2A807191 2A807161	CT-170 GUIDE SIDE L /B-11 CASSETTE A2 GUIDE SIDE R /B-11 CASSETTE A2 LEVER BASE CAS REAR SPRING BASE CAS REAR SPRING FIX PAPER INDICATOR CURSOR END LOCK BOTTOM SPRING BOTTOM L SPRING BOTTOM R SPRING LOCK BOTTOM GEAR CASSETTE SPRING RETARD HOLDER RETARD HOLDER RETARD PLATE BOTTOM ASSY PAD BOTTOM GUIDE RETARD RETARD ROLL ASSY /43487V0005 A4 SPRING STOPPER /A49 CASSETTE A4 LEVER REAR /A-49 CASSETTE A3 LEVER SIDE /A-49 CASSETTE A3		11 11 11 11 11 11 11 11 11 11 11 11 11		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1							2-0
				1			l							1

<sup>•</sup> Parts with ". indicate regular maintenance parts.

Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

<sup>•</sup> Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 4 Paper Feed Section 1 2L0/2PJ-1

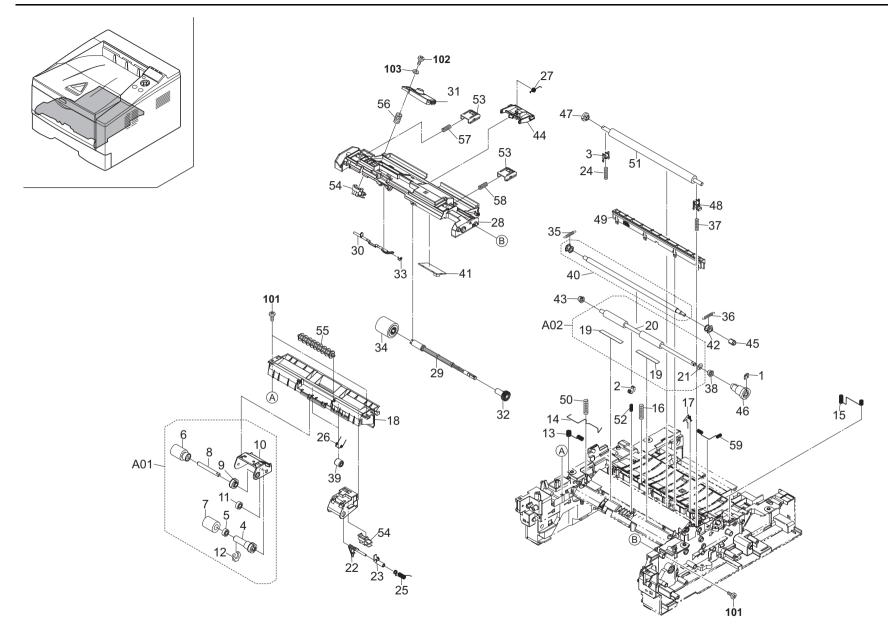


FIG. 4 Paper Feed Section 1 2L0/2PJ-1

		raperreeu o													-0,2	_ I J	•
	Re No	Dort No	Alternative.	Description	Notes		antit 230 2	_		Ref. No.	Part.No.	Alternative.	Description	Notes		antit 230 2	•
(	•		2A806250	RING STOPPER /A-49 FEED A4		1		1	•	48	302HS24250	2HS24250	BUSH TC R		1		1
		2 302LZ24220	2LZ24220	BUSH REGIST C		1		1	•	49	302H494080	2H494080	HOLDER DC BRUSH ASSY		1		1
		3 302A816031	2A816031	BUSH TC R /A-49 FEED A4		1		1		50	302HS24280	2HS24280	SPRING RELEASE TC L		1		1
(	• A0		2HS94032	HOLDER FEED ASSY		1		1	•	51	302LZ94060	2LZ94060	PARTS ROLLER TRANSFER E SP			1	1
	'		2F906170	JOINT PICKUP A		1	1	1	•	51	302LZ94070	2LZ94070	PARTS ROLLER TRANSFER A SP		1		
		*302F906180	2F906180	JOINT PICKUP B		1		1		52	302HS24360	2HS24360	SPRING REGIST C		1		1
		302F906230	2F906230	PULLEY FEED ASSY		1		1	•	53	5MVX431DN005	2FV02100	LEVER LOCK DLP		2	2	2
		*302F906240	2F906240	PULLEY PICKUP ASSY		1	1	1		54	7NXSG2481+++H01	NX052600	SENSOR OPT.		2	2	2
		302F906272	2F906272	SHAFT FEED L		1		1		55	302HS06050	2HS06050	PULLEY FEED		1		1
		*302F906280	2F906280	GEAR FEED Z30H		1		1		56	5MMW261LD036	2A814570	SPRING TE SENSOR /A-49 DLP A4		1		1
	1		2HS06020	HOLDER FEED		1	1	1		57	5MMW261LD067	2FV02270	SPRING LEVER LOCK L		1		1
	0 1		2HS06090	GEAR Z22S FEED		1		1		58 59	5MMW261LD068 302HS24310	2FV02280 2HS24310	SPRING LEVER LOCK R		1		1 1
(	1:		2A806250 2LZ02100	RING STOPPER /A-49 FEED A4		1	1	1		59	3020324310	20024310	SPRING EARTH BRUSH		1	'	'
				SPRING EARTH REG UP			1	1									
	1:		2HS02260 2HS02340	SPRING EARTH REG LOW		1	1	1									
	10		2HS02410	SPRING EARTH RIGHT			1	1									
	1		2HS02440	SPRING EARTH DU MID SPRING EARTH DLP PLATE				1									
	1		2HS06010	FRAME FEED			1	1		101	7BB200410H	BB105700	+BIND T.T P SCREW 4X10				
	• A0		2HS94081	REGIST LOW KIT			1	1		101	7BB20041011 7BB202308H	BB105690	+TP-FLAT T.T P SCREW 3X8				
	1:		2HS24181	SHEET REGIST		2		2		102	7BC00030A080H01	BC046150	WASHER M3X10X0.8T				
	2		2HS24410	ROLLER REGIST LOW		1	1	1		103	7 DC00030A0001101	DC040130	WASHER WSX 10X0.01				
	2		BC059590	CUT WASHER 5.2X9.0X0.8T(BLACK)			il	il									
	2		2LZ06011	ACTUATOR EMPTY A				1									
	<u>2</u>		2HS06071	ACTUATOR EMPTY B			il	il									
	2		2LZ24090	SPRING TC L		1	il	1									
	2		2HS06120	SPRING ACTUATOR		1		1									
	2		2HS06130	SPRING PULLEY		2	2	2									
	2		2HS08351	SPRING COVER REG		1		1									
	2		2HS08011	FRAME MPF		1	1	1									
	2	302HS08080	2HS08080	SHAFT FEED MPF		1	1	1									
(	9	302HS08110	2HS08110	ACTUATOR MPF		1	1	1									
	9	1 302HS94150	2HS94150	EMPTY SENSOR KIT SP		1	1	1									
(	3		2HS08160	GEAR Z20S MPF		1	1	1									
	3		2HS08190	SPRING ACTUATOR		1		1									
	⊙ 3		2HS08260	ROLLER M/P ASSY		1		1									
	3:		2LZ24120	SPRING REGIST LB		1		1									
(	9		2LZ24110	SPRING REGIST RB		1		1									
	3		2HS24400	SPRING TC R		1		1									
	3		2HS24460	BUSH REGIST R		1		1									
	3		2A820100	PULLEY EXIT /A-49 FUSER A3		2		2									
(	9 4		2LZ94050	PARTS ROLLER REGIST UP SP		1	1	1									
	4		2HS01130	P.W.B RFID WITH SOFTWARE		1	1	1									
	4:		2HS24120	BUSH REGIST		1		1									
	4		2HS24140	BUSH 6 EW		1	1	1									
	4		2HS08340	COVER REG SW		1		1									
	9 4		2HS24190	GEAR Z14R REG UP		1		1									
	9 4		2HS24200	GEAR Z21L-Z23L REG LOW		1	1	1									
(	• 4°	302LZ24010	2LZ24010	GEAR Z17L TC		1	1	1									
<u></u>			1		l				Щ.	1		I .		L		ــــــــــــــــــــــــــــــــــــ	


<sup>•</sup> Parts with "⊙" indicate regular maintenance parts.

Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

<sup>•</sup> Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

<sup>•</sup> Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 5 Paper Feed Section 2 2L0/2PJ

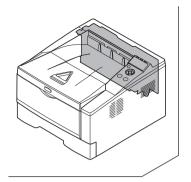

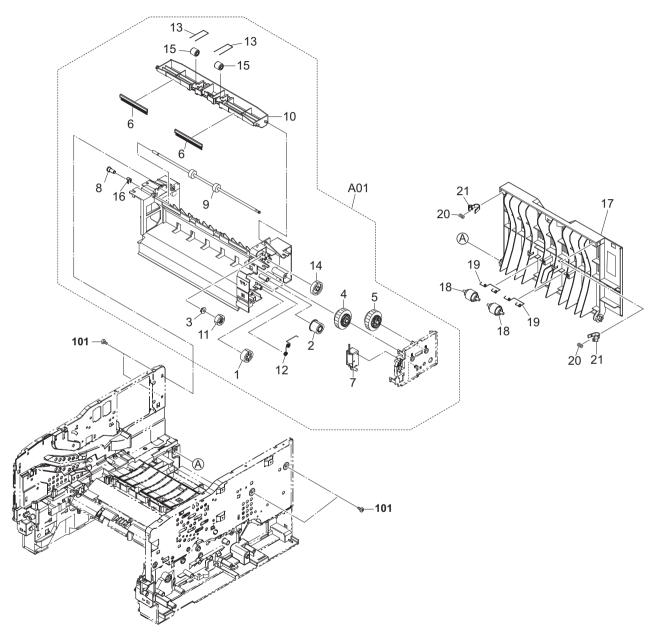


FIG. 5 Paper Feed Section 2 2L0/2PJ-2

	r aperir eea o												L0/21	
Ref No		Alternative.	Description	Notes	Qua		_	Ref. No.	Part.No.	Alternative.	Description	Notes		ntity 30 240
<ul> <li>A0°</li> <li>A0°</li> <li>A0°</li> <li>2</li> <li>3</li> <li>4</li> <li>5</li> <li>6</li> <li>7</li> <li>11</li> <li>12</li> <li>13</li> <li>20</li> <li>22°</li> </ul>	302LZ94100	2L094110 2LZ94100 2BL06380 5MVG133DN022 2F929140 2FM94020 2FM94030 2H428020 2H494070 2HN29050 2HS28830 2HS288060 2HS28110 2HS28110 2HS28110 2HS28141 2HS28170 2A820100 2BT11070 2HS94160 2HS28070 2HS28120 2HS08320 2F908200	PARTS FD ASSY (2L0) SP PARTS FD ASSY (2LZ) SP GEAR Z25 JOINT GEAR Z22 /B-11 FRAME A4 BUSH DU GEAR CLUTCH ASSY A SP GEAR CLUTCH ASSY B SP DISCHARGER FD SOLENOID ASSY SP BUSH DU ROLLER FD UP B COVER FD GEAR Z21S SPRING EARTH SPRING PULLEY GEAR FD Z29S PULLEY EXIT /A-49 FUSER A3 STOPPER 3 /ZBT1107 A4 COVER REAR ASSY SP PULLEY EXIT SPRING EXIT SPRING COVER MPF LOCK COVER	(A) (B)	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 2 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 2 1 1 2 1 1 1 2 2 2 2 2	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	101	7BB200410H	BB105700	+BIND T.T P SCREW 4X10			


<sup>•</sup> Parts with ". indicate regular maintenance parts.


Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

<sup>•</sup> Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

<sup>•</sup> Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 6 Image Formation Section 2L0/2PJ

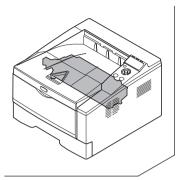

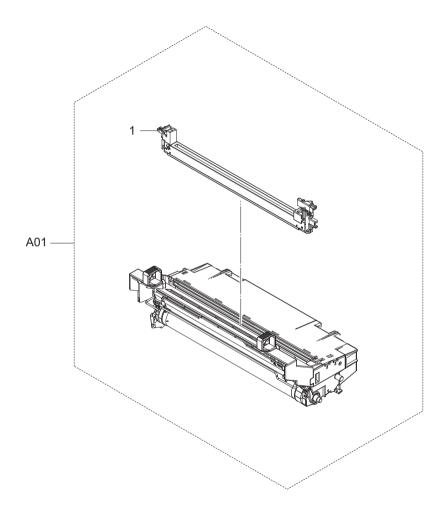

. –		image i ormati												L0/21	
1	Ref. No.	Part.No.	Alternative.	Description	Notes		antity 230 2		Ref. No.	Part.No.	Alternative.	Description	Notes	Qua 120 23	ntity 30 240
<ul><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><li>•</li><l< td=""><td>A01 1</td><td>302LZ93061 *302HS93070</td><td>2LZ93061 2HS93070</td><td>DK-170 MC-130</td><td></td><td>1 1</td><td>1</td><td>1 1</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></l<></ul>	A01 1	302LZ93061 *302HS93070	2LZ93061 2HS93070	DK-170 MC-130		1 1	1	1 1							


<sup>•</sup> Parts with "⊙" indicate regular maintenance parts.

Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

<sup>•</sup> Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 7 Developing Section 2L0/2PJ

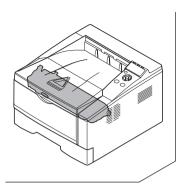

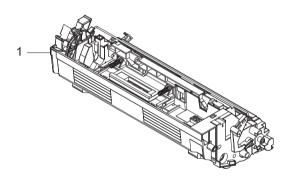


FIG. 7 Developing Section 2L0/2PJ

	J. ,	Developing oc	Otion										200	0
	Ref. No.	Part.No.	Alternative.	Description	Notes	uantity 230 24		Ref. No.	Part.No.	Alternative.	Description	Notes	Quai	ntity 0 240
	Ref. No.			DV-170(E) DV-172(U) DV-174(AO)	Notes	230 24 1		Ref. No.	Part.No.	Alternative.	Description	Notes		ntity


<sup>•</sup> Parts with "⊙" indicate regular maintenance parts.

Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

<sup>•</sup> Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

<sup>•</sup> Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 8 Fuser Section 2L0/2PJ

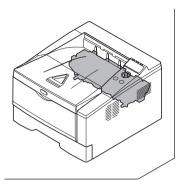

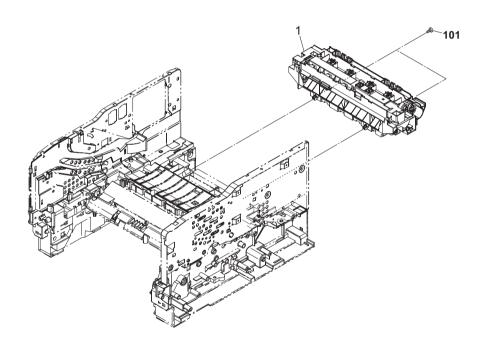


FIG. 8 Fuser Section 2L0/2PJ-2

Ref.   Part.No.   Alternative.   Description   Notes   Quantity   120   230   240     No.   Part.No.   Alternative.   Description   Notes   Notes   Part.No.   Alternative.   Description   Notes   Part.No.   Alternative.   Description   Notes   Part.No.   Part.No.   Alternative.   Description   Notes   Part.No.   Part.No.   Alternative.   Description   Notes   Part.No.   Part.No.
□ 1 302L293040 2L293040 FK-171(E) (B) 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1

<sup>•</sup> Parts with "⊙" indicate regular maintenance parts.

Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

<sup>•</sup> Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

<sup>•</sup> Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 9 Drive Section 2L0/2PJ-2

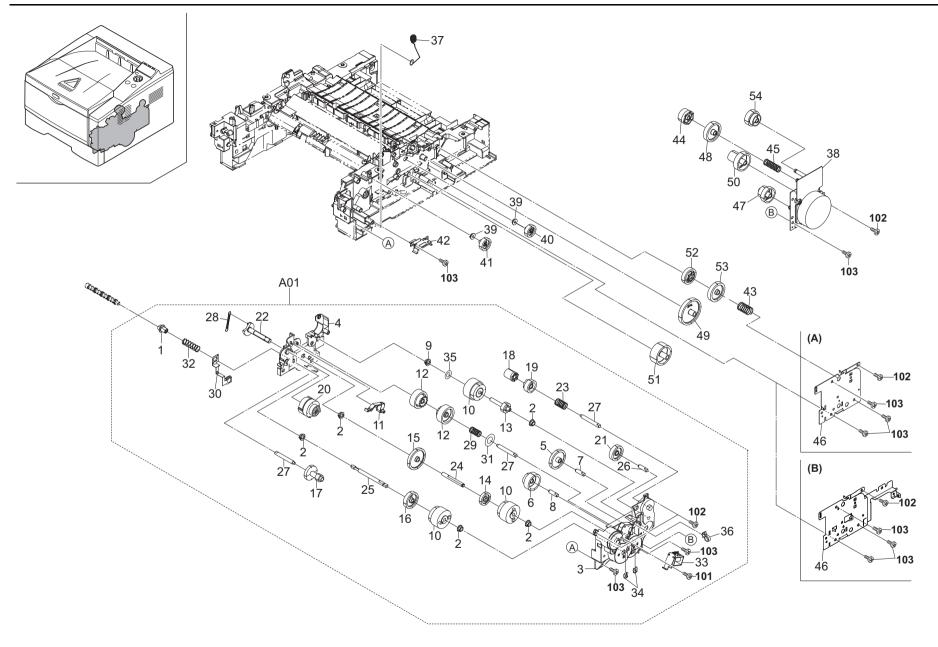


FIG. 9 Drive Section 2L0/2PJ-2

	<u> </u>	Dive occion																_
	Ref. No.	Part.No.	Alternative.	Description	Notes	-	antity 230 24	_		Ref. No.	Part.No.	Alternative.	Description	Notes		uan 230	tity 240	_
	101	00011400040	011400040	DD 450			,	,		40	00011004070	011004070	054B 740B 5B55 0					
•	A01	302H493040	2H493040	DR-150		1 1		1	•	48	302HS31070	2HS31070	GEAR Z42R FREE 2		1	1	1	
	1	*302F931350	2F931350	JOINT SHAFT CASSETTE		1 1		1	•	49	302HS31110	2HS31110	GEAR Z58L		1	1	1	
	2	*302F931490	2F931490	BUSH FEED DRIVE		5		5	•	50	302H431080	2H431080	GEAR Z64R-Z21L		1	1	1	
	3	*302H431010	2H431010	HOLDER DRIVE		1 1	1	1	•	51	302HS31180	2HS31180	GEAR Z44R		1	1	1	
	4	*302H431020	2H431020	COVER HOLDER DRIVE		1 1	1	1	•	52	302HS31210	2HS31210	GEAR Z35S FREE		1	1	1	
0	_	*302H431030	2H431030	GEAR Z42R		1 1	1	1	•	53	302HS31220	2HS31220	GEAR Z42R FREE		1	1	1	
•	_	*302H431040	2H431040	GEAR Z34L-Z24L		1 1	1	1	$_{\odot}$	54	302HS31240	2HS31240	GEAR Z32L DRUM		1	1	1	
	7	*302H431050	2H431050	PIN HOLDER A		1 1	1	1										
	8	*302H431060	2H431060	PIN HOLDER B		1 1	1	1										
	9	*302H431070	2H431070	BUSH DRIVE 6		1		1										
•		*302HN44111	2HN44111	CLUTCH FEED		3	3	3										
	11	*302HS31050	2HS31050	LEVER LIFT BOTTOM		1	1	1		101	7DD00000011	DD405000	DIND TT D CODEW 2V2					
0		*302HS31090	2HS31090	GEAR Z37L FREE		2		2		101	7BB200308H	BB105660	+BIND T.T P SCREW 3X8					
•		*302HS31100	2HS31100	GEAR Z20L CLUTCH		1 11	: 1	1		102	7BB100306H	BB046010	+BIND T.T S SCREW 3X6					
•		*302HS31120	2HS31120	GEAR Z27L CLUTCH		1 1	1	1		103	7BB200410H	BB105700	+BIND T.T P SCREW 4X10					
•		*302HS31130	2HS31130	GEAR Z45R CLUTCH		1 1	1	1										
•		*302HS31140	2HS31140	GEAR Z35R IDLE		1 1	1	1										
•		*302HS31150	2HS31150	GEAR Z31L-Z14S		1 11	1	1										
•		*302HS31190	2HS31190	GEAR Z17R FREE		1 1	1	1										
•		*302HS31200	2HS31200	GEAR Z26L FREE		1 1	1	1										
		*302HS31230	2HS31230	GEAR Z38S MPF			1	1										
•		*302HS31260	2HS31260	GEAR Z32R		1 1	1	1										
	22	*302HS31281	2HS31281 2HS31320	LIFT BOTTOM				<u> </u>										
	23	*302HS31320 *302HS31330		SPRING FREE MAG		1 1	1	1										
	24 25	*302HS31340	2HS31330 2HS31340	PIN CLUTCH SHAFT CASSETTE			1	1										
	26	*302HS31360	2HS31360	PIN HOLDER A			'	1										
	27	*302HS31370	2HS31370	PIN HOLDER B		3	3	3										
	28	*302HS31380	2HS31380	SPRING LIFT BOTTOM		1	1	1										
	29	*302HS31410	2HS31410	SPRING FREE Z37L			1	1										
	30	*302HS31420	2HS31420	EARTH PLATE DRIVE			il	1										
	31	*302HS31430	2HS31430	POLYSLIDER 9.5			1	1										
	32	*302HS31440	2HS31440	SPRING FEED			il	1										
•		*302HS44020	2HS44020	SOLENOID MPF		1	1	1										
		*5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		2	2	2										
	35	*7BC06062C020H01	BC045240	POLY SLIDER WASHER M6.2X12X0.2T		1		1										
	36	•M2107250	M2107250	BAND,RSG-100(KITAGAWA)		1	1	1										
	37	302HS02370	2HS02370	SPRING EARTH CASSETTE		1	1	1										
•		302LZ94021	2LZ94021	PARTS MOTOR ASSY SP		1	1	1										
	39	302F929140	2F929140	BUSH DU		2	2	2										
•		302HS24220	2HS24220	GEAR Z25R DU FEED		1	1	1										
•		302HS24230	2HS24230	GEAR Z26L DU MID		1	1	1										
	42	302HS02381	2HS02381	PLATE PF CONNECTOR		1	1	1										
	43	302HS31310	2HS31310	SPRING FREE FUSER		1	1	1										
•	44	302HS31390	2HS31390	GEAR Z27R FREE 2		1	1	1										
	45	302LZ31040	2LZ31040	SPRING FREE DRUM		1	1	1										
	46	302HS31041	2HS31041	PLATE GEAR DRIVE	(A)	1	1	1										
	46	302PK31010	2PK31010	PLATE GEAR DRIVE	(B)	1	1	1										
•	47	302HS31250	2HS31250	GEAR Z54R-Z24R		1	1	1										
																	<u> </u>	


<sup>•</sup> Parts with "⊙" indicate regular maintenance parts.

<sup>•</sup> Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

<sup>•</sup> Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

<sup>•</sup> Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 10 Duplex Section 2L0/2PJ

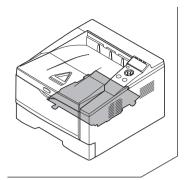

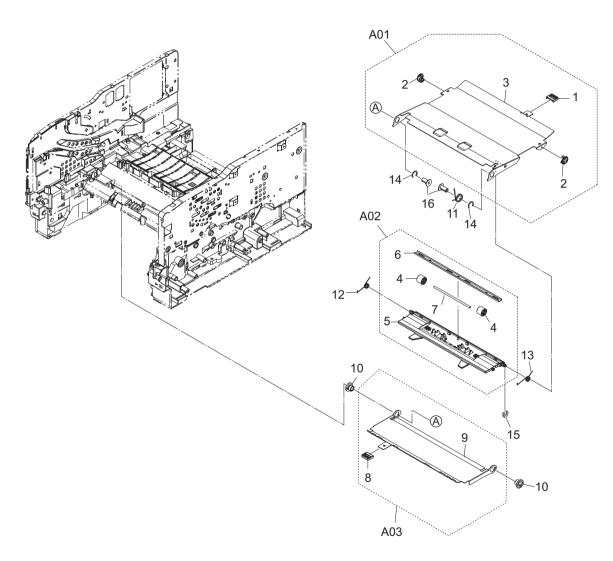


FIG. 10 Duplex Section 2L0/2PJ-1

	_	T Duplex Occil	1	Т	1	1		_	г	1_		1			_		
	Ref. No.	Part.No.	Alternative.	Description	Notes	Qu 120	antit	_		Ref. No.	Part.No.	Alternative.	Description	Notes	_	uan 230	-
•	A01 1 2	*2FM02690 *2FM21050	2HS94320 5MVX221DG002 5MVX173DN001	PARTS PLATE COVER DU B ASSY SP LEVER DU /B-11 DU A3 COLLER DU /B-11 DU A3		1 1 2	1 1 2	1 1 2									
•		302FM94061 *2FM02210	2HS29020 2FM94061 5MVM274DN002 2FM21011	PLATE COVER DU B PARTS HOLDER DU ASSY SP PULLEY MID /B-11 FRAME A4 HOLDER DU		1 1 2 1	1	1 1 2									
•	6 7 A03	*2FM21020 *302FM02421 302HS94331	5MML821SD009 2FM02421 2HS94331	STAY DU /B-11 DU A3 SHAFT PULLEY /B-11 FRAME A4 PARTS PLATE COVER DU ASSY SP		1 1 1	1 1 1 1 1	1 1 1									
	8 9 10 11	*302HS29011 2FM02140 2FM02500	5MVX221DG002 2HS29011 5MVM786XB001 5MMW176SD002	PLATE COVER DU BUSH DU /B-11 FRAME A3 SPRING DU R /B-11 FRAME A4		1 2 1	1 2 1	1 1 2 1									
•	12 13 14 15	2FM02520 5MBCK9560XSC	5MMW166SD002 5MMW166SD003 D4103700 2A806250	SPRING HOLDER L /B-11 FRAME A4 SPRING HOLDER R /B-11 FRAME A4 C STOP RING /X9.5 X 0.6T S-CR RING STOPPER /A-49 FEED A4		1 1 2 1		1 1 2									
	16		5MVM276DN017			2		2									

<sup>•</sup> Parts with ". indicate regular maintenance parts.

Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

<sup>•</sup> Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

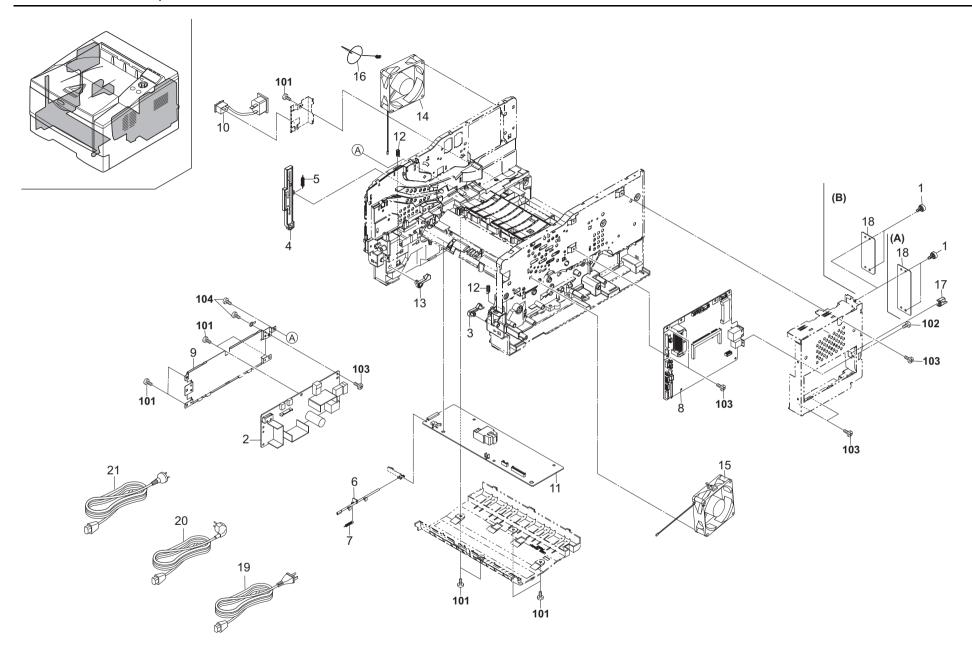


FIG. 11 Electrical Components 2L0/2PJ-2

		Licotrical Col												LU/ ZI	· -
	Ref. No.	Part.No.	Alternative.	Description	Notes	_	uanti 230	_	Ref. No.	Part.No.	Alternative.	Description	Notes	Qua 120 23	
0	2 2 2 3 3 4 4 5 6 6 7 7 8 8 8 8 9 10 11 12 13 13	302F939082 302HS45013 302PG94020 302HS450211 302HS02110 302HS02180 302HS02190 302L094010 302PJ94050 302HS02210 302HS02210 302HS02210 302HS02360 302HS02360 302HS02390 302LZ94041 302HS02360 302LS94070 302LS94070 302LS94070 302HS0250 302F939090 302LS39050 7AAACCUS+10H001 302FV94010 302FV94010	2F939082 2HS45013 2PG94020 2HS45021 2HS02070 2HS02110 2HS02120 2HS02180 2HS02190 2L094010 2PJ94040 2PJ94050 2HS02210 2HS02300 2HS02300 2LZ94041 2HS02360 2HS02390 2LZ94030 2L094070 2HS30040 2K339050 AA068380 2FV94010 2FV45040	SCREW BOX SWITCHING REGULATOR 230V PARTS SWITCHING REGULATOR 120V LEVER LOCK CASSETTE LEVER INTERLOCK SW SPRING INTERLOCK SW PIN CASSETTE SPRING PIN CASSETTE PARTS PWB CONTROL SP PARTS PWB ASSY MAIN SP PARTS PWB ASSY MAIN SP PARTS PWB ASSY MAIN EU SP PLATE POWER SUPPLY CONN.CORD ASSY PWS-INLET S03238 PARTS HIGH VOLTAGE UNIT SP SPRING LOCK CASSETTE LEVER LOCK CASSETTE LEVER LOCK CASSETTE L PARTS MOTOR FAN 80 ASSY SP SPRING EARTH FAN CAP NETWORK PLATE OPTION PLATE OPTION AC CORD ASSY US PARTS AC CORD EU SP AC CORD ASSY	(A) (B) (B) (B)	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	101 102 103 104	7BB200410H 5MBSPB3006NW++R 7BB100306H1 5MBTPB4006TW++R	BB105700 B1B03060 BB105820 B1A54060	+BIND T.T P SCREW 4X10 BIND HEAD SCREW(+) / M3 X 6 CRFREE +BIND T.T S SCREW 3X6 BIND T.T SCREW(+) / M4 X 6 CRFREE S-T			

<sup>•</sup> Parts with "⊙" indicate regular maintenance parts.

Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

<sup>•</sup> Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 12 Maintenance Kits 2L0/2PJ

 J. 1.	e maintenance	1110												2012	•
Ref. No.	Part.No.	Alternative.	Description	Notes		antity 230 24		R	Ref. No.	Part.No.	Alternative.	Description	Notes	Quar 120 230	
	1702LZ7US0	072LZ7US	MK-172/MAINTENANCE KIT DV-172(U)	OPTION	1										
	1702LZ8AS0	072LZ8AS	DK-170 MK-174/MAINTENANCE KIT DV-174(AO) DK-170	OPTION	1		1 1 1								
	1702LZ8NL0	072LZ8NL	MK-170/MAINTENANCE KIT DV-170(E) DK-170	OPTION		1 1 1									

<sup>•</sup> Parts with ". indicate regular maintenance parts.

Parts with Ref.No. indicate maintenance parts and the ones without it indicate out of the above.

<sup>•</sup> Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

<sup>•</sup> Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

	Part.No.	Alternative.	Description	Fig.No.		Part.No.	
	1702LZ7US0	072LZ7US	MK-172/MAINTENANCE KIT	12		302H405030	
	1702LZ8AS0	072LZ8AS	MK-174/MAINTENANCE KIT	12		302H405040	
	1702LZ8NL0	072LZ8NL	MK-170/MAINTENANCE KIT	12		302H405080	
•	2BL06380	2BL06380	GEAR Z25 JOINT	5		302H405110	
	2FM02140	5MVM786XB001	BUSH DU /B-11 FRAME A3	10	•	302H428020	
•	2FM02210	5MVM274DN002	PULLEY MID /B-11 FRAME A4	10	_	302H431010	
	2FM02350	5MVG133DN022	GEAR Z22 /B-11 FRAME A4	5		302H431020	
	2FM02500	5MMW176SD002	SPRING DU R /B-11 FRAME A4	10	•	302H431030	
	2FM02510	5MMW166SD002	SPRING HOLDER L /B-11 FRAME A4	10	•	302H431040	
	2FM02520	5MMW166SD003	SPRING HOLDER R /B-11 FRAME A4	10	_	302H431050	
	2FM02690	5MVX221DG002	LEVER DU /B-11 DU A3	10		302H431060	
	2FM06010	5MVX765SH004	GUIDE SIDE L /B-11 CASSETTE A2	3		302H431070	
	2FM06020	5MVX765SH005	GUIDE SIDE E /B-11 CASSETTE A2	3	•	302H431080	
	2FM21020	5MML821SD009	STAY DU /B-11 DU A3	10	•	302H446020	
				10	0		ļ
	2FM21030 2FM21050	5MVM276DN017 5MVX173DN001	STOPPER BUSH /B-11 DU A4 COLLER DU /B-11 DU A3	10	•	302H493040 302H494010	
				4	•		
- 1	302A816031	2A816031	BUSH TC R /A-49 FEED A4		_	302H494070	
	302BR06521	2BR06521	RETARD ROLL ASSY /43487V0005 A4	3	•	302H494080	
	302F902420	2F902420	LOCK COVER TOP R	2	$_{\odot}$	302H994360	
	302F904120	2F904120	EMBLEM KYOCERA	1		302HN09190	
	302F904130	2F904130	TAPE EMBLEM	1		302HN29050	
	302F906170	2F906170	JOINT PICKUP A	4	$_{\odot}$	302HN44111	
	302F906180	2F906180	JOINT PICKUP B	4		302HS01130	
	302F906230	2F906230	PULLEY FEED ASSY	4	$_{\odot}$	302HS02070	
	302F906240	2F906240	PULLEY PICKUP ASSY	4	$_{\odot}$	302HS02090	
	302F906272	2F906272	SHAFT FEED L	4		302HS02100	
	302F906280	2F906280	GEAR FEED Z30H	4	$_{\odot}$	302HS02110	ļ
	302F908200	2F908200	LOCK COVER	2,5		302HS02120	
	302F908270	2F908270	SP BOTTOM MPF L	2		302HS02132	
	302F908310	2F908310	PAD FRICTION MPF	2		302HS02160	
	302F909031	2F909031	LEVER BASE CAS REAR	3	$_{\odot}$	302HS02180	
	302F909040	2F909040	SPRING BASE CAS REAR	3		302HS02190	
	302F909210	2F909210	PAD BOTTOM	3	•	302HS02210	
	302F929140	2F929140	BUSH DU	5.9		302HS02260	
	302F931350	2F931350	JOINT SHAFT CASSETTE	9		302HS02330	
	302F931490	2F931490	BUSH FEED DRIVE	9		302HS02340	
ı	302F939082	2F939082	SCREW BOX	11		302HS02360	
	302F939090	2F939090	CAP NETWORK	11		302HS02370	
	302FM02421	2FM02421	SHAFT PULLEY /B-11 FRAME A4	10		302HS02381	
	302FM21011	2FM21011	HOLDER DU	10	•	302HS02390	
ı	302FM94020	2FM94020	GEAR CLUTCH ASSY A SP	5	0	302HS02410	
- 1	302FM94030	2FM94030	GEAR CLUTCH ASSY B SP	5		302HS02440	
	302FM94061	2FM94030 2FM94061	PARTS HOLDER DU ASSY SP	10		302HS02440 302HS02461	
1	302FV45040	2FV45040	AC CORD ASSY	11		302HS02470	
	302FV94010	2FV94010	PARTS AC CORD EU SP	11		302HS02620	
	302FV94010 302H402040	2H402040	SPRING REG GND	2	•	302HS02620 302HS02650	
				2 2	•		
	302H402060	2H402060	SPRING EARTH DU FEED	1		302HS02700	
)	302H404061	2H404061	SHEET LCD		•	302HS04070	
	302H405010	2H405010	BUTTON A	1	•	302HS04160	
	302H405020	2H405020	BUTTON B	1		302HS04170	

	Part.No.	Alternative.	Description	Fig.No.
	302H405030	2H405030	BUTTON C	1
	302H405040	2H405040	BUTTON D	1
	302H405080	2H405080	SHEET BUTTON	1
	302H405110	2H405110	LENS LED	1
•	302H428020	2H428020	DISCHARGER FD	5
_	302H431010	2H431010	HOLDER DRIVE	9
	302H431020	2H431020	COVER HOLDER DRIVE	9
•	302H431030	2H431030	GEAR Z42R	9
•	302H431040	2H431040	GEAR Z34L-Z24L	9
	302H431050	2H431050	PIN HOLDER A	9
	302H431060	2H431060	PIN HOLDER B	9
	302H431070	2H431070	BUSH DRIVE 6	9
•	302H431080	2H431080	GEAR Z64R-Z21L	9
	302H446020	2H446020	CONN.CORD ASSY LCD-RELAY S03394	1
•	302H493040	2H493040	DR-150	9
0		2H494010		1
0	302H494010		COVER TOP B(N) KIT SP SOLENOID ASSY SP	5
	302H494070	2H494070		4
⊙ ⊙	302H494080	2H494080	HOLDER DC BRUSH ASSY	•
•	302H994360	2H994360	PARTS FULL SENSOR ASSY SP	2
	302HN09190	2HN09190	SPRING FIX	3
	302HN29050	2HN29050	BUSH DU	5
•	302HN44111	2HN44111	CLUTCH FEED	9
	302HS01130	2HS01130	P.W.B RFID WITH SOFTWARE	4
•	302HS02070	2HS02070	LEVER LOCK CASSETTE	11
•	302HS02090	2HS02090	LEVER STOPPER DLP	2
	302HS02100	2HS02100	SPRING STOPPER DLP	2
•	302HS02110	2HS02110	LEVER INTERLOCK SW	11
	302HS02120	2HS02120	SPRING INTERLOCK SW	11
	302HS02132	2HS02132	HOLDER MC	2
	302HS02160	2HS02160	SPRING MC	2
•	302HS02180	2HS02180	PIN CASSETTE	11
	302HS02190	2HS02190	SPRING PIN CASSETTE	11
$\odot$	302HS02210	2HS02210	PLATE POWER SUPPLY	11
	302HS02260	2HS02260	SPRING EARTH REG LOW	4
1	302HS02330	2HS02330	SPRING EARTH DU PLATE	2
1	302HS02340	2HS02340	SPRING EARTH RIGHT	4
1	302HS02360	2HS02360	SPRING LOCK CASSETTE	11
1	302HS02370	2HS02370	SPRING EARTH CASSETTE	9
	302HS02381	2HS02381	PLATE PF CONNECTOR	9
$\odot$	302HS02390	2HS02390	LEVER LOCK CASSETTE L	11
	302HS02410	2HS02410	SPRING EARTH DU MID	4
	302HS02440	2HS02440	SPRING EARTH DLP PLATE	4
	302HS02461	2HS02461	PIN CONTACT BIAS	2
	302HS02470	2HS02470	SPRING PIN BIAS	2
1	302HS02620	2HS02620	SPRING EARTH FAN	11
•	302HS02650	2HS02650	HOOK PF	2
1	302HS02700	2HS02700	SHEET BUSH DU	2
•	302HS04070	2HS04070	COVER RACK	1
•	302HS04160	2HS04160	COVER RACK B	1
1	302HS04170	2HS04170	SHEET TOP COVER	1
	332.1001170		5	•

Parts with "⊙" indicate regular maintenance parts.

### 2L0/2PJ-1

	Part.No.	Alternative.	Description	Fig.No.		Part.No.	Alternative.	Description	Fig.No.
	302HS06010	2HS06010	FRAME FEED	4		302HS24460	2HS24460	BUSH REGIST R	4
ĺ	302HS06020	2HS06020	HOLDER FEED	4		302HS28041	2HS28041	COVER FD	5
ĺ	302HS06050	2HS06050	PULLEY FEED	4		302HS28060	2HS28060	GEAR Z21S	5
•	302HS06071	2HS06071	ACTUATOR EMPTY B	4		302HS28070	2HS28070	PULLEY EXIT	5
•	302HS06090	2HS06090	GEAR Z22S FEED	4			2HS28110		5
•				3		302HS28110		SPRING EARTH	
ĺ	302HS06120	2HS06120	SPRING ACTUATOR	4		302HS28120	2HS28120	SPRING EXIT	5
ĺ	302HS06130	2HS06130	SPRING PULLEY	4		302HS28141	2HS28141	SPRING PULLEY	5
ĺ	302HS08011	2HS08011	FRAME MPF	4		302HS28170	2HS28170	GEAR FD Z29S	5
ĺ	302HS08050	2HS08050	BASE MPF	2	(	302HS28830	2HS28830	ROLLER FD UP B	5
ĺ	302HS08080	2HS08080	SHAFT FEED MPF	4		302HS29011	2HS29011	PLATE COVER DU	10
۱.	302HS08100	2HS08100	BRACKET BOTTOM	2		302HS29020	2HS29020	PLATE COVER DU B	10
•	302HS08110	2HS08110	ACTUATOR MPF	4		302HS31041	2HS31041	PLATE GEAR DRIVE	9
•	302HS08160	2HS08160	GEAR Z20S MPF	4		302HS31050	2HS31050	LEVER LIFT BOTTOM	9
i	302HS08170	2HS08170	SPRING SEPARATOR	2		302HS31070	2HS31070	GEAR Z42R FREE 2	9
l	302HS08190	2HS08190	SPRING ACTUATOR	4		302HS31090	2HS31090	GEAR Z37L FREE	9
l	302HS08210	2HS08210	SPRING EARTH MPF	2	(	302HS31100	2HS31100	GEAR Z20L CLUTCH	9
i	302HS08230	2HS08230	PLATE EARTH BOTTOM	2	(	302HS31110	2HS31110	GEAR Z58L	9
ĺ	302HS08241	2HS08241	GUIDE MPF R	2	(	302HS31120	2HS31120	GEAR Z27L CLUTCH	9
ĺ	302HS08251	2HS08251	GUIDE MPF L	2	(	302HS31130	2HS31130	GEAR Z45R CLUTCH	9
•	302HS08260	2HS08260	ROLLER M/P ASSY	4	(	302HS31140	2HS31140	GEAR Z35R IDLE	9
l	302HS08270	2HS08270	SPRING BRACKET	2	(	302HS31150	2HS31150	GEAR Z31L-Z14S	9
i	302HS08320	2HS08320	SPRING COVER MPF	2,5	(	302HS31180	2HS31180	GEAR Z44R	9
i	302HS08340	2HS08340	COVER REG SW	4		302HS31190	2HS31190	GEAR Z17R FREE	9
ĺ	302HS08351	2HS08351	SPRING COVER REG	4		302HS31200	2HS31200	GEAR Z26L FREE	9
ĺ	302HS09070	2HS09070	PAPER INDICATOR	3	(	302HS31210	2HS31210	GEAR Z35S FREE	9
ĺ	302HS09081	2HS09081	CURSOR END	3		302HS31220	2HS31220	GEAR Z42R FREE	9
ĺ	302HS09100	2HS09100	LOCK BOTTOM	3		302HS31230	2HS31230	GEAR Z38S MPF	9
ĺ	302HS09120	2HS09120	SPRING BOTTOM L	3		302HS31240	2HS31240	GEAR Z32L DRUM	9
i	302HS09130	2HS09130	SPRING BOTTOM R	3		302HS31250	2HS31250	GEAR Z54R-Z24R	9
i	302HS09140	2HS09140	SPRING LOCK BOTTOM	3		302HS31260	2HS31260	GEAR Z32R	9
i	302HS09160	2HS09160	GEAR CASSETTE	3		302HS31281	2HS31281	LIFT BOTTOM	9
i	302HS09180	2HS09180	SPRING RETARD	3		302HS31310	2HS31310	SPRING FREE FUSER	9
i	302HS09260	2HS09260	HOLDER RETARD	3		302HS31320	2HS31320	SPRING FREE MAG	9
l	302HS24070	2HS24070	SPRING ACTUATOR REG	2		302HS31330	2HS31330	PIN CLUTCH	9
l	302HS24070	2HS24120	BUSH REGIST	4		302HS31340	2HS31340	SHAFT CASSETTE	9
l	302HS24120 302HS24130	2HS24130	BUSH 4 DU ROLL	2		302HS31360	2HS31360	PIN HOLDER A	9
	302HS24140	2HS24140	BUSH 6 EW	4		302HS31370	2HS31370	PIN HOLDER A PIN HOLDER B	9
•	302HS24140 302HS24160	2HS24160	ROLLER DU	2		302HS31380	2HS31380	SPRING LIFT BOTTOM	9
•	302HS24160 302HS24181	2HS24160 2HS24181	SHEET REGIST	2 4		302HS31380 302HS31390	2HS31380 2HS31390	GEAR Z27R FREE 2	9
				'					1 7
•	302HS24190	2HS24190	GEAR Z14R REG UP	4		302HS31410	2HS31410	SPRING FREE Z37L	9
•	302HS24200	2HS24200	GEAR Z21L-Z23L REG LOW	4		302HS31420	2HS31420	EARTH PLATE DRIVE	9
•	302HS24220	2HS24220	GEAR Z25R DU FEED	9		302HS31430	2HS31430	POLYSLIDER 9.5	9
•	302HS24230	2HS24230	GEAR Z26L DU MID	9		302HS31440	2HS31440	SPRING FEED	9
•	302HS24250	2HS24250	BUSH TC R	4		302HS34080	2HS34080	LABEL JAM TK OPERATION	1
l	302HS24280	2HS24280	SPRING RELEASE TC L	4		302HS39040	2HS39040	PLATE OPTION	11
l	302HS24300	2HS24300	SPRING CONTACT TC	2		302HS44020	2HS44020	SOLENOID MPF	9
i	302HS24310	2HS24310	SPRING EARTH BRUSH	4		302HS45013	2HS45013	SWITCHING REGULATOR 230V	11
l	302HS24360	2HS24360	SPRING REGIST C	4		00211040021	2HS45021	SWITCHING REGULATOR 120V	11
i	302HS24400	2HS24400	SPRING TC R	4		302HS46120	2HS46120	CONN.CORD ASSY PWS-INLET S03238	11
	302HS24410	2HS24410	ROLLER REGIST LOW	4	1 (	302HS93070	2HS93070	MC-130	6

<sup>•</sup> Parts with "O" indicate regular maintenance parts.

	Part.No.	Alternative.	Description	Fig.No.
•	302HS94000	2HS94000	PLATE BOTTOM ASSY	3
•	302HS94020	2HS94020	LID TOP ASSY	1
•	302HS94032	2HS94032	HOLDER FEED ASSY	4
•	302HS94040	2HS94040	SEPARATOR MPF ASSY	2
•	302HS94050	2HS94050	PLATE BOTTOM MPF ASSY	2
•	302HS94081	2HS94081	REGIST LOW KIT	4
•	302HS94121	2HS94121	COVER FRONT ASSY (2HS) SP	1
•	302HS94150	2HS94150	EMPTY SENSOR KIT SP	4
•	302HS94160	2HS94160	COVER REAR ASSY SP	5
•	302HS94281	2HS94281	HOLDER MCH ASSY	2
•	302HS94320	2HS94320	PARTS PLATE COVER DU B ASSY SP	10
•	302HS94331	2HS94331	PARTS PLATE COVER DU ASSY SP	10
•	302J002010	2J002010	FOOT	2
	302K339050	2K339050	PLATE OPTION	11
$_{\odot}$	302L000010	2L000010	COVER RIGHT ASSY	1
	302L004010	2L004010	COVER RIGHT	1
•	302L094010	2L094010	PARTS PWB CONTROL SP	11
$_{\odot}$	302L094030	2L094030	PARTS COVER TOP ASSY SP	1
$_{\odot}$	302L094050	2L094050	PARTS PWB LCD SP	1
$_{\odot}$	302L094070	2L094070	PARTS MOTOR FAN 80 ASSY SP	11
$_{\odot}$	302L094110	2L094110	PARTS FD ASSY (2L0) SP	5
	302LZ02100	2LZ02100	SPRING EARTH REG UP	4
•	302LZ04011	2LZ04011	COVER LEFT	1
	302LZ04030	2LZ04030	COVER DIMM	1
$\odot$	302LZ06011	2LZ06011	ACTUATOR EMPTY A	4
	302LZ08020	2LZ08020	GUIDE TURN MPF	2
	302LZ09030	2LZ09030	GUIDE RETARD	3
•	302LZ24010	2LZ24010	GEAR Z17L TC	4
	302LZ24030	2LZ24030	ACTUATOR REGIST	2
	302LZ24090	2LZ24090	SPRING TC L	4
•	302LZ24110	2LZ24110	SPRING REGIST RB	4
•	302LZ24120	2LZ24120	SPRING REGIST LB	4
	302LZ24220	2LZ24220	BUSH REGIST C	4
	302LZ31040	2LZ31040	SPRING FREE DRUM	9
•	302LZ93010	2LZ93010	DV-170(E)	7
•	302LZ93020	2LZ93020	DV-172(U)	7
•	302LZ93030	2LZ93030	LK-170	2
•	302LZ93040	2LZ93040	FK-170(E)	8
•	302LZ93050	2LZ93050	FK-170(U)	8
•	302LZ93061	2LZ93061	DK-170	6
•	302LZ93071	2LZ93071	CT-170	3
•	302LZ93080	2LZ93080	DV-174(AO)	7
0	302LZ94010	2LZ94010	PARTS PWB ERASER SP	2 9
• •	302LZ94021	2LZ94021	PARTS MOTOR ASSY SP	9 11
•	302LZ94030	2LZ94030	PARTS MOTOR FAN 80 SP	11
•	302LZ94041	2LZ94041	PARTS HIGH VOLTAGE UNIT SP	11 4
•	302LZ94050 302LZ94060	2LZ94050 2LZ94060	PARTS ROLLER REGIST UP SP PARTS ROLLER TRANSFER E SP	4
•	302LZ94060 302LZ94070			4 4
•		2LZ94070 2LZ94090	PARTS ROLLER TRANSFER A SP	2
•	302LZ94090	ZLZ94U9U	PARTS TRAY MPF ASSY SP	4

Part.No.	Alternative.	Description	Fig.No.
302LZ94100 302PG94020 302PH93010 302PH93020 302PJ00020 302PJ04010 302PJ95010 302PJ94010 302PJ94010 302PJ94050 302PJ94070 302PSH31010 5MBCK9560XSC 5MMW171LD006 5MMW261LD067 5MMW261LD067 5MWW261LD068 5MVX111DN003 5MVX111DN003 5MVX111DN005 5MVX541DG002 5MVX541DG002 5MVX541DG002 5MVX541DG003 7AAACCUS+10H001 7BC06062C020H01 7RC460529080H01 7NXSG2481+++H01 7YBEJ0J0D001H01 7YZM420002++H01 M2107250	2LZ94100 2PG94020 2PH93010 2PH93020 2PJ00020 2PJ005010 2PJ46010 2PJ46010 2PJ94040 2PJ94050 2PJ94070 2PK31010 D4103700 2A807530 2A814570 2FV02270 2FV02280 2A806720 2A820100 2A806720 2A8201100 2A807191 2A807191 AA068380 BC045240 BC059590 NX052600 RH043740 YB045400 YZ045260 M2107250	PARTS FD ASSY (2LZ) SP PARTS SWITCHING REGULATOR 230V SP FK-171(E) FK-171(U) COVER RIGHT ASSY COVER RIGHT BUTTON D CONN.CORD ASSY S03863 PARTS COVER TOP ASSY SP PARTS PWB ASSY MAIN SP PARTS PWB ASSY MAIN SP PARTS PWB ASSY MAIN EU SP PARTS PWB ASSY PANEL SP PLATE GEAR DRIVE C STOP RING /X9.5 X 0.6T S-CR SPRING STOPPER /A49 CASSETTE A4 SPRING TE SENSOR /A-49 DLP A4 SPRING LEVER LOCK L SPRING LEVER LOCK R GEAR MPF /A-49 MPF A4 PULLEY EXIT /A-49 FUSER A3 RING STOPPER /A-49 FEED A4 STOPPER 3 /2BT1107 A4 LEVER LOCK DLP LEVER REAR /A-49 CASSETTE A3 LEVER SIDE /A-49 CASSETTE A3 AC CORD ASSY US POLY SLIDER WASHER M6.2X12X0.2T CUT WASHER 5.2X9.0X0.8T(BLACK) SENSOR OPT. M.GLAZE R. 100MJ 1/2W FERRITE CORE ACCESS.BAND BAND,RSG-100(KITAGAWA)	5 11 8 8 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1

<sup>•</sup> Parts with "⊙" indicate regular maintenance parts.

# KYOCERA Document Solutions America, Inc. Headquarters

225 Sand Road,

Fairfield, New Jersey 07004-0008, USA

Phone: +1-973-808-8444 Fax: +1-973-882-6000

#### **Latin America**

8240 NW 52nd Terrace Dawson Building, Suite 100

Miami, Florida 33166, USA Phone: +1-305-421-6640 Fax: +1-305-421-6666

#### KYOCERA Document Solutions Canada. Ltd.

6120 Kestrel Rd., Mississauga, ON L5T 1S8,

Canada

Phone: +1-905-670-4425 Fax: +1-905-670-8116

# **KYOCERA Document Solutions Mexico, S.A. de C.V.**

Calle Arquimedes No. 130, 4 Piso, Colonia Polanco Chapultepec, Delegacion Miguel Hidalgo, Distrito Federal, C.P. 11560, México

Phone: +52-555-383-2741 Fax: +52-555-383-7804

### **KYOCERA Document Solutions Brazil, Ltda.**

Alameda África, 545, Pólo Empresarial Consbrás, Tamboré, Santana de Parnaíba-SP, CEP 06543-306,

Brazil

Phone: +55-11-4195-8496 Fax: +55-11-4195-6167

# KYOCERA Document Solutions Australia Pty. Ltd.

Level 3, 6-10 Talavera Road North Ryde N.S.W, 2113, Australia

Phone: +61-2-9888-9999 Fax: +61-2-9888-9588

#### KYOCERA Document Solutions New Zealand Ltd.

Ground Floor, 19 Byron Avenue, Takapuna, Auckland,

New Zealand

Phone: +64-9-415-4517 Fax: +64-9-415-4597

#### **KYOCERA Document Solutions Asia Limited**

16/F.,Mita Centre, 552-566, Castle Peak Road Tsuenwan, NT, Hong Kong

Phone: +852-2610-2181 Fax: +852-2610-2063

# **KYOCERA Document Solutions** (China) Corporation

8F, No. 288 Nanjing Road West, Huangpu District, Shanghai,200003, China

Phone: +86-21-5301-1777 Fax: +86-21-5302-8300

# KYOCERA Document Solutions (Thailand) Corp., Ltd.

335 Ratchadapisek Road, Bangsue, Bangkok 10800,

Thailand

Phone: +66-2-586-0333 Fax: +66-2-586-0278

# **KYOCERA Document Solutions Singapore Pte. Ltd.**

12 Tai Seng Street #04-01A, Luxasia Building, Singapore 534118

Phone: +65-6741-8733 Fax: +65-6748-3788

# **KYOCERA Document Solutions Hong Kong Limited**

16/F.,Mita Centre, 552-566, Castle Peak Road Tsuenwan, NT, Hong Kong Phone: +852-3582-4000

Fax: +852-3185-1399

# **KYOCERA Document Solutions Taiwan Corporation**

6F., No.37, Sec. 3, Minquan E. Rd., Zhongshan Dist., Taipei 104, Taiwan R.O.C.

Phone: +886-2-2507-6709 Fax: +886-2-2507-8432

### KYOCERA Document Solutions Korea Co., Ltd.

18F, Kangnam bldg, 1321-1, Seocho-Dong, Seocho-Gu, Seoul, Korea

Phone: +822-6933-4050 Fax: +822-747-0084

# **KYOCERA Document Solutions India Private Limited**

First Floor, ORCHID CENTRE Sector-53, Golf Course Road, Gurgaon 122 002,

India

Phone: +91-0124-4671000 Fax: +91-0124-4671001

#### KYOCERA Document Solutions Europe B.V.

Bloemlaan 4, 2132 NP Hoofddorp.

The Netherlands

Phone: +31-20-654-0000 Fax: +31-20-653-1256

#### KYOCERA Document Solutions Nederland B.V.

Beechavenue 25, 1119 RA Schiphol-Riik.

The Netherlands

Phone: +31-20-5877200 Fax: +31-20-5877260

# **KYOCERA Document Solutions (U.K.) Limited**

Eldon Court, 75-77 London Road, Reading, Berkshire RG1 5BS,

United Kingdom

Phone: +44-118-931-1500 Fax: +44-118-931-1108

#### KYOCERA Document Solutions Italia S.p.A.

Via Verdi. 89/91 20063 Cernusco s/N.(MI).

Italy

Phone: +39-02-921791 Fax: +39-02-92179-600

### **KYOCERA Document Solutions Belgium N.V.**

Sint-Martinusweg 199-201 1930 Zaventem,

Belaium

Phone: +32-2-7209270 Fax: +32-2-7208748

#### **KYOCERA Document Solutions France S.A.S.**

Espace Technologique de St Aubin Route de l'Orme 91195 Gif-sur-Yvette CEDEX.

France

Phone: +33-1-69852600 Fax: +33-1-69853409

#### KYOCERA Document Solutions Espana, S.A.

Edificio Kyocera, Avda. de Manacor No.2, 28290 Las Matas (Madrid), Spain

Phone: +34-91-6318392 Fax: +34-91-6318219

#### **KYOCERA Document Solutions Finland Oy**

Atomitie 5C, 00370 Helsinki.

Finland

Phone: +358-9-47805200 Fax: +358-9-47805390

### **KYOCERA Document Solutions**

# Europe B.V., Amsterdam (NL) Zürich Branch

Hohlstrasse 614, 8048 Zürich.

Switzerland

Phone: +41-44-9084949 Fax: +41-44-9084950

### **KYOCERA Document Solutions Deutschland GmbH**

Otto-Hahn-Strasse 12, 40670 Meerbusch,

Germany

Phone: +49-2159-9180 Fax: +49-2159-918100

#### **KYOCERA Document Solutions Austria GmbH**

Eduard-Kittenberger-Gasse 95, 1230 Vienna,

Austria

Phone: +43-1-863380 Fax: +43-1-86338-400

### KYOCERA Document Solutions Nordic AB

Esbogatan 16B 164 75 Kista, Sweden

Phone: +46-8-546-550-00 Fax: +46-8-546-550-10

# **KYOCERA Document Solutions Norge Nuf**

Postboks 150 Oppsal, 0619 Oslo.

Norway

Phone: +47-22-62-73-00 Fax: +47-22-62-72-00

#### KYOCERA Document Solutions Danmark A/S

Ejby Industrivej 60, DK-2600 Glostrup,

Denmark

Phone: +45-70223880 Fax: +45-45765850

### KYOCERA Document Solutions Portugal Lda.

Rua do Centro Cultural, 41 (Alvalade) 1700-106 Lisboa.

Portugal

Phone: +351-21-843-6780 Fax: +351-21-849-3312

# **KYOCERA Document Solutions** South Africa (Pty) Ltd.

KYOCERA House, Hertford Office Park. 90 Bekker Road (Cnr. Allandale), Midrand, South Africa.

Phone: +27-11-540-2600 Fax: +27-11-466-3050

### KYOCERA Document Solutions Russia LLC

Botanichesky pereulok 5, Moscow, 129090,

Russia

Phone: +7(495)741-0004 Fax: +7(495)741-0018

### **KYOCERA Document Solutions Middle East**

Dubai Internet City, Bldg, 17.

Office 157 P.O. Box 500817, Dubai,

**United Arab Emirates** Phone: +971-04-433-0412

# KYOCERA Document Solutions Inc.

2-28. 1-chome. Tamatsukuri. Chuo-ku Osaka 540-8585, Japan Phone: +81-6-6764-3555

http://www.kyoceradocumentsolutions.com

© 2014 KYOCERA Document Solutions Inc.

**KYDCERa** is a trademark of KYOCERA Corporation