

FS-1100 FS-1300D

PARTS LIST

Published in October 2007 2HSPL070 842HS120 First Edition

NOTES

1. Indicate parts number and parts description together with the machine model name when placing an order.

e.g.	Parts Number	Parts Name	Machine Model	Quantity
	302H508010	BASE BYPASS	FS-1100	1
	302HS08050	BASE MPF	FS-1300D	1

- 2. Symbols in the "Parts Number" column.
 - Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

e.g.	Parts Number	Parts Name	Parts Number	Parts Name
	302HS93080	CT-130	•302F909031	LEVER BASE CAS REAR
			•302F909040	SPRING BASE CAS REAR

• Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

e.g.	Parts Number	Parts Name	Parts Number	Parts Name
	•302HS94000	PLATE BOTTOM ASSY	••302F909210	PAD BOTTOM
			••302HS09110	PLATE BOTTOM

• Parts with "⊙" indicate regular maintenance parts.

—— CONTENTS ——

FIG. 2 Frames (Simplex model)	FIG. 1	Covers	2
FIG. 3 Paper Cassette FIG. 4 Paper Feed Section 1 FIG. 5 Paper Feed Section 2 FIG. 6 Image Formation Section FIG. 7 Developing Section FIG. 8 Fuser Section FIG. 9 Drive Section (Simplex model) FIG. 10 Duplex Section (Duplex model) FIG. 11 Electrical Components	FIG. 2	Frames (Simplex model)	4
FIG. 4 Paper Feed Section 1 FIG. 5 Paper Feed Section 2 FIG. 6 Image Formation Section FIG. 7 Developing Section FIG. 8 Fuser Section FIG. 9 Drive Section (Simplex model) FIG. 9 Drive Section (Duplex model) FIG. 10 Duplex Section (Duplex model) FIG. 11 Electrical Components	FIG. 2	Frames (Duplex model)	6
FIG. 5 Paper Feed Section 2	FIG. 3	Paper Cassette	8
FIG. 6 Image Formation Section	FIG. 4	Paper Feed Section 1	10
FIG. 7 Developing Section	FIG. 5	Paper Feed Section 2	12
FIG. 8 Fuser Section	FIG. 6	Image Formation Section	14
FIG. 9 Drive Section (Simplex model)	FIG. 7	Developing Section	16
FIG. 9 Drive Section (Duplex model)	FIG. 8	Fuser Section	18
FIG. 10 Duplex Section (Duplex model)	FIG. 9	Drive Section (Simplex model)	20
FIG. 11 Electrical Components	FIG. 9	Drive Section (Duplex model)	22
•	FIG. 10	Duplex Section (Duplex model)	24
FIG. 12 Parts Package	FIG. 11	Electrical Components	26
	FIG. 12	Parts Package	28
• INDEX		• INDEX	29

FIG. 1 Covers 2H5/2HS

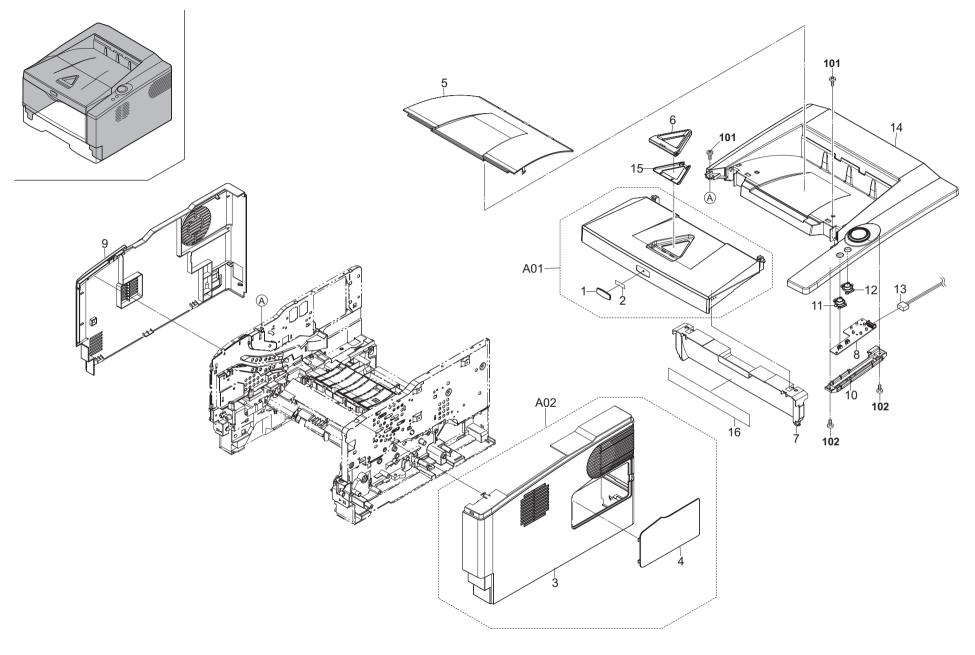


FIG. 1 Covers 2H5/2HS

	Ref. No.	Part.No.	Alternative.	Description	Quanti 120 230		Re No	Alternative.	Description	Qua 120 23	
。 。	A01 1 2 A02 A02 3 3 4 5 6 7 8 9 10 11 12 13 14 15 16	302HS94020 *302F904120 *302F904130 302HS00030 302H500010 *302HS04040 *302HS04060 302HS04070 302HS04130 302HS04030 302HS04100 302HS04100 302HS04100 302HS04100 302HS04100 302HS04100 302HS04080 302HS04080 302HS04080 302HS04080 302HS04080	2HS94020 2F904120 2F904130 2HS00030 2H500010 2HS04040 2H504010 2HS04050 2HS04070 2HS04130 2HS04130 2HS04130 2HS04100 2HS04100 2HS04110 2HS04110 2HS04110 2HS04180 2HS94010 2HS94010 2HS94010	LID TOP ASSY EMBLEM KYOCERA TAPE EMBLEM COVER RIGHT ASSY (Duplex model) COVER RIGHT (Duplex model) COVER RIGHT (Duplex model) COVER DIMM COVER TOP B COVER RACK COVER FRONT P.W.B BOARD ASSY PANEL COVER PANEL BUTTON ENTER BUTTON CANCEL CONN.CORD ASSY PANEL-RELAY S03353 COVER TOP ASSY COVER RACK B LABEL JAM TK OPERATION (Duplex model)	1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	10 10:	B1A64100 B1A63080	BIND T.T SCREW(+) / M4 X 10 CRFREE P-T BIND T.T SCREW(+) / M3 X 8 CRFREE P-T		

[•] Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

[•] Parts with ". indicate regular maintenance parts.

[•] Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

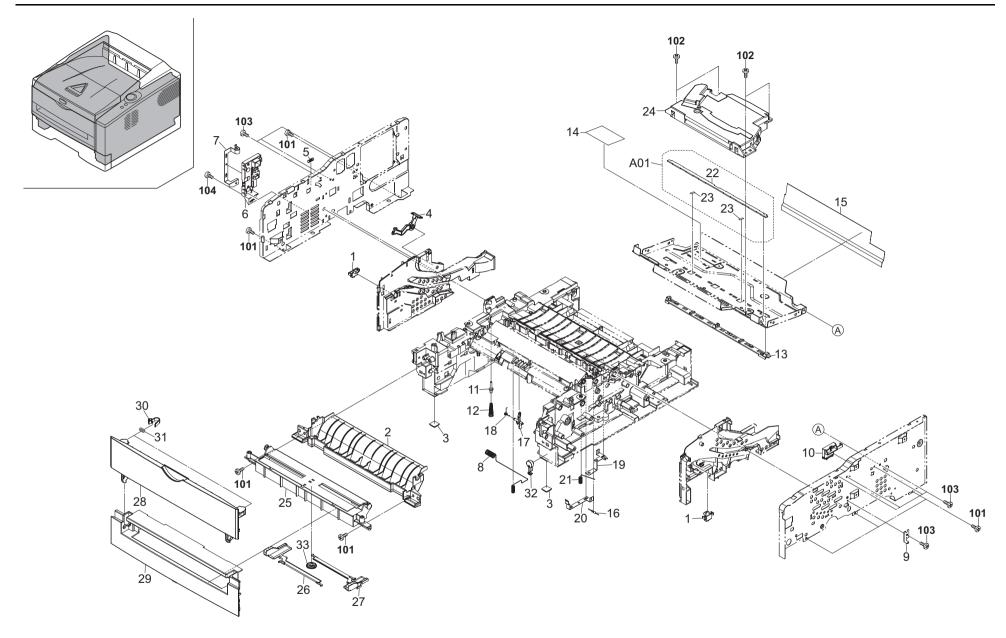


FIG. 2 Frames (Simplex model) 2H5/2HS

ſ	Ref		,		Quantity	Ref.	D 111	A11 .:	5	Qua	anti	ity
	No		Alternative.	Description	120 230 240	No.	Part.No.	Alternative.	Description	120 2		•
		Part.No. 302F902420 302HS08040 5MVX221RB014 302HS02090 302HS02100 302HS02140 302HS02140 302HS02290 302HS02250 302HS02460 302HS02470 302HS02550 302HS02580 302HS02590 7RHA2H10701+H01 302HS24060 302HS24070 302HS02500 302HS02600 302HS02600 302HS02600 302HS02600 302HS02600 302HS0000 302HS00000 302HS000000 302HS000000 302HS000000 302HS00000000000000000000000000000000000	Alternative. 2F902420 2H\$08040 2B\$03110 2H\$02090 2H\$02100 2H\$02130 2H\$02140 2H\$02290 2H\$02250 2H\$02250 2H\$02250 2H\$02500 2H\$02580 2H\$02580 2H\$02580 2H\$02580 2H\$02580 2H\$02600 2H\$24070 2H\$24080 2H\$24110 2H\$24300 2H\$93090 2H\$08010 2H\$08020 2H\$08010 2H\$08020 2H\$08020 2H\$08020 2H\$08020 2H\$08020 2H\$08050 2F925780 2H\$02650 2A806720	Description LOCK COVER TOP R GUIDE TURN MPF FOOT /43307C0007 A4 LEVER STOPPER DLP SPRING STOPPER DLP HOLDER MC PLATE CONTACT MC SPRING MC PLATE EARTH DRUM COVER CABLE B PIN CONTACT BIAS SPRING PIN BIAS HOLDER ERASER SHEET DUCT LSU SHEET DUCT LSU SHEET DUCT FD M.GLAZE R. 100MJ 1/2W ACTUATOR REGIST SPRING ACTUATOR REG PLATE EARTH HV PLATE ERATH PAPER CHUTE SPRING CONTACT TC ERASER KIT P.W.BOARD ASSY /ERASER TAPE ERASER LK-130 BASE BYPASS GUIDE BYPASS L GUIDE BYPASS L GUIDE BYPASS UP COVER BYPASS LOW LOCK COVER SPRING DU HOOK PF GEAR MPF /A-49 MPF A4			Part.No. 5MBTPB4010PW++R 7BB600308H 5MBTPB3006TW++R 5MBTPB3008PW++R	Alternative. B1A64100 BB055190 B1A53060 B1A63080	Description BIND T.T SCREW(+) / M4 X 10 CRFREE P-T +BIND SCREW M3X8 CRFREE SR BIND T.T SCREW(+) / M3 X 6 CRFREE S-T BIND T.T SCREW(+) / M3 X 8 CRFREE P-T			•

[•] Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

[•] Parts with ". indicate regular maintenance parts.

[•] Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

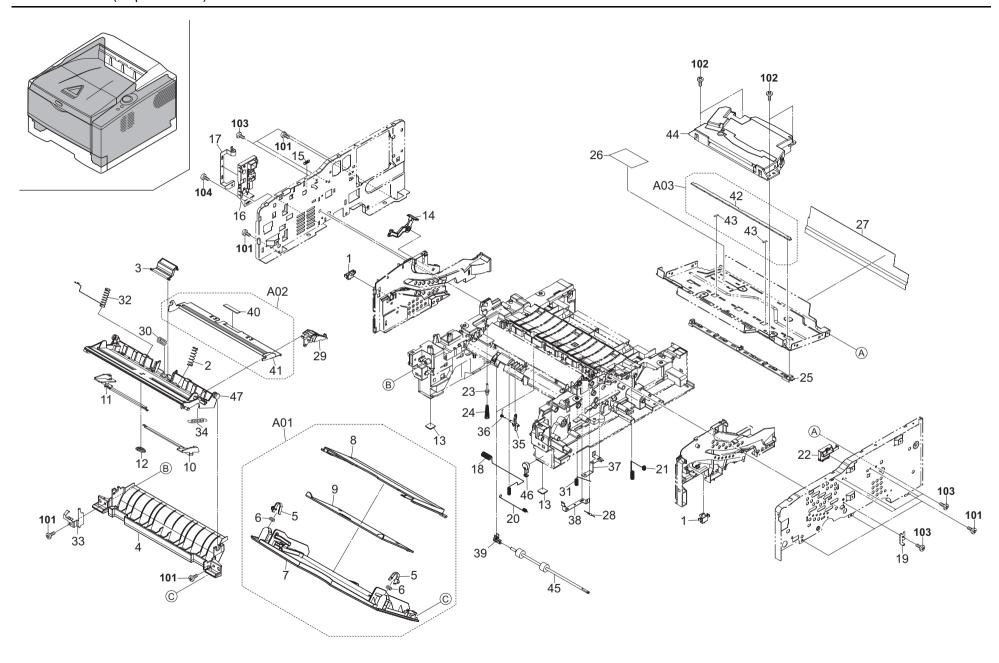


FIG. 2 Frames (Duplex model) 2H5/2HS

Ē			Traines (Bapie			0	uar	ntity	<u>, </u>	R△f	F				 Jus	nti	tv
			Part.No.	Alternative.	Description		_		_			Part.No.	Alternative.	Description			,
((F I	Ref. No. 1 2 3 4 4 A01 5 6 7 8 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27	· · ·	,	Description LOCK COVER TOP R SP BOTTOM MPF L SEPARATOR MPF ASSY GUIDE TURN MPF TRAY MPF ASSY LOCK COVER SPRING DU COVER MPF KM TRAY MPF MID TRAY MPF TOP GUIDE MPF R GUIDE MPF R GUIDE MPF L GEAR MPF /A-49 MPF A4 FOOT /43307C0007 A4 LEVER STOPPER DLP SPRING STOPPER DLP HOLDER MC PLATE CONTACT MC SPRING MC PLATE EARTH DRUM SPRING EARTH DU FEED SPRING EARTH DU FEED SPRING EARTH DU PLATE COVER CABLE B PIN CONTACT BIAS SPRING PIN BIAS HOLDER ERASER SHEET DUCT LSU SHEET DUCT FD		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	22 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	_	Ref. No. 1011 1022 1033 1044	1 2 3	Part.No. 5MBTPB4010PW++R 7BB600308H 5MBTPB3006TW++R 5MBTPB3008PW++R	Alternative. B1A64100 BB055190 B1A53060 B1A63080	Description BIND T.T SCREW(+) / M4 X 10 CRFREE P-T +BIND SCREW M3X8 CRFREE SR BIND T.T SCREW(+) / M3 X 6 CRFREE S-T BIND T.T SCREW(+) / M3 X 8 CRFREE P-T	Qua 20 23		,
(28 29 30 31 32 33 34 35 36 37 38 39 A02 40 41 A03 42 43 44 45 46 47	78HAZH10701+H01 302HS08100 302HS08170 302HS08170 302HS08210 302HS08210 302HS08270 302HS24060 302HS24070 302HS24070 302HS24110 302HS24110 302HS24110 302HS94150 *302HS94110 *302HS94150 *302HS93090 302HS93090 302HS94160 302HS93090 302HS93090 302HS93090	RH043740 2HS08100 2HS08170 2HS08210 2HS08210 2HS08230 2HS08270 2HS24060 2HS24070 2HS24080 2HS24070 2HS24080 2HS24110 2HS94050 2HS94110 2HS08180 2HS08180 2HS08180 2HS08180 2HS08650 2HS02650 2HS02650 2HS08050	M.GLAZE R. 100MJ 1/2W BRACKET BOTTOM SPRING SEPARATOR SPRING CONTACT TC SPRING EARTH MPF PLATE EARTH BOTTOM SPRING BRACKET ACTUATOR REGIST SPRING ACTUATOR REG PLATE EARTH HV PLATE EARTH HV PLATE ERATH PAPER CHUTE BUSH 4 DU ROLL PLATE BOTTOM MPF ASSY PAD FRICTION MPF PLATE BOTTOM MPF ERASER KIT P.W.BOARD ASSY /ERASER TAPE ERASER LK-130 ROLLER DU HOOK PF BASE MPF	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	11 11 11 11 11 11 11 11 11 11 11 11 11		111111111111111111111111111111111111111								

Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

[•] Parts with ". indicate regular maintenance parts.

[•] Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 3 Paper Cassette 2H5/2HS

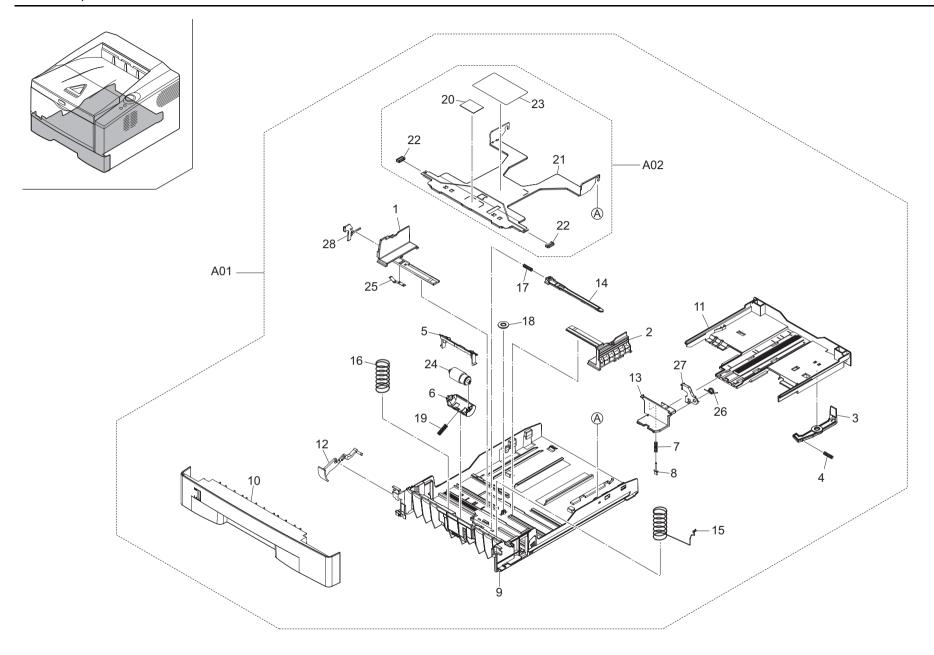


FIG. 3 Paper Cassette 2H5/2HS

	Ref.	Part.No.	Alternative.	Description	Qı	uant	ity
	No.	i ait.ivo.	Alternative.	Description	120	230	240
• •	A01 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28	302HS93080 *2FM06010 *2FM06020 *302F909031 *302F909040 *302GJ09110 *302HN09190 *302HN09240 *302HS09010 *302HS09010 *302HS09070 *302HS09080 *302HS09100 *302HS09100 *302HS09180 *302HS09110 *302HS09180 *302HS09180 *302HS09180 *302HS09180 *302HS09180 *302HS09180 *302HS09100 *302HS09100 *302HS09100 *302HS09100 *302HS0910 *302HS09100	2HS93080 5MVX765SH004 5MVX765SH005 2F909031 2F909040 2GJ09110 2GJ09120 2HN09190 2HN09240 2HS09010 2HS09020 2HS09040 2HS09010 2HS09100 2HS09110 2HS09110 2HS09110 2HS09110 2HS09150 2HS09160 2HS09180 2HS09180 2HS09180 2HS09181 2HS09110	CT-130 GUIDE SIDE L /B-11 CASSETTE A2 GUIDE SIDE R /B-11 CASSETTE A2 LEVER BASE CAS REAR SPRING BASE CAS REAR GUIDE RETARD HOLDER RETARD SPRING FIX SIZE FIX BASE CASSETTE COVER CASSETTE KM BASE CASSETTE KM BASE CASSETTE REAR PAPER INDICATOR CURSOR END LOCK BOTTOM SPRING BOTTOM L SPRING BOTTOM R SPRING LOCK BOTTOM GEAR CASSETTE SPRING RETARD PLATE BOTTOM ASSY PAD BOTTOM LABEL OPERATION RETARD ROLL ASSY /43487V0005 A4 PLATE SIDE GUIDE /A49 CASSETTE A4 LEVER REAR /A-49 CASSETTE A3 LEVER SIDE /A-49 CASSETTE A3	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1111111111111111111211111	111111111111111111111111111111111111111

[•] Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

• Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

[•] Parts with ". indicate regular maintenance parts.

FIG. 4 Paper Feed Section 1 2H5/2HS

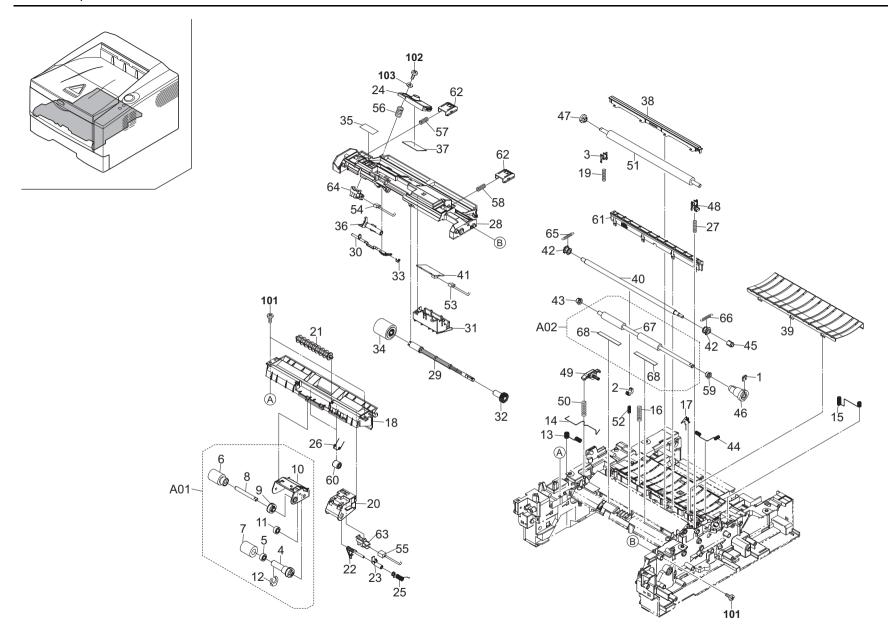


FIG. 4 Paper Feed Section 1 2H5/2HS


-	. • .	- r apor r cca o		_				_			T	1	T			
	Ref.	Don't Mo	A 14 45	Description	(Qua	antit	y		Ref.	Dt N-	A 14 45	Description	C	Quan	ntity
	No.	Part.No.	Alternative.	Description	1	20 2	30 2	40		No.	Part.No.	Alternative.	Description	12	0 23/	0 240
_	+				- 11	20 2	30 2	10						12	7200	7270
	1	2BC06980		STOPPER 5		1	1	1		50	302HS24280	2HS24280	SPRING RELEASE TC L	1	1 1	1
	2	2FM02180	5MVX221DN020	BUSH REGIST C /B-11 FRAME A3		: 1	il	1	•	51	302HS24170	2HS24170	ROLLER TRANSFER E	'	1	
•		302A816031	2A816031	BUSH TC R /A-49 FEED A4		1	1	1	⊙	51	302HS24340	2HS24340	ROLLER TRANSFER U	1	ιΙ.	1 .
	A01	302HS94030	2HS94030	HOLDER FEED ASSY		¦	1	1		52	302HS24360	2HS24360	SPRING REGIST C	'	i I 1	1
	4	•302F906170	2F906170	JOINT PICKUP A		<u> </u>	1	1		53	302HS46050	2HS46050	CONN.CORD ASSY CONTROL-RFID S03244	'	1	
		•302F906170 •302F906180		JOINT PICKUP B		<u> </u>	1	,			302HS46050 302HS46150		CONN.CORD ASSY CONTROL-RFID 303244	1		
	5		2F906180			1	1	1		54	302HS46150	2HS46150		1	1	1 1
	6	•302F906230	2F906230	PULLEY FEED ASSY		<u> </u>	1	<u> </u>			20211546460	011046460	S03251 (Duplex model)	1		
	7	•302F906240	2F906240	PULLEY PICKUP ASSY		1	1	1		55	302HS46160	2HS46160	CONN.CORD ASSY CONTROL-P.SENSOR S033	1 !	1	
	8	•302F906270	2F906270	SHAFT FEED L		1]		56	5MMW261LD036	2A814570	SPRING TE SENSOR /A-49 DLP A4	1 1	.]	1
	9	•302F906280	2F906280	GEAR FEED Z30H		1	1	1		57	5MMW261LD067	2FV02270	SPRING LEVER LOCK L	1	. 1	1 1
	10	*302HS06020	2HS06020	HOLDER FEED		1	1	1		58	5MMW261LD068	2FV02280	SPRING LEVER LOCK R	1	1	
•		•302HS06090	2HS06090	GEAR Z22S FEED		1	1	1		59	5MVM176DN016	2BR20170	BUSH A /45309P0135 A4	1	1	1
•		•5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4		1	'	1		60	5MVM273DB005	2A820100	PULLEY EXIT /A-49 FUSER A3 (Duplex model)	2		
	13	302HS02250	2HS02250	SPRING EARTH REG UP		1		1	⊙	61	302HS94060	2HS94060	HOLDER DC BRUSH ASSY	1	1 1	
	14	302HS02260	2HS02260	SPRING EARTH REG LOW		1		1	•	62	5MVX431DN005	2FV02100	LEVER LOCK DLP	2		
	15	302HS02340	2HS02340	SPRING EARTH RIGHT		1		1		63	7NXSG2481+++H01	NX052600	SENSOR OPT.	1	l 1	
	16	302HS02410	2HS02410	SPRING EARTH DU MID (Duplex model)		1		1		64	7NXSG2481+++H01	NX052600	SENSOR OPT. (Duplex model)	1	l 1	
	17	302HS02440	2HS02440	SPRING EARTH DLP PLATE		1	1	1	•	65	302HS24350	2HS24350	SPRING REGIST L	1	. 1	1
	18	302HS06010	2HS06010	FRAME FEED		1	1	1	•••	66	302HS24240	2HS24240	SPRING REGIST R	1	. 1	1
	19	302G622010	2G622010	SPRING TC L		1	1	1	•	A02	302HS94080	2HS94080	REGIST LOW KIT	1	. 1	1
	20	302HS06040	2HS06040	GUIDE FEED R		1	1	1		67	*302HS24050	2HS24050	ROLLER REGIST LOW	1	1	1
	21	302HS06050	2HS06050	PULLEY FEED		1	1	1		68	•302HS24180	2HS24180	SHEET REGIST	2	2 2	2 2
•	22	302HS06060	2HS06060	ACTUATOR EMPTY A		1	1	1								
•		302HS06070	2HS06070	ACTUATOR EMPTY B		1	1	1								
•		302HS01060	2HS01060	P.W.BOARD ASSY /EMPTY SENSOR		1	1	1								
	25	302HS06120	2HS06120	SPRING ACTUATOR		1	1	1								
	26	302HS06130	2HS06130	SPRING PULLEY (Duplex model)		2	2	2								
	27	302FV02490	2FV02490	SPRING TC R				1		101	5MBTPB4010PW++R	B1A64100	BIND T.T SCREW(+) / M4 X 10 CRFREE P-T			
	28	302HS08010	2HS08010	FRAME MPF		·		1		102	BAA63080	B 17 (0 1 1 0 0	+TP TAP-TITE P SCREW M3X08			
	29	302HS08080	2HS08080	SHAFT FEED MPF (Duplex model)		<u> </u>	1	1		103	7BC00030A080H01	BC046150	WASHER M3X10X0.8T			
•		302HS08110	2HS08110	ACTUATOR MPF (Duplex model)		¦	1	1		100	7 20000007 10001 101	D0040100	WAGIER MOXIOXO.01			
	31	302HS08140	2HS08140	BASE IC PWB		¦		1								
•		302HS08160	2HS08160	GEAR Z20S MPF (Duplex model)		<u> </u>	1	1								
	33	302HS08190	2HS08190	SPRING ACTUATOR (Duplex model)		1	1	1								
(•		302HS08260	2HS08260	ROLLER M/P ASSY (Duplex model)		<u>'</u>		1								1 1
	35	302HS08290	2HS08290	FILM SENSOR (Duplex model)		1	<u> </u>	1								
	36	302HS08300	2HS08300			¦│	¦	1								
_				HOLDER FEED M/P (Duplex model)		1	1	1								
•		302HS08310	2HS08310	FILM TE SENSOR		<u> </u>	1	1								
	38	302HS24010	2HS24010	GUIDE PAPER CHUTE		<u> </u>	11	1								
1 ~	39	302HS24020	2HS24020	GUIDE EARTH		1	'	1								
•		302HS24040	2HS24040	ROLLER REGIST UP		1	1	1								1 1
	41	302HS01130	2HS01130	P.W.B RFID WITH SOFTWARE		1	1	1								
	42	302HS24120	2HS24120	BUSH REGIST		- 1		2								1 1
	43	302HS24140	2HS24140	BUSH 6 EW		1		1								
	44	302HS24310	2HS24310	SPRING EARTH BRUSH		1	'	1								
(302HS24190	2HS24190	GEAR Z14R REG UP		1	'	1								
•	_	302HS24200	2HS24200	GEAR Z21L-Z23L REG LOW		1	1	1								
•		302HS24210	2HS24210	GEAR Z16L TC		1	1	1								1 1
•		302HS24250	2HS24250	BUSH TC R		1	1	1								
	49	302HS24260	2HS24260	LEVER RELEASE TC L		1	1	1								1 1
_				•		_			_					-		

[•] Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

[•] Parts with ". indicate regular maintenance parts.

[•] Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 5 Paper Feed Section 2 2H5/2HS

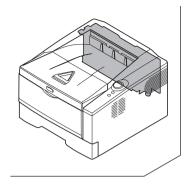

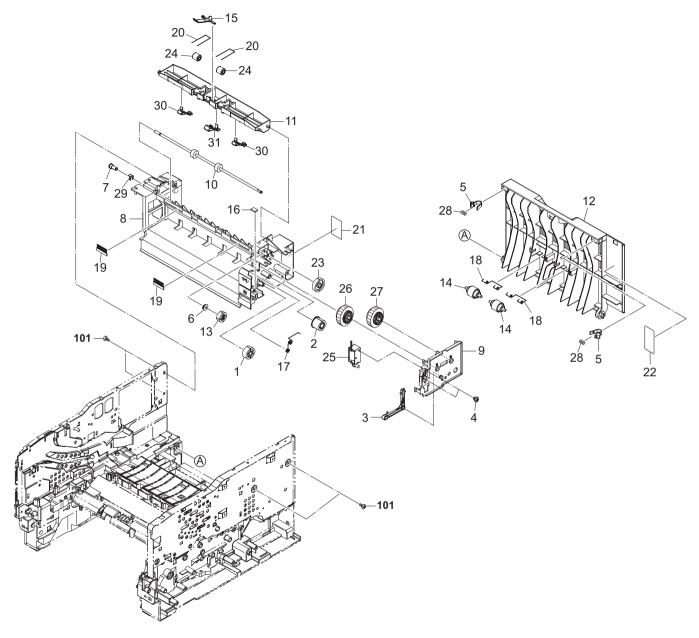



FIG. 5 Paper Feed Section 2 2H5/2HS


⊙ 1 2BL06380 GEAR Z25 JOINT 1 1 1 1 1 1 1 1 5MBTPB4010PW++R B1A64100 BIND T.T SCREW(+) / M4 X 10 0 2 2FM20050 5MVX651DN001 LEVER SOLENOID /B-11 FD A3 1 <t< th=""><th>10 CRFREE P-T</th><th></th><th></th></t<>	10 CRFREE P-T		
4 302F325910 2F3526910 STUD SCREW M3 (Ouplex model) 2 2 2 2 2 3 3 3 3 3 3			

[•] Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

[•] Parts with ". indicate regular maintenance parts.

[•] Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

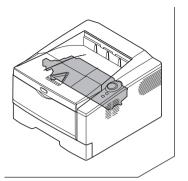

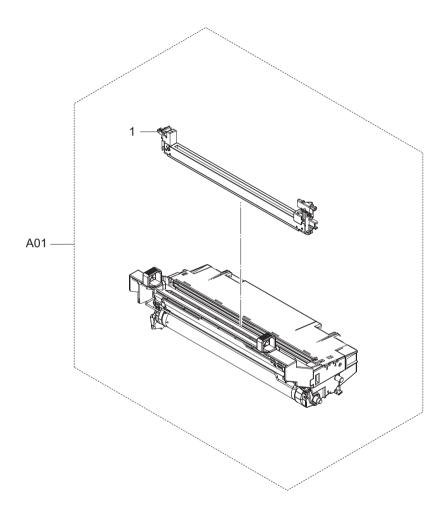


No. No. Atternative. Description 120 230 240 ⊙ A01 302HS93010 2HS93010 DK-130 1 1 1 1		Ref.	-		Description	Qı	ıant	tity
O A01 302HS93010 2HS93070 DK-130 DK-130		No.	rait.No.	Alternative.	Description	120	230	240
	• •	Ref. No.	302HS93010	Alternative.	DK-130 MC-130	120 1	230	240 1

[•] Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

[•] Parts with ". indicate regular maintenance parts.

[•] Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 7 Developing Section 2H5/2HS

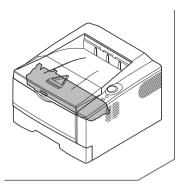

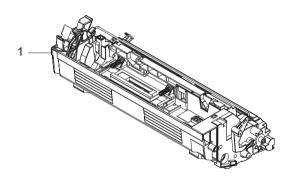


FIG. 7 Developing Section 2H5/2HS

ļ	Ref.	Part No.	Alternative	Description		uant	
	No.	T GILLING.	7 tterriative:	Bescription	120	230	240
	Ref. No.	Part.No. 302H593020 302H593100 302H593010 302H593030 302H593140	Alternative. 2H593020 2H593100 2H593010 2H593020 2H593030 2H593030 2HS93140	DV-142(U) (Simplex model) DV-132(U) (Duplex model) DV-140(E) (Simplex model) DV-130(E) (Duplex model) DV-134(AO) (Simplex model) DV-134(AO) (Duplex model)			1 1 1

Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

• Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

[•] Parts with ". indicate regular maintenance parts.

FIG. 8 Fuser Section 2H5/2HS

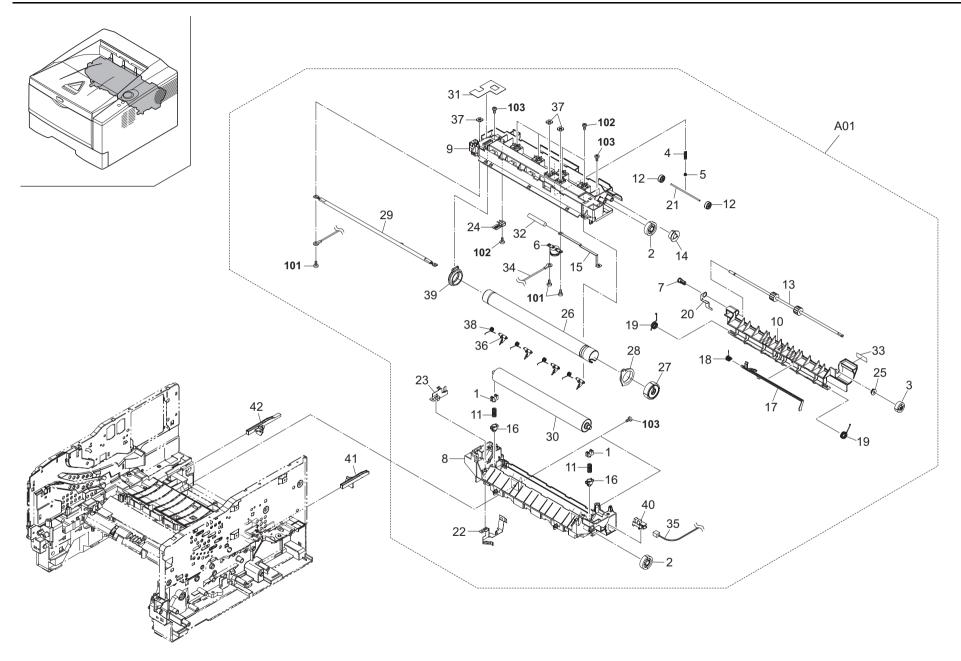



FIG. 8 Fuser Section 2H5/2HS

Re No	Dart No.	Alternative.	Description	Qu:	anti 230 2	,	Ref No.		Part.No.	Alternative.	Description		uan 0 230		_
A0 A0	1 302HS93050 1 302HS93040 1 2BY20070 2 302F925080 3 302F925080 3 302F925901 4 302F925901 5 302HS25010 3 302HS25010 3 302HS25010 3 302HS25000 3 302HS25060 4 302HS25060 4 302HS25060 4 302HS25060 4 302HS25100 7 302HS25110 3 302HS25110 3 302HS25110 3 302HS25100 7 302HS25110 3 302HS25100 7 302HS25100 3 302HS25200 3 302HS25300 3 302HS25300 3 302HS25300 3 302HS25400 3 302HS25400 3 302HS25400 3 302HS25400 3 302HS25400 3 302HS25400 3 302HS25400 3 302HS25400 3 302HS25410 3 302HS25400 3 302HS25500 3 302HS25500 3 302HS25500 3 302HS25400 3 302HS25500 3 302HS2500 3 302HS25500 3 302HS25500 3 302HS25500 3 302HS25500 3 302	2HS93050 2HS93040 5MVX221XN004 2F925080 2F925140 2F925340 2F925340 2F9255010 2HX25450 2HS25010 2HS25050 2HS25050 2HS25050 2HS25050 2HS25050 2HS25050 2HS25100 2HS25100 2HS25100 2HS25100 2HS25100 2HS25100 2HS25110 2HS25200 2HS25200 2HS25240 2HS252400 2HS252400 2HS252400 2HS252400 2HS252400 2HS252400 2HS252500 2HS252000 2HS252000 2HS252200	FK-130(U) FK-130(E) BUSH PRESS /49523A0152 A4 GEAR IDLE A Z29 GEAR EXIT Z21 SPRING EXIT CAP SPRING EXIT THERMOSTAT M FUSER BUSH EXIT FRAME FUSER LOW FRAME FUSER UP GUIDE EXIT LOW SPRING PRESSURE PULLEY EXIT FUSER ROLLER EXIT GEAR Z18S IDLE PLATE CODE HOLDER SPRING PRESS ACTUATOR FUSER SPRING ACTUATOR SPRING EXIT L PLATE EARTH EXIT SHAFT EXIT PLATE EARTH CLLER THERMISTOR FUSER BUSH FUSER ROLLER HEAT GEAR Z36S HEAT BUSH HEAT R HEATER LAMP U HEATER LAMP E ROLLER PRESS SHEET FUSER TUBE PLATE CODE LABEL FUSER OPERATION (Duplex model) CONN.CORD ASSY PWS-HEATER(U) S03306 CONN.CORD ASSY PWS-HEATER(E) S03305 CONN.CORD ASSY CONTROL-EXITSENSOR S0 SEPARATOR ASSY /FS-1000 A4 NUT FUSER A /FS-1800/3800 A4 SPRING SEPARATOR /FS-1000 A4 BUSH HEAT L /43307P0003 A4 SENSOR OPT. LEVER FUSER L	1 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	230 2 1 2 2 1 1 1 1 1 1 1 2 2 1 1 1 2 1 1 1 1	1 2 2 1 1 1 1 1 1 1 2 2 1 1 1 2 1 1 2 1	No. 1011 102 103	1 2	5MBSP43006NW++R 5MBTPB3012PW++R 5MBTPB4010PW++R	B4A03060 B1A63120 B1A64100	TP HEAD SCREW(+) / M3 X 6 DRFREE BIND T.T SCREW(+) / M3 X 12 CRFREE P-T BIND T.T SCREW(+) / M4 X 10 CRFREE P-T	120) 230	24) (

Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

[•] Parts with ". indicate regular maintenance parts.

[•] Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

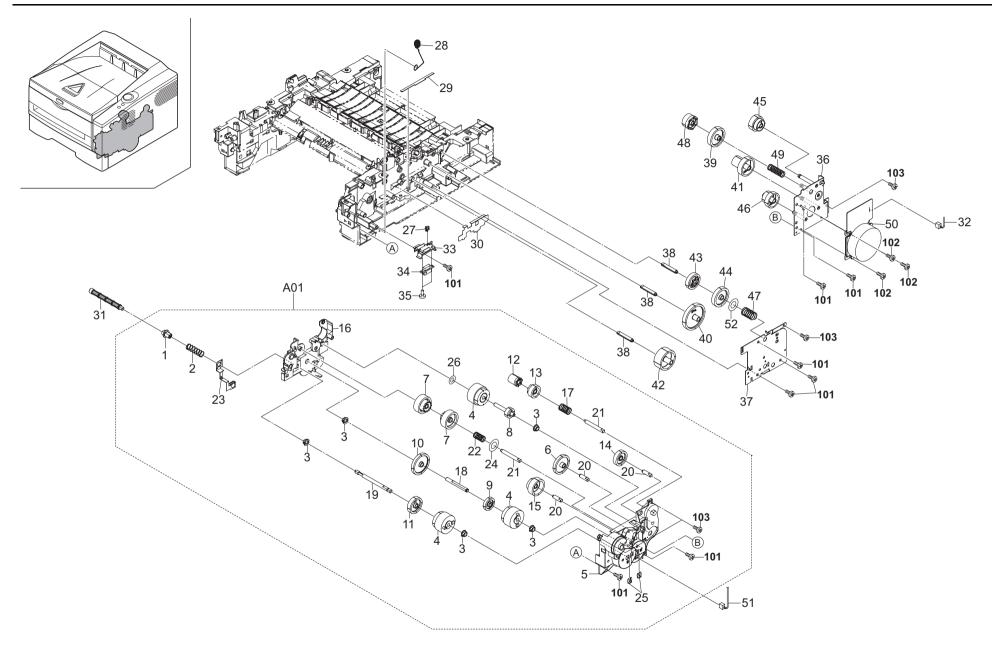


	Ref. No.	Part.No.	Alternative.	Description	_	uant 230	_			Ref. No.	Part.No.	Alternative.	Description		uar 230	tity 240)
•	404	20011202040	011500040	DD 440	4	1	4		•	F0	302HS44010	211044040	MOTOR MAIN	1	1	1	
•	A01	302H593040 •302F931350	2H593040 2F931350	DR-140 JOINT SHAFT CASSETTE	1	1	1	(٠	50 51	302HS46210	2HS44010 2HS46210	CONN.CORD ASSY CONTROL-F/RCLUTCH S03				
	1				1					52	302HS31430	2HS31430	POLYSLIDER 9.5	1			
	2	•302F931450	2F931450	SPRING FEED	1	1	1			52	3020331430	20031430	POLISLIDER 9.5	'	'	'	
	3	•302F931490	2F931490	BUSH FEED DRIVE	5	5	5										
•	4	•302HN44110	2HN44110	CLUTCH FEED	3	3	3										
	5	•302HS31030	2HS31030	DRIVE HOLDER	1	1	1										
•	6	•302HS31080	2HS31080	GEAR Z42R	1	1	1										
•	7	•302HS31090	2HS31090	GEAR Z37L FREE	2	2	2										
•	8	•302HS31100	2HS31100	GEAR Z20L CLUTCH	1	1	1			101	5MBTPB4010PW++R	B1A64100	BIND T.T SCREW(+) / M4 X 10 CRFREE P-T				
•	9	•302HS31120	2HS31120	GEAR Z27L CLUTCH	1	1	1			102	BAB53060		+TP TAP-TITE S SCREW M3X06				
•	10	•302HS31130	2HS31130	GEAR Z45R CLUTCH	1	1	1			103	5MBTPB3006TW++R	B1A53060	BIND T.T SCREW(+) / M3 X 6 CRFREE S-T				
•	11	•302HS31140	2HS31140	GEAR Z35R IDLE	1	1	1										
•	12	•302HS31190	2HS31190	GEAR Z17R FREE	1	1	1										
•	13	•302HS31200	2HS31200	GEAR Z26L FREE	1	1	1										
•	14	•302HS31260	2HS31260	GEAR Z32R	1	1	1										
•	15	•302HS31270	2HS31270	GEAR Z34L-Z24L	1	1	1										
	16	•302HS31290	2HS31290	DRIVE HOLDER COVER	1	1	1										
	17	•302HS31320	2HS31320	SPRING FREE MAG	1	1	1										
	18	•302HS31330	2HS31330	PIN CLUTCH	1	1	1										
	19	•302HS31340	2HS31340	SHAFT CASSETTE	1	1	1										
	20	•302HS31360	2HS31360	PIN HOLDER A	3	3	3										
	21	•302HS31370	2HS31370	PIN HOLDER B	2	2	2										
	22	•302HS31410	2HS31410	SPRING FREE Z37L	1	1	1										
	23	•302HS31420	2HS31420	EARTH PLATE DRIVE	1	1	1										
	24	•302HS31430	2HS31430	POLYSLIDER 9.5	1	1	1										
•	25	•5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4	2	2	2										
	26	•7BC06062C020H01	BC045240	POLY SLIDER WASHER M6.2X12X0.2T	1	1	1										
	27	7YZM610007++H01	YZ023340	ACCESS.SADDLE	1	1	1										
	28	302HS02370	2HS02370	SPRING EARTH CASSETTE	1	1	1										
	29	302HS02520	2HS02520	COVER CABLE E	1	1	1										
	30	302HS02530	2HS02530	COVER CABLE F	1	1	1										
	31	302HS06110	2HS06110	SHAFT FEED	1	1	1										
	32	302HS46040	2HS46040	CONN.CORD ASSY CONTROL-MAIN MOTOR SO	1	1	1										
	33	302HS02380	2HS02380	PLATE PF CONNECTOR	1	1	1										
	34	302HS46030	2HS46030	CONN.CORD ASSY CONTROL-PF S03247	1	1	1										
	35	302HS02540	2HS02540	PIN DRAWER	2	2	2										
•	36	302HS31020	2HS31020	PLATE DRIVE	1	1	1										
	37	302HS31040	2HS31040	PLATE GEAR DRIVE	1	1	1								1		
	38	302HS31060	2HS31060	PIN GEAR DRIVE	3	3	3										
0	39	302HS31070	2HS31070	GEAR Z42R FREE 2	1	1	1								1		
•	40	302HS31110	2HS31110	GEAR Z58L	1	1	1										
•	41	302HS31170	2HS31170	GEAR Z64R-Z21L	1	1	1										
0	42	302HS31180	2HS31180	GEAR Z44R	1	1	1								1		
•	43	302HS31210	2HS31210	GEAR Z35S FREE	1	1	1								1		
0	44	302HS31220	2HS31220	GEAR Z42R FREE	1	1	1								1		
• •	45	302HS31240	2HS31240	GEAR Z32L DRUM	1	1	1								1		
•	46	302HS31250	2HS31250	GEAR Z54R-Z24R	1	1	1								1		
	47	302HS31310	2HS31310	SPRING FREE FUSER	1	1	1								1		
•	48 49	302HS31390 302HS31400	2HS31390 2HS31400	GEAR Z27R FREE 2	1	1	1										
	49	3020331400	20031400	SPRING FREE DRUM	'										1		
			1	nt parts or out accompline of the									nont parte or out good blowith "-"		1	Щ.	

Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

[•] Parts with ". indicate regular maintenance parts.

[•] Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

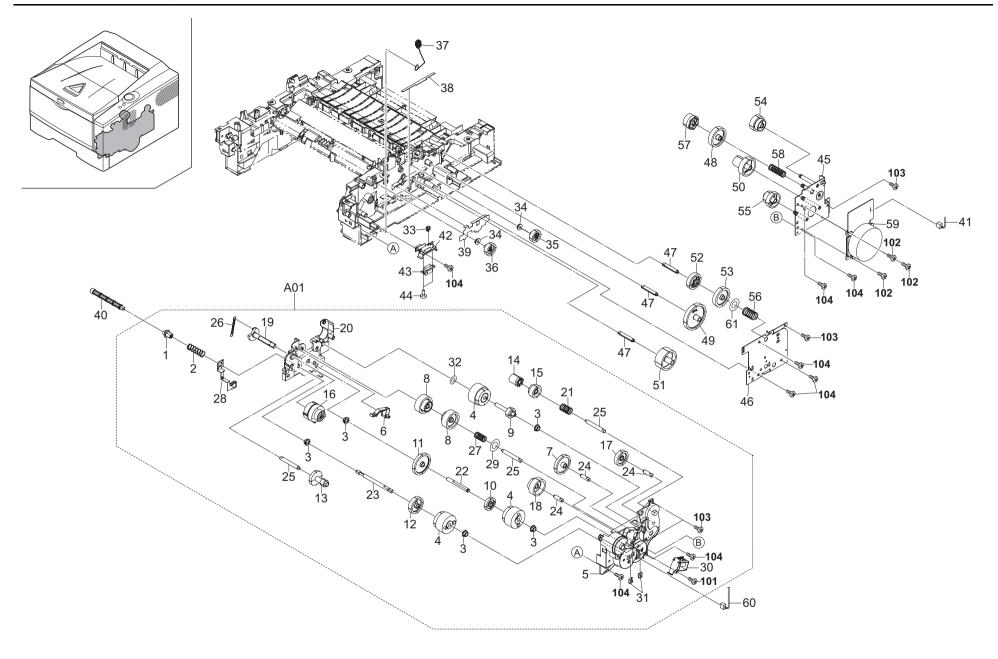



	Ref.	Part.No.	Alternative.	Description	Qu 120	uant 230				Ref. No.	Part.No.	Alternative.	Description	_	_	ntity 30 240	_
	5 6 7 8 9 10 11 11 12	*302F931490 *302HN44110 *302HS31030 *302HS31050 *302HS31080 *302HS31190 *302HS31100 *302HS31120 *302HS31130 *302HS31140 *302HS31150	2HS93060 2F931350 2F931450 2F931450 2F931490 2HN44110 2HS31030 2HS31050 2HS31080 2HS31090 2HS311100 2HS311120 2HS31130 2HS31130 2HS31140 2HS31150 2HS31150	DR-130 JOINT SHAFT CASSETTE SPRING FEED BUSH FEED DRIVE CLUTCH FEED DRIVE HOLDER LEVER LIFT BOTTOM GEAR Z42R GEAR Z37L FREE GEAR Z20L CLUTCH GEAR Z27L CLUTCH GEAR Z45R CLUTCH GEAR Z31L-Z14S GEAR Z17R FREE	1 1 1 5 3 1 1 1 2 1 1 1 1	1 1 1 5 3 1 1 1 2 1 1 1 1 1 1 1	1 1 1 5 3 1 1 1 2 1 1 1 1	•	0 0	50 51 52 53 54 55 56 57 58 59 60 61	302HS31170 302HS31180 302HS31210 302HS31220 302HS31240 302HS31250 302HS31310 302HS31310 302HS31400 302HS31400 302HS44010 302HS44010 302HS44010 302HS431430	2HS31170 2HS31180 2HS31210 2HS31220 2HS31220 2HS31250 2HS31310 2HS31390 2HS31400 2HS4010 2HS44010 2HS46210 2HS31430	GEAR Z64R-Z21L GEAR Z44R GEAR Z45S FREE GEAR Z42R FREE GEAR Z32L DRUM GEAR Z54R-Z24R SPRING FREE FUSER GEAR Z27R FREE 2 SPRING FREE DRUM MOTOR MAIN CONN.CORD ASSY CONTROL-F/RCLUTCH S03 POLYSLIDER 9.5	1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
	155 166 177 188 199 200 211 222 233 244 255 266 277 288 299 300 300	*302HS31200 *302HS31230 *302HS31280 *302HS31280 *302HS31280 *302HS31320 *302HS31330 *302HS31340 *302HS31340 *302HS31370 *302HS31340 *302HS31410 *302HS31420 *302HS31430 *302HS31440	2HS311200 2HS31230 2HS31260 2HS31270 2HS31280 2HS31290 2HS31320 2HS31330 2HS31330 2HS31340 2HS31370 2HS31340 2HS31370 2HS31370 2HS31410 2HS31410 2HS31420 2HS31430 2HS4020 2A806250 BC045240 YZ023340 2F929140 2HS24220 2HS24220	GEAR Z26L FREE GEAR Z38S MPF GEAR Z32R GEAR Z32R GEAR Z34L-Z24L LIFT BOTTOM DRIVE HOLDER COVER SPRING FREE MAG PIN CLUTCH SHAFT CASSETTE PIN HOLDER A PIN HOLDER A PIN HOLDER B SPRING LIFT BOTTOM SPRING FREE Z37L EARTH PLATE DRIVE POLYSLIDER 9.5 SOLENOID MPF RING STOPPER /A-49 FEED A4 POLY SLIDER WASHER M6.2X12X0.2T ACCESS.SADDLE BUSH DU GEAR Z25R DU FEED GEAR Z25R DU FEED	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 3 3 1 1 1 1 2 1 1 2 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			101 102 103 104	5MBTPB3008PW++R BAB53060 5MBTPB3006TW++R 5MBTPB4010PW++R	B1A63080 B1A53060 B1A64100	BIND T.T SCREW(+) / M3 X 8 CRFREE P-T +TP TAP-TITE S SCREW M3X06 BIND T.T SCREW(+) / M3 X 6 CRFREE S-T BIND T.T SCREW(+) / M4 X 10 CRFREE P-T				
0	37 38 39 40 41 42 43 44 45 46 47 48	302HS02370 302HS02520 302HS02530 302HS06110 302HS46040 302HS02380 302HS02380 302HS02540 302HS02540 302HS31020 302HS31040 302HS31070	2HS02370 2HS02520 2HS02530 2HS06110 2HS46040 2HS02380 2HS46030 2HS02540 2HS31020 2HS31040 2HS31070 2HS31070 2HS31110	SPRING EARTH CASSETTE COVER CABLE E COVER CABLE F SHAFT FEED CONN.CORD ASSY CONTROL-MAIN MOTOR SO PLATE PF CONNECTOR CONN.CORD ASSY CONTROL-PF S03247 PIN DRAWER PLATE DRIVE PLATE GEAR DRIVE PIN GEAR DRIVE GEAR Z42R FREE 2 GEAR Z58L	1 1 1 1 1 1 2 1 1 3 1	1 1 1 1 1 1 2 1 1 3 1	1 1 1 1 1 1 1 2 1 1 3 1										

Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

[•] Parts with ". indicate regular maintenance parts.

[•] Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

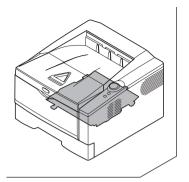

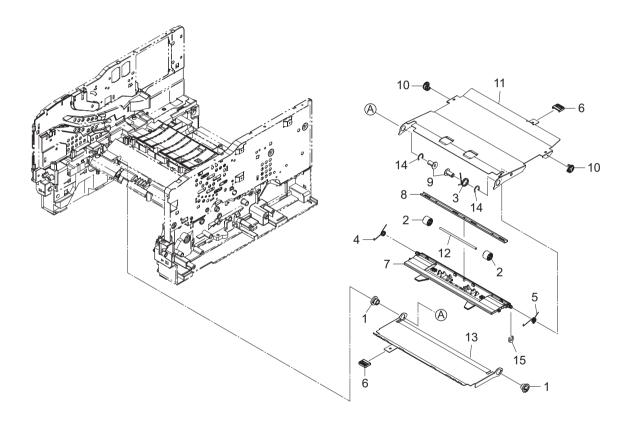

	Ref.	Duplex Section	<u> </u>	, 	Qı	uant	ity
	No.	Part.No.	Alternative.	Description		230	_
•	No. 1 2 3 4 5 6 6 7 8 9 10 11 12 13 14 15	2FM02140 2FM02210 2FM02500 2FM02510 2FM02520 2FM02690 2FM21010 2FM21030 2FM21050 302HS29020 302FM02421 302HS29010 5MBCK9560XSC 5MVX111DN003	5MVM786XB001 5MVM274DN002 5MMW176SD002 5MMW166SD002 5MWW166SD003 5MVX221DG002 5MVX861XB001 5MML821SD009 5MVM276DN017 5MVX173DN001 2HS29020 2FM02421 2HS29010 D4103700 2A806250	BUSH DU /B-11 FRAME A3 PULLEY MID /B-11 FRAME A4 SPRING DU R /B-11 FRAME A4 SPRING HOLDER L /B-11 FRAME A4 SPRING HOLDER R /B-11 FRAME A4 LEVER DU /B-11 DU A3 HOLDER DU /B-11 DU A1 STAY DU /B-11 DU A3 STOPPER BUSH /B-11 DU A4 COLLER DU /B-11 DU A3 PLATE COVER DU B SHAFT PULLEY /B-11 FRAME A4 PLATE COVER DU C STOP RING /X9.5 X 0.6T S-CR RING STOPPER /A-49 FEED A4	120 2 2 1 1 1 2 2 1 1 1 2 2 1 1 1 1 2 1	230 2 2 1 1 1 2 2 1 1 1 2 2 1 1 1 2 2 1	240 2 2 1 1 1 2 2 1 1 1 2 2 1 1 1 2 2 1 1 1 2 2 1 1 1 2 2 1 1 1 2 2 1 1 1 1 2 2 1 1 1 1 2 2 1 1 1 1 2 2 1 1 1 1 2 2 1 1 1 1 1 2 2 1 1 1 1 1 2 2 1 1 1 1 1 2 2 1 1 1 1 1 2 2 1 1 1 1 1 1 2 1

[•] Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

[•] Parts with ". indicate regular maintenance parts.

Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 11 Electrical Components 2H5/2HS

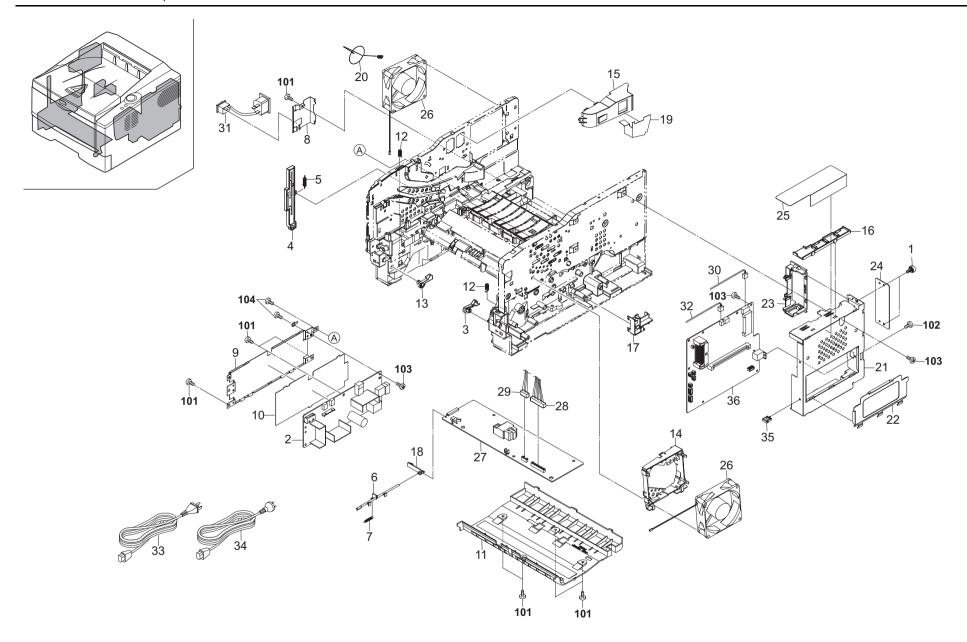


FIG. 11 Electrical Components 2H5/2HS

Ref. No.	Part.No.	Alternative.	Description	Qua	antit	,	Ref. No.	Part.No.	Alternative.	Description		uant 230	
No. 1 2 2 3 4 4 5 6 6 7 8 8 9 100 111 122 13 134 145 166 177 18 19 200 21 222 233 24 25 266 277 288 29 30 31 322 333 34 35 36 36 36	302F939081 302HS45020 302HS45010 302HS02110 302HS02110 302HS02120 302HS02180 302HS02210 302HS02210 302HS02240 302HS02280 302HS02360 302HS02360 302HS02360 302HS02450 302HS02450 302HS02450 302HS02510 302HS02510 302HS02510 302HS02510 302HS0250 302HS39010 302HS39010 302HS39010 302HS39010 302HS39010 302HS39010 302HS46010	2F939081 2HS45020 2HS45010 2HS02070 2HS02110 2HS02110 2HS02180 2HS02190 2HS02210 2HS022200 2HS02240 2HS02240 2HS02280 2HS02360 2HS02360 2HS02360 2HS02450 2HS02450 2HS02510 2HS02610 2HS02600 2HS02600 2HS09010 2HS39010 2HS39030 2HS39040 2HS39040 2HS39040 2HS39050 2HS44050 2HS46060 2HS46070 2HS46070 2HS46090 2HS46130 2FV45020 YZ037940 2HS94090	SCREW BOX SWITCHING REGULATOR 120V SWITCHING REGULATOR 230V LEVER LOCK CASSETTE LEVER INTERLOCK SW SPRING INTERLOCK SW PIN CASSETTE SPRING PIN CASSETTE PLATE MAIN SW PLATE POWER SUPPLY FILM POWER SUPPLY COVER BASE LOW SPRING LOCK CASSETTE LEVER LOCK CASSETTE LEVER LOCK CASSETTE LEVER LOCK CASSETTE LEVER LOCK CASSETTE SHET DUCT BKT FAN SPRING EARTH FAN BOX CONTROLLER COVER BOX GUIDE OPTION SLOT PLATE OPTION FILM COVER CABLE MOTOR FAN 80 HIGH VOLTAGE UNIT CONN.CORD ASSY CONTROL-H.V.UNIT S03240 CONN.CORD ASSY CONTROL-H.V.UNIT S03303 CONN.CORD ASSY CONTROL-RELAY S03243 CONN.CORD ASSY CONTROL-RELAY S03243 CONN.CORD ASSY CONTROL-ERASER S03252 AC CORD 120 ASSY AC CORD ASSY ACCESS.SADDLE P.W.BOARD ASSY CONTROL WITH SOFTWARE(SP) (Duplex model) P.W.BOARD ASSY CONTROL WITH SOFTWARE(SP) (Simplex model)	2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2 1111111111111111111111111111111111111	No. 101 102 103 104	5MBTPB4010PW++R 5MBSPB3006NW++R 5MBTPB3006TW++R 5MBTPB4006TW++R	B1A64100 B1B03060 B1A53060 B1A54060	BIND T.T SCREW(+) / M4 X 10 CRFREE P-T BIND HEAD SCREW(+) / M3 X 6 CRFREE BIND T.T SCREW(+) / M4 X 6 CRFREE S-T BIND T.T SCREW(+) / M4 X 6 CRFREE S-T	120	230	240

[•] Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

[•] Parts with ". indicate regular maintenance parts.

[•] Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 12 Parts Package 2H5/2HS

Ref.	Part.No.	Alternative.	Description	Qı	uant	tity
No.	T drt.ivo.	7 itemative.	Bescription	120	230	240
	302HS80020 302H580010	2HS80020 2H580010	PACKING ASSY (Duplex model) PACKING ASSY (Simplex model)	1	1	1

[•] Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

• Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

[•] Parts with "O" indicate regular maintenance parts.

INDEX 2H5/2HS

	Part.No.	Alternative.	Description	Fig.No.
	2BC06980		STOPPER 5	4
•	2BL06380		GEAR Z25 JOINT	5
•	2BY20070	5MVX221XN004	BUSH PRESS /49523A0152 A4	8
	2DC27410		AC CORD 120 ASSY	11
	2FM02140	5MVM786XB001	BUSH DU /B-11 FRAME A3	10
	2FM02180	5MVX221DN020	BUSH REGIST C /B-11 FRAME A3	4
$_{\odot}$	2FM02210	5MVM274DN002	PULLEY MID /B-11 FRAME A4	10
•	2FM02350	5MVG133DN022	GEAR Z22 /B-11 FRAME A4	5
	2FM02500	5MMW176SD002	SPRING DU R /B-11 FRAME A4	10
	2FM02510	5MMW166SD002	SPRING HOLDER L /B-11 FRAME A4	10
	2FM02520	5MMW166SD003	SPRING HOLDER R /B-11 FRAME A4	10
	2FM02690	5MVX221DG002	LEVER DU /B-11 DU A3	10
	2FM06010	5MVX765SH004	GUIDE SIDE L /B-11 CASSETTE A2	3
	2FM06020	5MVX765SH005	GUIDE SIDE R/B-11 CASSETTE A2	3
	2FM20050	5MVX651DN001	LEVER SOLENOID /B-11 FD A3	5
	2FM21010	5MVX861XB001	HOLDER DU /B-11 DU A1	10
	2FM21020	5MML821SD009	STAY DU /B-11 DU A3	10
	2FM21030	5MVM276DN017	STOPPER BUSH /B-11 DU A4	10
	2FM21050	5MVX173DN001	COLLER DU /B-11 DU A3	10
•	2FM68250	SWIVX IT OBTOOT	GEAR CLUTCH ASSY A	5
•	2FM68260		GEAR CLUTCH ASSY B	5
•	302A816031	2A816031	BUSH TC R /A-49 FEED A4	4
_	302F325010	2F325010	STUD SCREW M3	5
	302F902420	2F902420	LOCK COVER TOP R	2
	302F904120	2F904120	EMBLEM KYOCERA	1
	302F904130	2F904130	TAPE EMBLEM	1
	302F906170	2F906170	JOINT PICKUP A	4
	302F906180	2F906180	JOINT PICKUP B	4
	302F906230	2F906230	PULLEY FEED ASSY	4
	302F906240	2F906240	PULLEY PICKUP ASSY	4
	302F906270	2F906270	SHAFT FEED L	4
	302F906280	2F906280	GEAR FEED Z30H	4
	302F908200	2F908200	LOCK COVER	2.5
	302F908270	2F908270	SP BOTTOM MPF L	2,3
	302F908310	2F908310	PAD FRICTION MPF	2
	302F909031	2F909031	LEVER BASE CAS REAR	3
	302F909040	2F909040	SPRING BASE CAS REAR	3
	302F909210	2F909210	PAD BOTTOM	3
•	302F925080	2F925080	GEAR IDLE A Z29	8
•		2F925060 2F925140	GEAR EXIT Z21	8
0	302F925140 302F925340	2F925140 2F925340	SPRING EXIT	8
	302F925340 302F925780	2F925340 2F925780	SPRING EXTI	2.5
				2,5 8
	302F925901	2F925901	CAP SPRING EXIT BUSH DU	5,9
	302F929140	2F929140		5,9
	302F931350	2F931350	JOINT SHAFT CASSETTE	-
	302F931450	2F931450	SPRING FEED	9
	302F931490	2F931490	BUSH FEED DRIVE	9
	302F939081	2F939081	SCREW BOX	11
	302FM02421	2FM02421	SHAFT PULLEY /B-11 FRAME A4	10
	302FV02490	2FV02490	SPRING TC R	4

	Part.No.	Alternative.	Description	Fig.No.
	302FV45020	2FV45020	AC CORD ASSY	11
	302G622010	2G622010	SPRING TC L	4
•	302G680110	2G680110	SOLENOID ASSY	5
	302GJ09110	2GJ09110	GUIDE RETARD	3
	302GJ09120	2GJ09120	HOLDER RETARD	3
•	302GR25290	2GR25290	THERMOSTAT M FUSER	8
•	302H500010	2H500010	COVER RIGHT ASSY	1
	302H504010	2H504010	COVER RIGHT	1
	302H508010	2H508010	BASE BYPASS	2
	302H508020	2H508020	GUIDE BYPASS L	2
	302H508030	2H508030	GUIDE BYPASS R	2
•	302H508040	2H508040	COVER BYPASS UP	2
•	302H508050	2H508050	COVER BYPASS LOW	2
	302H580010	2H580010	PACKING ASSY	12
$_{\odot}$	302H593010	2H593010	DV-140(E)	7
•	302H593020	2H593020	DV-142(U)	7
•	302H593030	2H593030	DV-144(AO)	7
•	302H593040	2H593040	DR-140	9
•	302H594010	2H594010	P.W.BOARD ASSY CONTROL WITH SOFTWARE(SP)	11
	302HN09190	2HN09190	SPRING FIX	3
	302HN09240	2HN09240	SIZE FIX	3
	302HN25450	2HN25450	BUSH EXIT	8
	302HN29050	2HN29050	BUSH DU	5
•	302HN44110	2HN44110	CLUTCH FEED	9
•	302HS00010	2HS00010	TRAY MPF ASSY	2
•	302HS00030	2HS00030	COVER RIGHT ASSY	1
•	302HS01030	2HS01030	P.W.B BOARD ASSY PANEL	1
•	302HS01050	2HS01050	P.W.BOARD ASSY /ERASER	2
•	302HS01060	2HS01060	P.W.BOARD ASSY /EMPTY SENSOR	4
	302HS01130	2HS01130	P.W.B RFID WITH SOFTWARE	4
•	302HS02070	2HS02070	LEVER LOCK CASSETTE	11
•	302HS02090	2HS02090	LEVER STOPPER DLP	2
	302HS02100	2HS02100	SPRING STOPPER DLP	2
•	302HS02110	2HS02110	LEVER INTERLOCK SW	11
	302HS02120	2HS02120	SPRING INTERLOCK SW	11
	302HS02130	2HS02130	HOLDER MC	2
	302HS02140	2HS02140	PLATE CONTACT MC	2
	302HS02160	2HS02160	SPRING MC	2
•	302HS02180	2HS02180	PIN CASSETTE	11
	302HS02190	2HS02190	SPRING PIN CASSETTE	11
	302HS02200	2HS02200	PLATE MAIN SW	11
•	302HS02210	2HS02210	PLATE POWER SUPPLY	11
	302HS02240	2HS02240	FILM POWER SUPPLY	11
	302HS02250	2HS02250	SPRING EARTH REG UP	4
	302HS02260	2HS02260	SPRING EARTH REG LOW	4
	302HS02280	2HS02280	COVER BASE LOW	11
	302HS02290	2HS02290	PLATE EARTH DRUM	2
	302HS02310	2HS02310	SPRING EARTH DU FEED	2
	302HS02330	2HS02330	SPRING EARTH DU PLATE	2
	302HS02340	2HS02340	SPRING EARTH RIGHT	4

[•] Parts with "⊙" indicate regular maintenance parts.

2H5/2HS

	Part.No.	Alternative.	Description	Fig.No.		Part.No.	Alternative.	Description	Fig.No.
	302HS02350	2HS02350	COVER CABLE B	2		302HS08100	2HS08100	BRACKET BOTTOM	2
	302HS02360	2HS02360	SPRING LOCK CASSETTE	11			2HS08110	ACTUATOR MPF	4
	302HS02370	2HS02370	SPRING EARTH CASSETTE	9	-	302HS08140	2HS08140	BASE IC PWB	4
	302HS02380	2HS02370	PLATE PF CONNECTOR	9			2HS08160	GEAR Z20S MPF	4
•	302HS02390	2HS02390	LEVER LOCK CASSETTE L	11		302HS08170	2HS08170	SPRING SEPARATOR	2
	302HS02410	2HS02410	SPRING EARTH DU MID	4		302HS08180	2HS08180	PLATE BOTTOM MPF	2
	302HS02410	2HS02410 2HS02420	BKT FAN R	11		302HS08190	2HS08190	SPRING ACTUATOR	4
	302HS02440	2HS02440	SPRING EARTH DLP PLATE	4		302HS08210	2HS08210	SPRING EARTH MPF	2
	302HS02450	2HS02450	BKT FAN L	11		302HS08220	2HS08220	TRAY MPF TOP	2
	302HS02460	2HS02460	PIN CONTACT BIAS	2		302HS08230	2HS08230	PLATE EARTH BOTTOM	2
	302HS02470	2HS02470	SPRING PIN BIAS	2 2		302HS08240	2HS08240	GUIDE MPF R	2
	302HS02470	2HS02470 2HS02490	COVER CABLE C	11		302HS08250	2HS08250	GUIDE MPF L	2
	302HS02500	2HS02500	HOLDER ERASER	2			2HS08260		4
	302HS02500 302HS02510	2HS02500 2HS02510	COVER CABLE D	11		302HS08270	2HS08270	ROLLER M/P ASSY SPRING BRACKET	2
	302HS02510 302HS02520	2HS02510 2HS02520	COVER CABLE D	9		302HS08270 302HS08290	2HS08270 2HS08290	FILM SENSOR	4
	302HS02520 302HS02530	2HS02520 2HS02530	COVER CABLE E	9		302HS08290 302HS08300	2HS08290 2HS08300	HOLDER FEED M/P	4 4
	302HS02530 302HS02540	2HS02530 2HS02540	PIN DRAWER	9			2HS08300 2HS08310	FILM TE SENSOR	4 4
	302HS02540 302HS02560	2HS02540 2HS02560	HOLDER PIN CASSETTE	9		302HS08310 302HS09010	2HS08310 2HS09010	BASE CASSETTE	4 3
	302HS02560 302HS02580	2HS02560 2HS02580		2			2HS09010 2HS09020	COVER CASSETTE KM	3
			SHEET DUCT LSU	2 2					3
	302HS02590	2HS02590	SHEET DUCT FD			302HS09040	2HS09040	BASE CASSETTE REAR	-
	302HS02610	2HS02610	SHEET DUCT BKT FAN	11		302HS09070	2HS09070	PAPER INDICATOR	3
	302HS02620	2HS02620	SPRING EARTH FAN	11		302HS09080	2HS09080	CURSOR END	3
	302HS02630	2HS02630	TAPE ERASER	2		302HS09100	2HS09100	LOCK BOTTOM	3
	302HS02650	2HS02650	HOOK PF	2		302HS09110	2HS09110	PLATE BOTTOM	3
•	302HS04030	2HS04030	COVER LEFT	1		302HS09120	2HS09120	SPRING BOTTOM L	3
$\overline{}$	302HS04040	2HS04040	COVER RIGHT	1		302HS09130	2HS09130	SPRING BOTTOM R	3
•	302HS04050	2HS04050	COVER TOP B			302HS09140	2HS09140	SPRING LOCK BOTTOM	3
•	302HS04060	2HS04060	COVER DIMM			302HS09160	2HS09160	GEAR CASSETTE	3
•	302HS04070	2HS04070	COVER RACK			302HS09170	2HS09170 2HS09180	CAP BOTTOM	3 3
	302HS04080 302HS04100	2HS04080 2HS04100	COVER PANEL			302HS09180	2HS24010	SPRING RETARD	3 4
			BUTTON CANCEL			302HS24010	2HS24010 2HS24020	GUIDE PAPER CHUTE	4 4
•	302HS04110 302HS04130	2HS04110 2HS04130	BUTTON CANCEL COVER FRONT			302HS24020 302HS24040	2HS24040	GUIDE EARTH ROLLER REGIST UP	4 4
9 9						00202.0			•
	302HS04160	2HS04160	COVER RACK B			302HS24050	2HS24050	ROLLER REGIST LOW	4
	302HS06010	2HS06010	FRAME FEED	4 4		302HS24060	2HS24060	ACTUATOR REGIST	2
	302HS06020	2HS06020 2HS06040	HOLDER FEED	4		302HS24070	2HS24070 2HS24080	SPRING ACTUATOR REG	2
	302HS06040 302HS06050	2HS06040 2HS06050	GUIDE FEED R PULLEY FEED	4 4	1 1	302HS24080	2HS24080 2HS24110	PLATE EARTH BADED CHUTE	2 2
	302HS06060 302HS06060	2HS06060	ACTUATOR EMPTY A	4 4		302HS24110 302HS24120	2HS24110 2HS24120	PLATE ERATH PAPER CHUTE BUSH REGIST	4
	302HS06070	2HS06070	ACTUATOR EMPTY A ACTUATOR EMPTY B	4		302HS24120 302HS24130	2HS24120 2HS24130	BUSH 4 DU ROLL	2
	302HS06070 302HS06090	2HS06070 2HS06090	GEAR Z22S FEED	4	1 1	302HS24130 302HS24140	2HS24130 2HS24140	BUSH 6 EW	4
'	302HS06090 302HS06110	2HS06090 2HS06110	SHAFT FEED	9	•		2HS24140 2HS24160	ROLLER DU	2
	302HS06110 302HS06120	2HS06110 2HS06120	SPRING ACTUATOR	4			2HS24170	ROLLER TRANSFER E	4
J	302HS06130	2HS06130	SPRING ACTUATOR SPRING PULLEY	4		302HS24180	2HS24180	SHEET REGIST	4 4
	302HS08010	2HS08010	FRAME MPF	4	•		2HS24190	GEAR Z14R REG UP	4 4
	302HS08020	2HS08010 2HS08020	COVER MPF KM	2	0		2HS24200	GEAR Z21L-Z23L REG LOW	4 4
	302HS08040	2HS08040	GUIDE TURN MPF	2	•		2HS24210	GEAR 2216-223E REG LOW	4
	302HS08050	2HS08050	BASE MPF	2	0	302HS24210	2HS24210 2HS24220	GEAR Z10L TO	9
	302HS08060	2HS08060	TRAY MPF MID	2 2	•		2HS24230	GEAR Z25R DO FEED	9
	302HS08080	2HS08080	SHAFT FEED MPF	4	0	302HS24240	2HS24240	SPRING REGIST R	4
- 1	55211000000	21100000	OLIVAL LI EED IVII I	7		30211024240	211027240	OF TAINO INLOIDE IN	7

[•] Parts with "O" indicate regular maintenance parts.

Part.No.	Alternative.	Description	Fig.No.
302HS24250	2HS24250	BUSH TC R	4
302HS24260	2HS24260	LEVER RELEASE TC L	4
302HS24280	2HS24280	SPRING RELEASE TC L	4
302HS24300	2HS24300	SPRING CONTACT TC	2
302HS24310	2HS24310	SPRING EARTH BRUSH	4
302HS24340	2HS24340	ROLLER TRANSFER U	4
302HS24350	2HS24350	SPRING REGIST L	4
302HS24360	2HS24360	SPRING REGIST C	4
302HS25010	2HS25010	FRAME FUSER LOW	8
302HS25020	2HS25020	FRAME FUSER UP	8
302HS25030	2HS25030	GUIDE EXIT LOW	8
302HS25040	2HS25040	SPRING PRESSURE	8
302HS25050	2HS25050	PULLEY EXIT FUSER	8
302HS25060	2HS25060	ROLLER EXIT	8
302HS25070	2HS25070	GEAR Z18S IDLE	8
302HS25080	2HS25070 2HS25080	PLATE CODE	8
302HS25100	2HS25100	HOLDER SPRING PRESS	8
302HS25110	2HS25100 2HS25110	ACTUATOR FUSER	8
302HS25110	2HS25110	SPRING ACTUATOR	8
302HS25130	2HS25130	SPRING ACTUATOR SPRING EXIT L	8
302HS25140	2HS25140	PLATE EARTH EXIT	8
302HS25150	2HS25150	SHAFT EXIT	8
302HS25160	2HS25160	PLATE EARTH L	8
302HS25170	2HS25170	PLATE EARTH ROLLER	8
302HS25190	2HS25190	THERMISTOR FUSER	8
302HS25190	2HS25190 2HS25200	LEVER FUSER R	8
302HS25210	2HS25210	LEVER FUSER L	8
302HS25210	2HS25210 2HS25220	BUSH FUSER	8
302HS25230	2HS25230	ROLLER HEAT	8
302HS25240	2HS25240	HEATER LAMP E	8
302HS25260	2HS25260	GEAR Z36S HEAT	8
302HS25280	2HS25280	BUSH HEAT R	8
302HS25300	2HS25300	HEATER LAMP U	8
		ROLLER PRESS	8
302HS25360	2HS25360	SHEET FUSER	8
302HS25400 302HS25410	2HS25400	TUBE PLATE CODE	8
302HS28010	2HS25410 2HS28010	FRAME FD	5
302HS28020	2HS28020	COVER FRAME FD	5
302HS28030	2HS28030	ROLLER FD UP	5
302HS28040	2HS28040	COVER FD	5
302HS28050	2HS28050	COVER FD COVER REAR	5
302HS28060	2HS28060	GEAR Z21S	5
302HS28070	2HS28070	PULLEY EXIT	5
302HS28080	2HS28080	ACTUATOR PAPER	5
302HS28110	2HS28110	SPRING EARTH	5
302HS28120	2HS28120	SPRING EARTH SPRING EXIT	5
302HS28120 302HS28130	2HS28130	DISCHARGER FD	5
302HS28130 302HS28140	2HS28140	SPRING PULLEY	5
302HS28150	2HS28150	GUIDE FD SIDE	5
302HS28160	2HS28160	GUIDE FD SIDE	5
30211320100	20020100	GOIDE LD CENTEK	٥

			T	200/203
	Part.No.	Alternative.	Description	Fig.No.
	302HS29010	2HS29010	PLATE COVER DU	10
	302HS29020	2HS29020	PLATE COVER DU B	10
•	302HS31020	2HS31020	PLATE DRIVE	9
	302HS31030	2HS31030	DRIVE HOLDER	9
	302HS31040	2HS31040	PLATE GEAR DRIVE	9
	302HS31050	2HS31050	LEVER LIFT BOTTOM	9
	302HS31060	2HS31060	PIN GEAR DRIVE	9
$_{\odot}$	302HS31070	2HS31070	GEAR Z42R FREE 2	9
$_{\odot}$	302HS31080	2HS31080	GEAR Z42R	9
•	302HS31090	2HS31090	GEAR Z37L FREE	9
•	302HS31100	2HS31100	GEAR Z20L CLUTCH	9
$_{\odot}$	302HS31110	2HS31110	GEAR Z58L	9
$_{\odot}$	302HS31120	2HS31120	GEAR Z27L CLUTCH	9
$_{\odot}$	302HS31130	2HS31130	GEAR Z45R CLUTCH	9
•	302HS31140	2HS31140	GEAR Z35R IDLE	9
$_{\odot}$	302HS31150	2HS31150	GEAR Z31L-Z14S	9
•	302HS31170	2HS31170	GEAR Z64R-Z21L	9
•	302HS31180	2HS31180	GEAR Z44R	9
•	302HS31190	2HS31190	GEAR Z17R FREE	9
•	302HS31200	2HS31200	GEAR Z26L FREE	9
•	302HS31210	2HS31210	GEAR Z35S FREE	9
•	302HS31220	2HS31220	GEAR Z42R FREE	9
•	302HS31230	2HS31230	GEAR Z38S MPF	9
•	302HS31240	2HS31240	GEAR Z32L DRUM	9
•	302HS31250	2HS31250	GEAR Z54R-Z24R	9
•	302HS31260	2HS31260	GEAR Z32R	9
•	302HS31270	2HS31270	GEAR Z34L-Z24L	9
	302HS31280	2HS31280	LIFT BOTTOM	9
	302HS31290	2HS31290	DRIVE HOLDER COVER	9
	302HS31310	2HS31310	SPRING FREE FUSER	9
	302HS31320	2HS31320	SPRING FREE MAG	9
	302HS31330	2HS31330	PIN CLUTCH	9
	302HS31340	2HS31340	SHAFT CASSETTE	9
	302HS31360	2HS31360 2HS31370	PIN HOLDER A PIN HOLDER B	9
	302HS31370 302HS31380	2HS31380	SPRING LIFT BOTTOM	9
•	302HS31390	2HS31390	GEAR Z27R FREE 2	9
	302HS31400	2HS31400	SPRING FREE DRUM	9
	302HS31410	2HS31410	SPRING FREE Z37L	9
	302HS31420	2HS31410 2HS31420	EARTH PLATE DRIVE	9
	302HS31430	2HS31430	POLYSLIDER 9.5	9
	302HS34010	2HS34010	LABEL FUSER CAUTION	5
	302HS34020	2HS34020	LABEL FUSER JAM	5
	302HS34030	2HS34030	LABEL OPERATION	3
•	302HS34080	2HS34080	LABEL JAM TK OPERATION	1
	302HS34120	2HS34120	LABEL FUSER OPERATION	8
	302HS39010	2HS39010	BOX CONTROLLER	11
	302HS39020	2HS39020	COVER BOX	11
	302HS39030	2HS39030	GUIDE OPTION SLOT	11
	302HS39040	2HS39040	PLATE OPTION	11
		1	I	

[•] Parts with "⊙" indicate regular maintenance parts.

2H5/2HS

	Part.No.	Alternative.	Description	Fig.No.
	302HS39050	2HS39050	FILM COVER CABLE	11
•	302HS44010	2HS44010	MOTOR MAIN	9
•	302HS44020	2HS44020	SOLENOID MPF	9
•	302HS44050	2HS44050	MOTOR FAN 80	11
•	302HS45010	2HS45010	SWITCHING REGULATOR 230V	11
•	302HS45020	2HS45020	SWITCHING REGULATOR 120V	11
•	302HS45030	2HS45030	HIGH VOLTAGE UNIT	11
	302HS46030	2HS46030	CONN.CORD ASSY CONTROL-PF S03247	9
				9
	302HS46040	2HS46040	CONN.CORD ASSY CONTROL MAIN MOTOR S03245	4
	302HS46050	2HS46050	CONN.CORD ASSY CONTROL-RFID S03244	•
	302HS46060	2HS46060	CONN.CORD ASSY CONTROL-H.V.UNIT S03240	11
	302HS46070	2HS46070	CONN.CORD ASSY CONTROL-H.V.UNIT S03303	11
	302HS46090	2HS46090	CONN.CORD ASSY CONTROL-RELAY S03243	11
	302HS46100	2HS46100	CONN.CORD ASSY PWS-HEATER(E) S03305	8
	302HS46110	2HS46110	CONN.CORD ASSY PWS-HEATER(U) S03306	8
	302HS46120	2HS46120	CONN.CORD ASSY PWS-INLET S03238	11
	302HS46130	2HS46130	CONN.CORD ASSY CONTROL-ERASER S03252	11
	302HS46140	2HS46140	CONN.CORD ASSY CONTROL-EXITSENSOR S03248	8
	302HS46150	2HS46150	CONN.CORD ASSY CONTROL-MPFSENSOR S03251	4
	302HS46160	2HS46160	CONN.CORD ASSY CONTROL-P.SENS0R S03304	4
	302HS46210	2HS46210	CONN.CORD ASSY CONTROL-F/RCLUTCH S03308	9
	302HS46230	2HS46230	CONN.CORD ASSY PANEL-RELAY S03353	1
	302HS80020	2HS80020	PACKING ASSY	12
•	302HS93010	2HS93010	DK-130	6
•	302HS93020	2HS93020	DV-130(E)	7
•	302HS93040	2HS93040	FK-130(E)	8
•		2HS93050	· '	8
•	302HS93050		FK-130(U)	9
•	302HS93060	2HS93060	DR-130	
	302HS93070	2HS93070	MC-130	6
0	302HS93080	2HS93080	CT-130	3
•	302HS93090	2HS93090	LK-130	2
•	302HS93100	2HS93100	DV-132(U)	7
•	302HS93140	2HS93140	DV-134(AO)	7
•	302HS94000	2HS94000	PLATE BOTTOM ASSY	3
•	302HS94010	2HS94010	COVER TOP ASSY	1
•	302HS94020	2HS94020	LID TOP ASSY	1
\odot	302HS94030	2HS94030	HOLDER FEED ASSY	4
$_{\odot}$	302HS94040	2HS94040	SEPARATOR MPF ASSY	2
•	302HS94050	2HS94050	PLATE BOTTOM MPF ASSY	2
•	302HS94060	2HS94060	HOLDER DC BRUSH ASSY	4
•	302HS94080	2HS94080	REGIST LOW KIT	4
•	302HS94090	2HS94090	P.W.BOARD ASSY CONTROL WITH SOFTWARE(SP)	11
	302HS94110	2HS94110	ERASER KIT	2
•	5AAVR0LL+052	2BR06520	RETARD ROLL ASSY /43487V0005 A4	3
•	5AAVSEPRT015	2A820360	SEPARATOR ASSY /FS-1000 A4	8
	5MBCK9560XSC	D4103700	C STOP RING /X9.5 X 0.6T S-CR	10
	5MMP141LD002	2A807510	PLATE SIDE GUIDE /A49 CASSETTE A4	3
	5MMS111SL002	2BY20050	NUT FUSER A /FS-1800/3800 A4	8
				3
	5MMW171LD006	2A807530	SPRING STOPPER /A49 CASSETTE A4	3
	5MMW261LD036	2A814570	SPRING TE SENSOR /A-49 DLP A4	4
	C.V	2.1014010	G. T. M. C. I. SERVOOR /// TO BE! //T	

				200/200
	Part.No.	Alternative.	Description	Fig.No.
\odot \odot \odot \odot	5MMW261LD055 5MMW261LD068 5MW261LD068 5MVG137DN032 5MVG138DN048 5MVM176DN016 5MVW273DB005 5MVS217SN002 5MVX111DN003 5MVX211BD14 5MVX221RB014 5MVX431DN005 5MVX441XN001 5MVX541DG003 7BC06062C020H01 7NXSG2481+++H01 7RHA2H10701+H01 7YZM610007++H01 7YZM610008++H01	2A820350 2FV02270 2FV02280 2A806720 2BB02270 2BR20170 2A820100 2A806280 2A806250 2BT11070 2BS03110 2FV02100 2BR20180 2A807191 2A807161 BC045240 NX052600 RH043740 YZ023340 YZ037940	SPRING SEPARATOR /FS-1000 A4 SPRING LEVER LOCK L SPRING LEVER LOCK R GEAR MPF /A-49 MPF A4 GEAR FD Z29 /43397B0051 A4 BUSH A /45309P0135 A4 PULLEY EXIT /A-49 FUSER A3 PAD SOLENOID /FS-1000 A4 RING STOPPER /A-49 FEED A4 STOPPER 3 /2BT1107 A4 FOOT /43307C0007 A4 LEVER LOCK DLP BUSH HEAT L /43307P0003 A4 LEVER REAR /A-49 CASSETTE A3 LEVER SIDE /A-49 CASSETTE A3 POLY SLIDER WASHER M6.2X12X0.2T SENSOR OPT. M.GLAZE R. 100MJ 1/2W ACCESS.SADDLE ACCESS.SADDLE	8 4 4 2 5 4 4,5 5 5 4,9,10 5 2 4 8 3 3 9 4,8 2 9 11

[•] Parts with ". indicate regular maintenance parts.

KYOCERA MITA EUROPE B.V.

Hoeksteen 40, 2132 MS Hoofddorp,

The Netherlands

Phone: +31.20.654.0000

Home page: http://www.kyoceramita-europe.com

Email: info@kyoceramita-europe.com KYOCERA MITA NEDERLAND B.V. Beechavenue 25,1119RA Schiphol-Rijk

The Netherlands

Phone: +31.20.58.77.200 KYOCERA MITA (UK) LTD

8 Beacontree Plaza

Gillette Way Reading Berks RG2 OBS,

U.K.

Phone: +44.1189.311.500 KYOCERA MITA ITALIA S.p.A.

Via G. Verdi, 89 / 91, 20063 Cernusco s/N

Milano, Italy

Phone: +39.02.92179.1

S.A. KYOCERA MITA BELGIUM N.V. Hermesstraat 8A,1930 Zaventem,

Belaium

Phone: +32.2.720.9270

KYOCERA MITA FRANCE S.A. Parc Les Algorithmes Saint Aubin

91194 GIF-SUR-YVETTE,

France

Phone: +33.1.6985.2600

KYOCERA MITA ESPAÑA S.A.

Edificio Kyocera, Avda de Manacor No. 2,

28290 Las Matas (Madrid),

Spain

Phone: +34.91.631.8392

KYOCERA MITA FINLAND OY Kirvesmiehenkatu 4,00880 Helsinki,

Finland

Phone: +358.9.4780.5200

KYOCERA MITA (SCHWEIZ) Hohlstrasse 614, 8048 Zürich

Switzerland

Phone: +41.1.908.4949

KYOCERA MITA DEUTSCHLAND GMBH Otto-Hahn-Str. 12 D-40670 Meerbusch.

Germany

Phone: +49.2159.918.0

KYOCERA MITA GMBH AUSTRIA Eduard-Kittenberger-Gasse 95,

1230 Wien, Austria

Phone: +43.1.86338.210

KYOCERA MITA SVENSKA AB Esbogatan 16B 164 75 Kista.

Sweden

Phone: +46.8.546.55000

KYOCERA MITA NORGE

Postboks 150 Oppsal, NO 0619 Oslo Olaf Helsetsvei 6, NO 0694 Oslo,

Norway

Phone: +47.22.62.73.00

KYOCERA MITA DANMARK A/S Ejby Industrivej 1, DK-2600 Glostrup,

Denmark

Phone: +45.5687.1100

KYOCERA MITA PORTUGAL LDA.

Rua do Centro Cultural, 41 (Alvalade) 1700-106 Lisbon,

Portugal

Phone: +351.21.842.9100

KYOCERA MITA SOUTH AFRICA (PTY) LTD.

527 Kyalami Boulevard,

Kyalami Business Park Midrand,

South Africa

Phone: +27.(0)11.540.2600

KYOCERA MITA AMERICA, INC.

Headquarters:

225 Sand Road,

Fairfield, New Jersey 07004-0008,

U.S.A.

Phone: (973) 808-8444

KYOCERA MITA AUSTRALIA PTY. LTD.

Level 3, 6-10 Talavera Road, North Ryde,

N.S.W. 2113 Australia Phone: (02) 9888-9999

KYOCERA MITA NEW ZEALAND LTD.

1-3 Parkhead Place, Albany

P.O. Box 302 125 NHPC, Auckland,

New Zealand

Phone: (09) 415-4517

KYOCERA MITA (THAILAND) CORP., LTD.

9/209 Ratchada-Prachachem Road, Bang Sue, Bangkok 10800, Thailand

Phone: (02) 586-0320

KYOCERA MITA SINGAPORE PTE LTD.

121 Genting Lane, 3rd Level,

Singapore 349572 Phone: 67418733

KYOCERA MITA HONG KONG LIMITED

11/F., Mita Centre.

552-566, Castle Peak Road,

Tsuen Wan, New Territories,

Hong Kong

Phone: 24297422

KYOCERA MITA TAIWAN Corporation.

7F-1~2, No.41, Lane 221, Gangchi Rd. Neihu District, Taipei, Taiwan, 114. R.O.C.

Phone: (02) 87511560

KYOCERA MITA Corporation

2-28, 1-chome, Tamatsukuri, Chuo-ku

Osaka 540-8585, Japan Phone: (06) 6764-3555 http://www.kyoceramita.com

©2007 KYOCERA MITA Corporation

KYOCERA MITA AMERICA, INC.

Headquarters:

225 Sand Road, Fairfield, New Jersey 07004-0008

TEL: (973) 808-8444 FAX: (973) 882-6000

New York Branch:

1410 Broadway 23rd floor New York, NY 10018 TEL: (917) 286-5400 FAX: (917) 286-5402

Northeastern Region:

225 Sand Road,

Fairfield, New Jersey 07004-0008

TEL: (973) 808-8444 FAX: (973) 882-4401

Midwestern Region:

201 Hansen Court Suite 119 Wood Dale, Illinois 60191 TEL: (630) 238-9982 FAX: (630) 238-9487

Western Region:

14101 Alton Parkway, Irvine, California 92618-7006

TEL: (949) 457-9000 FAX: (949) 457-9119

Southeastern Region:

1500 Oakbrook Drive, Norcross, Georgia 30093 TEL: (770) 729-9786 FAX: (770) 729-9873

Southwestern Region:

2825 West Story Road, Irving, Texas 75038-5299 TEL: (972) 550-8987 FAX: (972) 252-9786

National Operation Center & National Training Center:

2825 West Story Road, Irving, Texas 75038-5299 TEL: (972) 659-0055 FAX: (972) 570-5816

Latin America Division:

8240 N.W. 52nd. Terrace Dawson Building, Suite 108 Miami. Florida 33166

TEL: (305) 421-6640 FAX: (305) 421-6666

KYOCERA MITA CANADA, LTD.

6120 Kestrel Road, Mississauga, Ontario L5T 1S8, Canada

TEL: (905) 670-4425 FAX: (905) 670-8116

KYOCERA MITA MEXICO, S.A. DE C.V.

Av. 16 de Septiembre #407

Col. Santa Inés, Azcapotzalco México, D.F. 02130, México TEL: (55) 5383-2741

FAX: (55) 5383-7804

©2007 KYOCERA MITA Corporation http://www.kyoceramita.com