

Motherboard

H81M-PLUS

quick start guide دليل التشغيل السريع

Кратко упътване за бърз старт

Stručná příručka

Quick Start-veiledning

Snelstartgids

Lühijuhend

راهنمای شروع سریع

Guide de démarrage rapide Pikakäynnistysopas

Schnellstarthilfe

Οδηγός γρήγορης έναρξης

Beüzemelési útmutató Guida Rapida

Panduan Ringkas

クイックスタートガイド Жылдам іске қосу нұсқаулығы

빠른 시작 설명서

Greitos darbo pradžios vadovas

Īsa pamācība

Hurtigstartsveiledning

Guia de consulta rápida

Instrukcja szybkiej instalacji

Краткое руководство Ghid de pornire rapidă

Guía de inicio rápida

Vodič za brzo korišćenje

Stručný návod na spustenie Snabbstartsguide

ดู่มือเริ่มต์นอย่างเร็ว

Hızlı Başlatma Kılavuzu

Höôùng daãn khôûi ñoäng nhanh

Step 1

Install the CPU قم بتثبيت وحدة المعالجة المركزية (CPU)

Instalace procesoru Installer CPU'en De CPU installeren Paigaldage CPU

Инсталирайте процесора

CPU را نصب کنید Installer le CPU Asenna suoritin Installieren der CPU

Εγκατάσταση της CPU

Helyezze be a CPU-t

Installare la CPU **Pasang CPU** CPUを設置する

CPU орнатыңыз

CPU 설치

Sumontuokite centrinį procesorių Uzstādiet centrālo procesoru Installer sentralprosessoren (CPU) Instale a CPU Instalacja procesora Установка процессора

Instalaţi CPU-ul Instalar la CPU Instalirajte CPU

Installera CPU

CPU'yu takın

تثبيت مروحة وحدة المعالجة المركزية Инсталирайте вентилатора на процесора Instalace ventilátoru procesoru Installer CPU-blæseren De CPU-ventilator installeren Paigaldage CPU ventilaator پنکه CPU را نصب کنید Installer le ventilateur de CPU Asenna suorittimen tuuletin

Step 2

Install the CPU fan

Inštalácia centrálneho procesora ติดตั้ง CPU Lắp CPU



B

Pasang kipas CPU

CPUファン を設置する

Sumontuokite centrinio procesoriaus ventiliatoriu Uzstādiet centrālā procesora ventilatoru

Installer CPU-viften

Instale a ventoinha de CPU

Installieren des CPU-Lüfters

Szerelje be a CPU ventillátort

Installare la ventola della CPU

СРИ желдеткішін орнатыңыз

Εγκατάσταση του ανεμιστήρα της CPU

Instalacja wentylatora procesora

Установка вентилятора

Instalaţi ventilatorul CPU-ului


Instalar el ventilador de la CPU Instalirajte CPU ventilator

Inštalácia ventilátora centrálneho procesora


Installera CPU-fläkten

ติดตั้งพัดลม CPU

CPU fanını takın Lắp quạt CPU

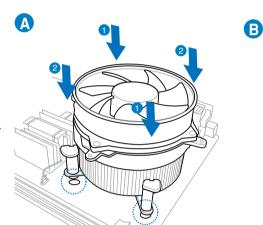

Motherboard Layout

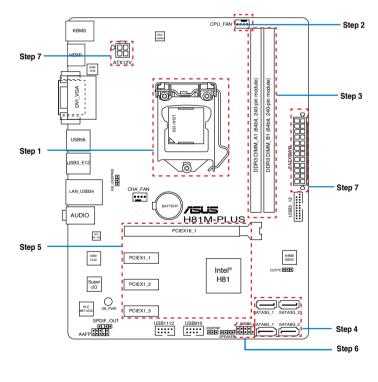

Australia statement notice

From 1 January 2012 updated warranties apply to all ASUS products, consistent with the Australian Consumer Law. For the latest product warranty details please visit http://support.asus.com. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you require assistance please call ASUS Customer Service 1300 2787 88 or visit us at http://support.asus.com

Step 3

Install memory modules تثبيت وحدات الذاكرة

Инсталирайте модулите памет Instalace paměťových modulů Installer hukommelsesmodulerne Geheugenmodules installeren Paigaldage mälumoodulid مادول های حافظه را نصب کنید

Installer les modules mémoire Asenna muistimoduulit Installieren der Speichermodule Εγκατάσταση των στοιχείων μνήμης Helyezze be a memória modulokat Installare i moduli di memoria Pasang modul memori メモリーモジュールを設置する

Жад модульдерін орнатыңыз

메모리 모듈 설치

Sumontuokite atminties modulius Uzstādiet atmiņas moduļus Installer minnemoduler Instale módulos de memória Instalacja modułów pamięci Установка модулей памяти Instalați modulele de memorie Instalar los módulos de memoria Instalirajte module memorije Inštalácia pamäťových modulov Installera minnesmoduler ติดตั้งโมดูลหน่วยความจำ Bellek modüllerini takın Lắp các thanh nhớ

Step 4

Install SATA devices تثبيت أجهزة SATA

Инсталирайте SATA устройства Instalace zařízení SATA Installer SATA-udstyret

SATA-apparaten installeren Paigaldage SATA seadmed دستگاه های SATA را نصب کنید


Installer des périphériques SATA Asenna SATA-laitteet Installieren der SATA-Geräte

Εγκατάσταση συσκευών SATA Szerelje be a SATA eszközöket Installare i dispositivi SATA

Pasang perangkat SATA SATA デバイスを取り付ける SATA құрылғыларын орнатыңыз

SATA 장치 설치

Sumontuokite SATA įrenginius Uzstādiet SATA ierīces Installer SATA-enheter Instale dispositivos SATA Instalacja urządzeń SATA Установка SATA устройств Instalaţi dispozitivele SATA Instalar dispositivos SATA Instalirajte SATA uređaje Inštalácia zariadení SATA Installera SATA-enheter ติดตั้งอุปกรณ์ SATA SATA aygıtlarını takın Lắp các thiết bị SATA

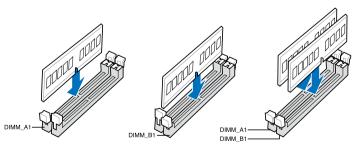



Q8448 First Edition June 2013 Copyright © ASUSTeK Computer Inc. All Rights Reserved



Step 5

Install expansion card(s) تثبيت بطاقة (بطاقات) التوسعة

Инсталирайте допълнителна карта (допълнителни карти)

Instalace přídavné karty (karet) Installer udvidelseskortene

Uitbreidingskaart(en) installeren

Paigaldage laienduskaart(-kaardid)

کارت های گسترش را نصب کنید

Installer une carte d'extension Asenna laaiennuskortti/kortit

Installieren der Erweiterungskarte(n)

Εγκατάσταση καρτών επέκτασης

Helyezze be a bővítőkártyá(ka)t

Installare le schede di espansione

Pasang kartu ekspansi

拡張カードを設置する

Кеңейту картас(лар)ын орнатыңыз

확장 카드 설치

Sumontuokite išplėtimo plokštę (-es)

Uzstādiet izvērses karti(-es)

Installer utvidelseskort

Instale placas de expansão Instalacja kart(y) rozszerzenia

Установка карт расширения

Instalaţi cardul/cardurile de extensie


Instalar tarjetas de expansión Instalirajte ekspanzionu/e karticu/e

Inštalácia rozširujúcich kariet

Installera expansionskort

ติดตั้งเอ็กซ์แพนชั่นการ์ด

Genişletme kartlarını takın

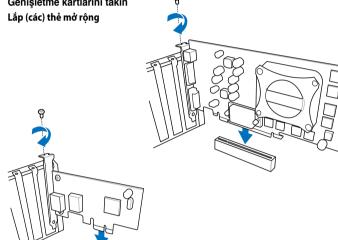

Step 6

Install system panel connectors تثبيت وحدات توصيل لوحة النظام

Инсталирайте конекторите на ситемния панел

Instalace konektorů panelu systému Installer systempanelets tilslutninger

Aansluitingen op het systeempaneel installeren

Paigaldage süsteemi paneeli konnektorid رابط های صفحه سیستم را نصب کنید

Installer les connecteurs système Asenna järjestelmäpaneelin liittimet Installieren des Systemtafelanschlusses

Εγκατάσταση συνδέσμων πάνελ συστήματος Szerelje be a rendszerpanel csatlakozóit Installare i connettori del pannello del sistema

Pasang konektor panel sistem

システムパネルコネクターを取り付ける

Жүйе тақтасының қосқыштарын орнатыңыз

시스템 패널 커넥터 설치

Sumontuokite sistemos plokštės jungtis Uzstādiet sistēmas paneļa savienotājus Installer kontakter for systempanelet Instale os conectores do painel do sistema Instalacja złączy panela systemu

Установка соединений системной панели Instalaţi conectorii pentru placa de bază Instalar conectores del panel del sistema


Instalirajte sistemske priključke Inštalácia konektorov ovládacieho panela

Installera systempanelkontakter

ติดตั้งขั้วต่อแผงระบบ

Sistem paneli konnektörlerini takın

Lắp các đầu nối hệ thống ra ngoài

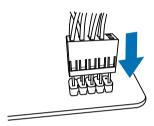

Step 7

Install ATX power connectors

تثبيت توصيلات الطاقة ATX

Инсталирайте АТХ конекторите за захранване Instalace konektorů napájení ATX

Installer ATX-strømtilslutningerne ATX-voedingsaansluitingen installeren

Paigaldage ATX-i toitekonnektorid رابط های برق ATX را نصب کنید

Installer les connecteurs d'alimentation ATX

Asenna ATX-virtaliittimet

Installieren des ATX-Stromanschlusses Εγκατάσταση συνδέσμων τροφοδοσίας ΑΤΧ

Csatlakoztassa az ATX tápcsatlakozókat

Installare i connettori di alimentazione ATX

Pasang konektor daya ATX ATX 電源コネクターを取り付ける

АТХ электр қуат қосқыштарын орнатыңыз

ATX 전원 커넥터 설치

Sumontuokite ATX maitinimo jungtis Uzstādiet ATX strāvas savienotājus

Installer kontakter for ATX-strøm Instale os conectores de alimentação ATX

Instalacja złączy zasilacza ATX

Установка АТХ разъема

Instalaţi pinii conectori ATX

Instalar conectores de alimentación ATX Instalirajte ATX električne priključke


Inštalácia napájacích konektorov ATX

Installera ATX strömkontakter


ติดตั้งขั้วต่อ ATX เพาเวอร์

ATX güç konnektörlerini takın

Lắp các đầu nối nguồn ATX

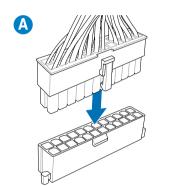





Step 8

Connect input/output devices توصيل أجهزة الدخل/الخرج

Свързване на І/О устройства Připojení vstupních/výstupních zařízení

Tilslut input-/outputudstyr I/O-apparaten aansluiten

Ühendage sisend -/väljundseadmed

دستگاه های ورودی/خروجی را متصل نمایید Connecter les périphériques d'entrée/sortie

Liitä tulo/lähtölaitteita Eingabe-/Ausgabe-Geräte verbinden

Σύνδεση συσκευών εισόδου/εξόδου

Bemeneti/kimeneti eszközök csatlakoztatása Collegate i dispositivi di input/output

Sambungkan perangkat input/output

入出力デバイスに接続する Кіріс/шығыс құрылғыларын қосу

입력/출력 장치 연결

Prijunkite įvesties / išvesties įrenginius Pievienot ievades/izvades ierīces Koble til inngang/utgangsenheter. Ligar dispositivos de entrada/saída Podłączenie urządzeń wejścia/wyjścia Подключите устройства ввода/вывода Conectare dispozitive de intrare/iesire Conectar dispositivos de entrada y salida Povežite ulazne/izlazne uređaje Pripojenie vstupných/výstupných zariadení Anslut ingående/utgående enheter ชื่อมตออุปกรณ์อินพุต/เอาต์พุต Giriş/çıkış aygıtlarına bağlan

Kết nối các thiết bị đầu vào/đầu ra

Step 9

Power on the system and install operating system and drivers

تشغيل الجهاز وتثبيت نظام وبرمجيات التشغيل

Включете системата и инсталирайте операционната система и драйверите

Zapnutí napájení systému a instalace operačního systému a ovladačů

Tænd for systemet, og installer operativsystemet og de tilhørende drivere

Het systeem inschakelen en het besturingssysteem en de stuurprogramma's installeren Lülitage süsteemi toide sisse ning installige operatsioonisüsteem ja draiverid

سیستم را روشن کرده و درایورها و سیستم عامل را نصب کنید Allumer le système et installer le système d'exploitation et les pilotes

Käynnistä järjestelmä ja asenna käyttöjärjestelmä ja ohjaimet

Einschalten des Systems und installieren des Betriebssystems und der Treiber

Ενεργοποιήστε το σύστημα και εγκαταστήστε το λειτουργικό σύστημα και τα προγράμματα οδήγησης

Kapcsolja be a rendszert és telepítse az operációs rendszert és illesztőprogramokat

Accendere il sistema e installare il sistema operativo e i driver Hidupkan sistem, lalu instal sistem operasi dan driver

システムの電源をONにし、OSとドライバーをインストールする

Жүйені қосып, операциялық жүйені және драйверлерді орнатыңыз

시스템 전원 켜기 및 운영체제와 드라이버 설치

Įjunkite sistemą ir įdiekite operacinę sistemą ir tvarkykles leslēdziet sistēmu un instalējiet operētājsistēmu un draiverus

Slå på systemet og installer operativsystem og drivere

Ligue o sistema e instale o sistema operativo e os controladores

Włącz zasilanie i zainstaluj system operacyjny oraz sterowniki

Включение системы и установка операционной системы и драйверов Porniți sistemul și instalați sistemul de operare și driverele

Proporcionar alimentación al sistema e instalar el sistema operativo y los controladores Uključite sistem i instalirajte operativni sistem i drajvere

Zapnutie systému a inštalácia operačného systému a ovládačov

Slå på systemet och installera operativsystem och drivrutiner เปิดระบบ และติดตั้งระบบปฏิบัติการและใดรเวอร์

Sistemi açıp işletim sistemini ve sürücüleri yükleyin Bật nguồn hệ thống và cài đặt hệ điều hành cũng như các driver

