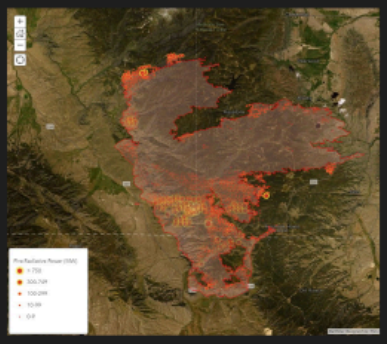

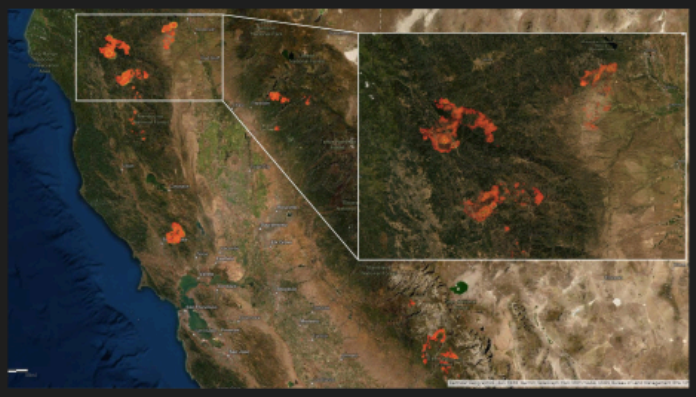

The 3D map (once uploaded) is here. With each parameter change (relating to the map), it should update, showing an estimation of what the map will look like before launching.

Prompts the user to upload a map, if there is not one already uploaded.

You can slide to see more of the map or more of the settings.

Mission Design Screen



Different parameters that can be set.

The Map showing location of the drone.

drone 1

Camera view from drone 1 & 2.
The user can passively watch what's going on from both and can zoom into just the cam. view of one if something interesting is happening. (will send single images once in a while)

Represents different fires happening in the overall area.

Mission Execution Screen



Drone 2

Edit Parameters Screen (in real tim...

The map should be interactive. If the user clicks on an area of the map (like one of the drones), the camera & parameter section will expand to only show details of drone 1 & the map will zoom in to that surrounding area of the drone. The same would apply for the fires.

Mission Execution Screen (Drone 1...

Shows more detail, such as different assets close to the near (like people, trucks, etc)



Can also swipe to view 2 (map zoomed into drone 1's surrounding area)