

# **SIM7080** Series\_Low Power Mode\_Application Note

Version:V1.01 Release Date:Feb 26, 2020



# **About Document**

#### **Document Information**

Document		
Title	SIM7080 Series_Low Power Mode_Application Note	
Version	1.01	
Document Type	Application Note	
Document Status	Released/Confidential	

## **Revision History**

Revision	Date	Owner	Status / Comments
1.00	Oct 31,2019	Wanchuan.he	First Release
1.01	Feb 26,2020	Wenjie.lai	Added product types

### **Related Documents**

[1] SIM7080 Series AT Command Manual V1.02

#### This document applies to the following products:

Name	Туре	Size (mm)	Comments
SIM7080G	CAT-M/NB	17.6*15.7 *2.3	N/A
SIM7070G/SIM7070E	CAT-M/NB/EGPRS	24*24*2.4	N/A
SIM7070G-NG	NB/EGPRS	24*24*2.4	N/A
SIM7090G	CAT-M/NB	14.8*12.8*2.0	N/A

## Copyrights

This document contains proprietary technical information which is the property of SIMCom Wireless Solutions Co.,Ltd. Copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.



# **Contents**

Ab	out D	ocument		1
	Doc	ument In	nformation	1
			tory	
			, uments	
C-:				
COI	ntents	······	•	,Δ
1	Pur	nose of t	his document	
-		<b>pose o</b> i t		
2	Intr	oduction	1	4
	2.4	DCM	mode	4
	2.1		mode	
	2.2		difference between three modes	
3	PSN	በ Mode .		5
	3.1	PSM	Wake-up	6
	3.2		ommands Related to PSM Mode	
	3.3		iality	
	3.4		ce	
4	o D E	V Mada		0
4	eDr	ix ivioue		······································
	4.1	eDRX	( introduction	8
		4.1.1	eDRX Mode	
		4.1.2	PTW	
		4.1.3	eDRX cycle length	
	4.2		ommands Related to eDRX Mode	
	4.3	Notic	ce	10
5	Slee	ep Mode		11
6	AT 1	Test Exam	nple	11
	6.1	Rear	er Configuration	11
	0.1	6.1.1	PDN Auto-activation	
		6.1.2	APN Manual configuration	
	6.2	0.1.1	Mode Demo	
		6.2.1	Enable/Disable PSM mode	
	6.3	eDRX	( Mode Demo	
		6.3.1	Enable eDRX	13



	6.3.2	Set eDRX cycle length 20.48s	.13
	6.3.3	Set eDRX cycle length 20.48s and PTW 10.24s	.14
	6.3.4	Disable eDRX mode	.14
6.4	Sleep N	Mode Demo	.14
	•		
Contact			15



# 1 Purpose of this document

Based on module AT command manual, this document will introduce module low power modes and relevant conditions.

Developers could understand and develop application quickly and efficiently based on this document.

# 2 Introduction

NB-IoT supports three power saving modes: PSM (Power Saving Mode), DRX (Discontinuous Reception Mode), and eDRX (Extended DRX).

PSM (power saving mode) and eDRX (extended Discontinuous Reception) are used in NB-IOT to save power. In PSM mode, the terminal does not need to receive paging to detect whether there is downlink service, and eDRX mode has a longer paging detection period than DRX, which may result in a longer time delay, which has an impact on the real-time performance of the data. Whether the PSM or the eDRX are used depends on the capabilities and configuration of the terminal and the network. In terms of capabilities, the capability network that the terminal does not support must not be configured, and the capabilities supported by the terminal may be different in different situations of the network.

### 2.1 PSM mode

In PSM mode, the terminal does not detect whether there is paging data in the downlink. As long as the TAU and uplink need to send data, the PSM state will be exited. T3412 is the time of TAU (Tracking Area Update), and T3324 is the timer that enters PSM in IDLE mode.

DRX can be considered that the downlink service can reach the terminal equipment at any time. In each DRX cycle (1.28s, 2.56s, 5.12s or 10.24s), the terminal will detect whether there is a downlink service arrival, which is applicable to services with high requirements for delay. Terminal equipment generally adopts a power supply method, such as a street light service.



- Since the DRX cycle is short (1.28s, 2.56s, 5.12s, or 10.24s, determined by the operator's network side setting), the downlink service can be considered to be reachable at any time with a small delay.
- Applicable to services with high latency requirements, but with relatively high power consumption. Terminal devices generally use power supply.

#### 2.2 **eDRX**

eDRX has a longer paging cycle than DRX, which enables the terminal to save power and also causes longer downlink data delay (such as DRX value of 1.28s\2.56s, and eDRX value can be 20.48s, even 2.9h), so it is suitable for use in scenarios where time urgency is not very high.

### 2.3 The difference between three modes

DRX: Can find devices anytime, anywhere.

eDRX: It takes from few minutes to an hour or even longer time to find the device.

PSM: It may take a day or longer time to find the device.

## 3 PSM Mode

Power Saving Mode (**PSM**) will start after data connection terminates or periodic TAU completes.

Data connection terminates, module will go to idle mode firstly, and then move to DRX

(Discontinuous Reception) status. Once timer T3324 is expired, module will enter into PSM mode.

In PSM mode, module will be in a kind of deep sleep mode, in extremely low power mode, the current of SIM7080 is about 3.5  $\mu$ A.



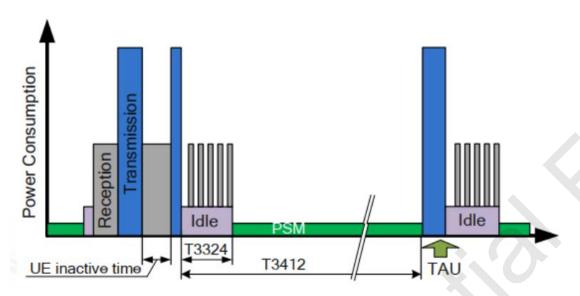


Figure 1 PSM mode

### 3.1 PSM Wake-up

#### Wake-up conditions:

- 1) T3412 timer is expired
- 2) Pulling PWRKEY to low level

### 3.2 AT Commands Related to PSM Mode

AT Command	Description		
AT+CPSMS	Power Saving Mode Setting		
AT+CPSMRDP	Read PSM Dynamic Parameters		
AT+CPSMSTATUS	Enable Deep Sleep Wakeup Indication		
AT+CPSMCFG	Configure PSM version and Minimum Threshold Value		
AT+CPSMCFGEXT	Configure Modem Optimization of PSM		

For the detail of these commands, Please refer to "SIM7080 Series AT Command Manual".

## 3.3 Speciality

#### NOTE: Parameters for AT+CPSMS command

+CPSMS:

<mode>,<Requested\_Periodic-RAU>,<Requested\_GPRS-Ready-timer>,<Requested\_periodic-TAU>,<Requested\_Active-Time>

Here, parameters <Requested\_Periodic-RAU> and<Requested\_GPRS-Ready-timer> are not need



to configure. <Requested\_periodic-TAU> is T3412\_ext, <Requested\_Active-Time> is timer T3324.

Parameter includes unit (high 3 bits) and value (low 5 bits), below is the table.

#### <Requested\_Periodic-TAU>

Unit	Base	Min. in Second	Max. in Second
0	10min	2400	18600
1	1h	21600	111600
2	10h	144000	1116000
3	2sec	0	62
4	30sec	90	930
5	1min	960	1860
6	320h	1152000	35712000

Table 1 <Requested\_Periodic-TAU> of AT+CPSMS

For example, <TAU>=01000111 means, unit=2(010 hours) and value=7(00111), so total period is 7\*10hours=70 hours.

#### <Requested\_Active-Time>

Unit	Base	Min. in Second	Max. in Second
0	2sec	0	62
1	1min	120	1860
2	6min	2160	11160

Table 2 <Requested\_Active-Time> of AT+CPSMS

#### 3.4 Notice

- 1) About the URC report of "+ CPSMSTATUS: ENTER PSM" in the process of entering PSM, it means that the module is ready to enter PSM sleep mode. When the module exits from the PSM, it reports +CPSMSTATUS: "EXIT PSM". AT+CPSMSTATUS can control whether these URCs are reported.
- 2) The module enables and disables the PSM function through the AT+CPSMS command. This command can also configure the values of the terminal's T3324 and T3241. The module only makes network requests when it switches from CPSMS 0 to CPSMS 1, and gets the parameters issued by the operator. When the value of CPSMS is already 1, reconfiguring AT+CPSMS=1 will not do network requests.
- 3) The actual value of T3324 and T3412 is issued by the operator. Values configured with AT+CPSMS may in some cases be inconsistent with the values assigned by the network. The



- AT+CPSMRDP command can be used to query the terminal configuration and the values of T3324 and T3412 delivered by the network.
- 4) The usage of AT+CPSMCFG indicates that if the terminal cannot enter the PSM in some cases, it can be checked whether the difference between T3412 and T3324 is less than the default minimum threshold. If it is less than, you can adjust this threshold by AT+CPSMCFG.
- 5) AT + CPSMCFGEXT is mainly used to configure PSM extended parameters, these parameters mainly include network search and other related content. If it is needed in the actual application, you can refer to the documentation of the command to set it up.
- 6) If the SIM card is opened with a PIN code and other related functions, it may not be able to enter the PSM. If you want to use the PSM function, please first confirm the related functions such as closing the SIM card PIN code.
- 7) If the module is not woken up when the time of the T3412 arrives, in this case, it needs to interact with the network to enter the PSM mode again. The interaction mode can be to send a packet of data.

## 4 eDRX Mode

#### 4.1 eDRX introduction

#### **4.1.1** eDRX Mode

The eDRX mode is a new feature in the Rel-13. Its main purpose is to support longer-cycle paging monitoring to save power. The traditional 2.56-second paging interval consumes a large amount of power for the UE, and the downlink data transmission frequency is small. Through the negotiation cooperation between the core network and the user terminal, the user terminal skips most of the paging monitoring, thereby achieving the purpose of power saving.

The power saving effect of the eDRX mode is worse than the PSM mode, but the accessibility of the downlink communication link is greatly improved relative to the PSM mode.

The eDRX cycle is shown in Figure 3. The user can check the eDRX cycle by consulting the relevant AT command (AT+CEDRXS).



#### 4.1.2 PTW

During each eDRX cycle, there is a Paging Time Window (PTW). The UE can only listen to the paging channel according to the DRX cycle in the PTW to receive downlink traffic. The time outside the PTW is in a sleep state and does not monitor. The paging channel cannot receive downlink traffic.

The PTW cycle is shown in Figure 3. The user can perform the PTW cycle setting by consulting the relevant AT command (AT+CEDRX).

Note: The user terminal and the core network negotiate the length of the eDRX through the attach and TAU procedures.

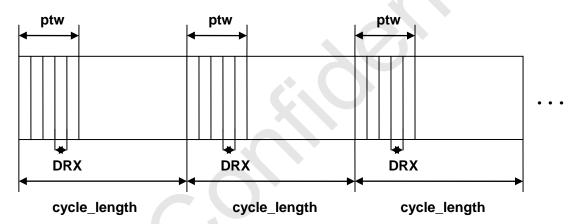


Figure 3 eDRX diagrammatic sketch

## 4.1.3 eDRX cycle length

eDRX value, octet 3 (bit 4 to 1)

The octet contains the eDRX value field. The values are listed in table3.



4	3	2	1	eDRX cycle length duration	
0	0	0	0	5.12 seconds	
0	0	0	1	10.24 seconds	
0	0	1	0	20.48 seconds	
0	0	1	1	40.96 seconds	
0	1	0	0	61.44 seconds	
0	1	0	1	81.92 seconds	
0	1	1	0	102.4 seconds	
0	1	1	1	122.88 seconds	
1	0	0	0	143.36 seconds	
1	0	0	1	163.84 seconds	
1	0	1	0	327.68 seconds	
1	0	1	1	655.36 seconds	
1	1	0	0	1310.72 seconds	
1	1	0	1	2621.44 seconds	
1	1	1	0	5242.88 seconds	
1	1	1	1	10485.76 seconds	

Table 3 eDRX cycle length

#### 4.2AT Commands Related to eDRX Mode

AT Command	Description			
AT+CEDRXS	Entended-DRX Setting			
AT+CEDRXRDP	eDRX Read Dynamic Parameters			
AT+CEDRX	Configure EDRX parameters			

For the detail of these commands, Please refer to "SIM7080 Series AT Command Manual".

#### 4.3 Notice

- 1) AT+CEDRXS can be used to enable and disable the EDRX function of the module. If it has been registered to the network, executing this command will initiate a TAU update process. If accepted by the network, these parameters will take effect immediately.
- 2) The AT+CEDRXRDP command can be used to query whether the request sent by the module to the network is accepted by the network. If the response "+CEDRXRDP: 0" indicates that the EDRX request is not accepted by the carrier's network.
- 3) The AT+CEDRX command can be used to configure the EPRX paging cycle and PTW parameters, but the configuration parameters need to be restarted. This command can be used for the need to modify the PTW parameters.



# **5 Sleep Mode**

In sleep mode, module will consume very low power, but still can receive paging.

# **6 AT Test Example**

## **6.1** Bearer Configuration

Usually module will register PS service automatically.

### 6.1.1 PDN Auto-activation

Response	Description
+CPIN:READY	Check SIM card status
ОК	
+CSQ: 13,99	Check RF signal
ОК	
+CGATT: 1	Check PS service. 1 indicates PS has
	attached.
ОК	
+CGACT: 1,1	Activated automatically
ОК	
+COPS: 0,0,"CHINA MOBILE CMCC",9	Check operator information
	9 is NB-IOT network
ОК	
+CGNAPN: 1,"cmnbiot"	Check APN
Ok	
	Check IP address
TCGPADDR: 1,100.105.40.155	CHECK IP duuless
ОК	
	+CPIN:READY  OK  +CSQ: 13,99  OK  +CGATT: 1  OK  +CGACT: 1,1  OK  +COPS: 0,0,"CHINA MOBILE CMCC",9  OK  +CGNAPN: 1,"cmnbiot"  OK  +CGPADDR: 1,100.105.46.155

# 6.1.2 APN Manual configuration

If not attached automatically, could configure correct APN setting.



AT Command	Response	Description
AT+CFUN=0	+CPIN: NOT READY	Disable RF
	OK	
AT+CGDCONT=1,"IP	OK	Set the APN manually
",",cmnbiot"		
AT+CFUN=1	OK	Enable RF
	+CPIN: READY	
AT+CGATT?	+CGATT: 1	Check PS service. 1 indicates PS
		has attached.
	OK	
AT+CGNAPN	+CGNAPN: 1,"cmnbiot"	Check APN
	OK	
AT+CGPADDR=1	+CGPADDR: 1,100.90.77.162	Check IP address
	ОК	

### 6.2 PSM Mode Demo

# 6.2.1 Enable/Disable PSM mode

AT Command	Response	Description
AT+CPSMSTATUS=	OK	Enable PSM Event report
1		
AT+IPR=115200	OK	Fix baud rate
AT+CEREG=4	OK	
AT+CEREG?	+CEREG:	Inquiry timers configured by
	4,1,"5B57","195071B",9,,,"000000000","01100000"	network.
	OK	
AT+CPSMS=1,,,"0	OK	Enable PSM mode and set
1011111","00000		the specific T3412_ext and
001"	+CEREG:	T3324
	1,"5B57","195071B",9,,,"00000001","01011111"	
	+CEREG:	
	1,"5B57","195071B",9,,,"00000001","01011111"	
	+CPSMSTATUS: "ENTER PSM"	



AT+CEREG?	+CEREG:	Inquiry timers configured by
	4,1,"5B57","195071B",9,,,"00000001","01011111"	network.
	ОК	
AT+CEREG=0	ОК	Disable network registration
		unsolicited result code
AT+CPSMS=0	OK	Disable PSM

#### 6.3 eDRX Mode Demo

#### NOTE:

- 1) After eDRX enabled, you need to let module enter into sleep mode. To disable eDRX, you need to exit sleep mode firstly. In order to achieve real power saving.
- 2) If not enter into sleep mode, Enable eDRX mode is used to enter eDRX in standby mode.

## 6.3.1 Enable eDRX

AT Command	Response	e		Description
AT+COPS?	+COPS:	0,0,"CHINA	MOBILE	Check operator information
	CMCC",9			9 is NB-IOT network
	ОК			
AT+CEDRXS=1,5,"0000"	OK			Enable eDRX function.
AT+CEDRXS?	+CEDRXS:	4,"0001"		Query eDRX current status
	+CEDRXS:	5,"0000"		
	OK			
AT+CEDRXRDP	+CEDRXRD	P:		If eDRX supported,
	5,"0000","	0010","0100"		"0000" Requested cycle length
				"0010" Cycle length from network
	ОК			"0100" PTW
AT+CEDRXRDP	+CEDRXRD	P: 0		If eDRX not supported, return with 0.
	OK			

# 6.3.2 Set eDRX cycle length 20.48s

AT Command	Response	Description
AT+CEDRXS?	+CEDRXS: 4,"0001"	Query eDRX current status
	+CEDRXS: 5,"0000"	



	OK	
AT+CEDRXS=1,5, "0010"	OK	Set eDRX cycle length with "0010",which is
		20.48 s.
AT+CEDRXRDP	+CEDRXRDP:	"0010" Requested cycle length
	5,"0010","0010","0100"	"0010" Cycle length from network
		"0100" PTW from network
	OK	

## 6.3.3 Set eDRX cycle length 20.48s and PTW 10.24s

AT Command	Response	Description
AT+CEDRXS?	+CEDRXS: 5,"0000"	Query eDRX current status
	OK	
AT+CEDRX=2,1,3,2	OK	Set PTW with 3(10.24s).
		This configuration will be saved after reboot.
AT+CEDRXRDP	+CEDRXRDP:	"0010" Requested cycle length
	5,"0010","0010","0011"	"0010" Cycle length from network
		"0011" PTW from network
	ОК	X

# 6.3.4 Disable eDRX mode

AT Command	Response	Description
AT+CEDRXS=0	ОК	Disable eDRX function
AT+CEDRXRDP	+CEDRXRDP: 0	If eDRX not supported, return with 0.

# 6.4 Sleep Mode Demo

AT Command	Response	Description
AT+CSCLK=1	ОК	Enable sleep mode 1.
		Pulling up DTR pin, module will go to normal
		sleep mode
		Pulling down DTR pin will wake module up
		from sleep mode.



# **Contact**

### **SIMCom Wireless Solutions Co.,Ltd**

Address: Building B, No.633 Jinzhong Road, Changning District, Shanghai P.R.China 200335

Tel: +86-21-31575126

Email: <a href="mailto:support@simcom.com">support@simcom.com</a>