

WYVERN 3-ZONE



Component	Description	Qty
Α	Wyvern 3-Zone Jacket	1
В	7.4V Battery	1
С	Charger	1





SAFETY INFORMATION



SERVICE

• THIS ITEM SHOULD BE SERVICED BY A QUALIFIED REPAIR PERSON USING ONLY IDENTICAL REPLACEMENT PARTS. THIS WILL ENSURE THE SAFETY OF THE PRODUCT IS MAINTAINED.

SPECIFIC SAFETY RULES

- DO NOT USE THIS ITEM WITH AN INFANT, CHILD, HELPLESS PERSON, OR ANYONE INSENSITIVE TO HEAT SUCH AS A PERSON WITH POOR CIRCULATION.
- NEVER USE IF INNER LINING IS WET.
- HEATING ELEMENTS SHOULD NOT BE ALLOWED TO TOUCH BARE SKIN
- SHUT OFF POWER IMMEDIATELY IF DISCOMFORT OCCURS.
- DO NOT NOT ALLOW THE CORDS TO BE PINCHED.
- IF IMPROPER OPERATION OF THIS ITEM IS OBSERVED, DISCONTINUE ITS USE IMMEDIATELY.
- DO NOT USE PINS ON OR AROUND THIS JACKET THEY CAN CAUSE DAMAGE TO THE WIRING.
- DISCONNECT AND REMOVE THE BATTERY PACK FROM BATTERY HOLDER POCKET BEFORE WASHING.
- DO NOT DRY CLEAN. DO NOT USE DRY-CLEANING FLUID ON THIS ITEM. DO NOT BLEACH. CLEANING SOLVENTS MAY HAVE A DETERIORATING EFFECT ON THE INSULATION OF THE HEATING ELEMENTS.
- HAND WASH AND HANG DRY. DO NOT WRING. DO NOT MACHINE WASH OR MACHINE DRY, EVEN THOUGH THE MACHINE MAY INCLUDE A HANG WASH OR EQUIVALENT CYCLE, AS AN ELECTRIC SHOCK OR FIRE MAY RESULT.
- Do not iron.
- MAINTAIN LABELS AND NAMEPLATES. THESE CARRY IMPORTANT INFORMATION.



ASSEMBLY



INSERTING AND REMOVING THE BATTERY

- 1. Unzip the battery holder pocket (1) located inside the Jacket (A) on the left front.
- 2. Insert the power cable (2) from inside the battery holder pocket (1) into the power cable port on the battery (B).
- 3. PLACE THE CONNECTED BATTERY (B) INTO THE HOLDER POCKET AND ZIP CLOSED.
- 4. TO REMOVE THE BATTERY (B), UNZIP THE BATTERY HOLDER POCKET (1), REMOVE THE BATTERY (B), AND DISCONNECT THE POWER CABLE (2).

CLEANING INSTRUCTIONS

- 1. REMOVE THE BATTERY PACK.
- 2. HAND WASH THE JACKET IN COLD WATER. DO NOT USE BLEACH. DO NOT WRING. DO NOT MACHINE WASH, EVEN THOUGH THE WASHING MACHINE MAY INCLUDE A HAND WASH OR EQUIVALENT CYCLE.
- 3. HANG DRY. DO NOT MACHINE DRY. DO NOT IRON.






TO TURN ON, PLEASE AND HOLD THE HEATED JACKET POWER BUTTON (1) FOR ABOUT 3 SECONDS. THE JACKET (Å) WILL BEGIN TO PREHEAT. THIS WILL BE SIGNALED BY THE POWER BUTTON (1) CYCLING THROUGH RED, AMBER, GREEN AND THEN RED AGAIN ILLUMINATION

TO CHANGE THE HEAT MODE, CYCLE THROUGH THE MODES WITH A SINGLE CLICK. THE SETTINGS ARE SIGNALED BY THE FOLLOWING COLORS:

HIGH – RED MEDIUM – AMBER GREEN – LOW

IF THE JACKET TURNS OFF UNEXPECTEDLY, CHECK THE CONNECTIONS AND CHARGE THE BATTERY PACK.

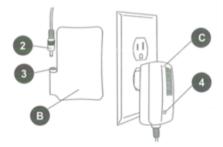

TO CHARGE THE BATTERY (B), INSERT THE CHARGER'S PLUG (2) INTO THE BATTERY POWER CABLE PORT (3). PLUG THE CHARGER (C) INTO THE 1 10V OUTLET. THE CHARGER'S RED LIGHT (4) WILL COME ON INDICATING THE BATTERY IS BEING CHARGED. AFTER CHARGING IS COMPETE (APPROX. 2 HOURS), THE CHARGER LIGHT (4) WILL TURN TO GREEN.



WE ARE PASSIONATE ABOUT GIVING OUR CUSTOMERS A GREAT PRODUCT. WE WANT YOU ALL TO GET OUT THERE, NO MATTER WHAT THE WEATHER, AND ENJOY OUR PLANET. IF YOU HAVE QUESTIONS, NEED CUSTOMER SERVICE OR NEED ORDER REPLACEMENT PARTS, PLEASE CONTACT US AT WWW.DRAGONHEATWEAR.COM.

FCC COMPLIANCE STATEMENT

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- 1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- 2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

FCC WARNING

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION.

THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- Increase the separation between the equipment and the receiver.
- CONNECT THE EQUIPMENT INTO AN OUTLET DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- Consult the dealer or an experienced radio/TV technician for help.

