

# Zebra DS2278 - kitchen-relay quick reference

Bar codes lifted from the DS2278 Product Reference Guide (MN-002915). Scan them straight off this page.


---

## 1. Re-bond the scanner to a relay board

Do this after moving the gun to a different ESP32. A BLE bond is stored per-host: the old board's bond does NOT transfer.

Scan TOP first, then BOTTOM. Then power-cycle the relay and watch its /status for barcode.connected: true.


PRG 6-29

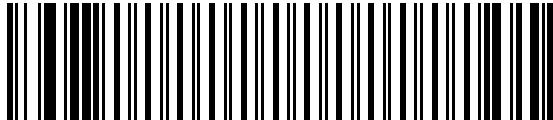

### [1] Unpairing

Drops the old host. Safe even if nothing is paired.

PRG 6-6

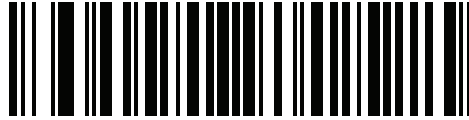

### [2] HID Bluetooth Low Energy (Discoverable)

Puts the gun back in BLE HID mode + advertising.

Do NOT scan "HID Bluetooth Classic" (it sits just above [2] in the guide, PRG 6-6). It switches the gun to Classic BT, which the NimBLE firmware cannot see at all - the relay will simply never find it.

---

## 2. Discoverable mode

Only if [2] alone doesn't get it advertising. General is the factory default; Limited lasts 30 s then stops.

PRG 6-11



### General Discoverable Mode

default

PRG 6-11



### Limited Discoverable Mode


30 s window, then off

---

## 3. Beeper volume


Re-drawn as vector from the guide's bitmaps; symbol values and mod-103 checksums verified identical.

PRG 5-7




### Low Volume

PRG 5-7



### Medium Volume

PRG 5-7




### High Volume (default)

---

## 4. Reset - last resort

Set Factory Defaults also reverts the host type, so you MUST re-scan [2] afterwards or the relay will never see the gun.

PRG 5-5



### Restore Defaults

back to defaults (custom ones if set)

PRG 5-5



### Set Factory Defaults

clears custom defaults too - then re-scan [2]

---

Kitchen relay: `_extensions/kitchen-relay` | scanner MAC `c8:1c:fe:fd:ce:90` | health at `http://<relay-ip>/status`  
Regenerate: `python3 tools/gen-ds2278-reference.py <ds2278-prg-en.pdf>`