FM EchoLink Gateway (fm_gateway) - flow chart

OpenMT - Rick KD0OSS

Links the FM repeater to an EchoLink station. Connects to fm_host on :18700+N-1; talks to EchoLink over UDP 5198 (audio) and 5199 (control) and to the directory servers over TCP 5200.

main() - start-up



Repeater -> EchoLink station (audio out, commands in)

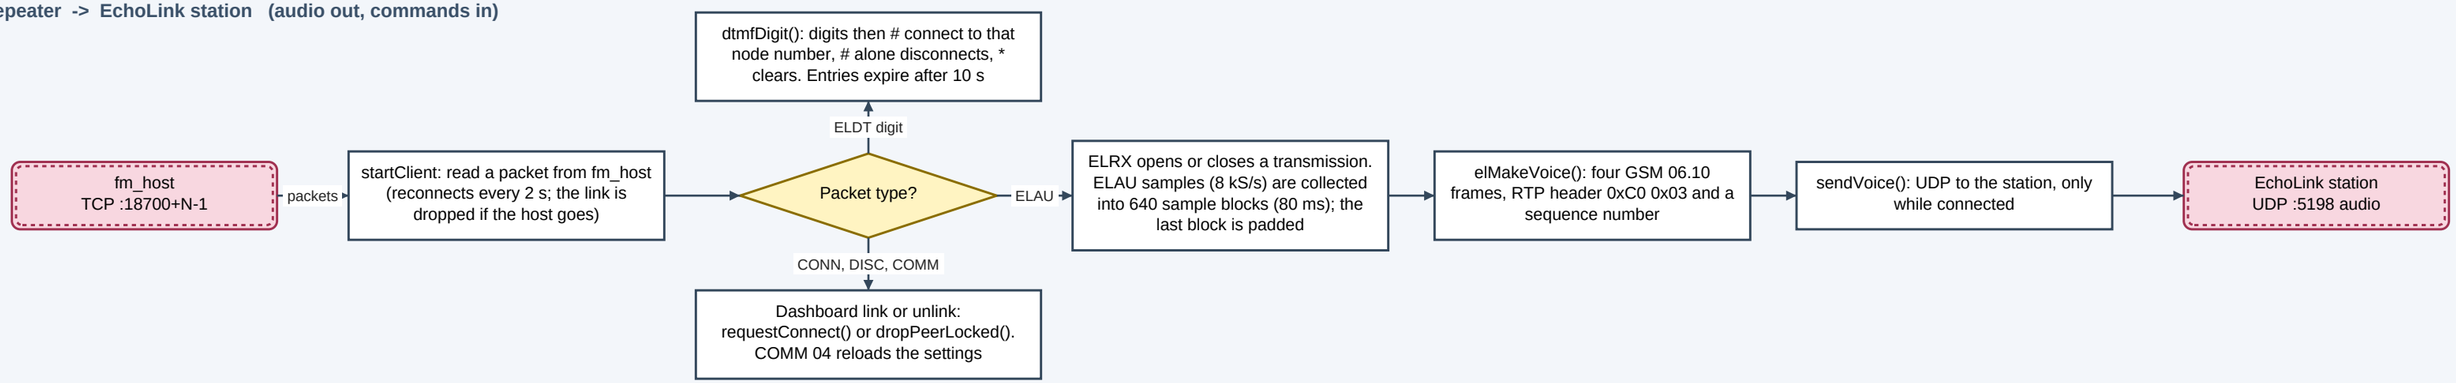

EchoLink station -> repeater (audio in, connection handling)

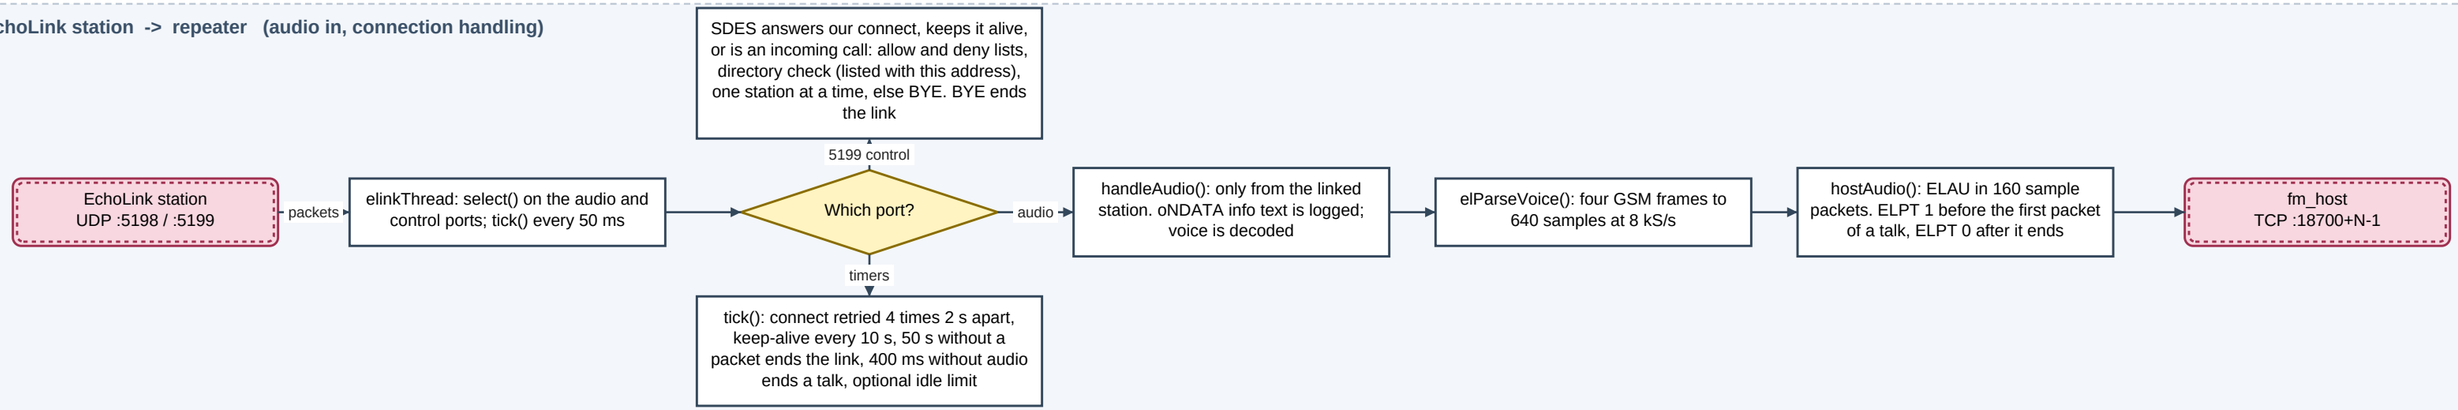

Directory, lookup and the database



Key

EchoLink needs a validated callsign with the -L (link) or -R (repeater) suffix and its password. UDP ports 5198 and 5199 must be reachable from the Internet for incoming connections.