

B I G A

TWO CIRCUITS, ON ONE BOARD


USER GUIDE · VERSION 1.0

K.ODK

Two circuits, played by drawing

Biga is two small analog-style circuits — **FORCES** and **FRYALL** — laid out on a board of contacts. You don't turn knobs to make sound: you draw shapes over the contacts, and wherever a shape lies, the circuit is touched there and answers.

Shapes can flicker on and off and sway around the point where they were drawn, so the board keeps changing by itself — freely, or in time with your DAW. Play one circuit alone, or turn both on and they share one board, joined.

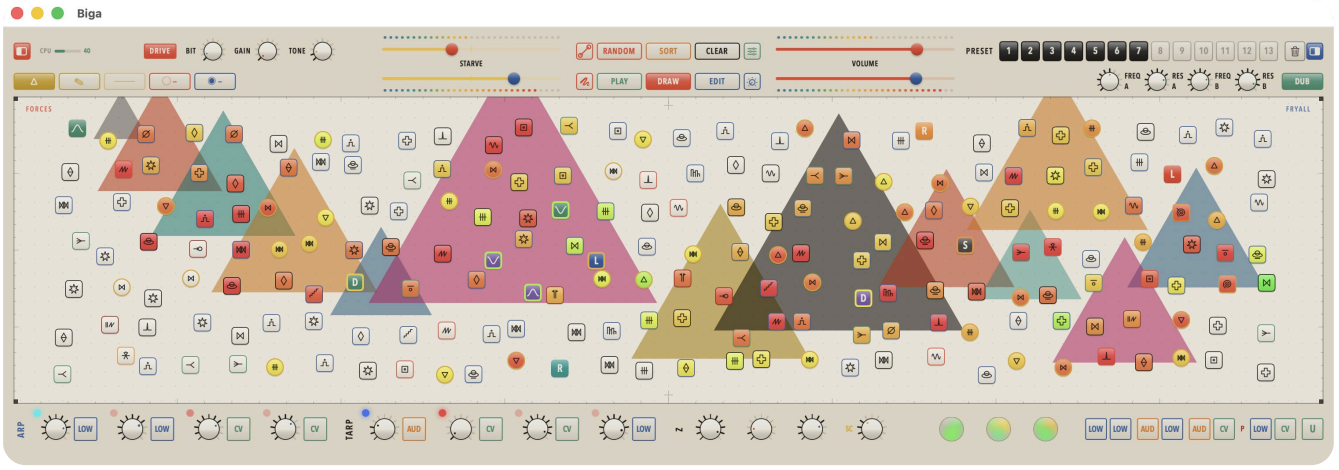


Too much to read? Skip it. Press RANDOM to scatter the contacts, press the dice beside PLAY to draw some shapes, then raise **VOLUME**. Hold a preset number to keep what you hear.

Three instruments

FORCES	The first circuit: four oscillators in two pairs (ARP and TARP) that push and pull each other, and the INTER contacts between them.
FRYALL	The second circuit: its own oscillators, slopes and switches, with three lights.
BIGA	Both side by side on one wide board, joined — the shapes can reach both, and one set of controls drives the two.

The app, the AU (AUv3) and the VST3 each come as all three: in your DAW you'll find **Forces**, **Fryall** and **Biga** under *k.odk*.

One circuit on its own

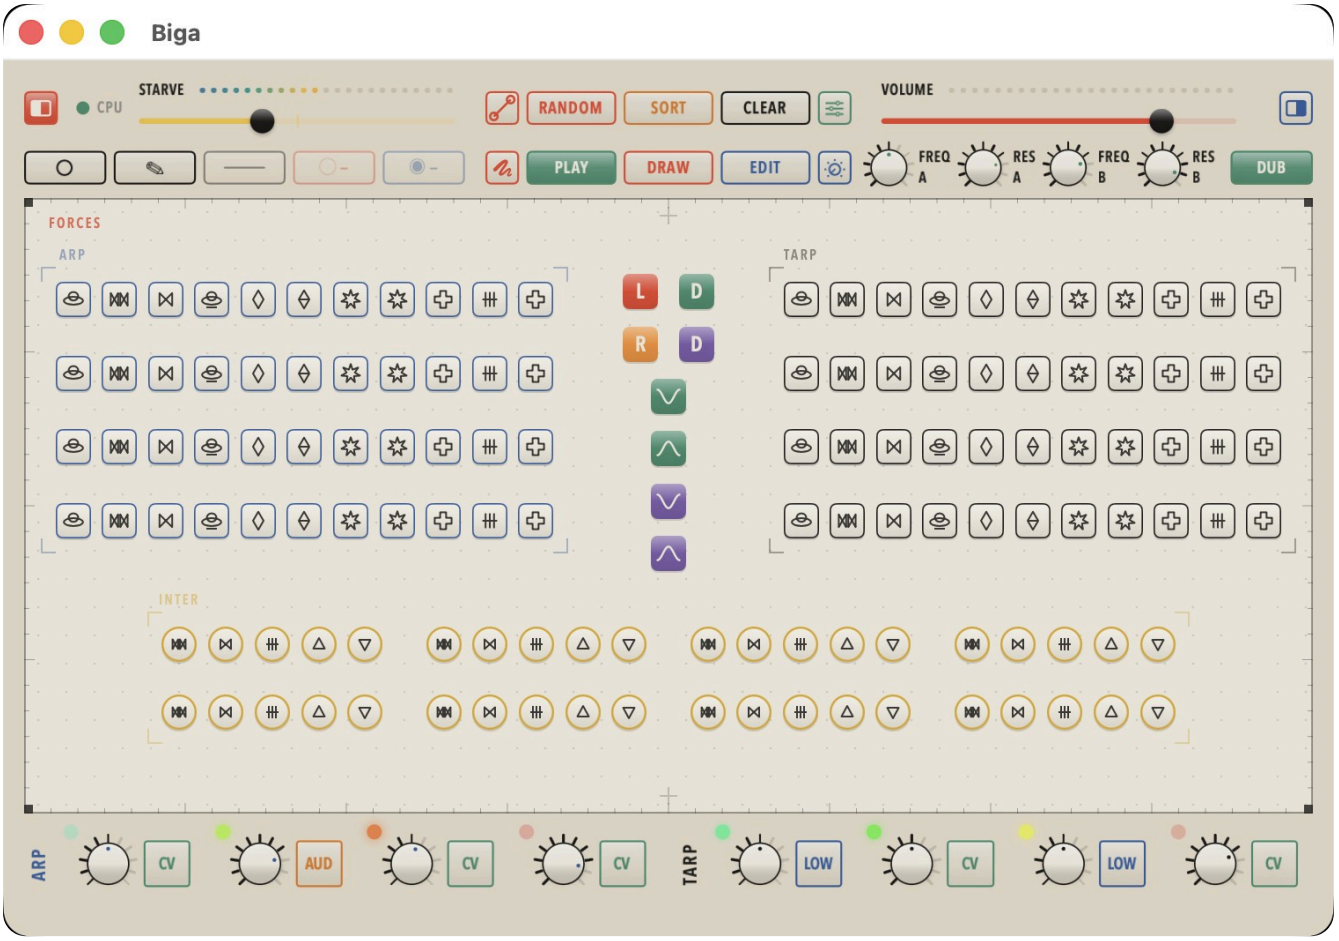

◧ ◨	**The side keys.** Left: FORCES on or off. Right: FRYALL on or off. Both on: Biga, the two on one board. One of them is always on.
● CPU	How hard your Mac is working. Green is fine, orange is busy, red is at its limit.
STARVE	The circuit's supply. Lower it and the circuit is starved: it slows, stutters and breaks up. The dots above show what it gets.
VOLUME	The output level, with a meter above it.
⁄ RANDOM SORT CLEAR	The wire key draws wires between contacts. **RANDOM** scatters the contacts over the board, **SORT** puts them back in order, **CLEAR** takes all the shapes away. Changes fade in, with no click.
☰	Opens the panel (page 6).
PLAY DRAW EDIT	What your mouse does on the board — see the next page.
FREQ · RES A / B DUB	**DUB** is a pair of resonant filters at the end of the sound. FREQ and RES set each one; the DUB key turns them on or off.


Shapes on the board

Every small square on the board is a contact of the circuit. A shape laid over contacts touches them, as a finger would: the circuit hears it at once.

PLAY	Touch the board directly: press and drag over contacts to play them, like fingers on the circuit.
DRAW	Drag on the board to draw a shape with the tool chosen on the left of the second row.
EDIT	Move shapes, change their size, or remove them.
dice	The dice either side of PLAY · DRAW · EDIT: the left one draws new shapes at random (added to the ones there), the right one sets the knobs and keys below at random.


The second row: tools


○ △	The shape to draw (tap again for the next kind), a free line, and a straight line.
○ –	**Flicker** for the next shapes: off, SLOW, FAST, IRREG (uneven) or DRUNK (wandering). A flickering shape touches and lets go.
◉ –	**Sway** for the next shapes: off, SLOW (round its point), FAST (a tremble), IRREG or DRUNK. A swaying shape moves around where it was drawn, over new contacts.

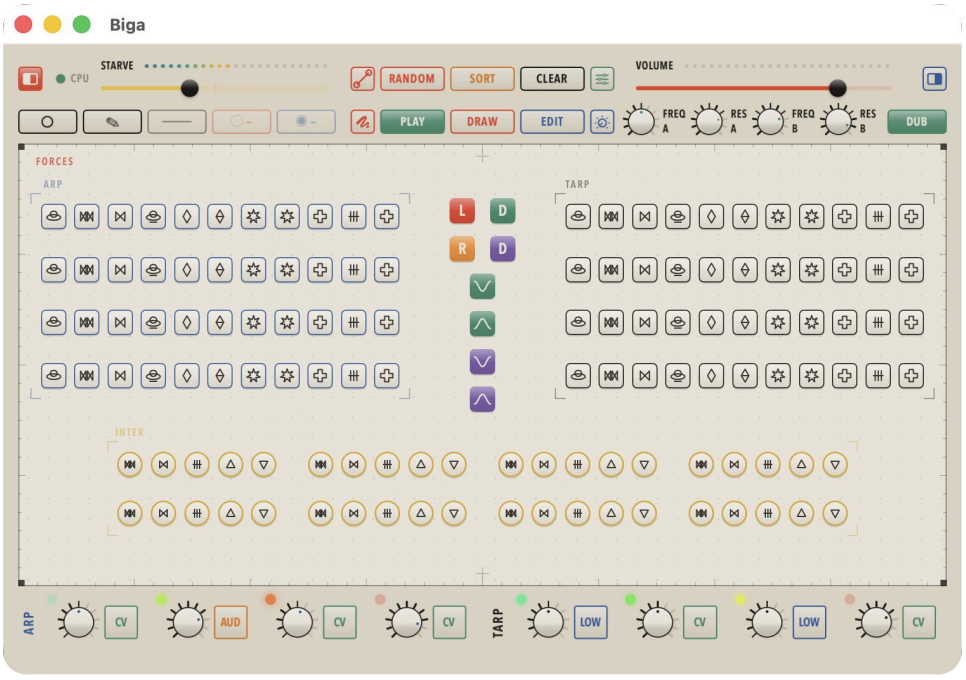

Sorted: the Forces board with nothing drawn — ARP, TARP and INTER contacts, and the outputs in the middle.

Forces and Fryall

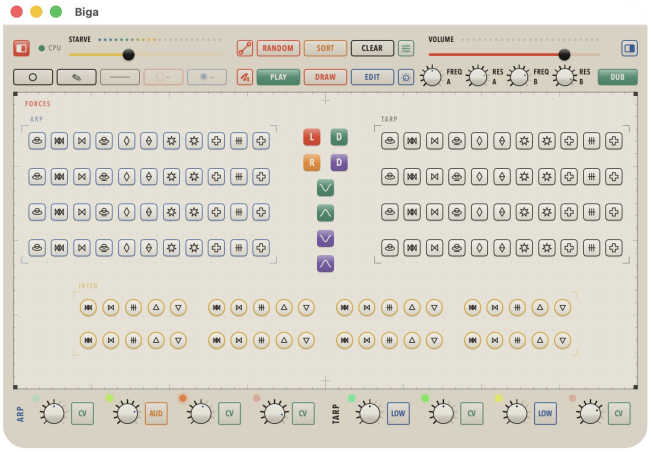

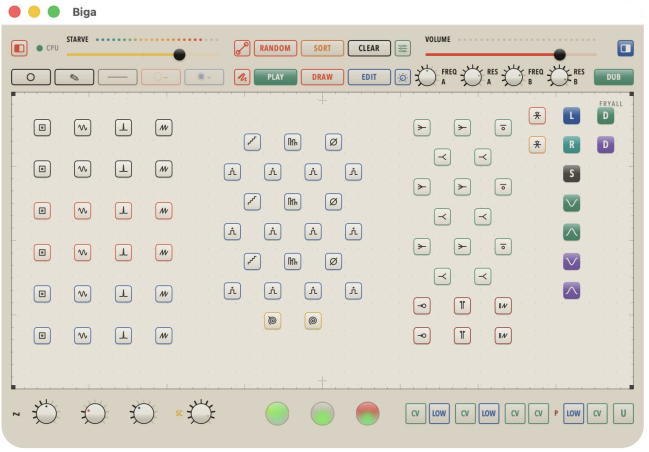

Forces

Two rows of oscillators — **ARP** and **TARP**, four each — with their contacts on the left and right, and the **INTER** contacts between them. In the middle: L R the left and right outputs, D D and the filter shapes, where the sound leaves the circuit.


Under the board, each oscillator has a knob (its pitch), a light (its swing) and a key that sets what it does: CV AUD LOW.

Fryall

Columns of its own contacts — steps, slopes, switches and spirals — and on the right the outputs L R S and the filter shapes. Under the board: the **Z** knobs and **SC**, three lights showing the circuit's state, and the keys CV LOW U that set each part.

> There is no wrong place to draw. Try a large shape over many contacts, then a small one over two or three; the sound changes with what is touched, and with what touches what.

Biga

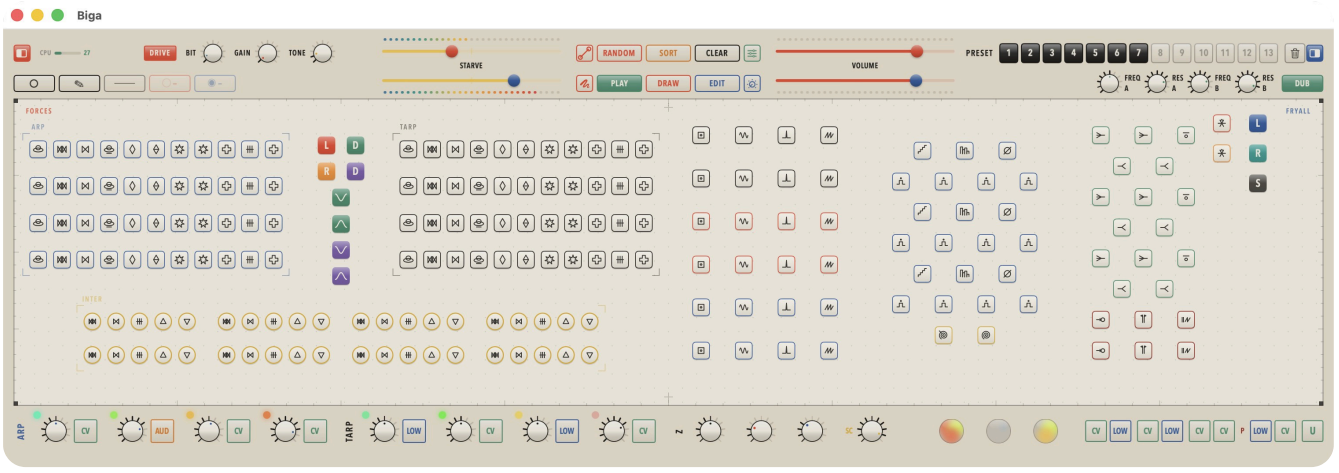


Turn on both side keys and the two circuits share one wide board: Forces on the left, Fryall on the right, joined in the middle. Shapes can lie across both. The top bar shows both STARVE and both VOLUME sliders, and a few more controls:

DRIVE	BIT · GAIN · TONE	Grit on the output: DRIVE turns it on, BIT lowers the resolution, GAIN pushes it harder, TONE darkens or brightens it.
PRESET 1 – 13 · 🗑		Tap a number to bring back a board, hold it to keep the board as it is. The bin: tap it, then a number to empty it. Presets change smoothly, with no click.
CPU		With both circuits running, a bar and a number.

Each circuit keeps its own knobs and keys below the board. The first time you open Biga, the contacts of the two are mixed over the whole board.

Settings

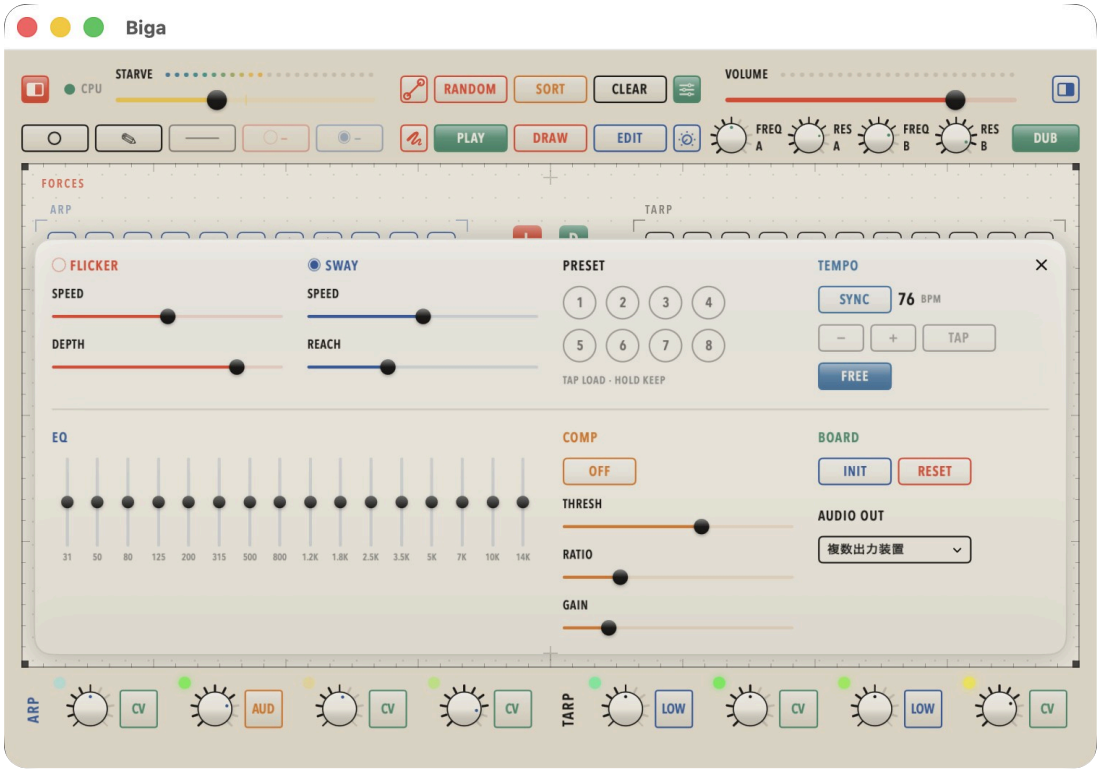

○ FLICKER	SPEED and DEPTH of every flickering shape.
◉ SWAY	SPEED and REACH (how far) of every swaying shape.
PRESET 1 – 8	One circuit alone: tap to load, hold to keep.
SYNC FREE	**SYNC**: flicker and sway in beats — on the app's own tempo (– + TAP), or in a DAW on the DAW's, following its transport. **FREE**: they never keep one pace; each turn has a new, random length.
EQ · COMP	A 16-band EQ (two clicks on a band: flat) and a compressor (THRESH, RATIO, GAIN).
INIT RESET	INIT: the board as it was first laid out. RESET: everything back to the start.
AUDIO OUT	The app only: which output it plays to. In a DAW, the DAW's.

In your DAW

AU (AUv3): Logic, GarageBand, Live and other AU hosts list Forces, Fryall and Biga under *k.odk*. **VST3:** Live, Bitwig, Reaper, Cubase … — rescan your plug-ins after installing. Biga plays on its own; it doesn't need MIDI notes.

Requires macOS 12 or later · Apple silicon and Intel. Questions: instagram.com/k_odk_ · kodk.gumroad.com