




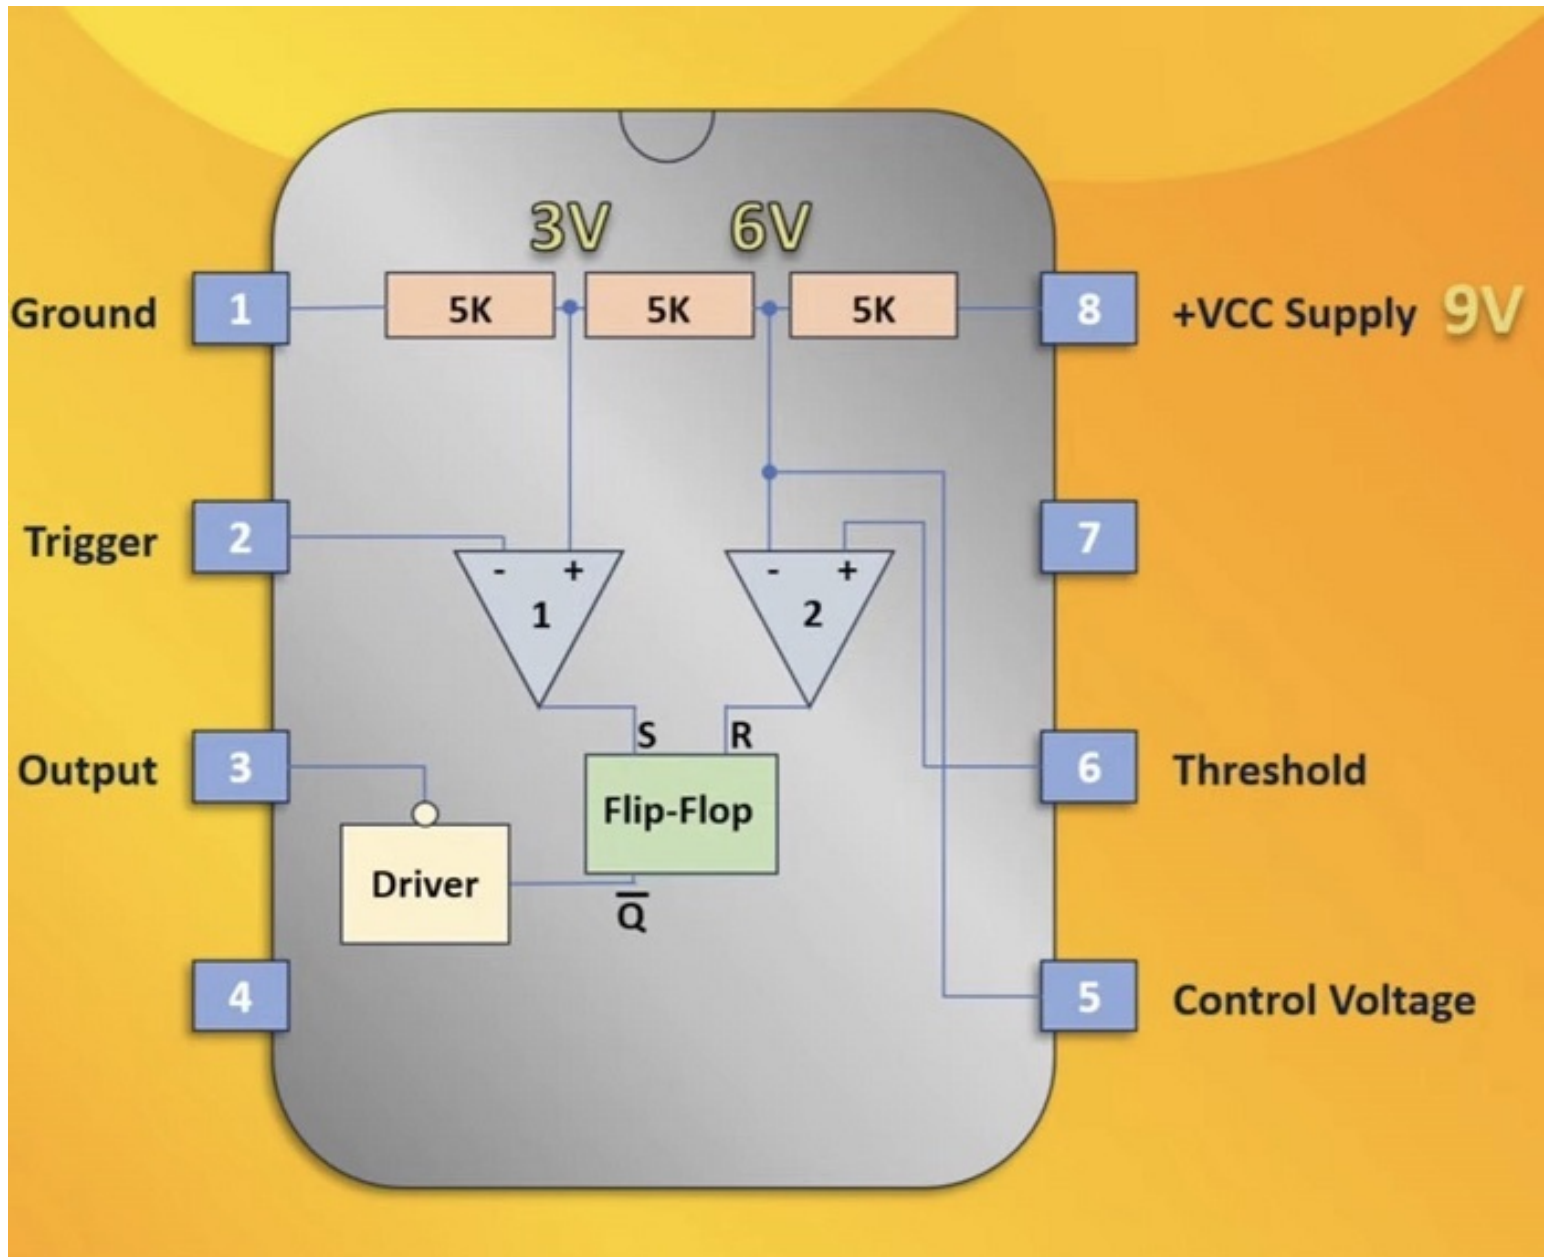

1. **GND** - Ground, 0V connection
2. **TRIG** - Trigger input to start timing cycle
3. **OUT** - Output signal (high or low)
4. **RESET** - Resets the timer
5. **CTRL** - Control voltage, rarely used (e.g., for modulating timer function)
6. **THRESH** - Threshold input, ends timing cycle
7. **DISCH** - Discharge output to discharge capacitor
8. **VCC** - Positive power supply

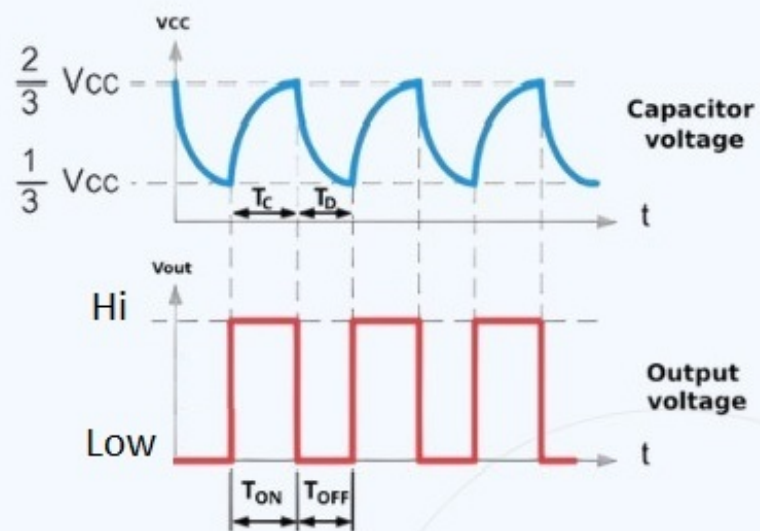

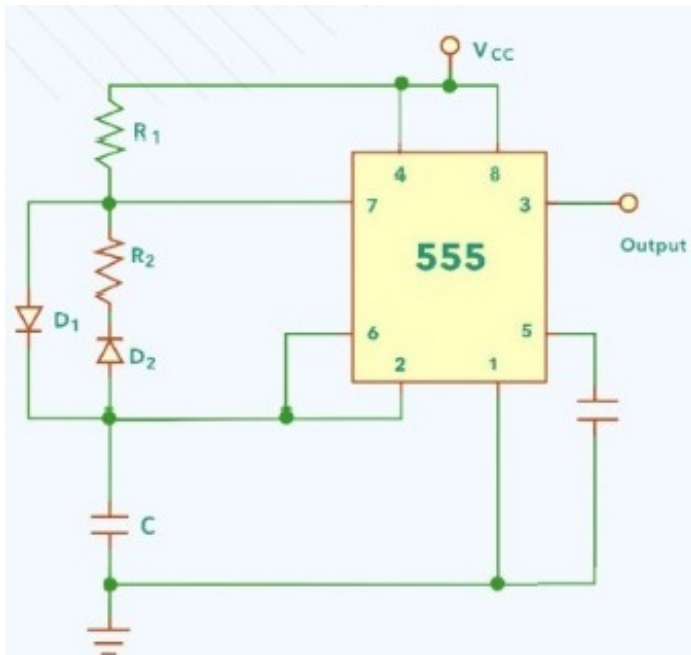

$$Frequency (Hz) = \frac{1.44}{(R_1 + 2R_2)C}$$