
Machine Map

6 — 3 CONTROL BOARDS

The control boards built in the mounter are shown in the figure.
When you replace or check boards, this diagram will be necessary.

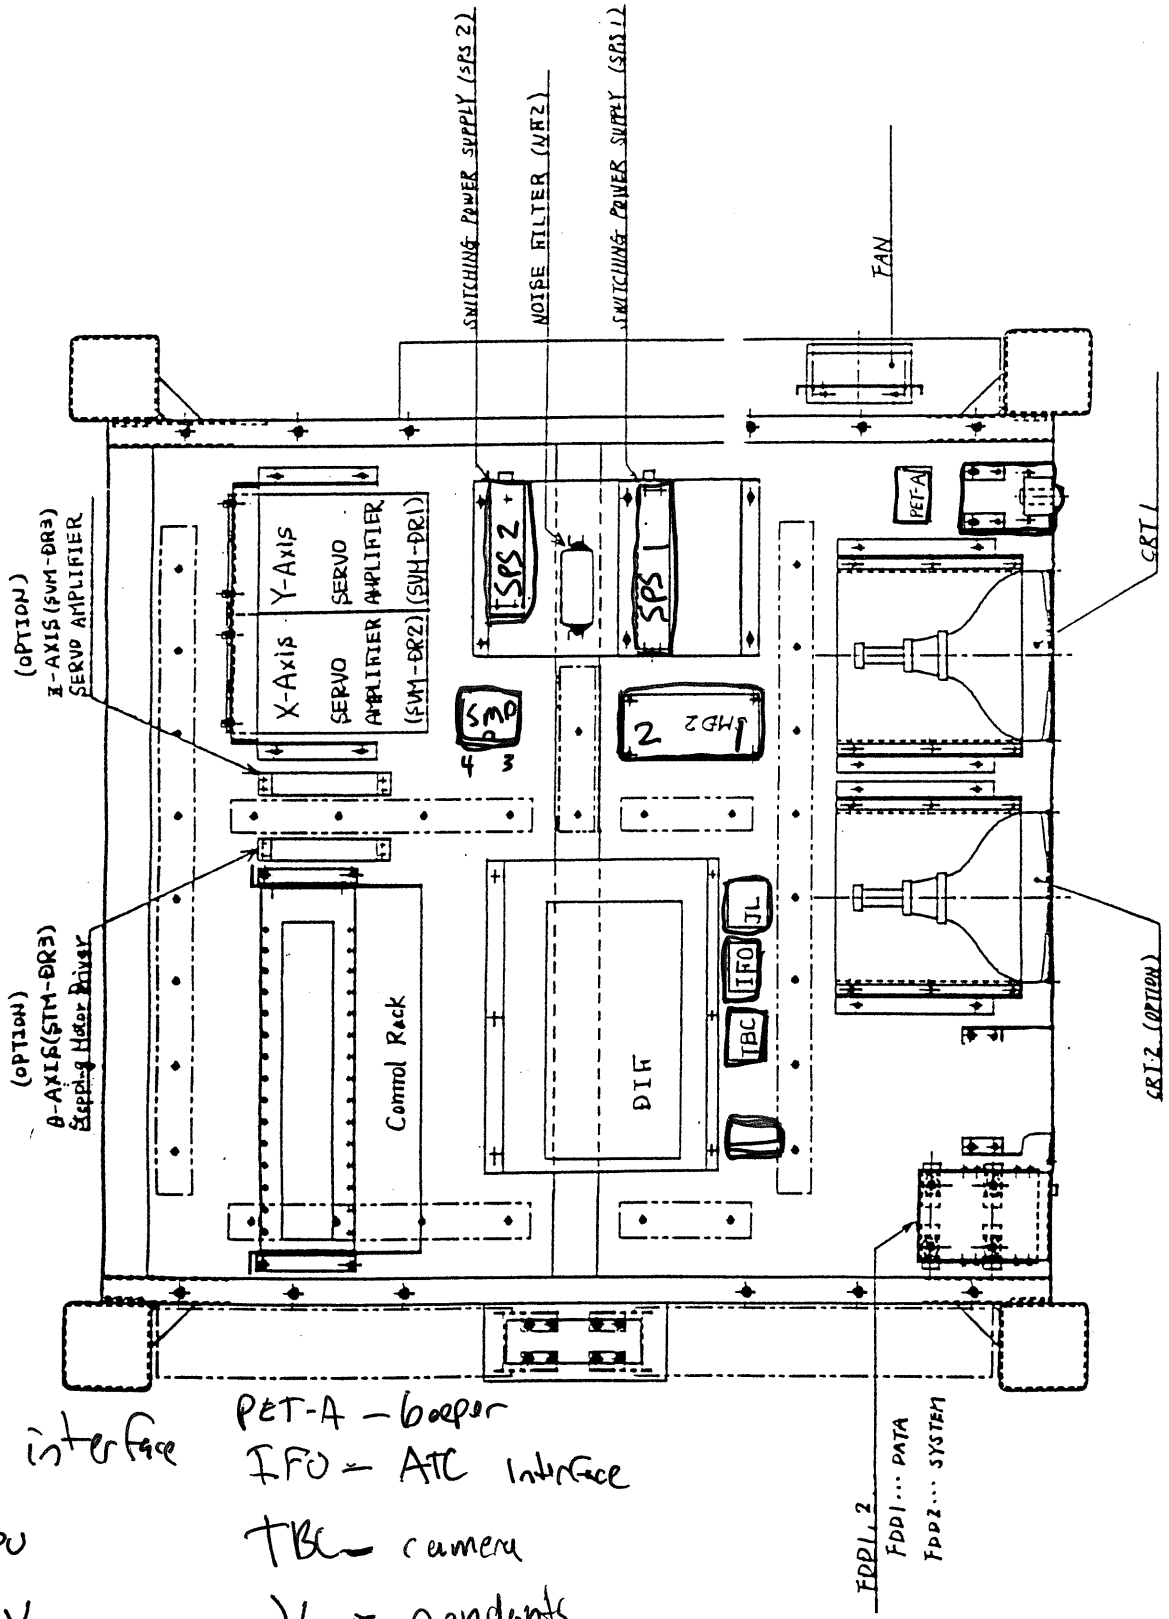

DIF- data interface

SPS1 - PSU - CPU

SPS2 - PSU - 24V

PET-A — beeper

IFO — AIC interface

IBC — camera

JL — pendants

SMD - head motor drives

CONTROL RACK - CPU

(3)-1 IN THE CONTROL RACK

BOARD	FUNCTION	BOARD NO.
CPU(98)-02	Accommodates one 16-bit CPU(V30), two communication connectors(RS-232C), and one centronics connector.	920030-1
MEM(98)-02	Memory board(1M bytes). It accommodates ROMs and RAMs.	920030-2
MEM(98)-01	Memory board(256k bytes). It accommodates ROMs and RAMs.	920030-3
DI6-(1)	Accepts input of operation box and sensors (board clamping sensors, XY overrun sensors, and so on).	920030-4
DI6-(2)	Accepts input of ATC sensors.	920030-5
DI6-(3)	Accepts input of head and ANC sensors.	920030-6
DI6-D	Accepts input of system(option) information.	920030-8
DO6(1)	Accepts drive output of board clamping, heads, and so on.	920030-9
DO6(2)	Accepts drive output of ATCs.	920030-10
LDK-A	Controls operation box and pickup level.	920030-11
FCC -1	Controls disk drive 1 and 2.	920030-12
FCC -2	Controls CRT.	920030-13
MPC6	Controls X, Y, Z, and theta motors.	920030-15-1
SIO	Serial interface for tray feeder. (TF-14)	920030-17

(3)-2 OTHERS


BOARD	FUNCTION	BOARD NO.
SMD2	Theta axis motor driver	920030-18
AT12,	For connection of ATC, UP, DOWN and CLAMP sensor. (power and sensor signal)	920030-19
PS12	For connection of ATC approximately sensor. (power and sensor signal)	920030-20
CIO2	For connection of board clamping sensors. (power and sensor signal)	920030-21
SCA2	Controls conveyor soft stop function.	920030-22
HIO	For connection of head sensors. (power and sensor signal)	920030-23
PET-A	Beep sound of operation box.	920030-24
TBC	Controls operation box.	920030-25
IFO3	Output interface for ATC data.	920030-26
DIF	Input/output interface for operation box, X, Y, and Z axes sensors, board clamping sensors, head sensors, ANC sensors, fixed positioner sensors, and so on. Also it controls pickup vacuum comparator and lamps (driveswitches and signal tower).	920030-27

(3)-3 TF-14

BOARD	FUNCTION	BOARD NO.
CPS-T	Accommodates a Z80 CPU, a memory(256k bytes), a ROM, a RAM, communication connector, and drive input/output circuit.	920030-28
MPC6-T3	Controls XY axes and carrousel motor.	920030-29

6 — 2 CABLE SUPPORT


The No. of the harness in a cable supports are noted in the block diagram. The
They are numbered by 6 digits.
When you order the harness, tell us the No.

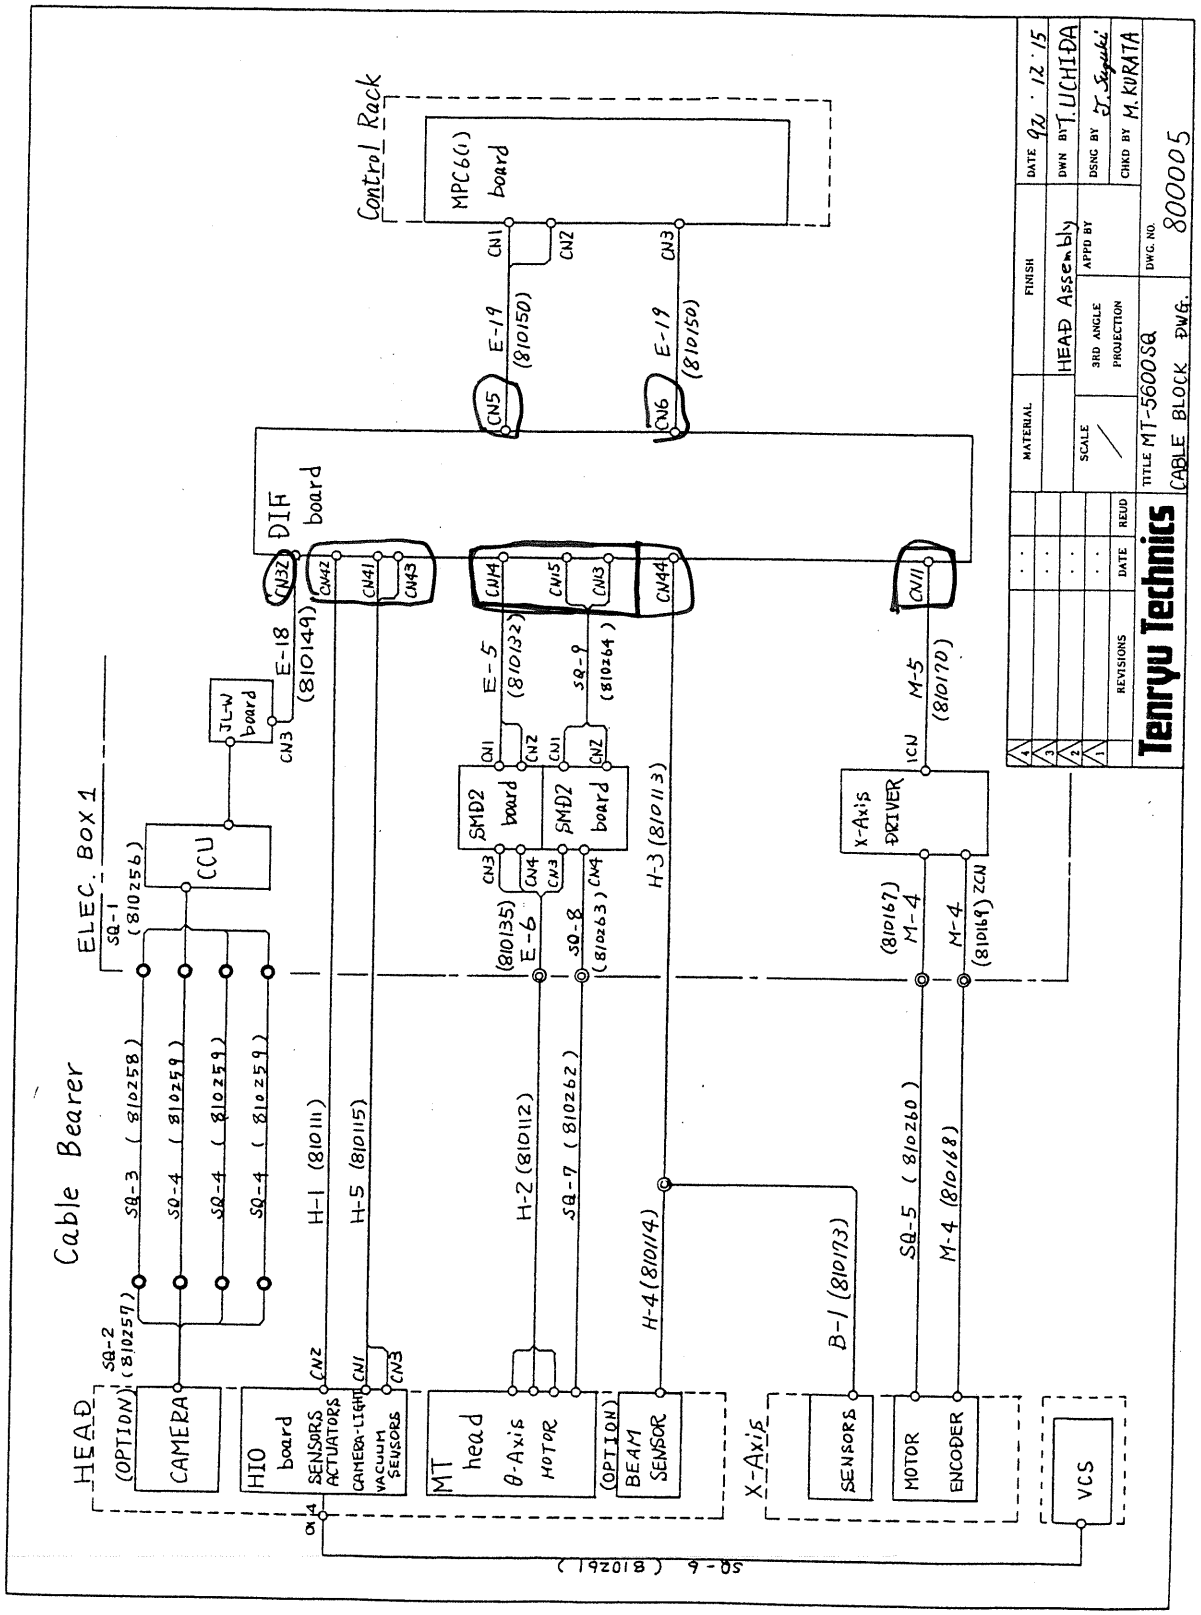



Over view block diagram 11, 44, 32, 42, 41, 43, 14, 15, 13 5, 6

OPERATION BOX, CPU RACK
CONTROL/RACK

27, 28, 52, 28,

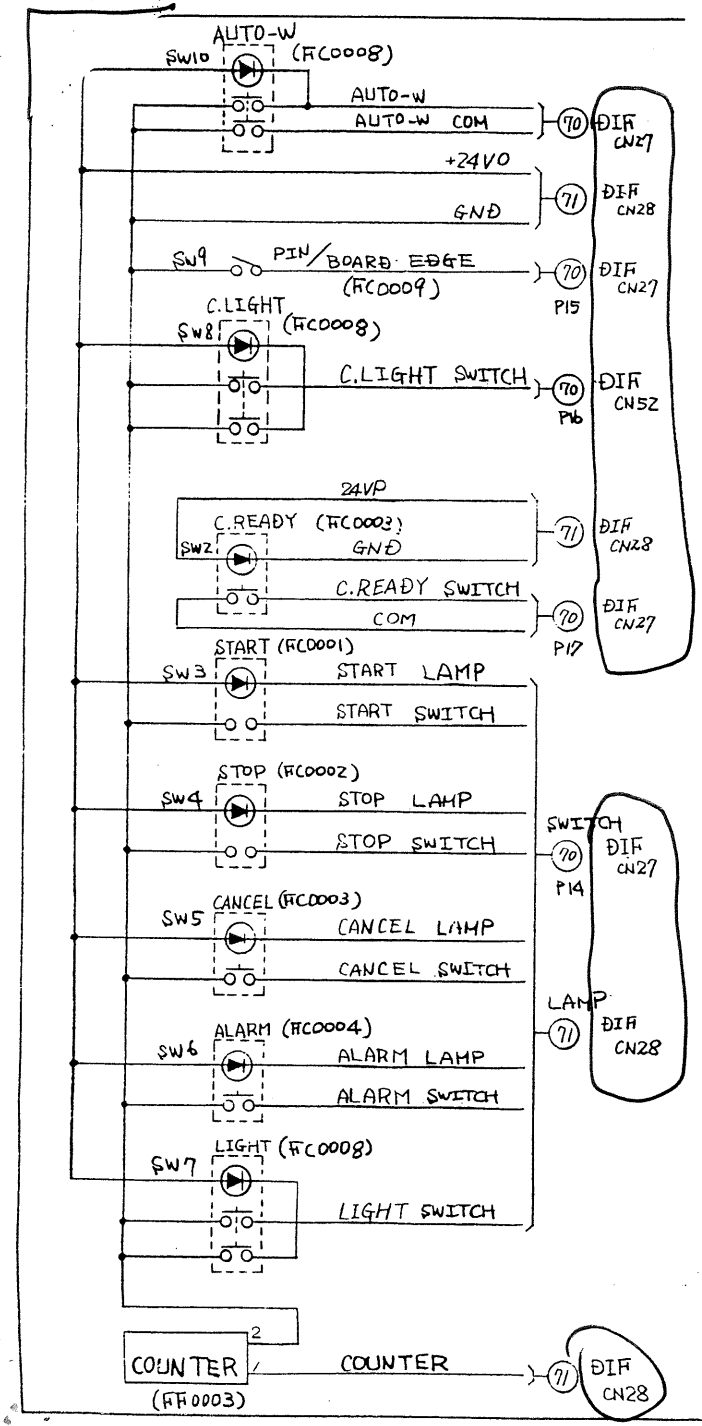

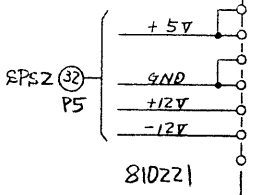

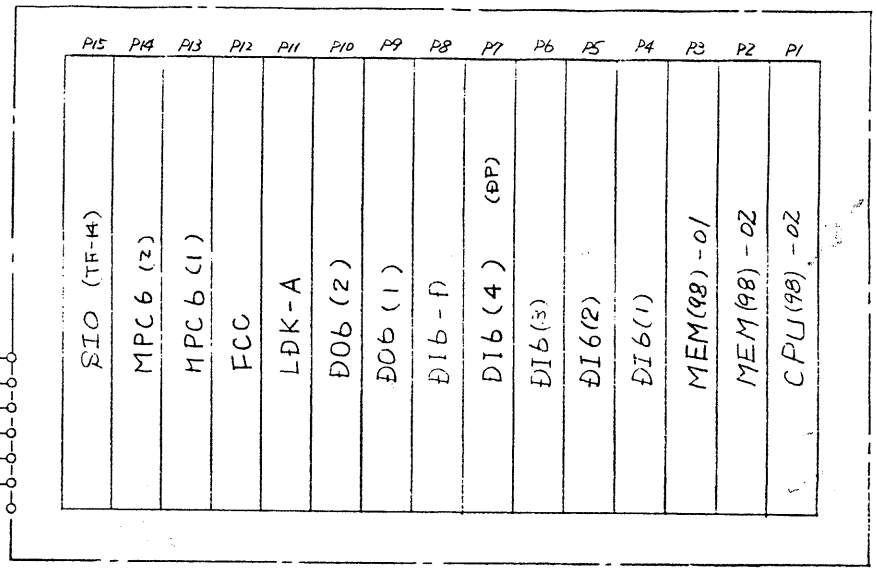

CONTROL RACK (FG0010)

REVISIONS	DATE	REUD
4		
3		
2		
1		

MATERIAL	FINISH	DATE	92. 12. 26
		DWN BY	T. UCHIDA
SCALE /	3RD ANGLE PROJECTION	APPD BY	
		DSNG BY	T. Suzuki
		CHKD BY	M. KURATA

Tenryu Technics

TITLE MT-5600 SQ ELEC. CIRCUIT DWG.


DWG. NO. 910073

Power Supply

DIF23- CONTACTORS! SERVO DRV.

23

Axis Motors

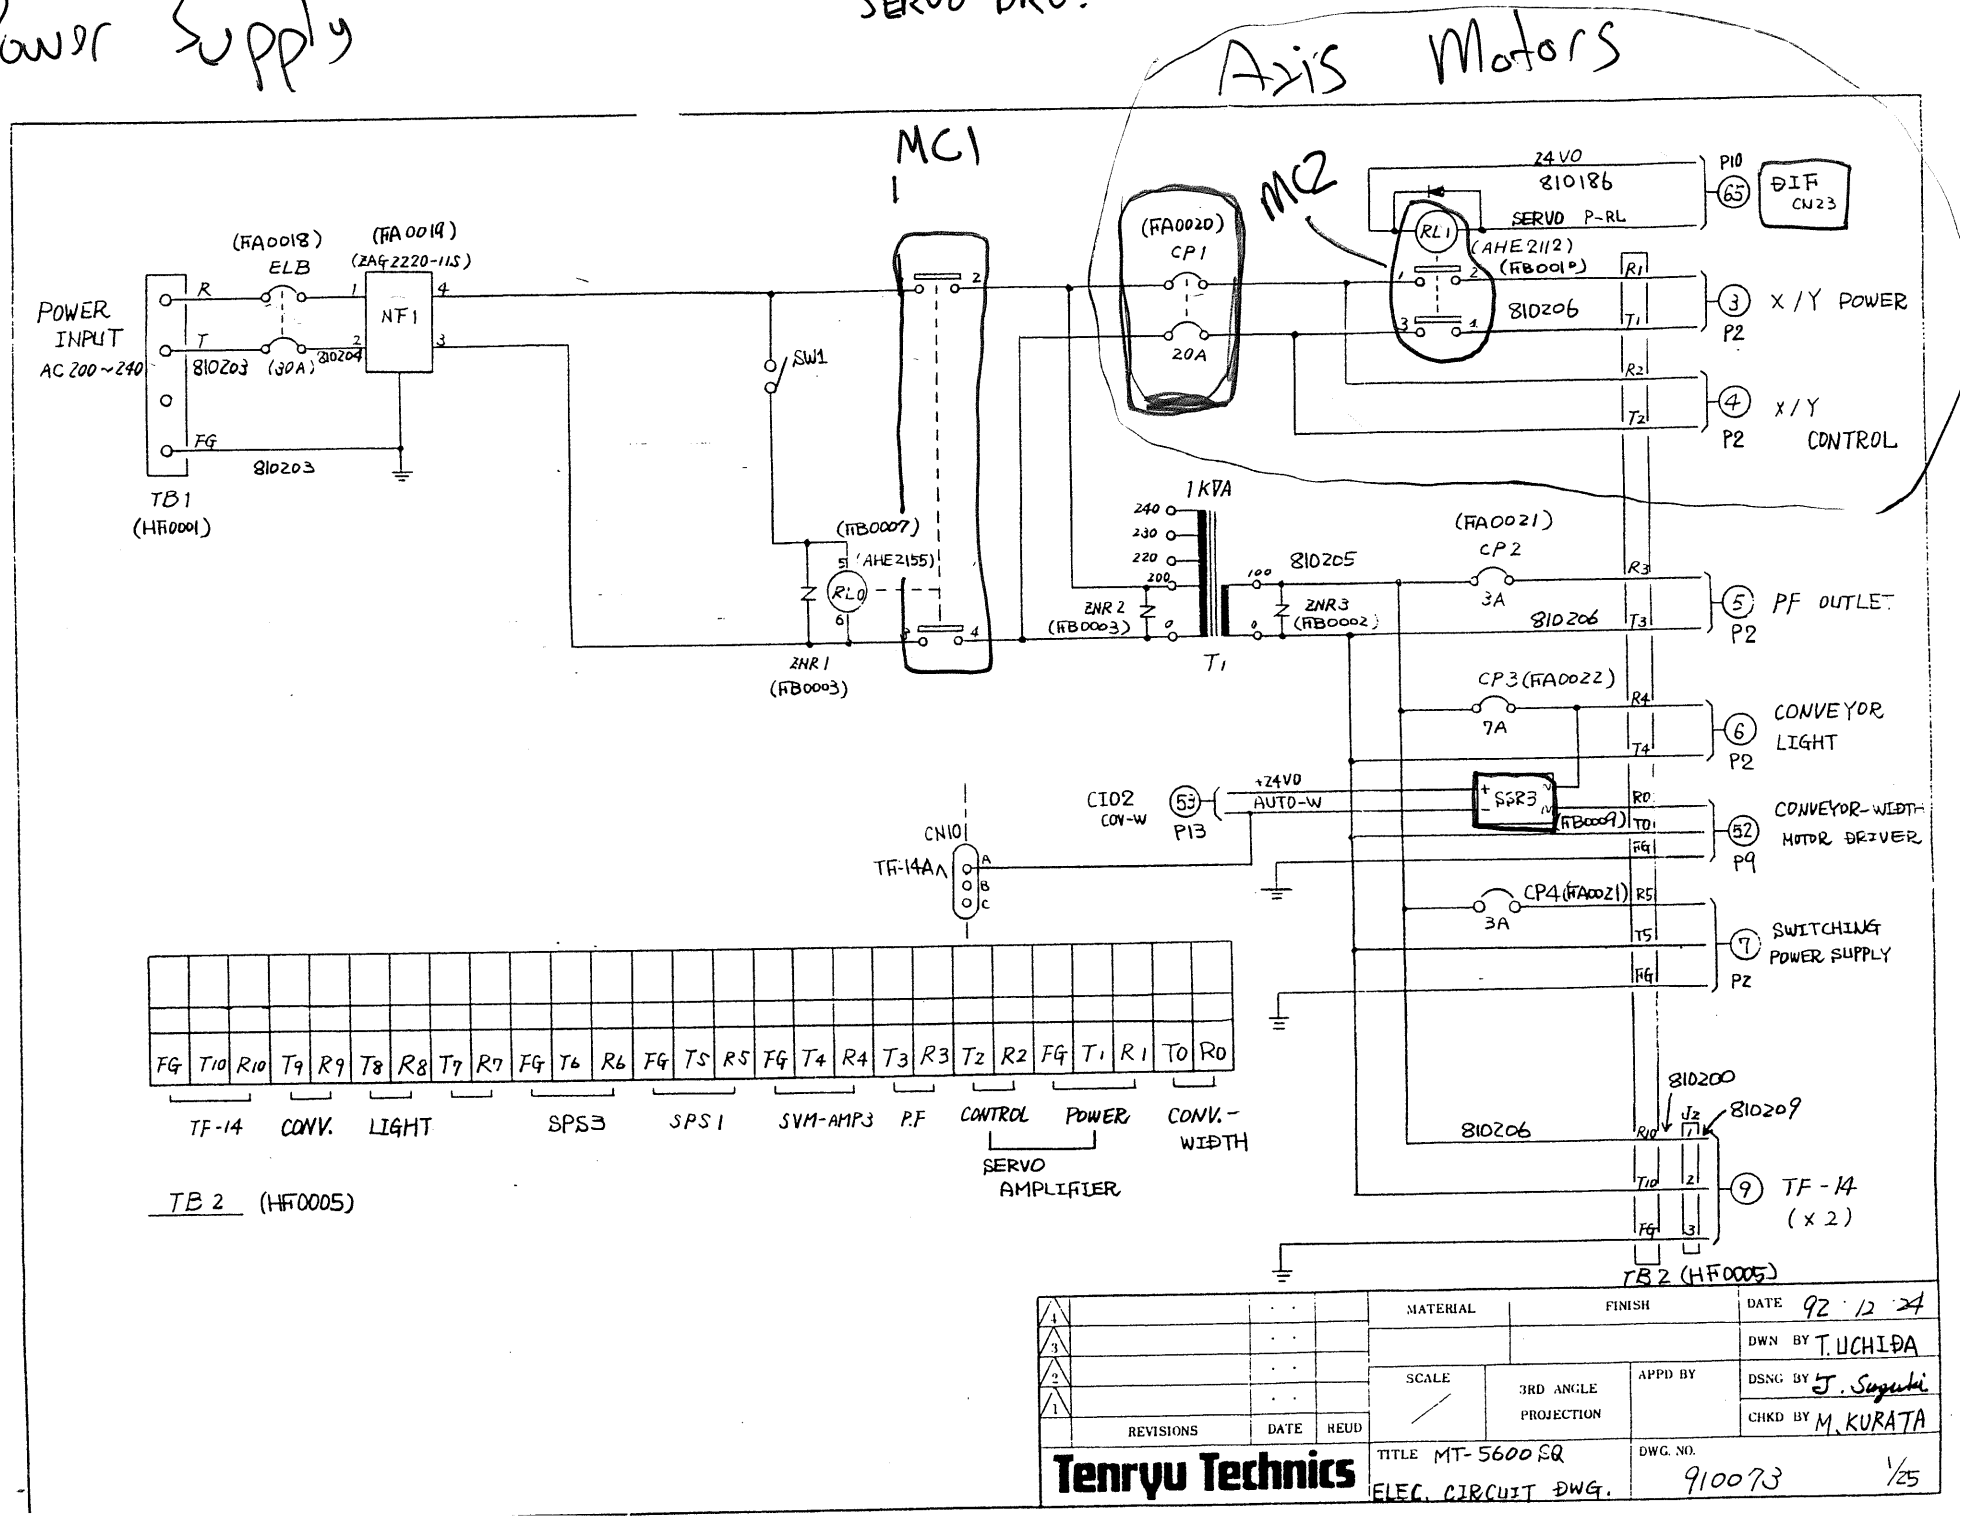

REVISIONS	DATE	REVD
4		
3		
2		
1		


MATERIAL	FINISH		DATE 92.12.24
			DWN BY T. UCHIDA
SCALE /	3RD ANGLE PROJECTION	APPD BY	DSNG BY T. Suzuki
			CHKD BY M. KURATA

Tenryu Technics

TITLE MT-5600SQ ELEC. CIRCUIT DWG.

DWG. NO. 910073 1/25

Power Supply :

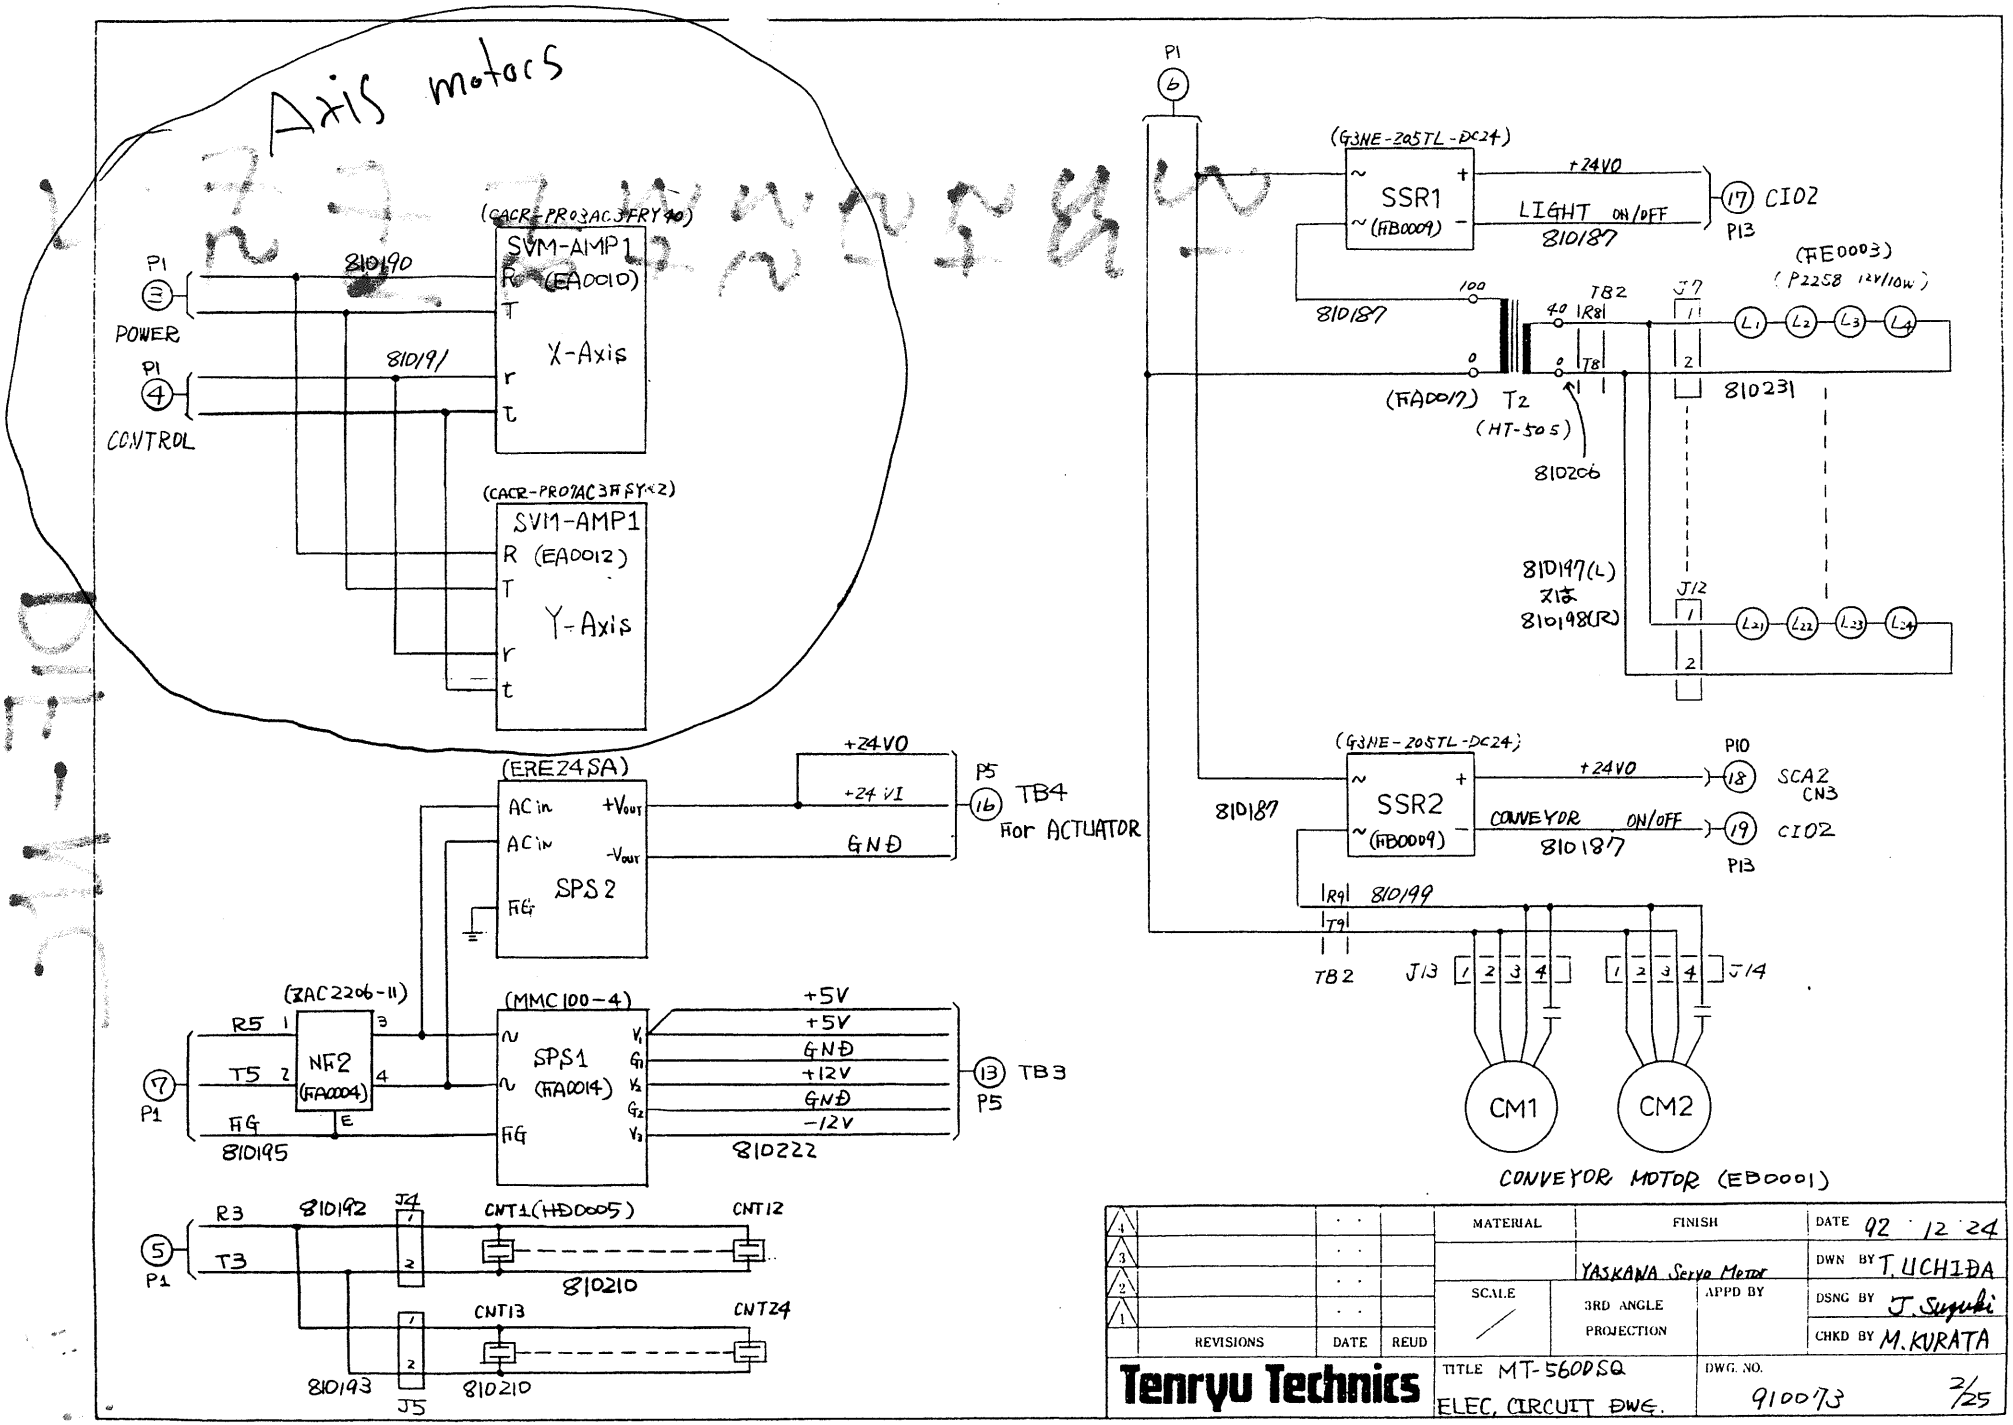

REVISIONS	DATE	REVD	MATERIAL	FINISH	DATE 92 · 12 · 24
				YASKAWA Servo Motor	DWN BY T. UCHIDA
			SCALE /	3RD ANGLE PROJECTION	APPD BY
					DSNG BY J. Suzuki
					CHKD BY M. KURATA

Tenryu Technics

TITLE MT-560DSQ ELEC. CIRCUIT DWG.

DWG. NO. 910073

3/25

NF
NC1
CP1
20A
+
-
T
R
24V
MC2
OFF
33
-ESTOP
NF
NF
DYN
NF
DYN