


LEFT HAND — DRONE / ATMOSPHERE

1 HAND OPENNESS

DRONE/ATMOSPHERE FILTER

Open your hand to make the drone smoothly appear. The wider the hand is opened, the brighter the sound.

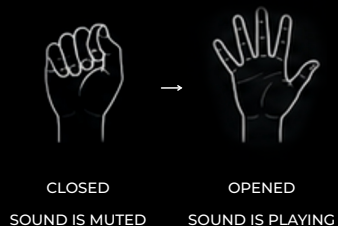


FILTER



2 HAND ROTATION

VOCAL SAMPLE VOLUME

Rotate your hand to the right to increase the volume of the vocal sample — from silence to max volume.

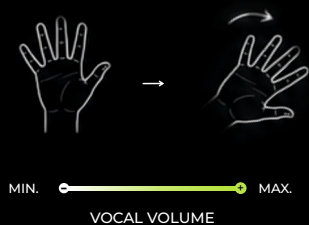


VOX VOLUME



3 HAND SIZE

REVERB AMOUNT

Hand is closer to camera — more reverb.
Hand is further — less reverb.

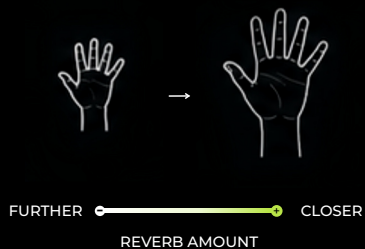

REVERB




RIGHT HAND — MELODY

1 INDEX FINGER

MELODY (PENTATONIC GRID)

Move the tip of your index finger across the 5x5 grid to play a melody.

PENTATONIC GRID

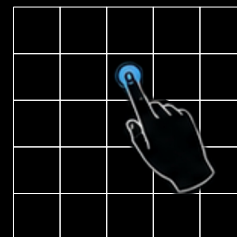

MODE:
MAJOR
PENTATONIC
C, D, E, G, A

2 INDEX & THUMB PINCH

TANPURA STRUM

Pinch your index & thumb fingers together to play a tanpura strum. Faster pinching = faster strums.



TANPURA STRUM




TANPURA

3 HAND OPENNESS

ECHO AMOUNT (DELAY)

Open your hand to add more delay/echo to the melody.

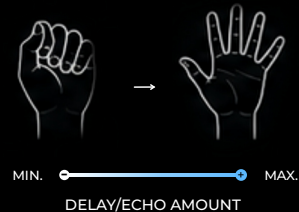

DELAY

