

2008 Ford Edge SE

2008 BRAKES Power Brake Actuation - Edge & MKX

2008 BRAKES

Power Brake Actuation - Edge & MKX

SPECIFICATIONS

TORQUE SPECIFICATIONS

Description	Nm	lb-ft
Brake booster nuts	23	17

DESCRIPTION AND OPERATION

BRAKE BOOSTER

The power brake actuation system consists of the following components:

- Brake booster
- Brake booster check valve
- Brake booster vacuum supply hose

The brake booster uses engine vacuum from the intake manifold to create a partial vacuum inside the vacuum booster on both sides of the diaphragm. When the brake pedal is pressed, the booster rod opens a valve, allowing air to enter the booster on one side of the diaphragm while sealing off the opposite side. This increases pressure on that side of the diaphragm so that it helps push the rod, which in turn pushes the piston in the master cylinder. As the brake pedal is released, the valve seals off the outside air supply while opening the vacuum valve. This restores vacuum to both sides of the diaphragm, allowing everything to return to its original position.

DIAGNOSTIC TESTS

POWER BRAKE SYSTEM

Refer to [BRAKE SYSTEM - GENERAL INFORMATION](#) article.

REMOVAL AND INSTALLATION

BRAKE BOOSTER

2008 Ford Edge SE

2008 BRAKES Power Brake Actuation - Edge & MKX

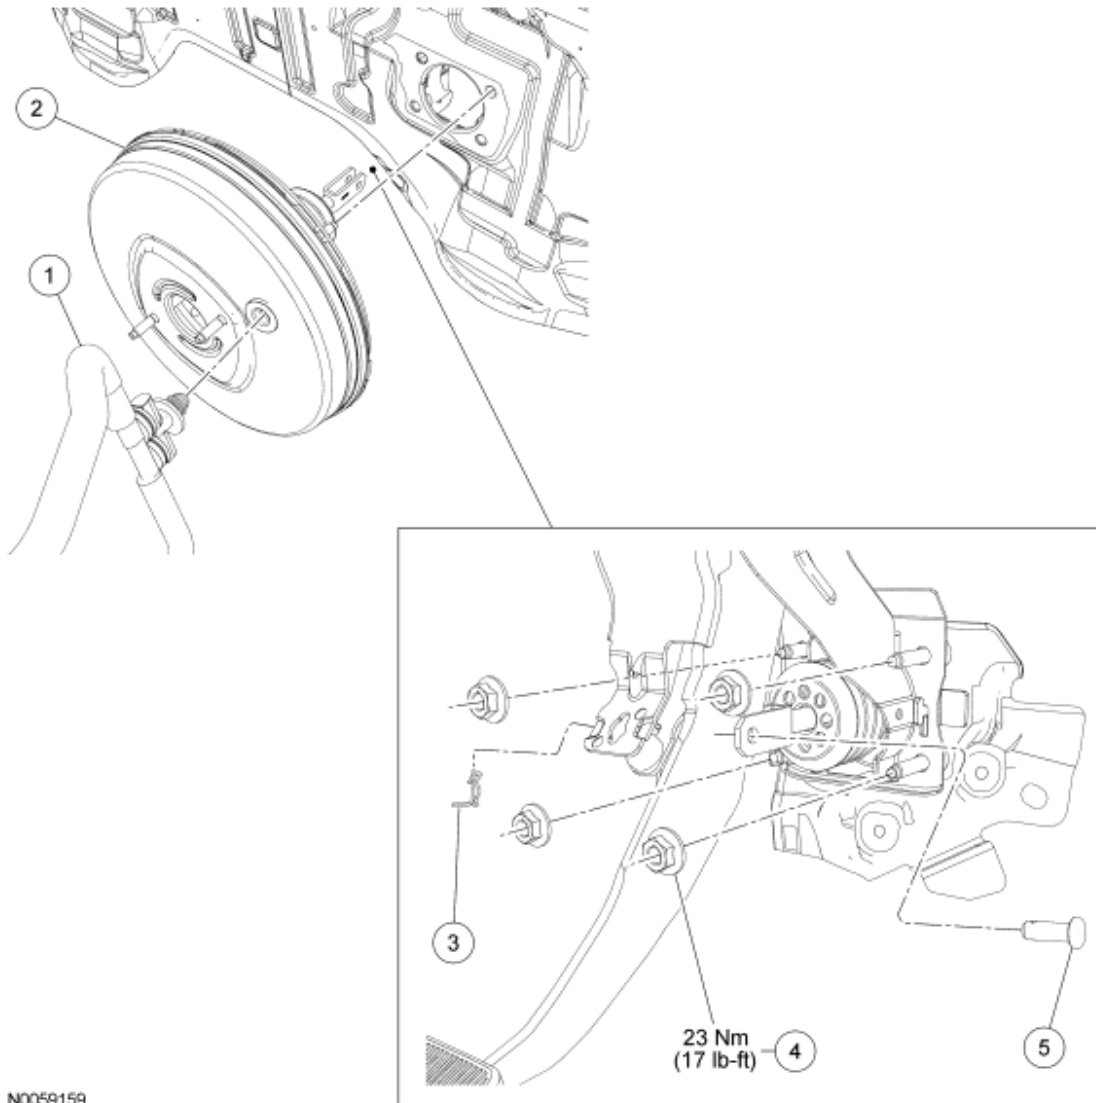


Fig. 1: Exploded View Of Brake Booster With Torque Specification
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	9C490	Manifold vacuum hose assembly
2	-	Brake booster
3	7B096	Brake booster push rod spring clip
4	W707144	Brake booster nut (4 required)
5	2N513	Brake booster push rod pin

REMOVAL AND INSTALLATION

CAUTION: Do not service the brake pedal or brake booster without first removing the stoplamp switch and speed control deactivator switch.

These switches must be removed with the brake pedal in the at-rest position. Switch plungers must be compressed for the switch to rotate in the bracket. Attempting to remove the switch when the plunger is extended (during pedal apply) will result in damage to the switch.

1. Remove the stoplamp switch. For additional information, refer to EXTERIOR LIGHTING article.

CAUTION: The brake booster check valve must be disconnected from the brake booster (prior to removing the master cylinder) or the master cylinder seal may be drawn into the brake booster.

2. Disconnect the brake booster check valve from the brake booster to deplete the residual vacuum in the brake booster.
3. Remove the brake master cylinder. For additional information, refer to HYDRAULIC BRAKE ACTUATION article.

CAUTION: Make sure that the vacuum hose assembly is routed correctly so it does not make contact with surrounding components or damage to the hose may occur.

4. Disconnect the vacuum hose and wire harness from the studs and position aside.

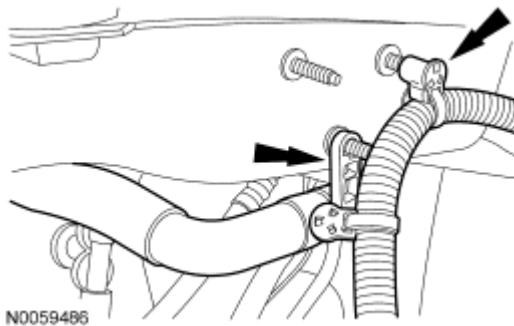


Fig. 2: Identifying Vacuum Hose & Wire Harness Studs
Courtesy of FORD MOTOR CO.

5. Remove the brake booster push rod pin and clip and disconnect the push rod from the brake pedal.
6. Remove the 4 brake booster nuts.
 - To install, tighten to 23 Nm (17 lb-ft).
7. Remove the brake booster.

CAUTION: Do not press, pull or otherwise move the brake pedal while installing the stoplamp switch or the speed control deactivator switch. These switches must be installed with the booster push rod attached to the brake pedal and with the brake pedal in the at-rest position. Installing

2008 Ford Edge SE

2008 BRAKES Power Brake Actuation - Edge & MKX

these switches with the brake pedal in any other position will result in incorrect adjustment and may damage the switches.

8. To install, reverse the removal procedure.
9. Check the brake booster for correct operation.