

2008 Ford Edge SE

2008 ENGINE PERFORMANCE Acceleration Control - Edge & MKX

2008 ENGINE PERFORMANCE

Acceleration Control - Edge & MKX

SPECIFICATIONS

TORQUE SPECIFICATIONS

Description	Nm	lb-in
Accelerator pedal and sensor assembly mounting nuts	7	62

DESCRIPTION AND OPERATION

ACCELERATION CONTROL

The acceleration controls consist of an accelerator pedal and sensor assembly.

The engine management system electronically operates the accelerator of the engine in response to accelerator pedal movements initiated by the driver. In the event of a system failure, the engine management system provides a "limp home" mode which allows the vehicle to be driven with limited performance.

DIAGNOSTIC TESTS

ACCELERATION CONTROL


Refer to the [Introduction - Gasoline Engines](#) article.

REMOVAL AND INSTALLATION

ACCELERATOR PEDAL AND BRACKET

2008 Ford Edge SE

2008 ENGINE PERFORMANCE Acceleration Control - Edge & MKX

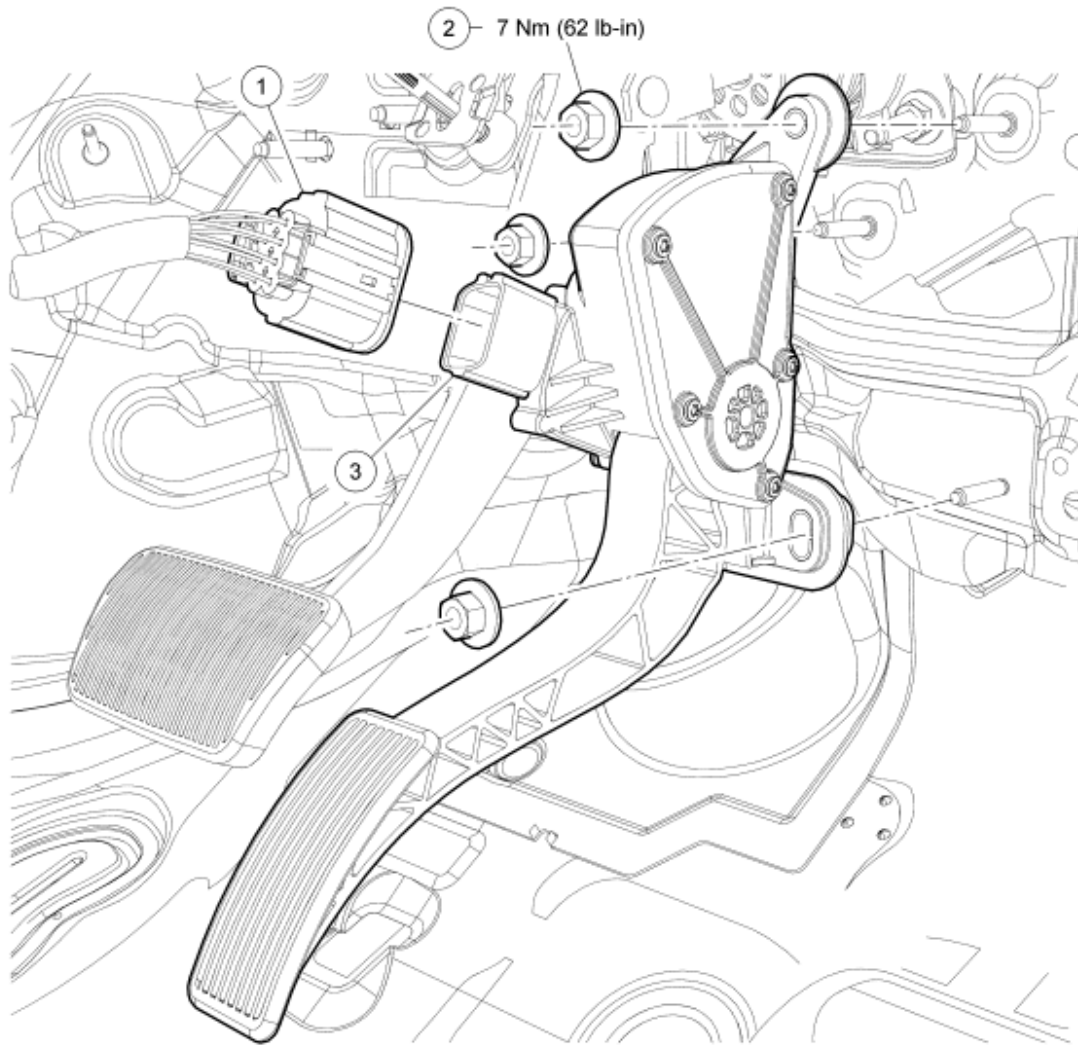

N0056887

Fig. 1: Exploded View Of Accelerator Pedal & Bracket With Torque Specification
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	14A464	Accelerator pedal sensor electrical connector (part of 14290)
2	90907	Accelerator pedal nut (3 required)
3	9F836	Accelerator pedal and sensor assembly

REMOVAL AND INSTALLATION

NOTE: Release the safety lock tab mechanism on the accelerator pedal sensor electrical connector prior to disconnecting.

2008 Ford Edge SE

2008 ENGINE PERFORMANCE Acceleration Control - Edge & MKX

1. Disconnect the accelerator pedal sensor electrical connector.
2. Remove the 3 nuts and the accelerator pedal and sensor assembly.
 - To install, tighten to 7 Nm (62 lb-in).
3. To install, reverse the removal procedure.