

2008 Ford Edge SE

2008 DRIVELINE/AXLES Driveshaft - Edge & MKX

2008 DRIVELINE/AXLES

Driveshaft - Edge & MKX

SPECIFICATIONS

GENERAL SPECIFICATIONS

Item	Specification
Driveshaft runout	1.1 mm (0.043 in)

TORQUE SPECIFICATIONS

Description	Nm	lb-ft
Center bearing support nuts	40	30
Front driveshaft-to-transfer case bolts	70	52
Rear driveshaft-to-pinion flange bolts	70	52

DESCRIPTION AND OPERATION

DRIVESHAFT

NOTE: All driveshaft assemblies are balanced. If undercoating the vehicle, protect the driveshaft to prevent overspray of any undercoating material.

The driveshaft assembly consists of the following:

- Rubber isolated center support bearings
- Constant velocity (CV) joint at the power transfer unit (PTU)
- U-joints at the center supports and pinion flange
- Assembly balanced with traditional balance weights
- Lubed-for-life joints requiring no periodic lubrication

The driveshaft transfers torque from the PTU to the rear axle. It is attached to the PTU flange with a CV joint. The 3-piece shaft is connected by a staked U-joint at each center bearing and attached to the rear pinion flange. The driveshaft joints allow the smooth continuous rotation of the driveshaft through the allowable angle planes and length variations required in normal vehicle operation. The driveshaft is always turning at front wheel speed. The driveshaft is not serviceable. A new driveshaft must be installed if worn or damaged.

UNIVERSAL JOINTS

The U-joints consist of the following:

- A single spider (cross)
- Lubed-for-life design and require no periodic lubrication

- Nylon thrust washers, located at each base of the bearing cup, which control end play, position the needle bearing and improve grease movement
- Grease seals located at the opening of each bearing cup to retain the grease for the bearing lubrication
- Bearing cups that retain the needle bearings and locate the spider on the centerline of the shaft bore to control shaft runout and balance

The U-joints are staked in place and are not serviced individually. If worn or damaged, install a new driveshaft assembly.

The 3 U-joints in this driveshaft assembly allow the driveshaft tubes to rotate smoothly through the varying angles of the power transfer unit (PTU), the center support bearings and the rear drive unit (RDU). The angles that cause the U-joints to accelerate and decelerate may cause vibration in the driveshaft assembly if the angles are either too great or too small. Refer to **DRIVELINE SYSTEM - GENERAL INFORMATION** article.


DIAGNOSTIC TESTS

DRIVESHAFT

Refer to **DRIVELINE SYSTEM - GENERAL INFORMATION** article.

REMOVAL AND INSTALLATION

DRIVESHAFT

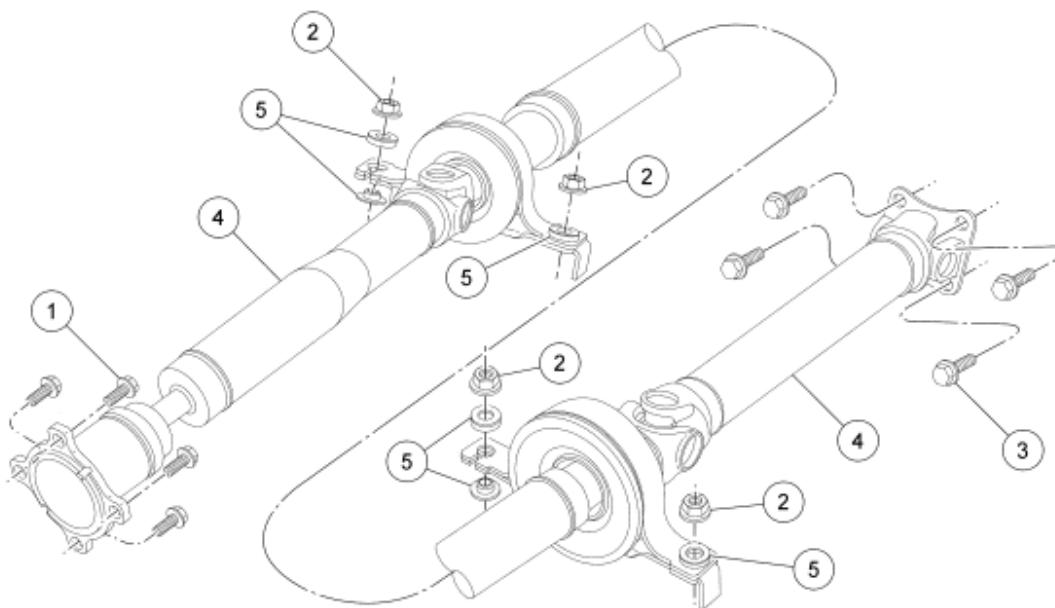

2008 Ford Edge SE

2008 DRIVELINE/AXLES Driveshaft - Edge & MKX

Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	W711918	Front driveshaft-to-transfer case bolt (4 required)
2	W520113	Center bearing support nuts (4 required)
3	W711918	Universal flange-to-pinion flange bolt (4 required)
4	4K357	Driveshafts
5	4A169	Isolators (8 required)

REMOVAL AND INSTALLATION

NOTE: Index-mark both driveshaft flanges.

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to **JACKING AND LIFTING** article.

CAUTION: Do not reuse the constant velocity (CV) joint bolts. Install new bolts or damage to the vehicle may occur.

2. Remove and discard the 4 front driveshaft-to-transfer case bolts.
 - To install, tighten to 70 Nm (52 lb-ft).


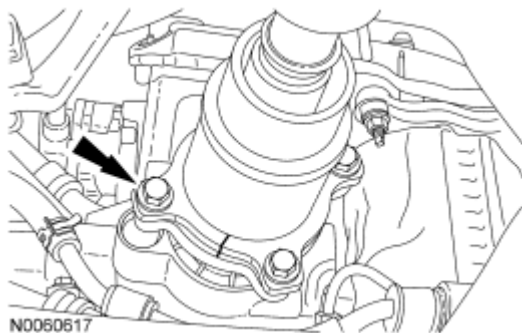


Fig. 2: Locating Front Driveshaft-To-Transfer Case Bolts
Courtesy of FORD MOTOR CO.

CAUTION: Do not reuse the bolts for the rear U-joint flange or damage to the component may occur. Install new bolts.


3. Remove and discard the 4 U-joint flange bolts.
 - To install, tighten to 70 Nm (52 lb-ft).

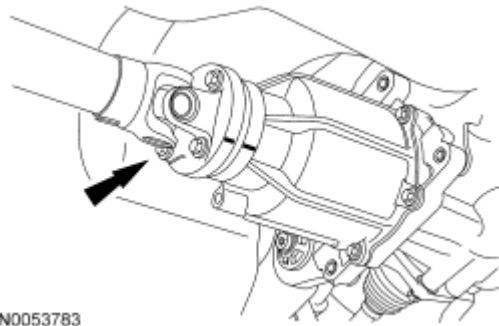

N0053783

Fig. 3: Locating U-Joint Flange Bolts
Courtesy of FORD MOTOR CO.

4. With the help of an assistant, remove the 4 center bearing support nuts and the driveshaft.
 - To install, tighten to 40 Nm (30 lb-ft).

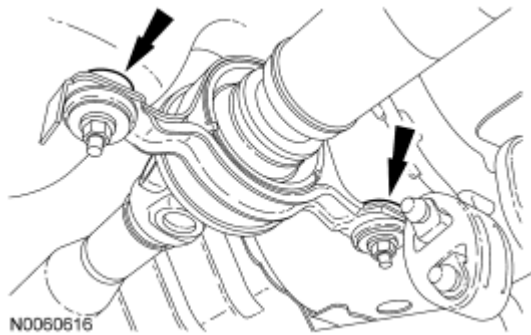

N0060616

Fig. 4: Locating Center Bearing Support Nuts & Driveshaft
Courtesy of FORD MOTOR CO.

NOTE: If a driveshaft is installed and driveshaft vibration is encountered after installation, index the driveshaft. For additional information, refer to **DRIVELINE SYSTEM - GENERAL INFORMATION** article.

5. To install, reverse the removal procedure.