

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

2008 FORD MOTOR CO.

Edge & MKX

BUZZERS, RELAYS & TIMERS

BUZZERS, RELAYS & TIMERS LOCATION

Component	Location
Accessory Delay Relay	In smart junction box (SJB). See Fig. 2 .
A/C Clutch Relay	In battery junction box (BJB). See Fig. 1 .
Front Blower Motor Relay	In battery junction box (BJB). See Fig. 1 .
Fuel Pump Relay	In battery junction box (BJB). See Fig. 1 .
Heated Mirror Relay	In battery junction box (BJB). See Fig. 1 .
PCM Power Relay	In battery junction box (BJB). See Fig. 1 .
Power Liftgate Chime	Base of left "D" pillar. See Fig. 15 .
Rear Seat Release Relay	In battery junction box (BJB). See Fig. 1 .
Rear Window Defrost Relay	In battery junction box (BJB). See Fig. 1 .
Reversing Lamps Relay	In battery junction box (BJB). See Fig. 1 .
Run/Start Relay	In battery junction box (BJB). See Fig. 1 .
Starter Relay	In battery junction box (BJB). See Fig. 1 .
Trailer Tow Left Stop/Turn Lamp Relay	In battery junction box (BJB). See Fig. 1 .
Trailer Tow Park Lamp Relay	In battery junction box (BJB). See Fig. 1 .
Trailer Tow Right Stop/Turn Lamp Relay	In battery junction box (BJB). See Fig. 1 .

CIRCUIT PROTECTION DEVICES

CIRCUIT PROTECTION DEVICES LOCATION

Component	Location
Battery Junction Box (BJB) (Edge)	Left side of engine compartment. See Fig. 3 .
Battery Junction Box (BJB) (MKX)	Left side of engine compartment. See Fig. 5 .
Fuel Pump Diode	In battery junction box (BJB). See Fig. 1 .
Fuel Pump Diode	In battery junction box (BJB). See Fig. 1 .
Smart Junction Box (SJB) (Edge)	Left rear corner of engine compartment. See Fig. 3 .
Smart Junction Box (SJB) (MKX)	Left rear corner of engine compartment. See Fig. 5 .

CONTROL UNITS

CONTROL UNITS LOCATION

Component	Location
ABS Control Module (Edge)	Left rear corner of engine compartment. See Fig. 3 .
ABS Control Module (MKX)	Left rear corner of engine compartment. See Fig. 5 .

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

All Wheel Drive (AWD) Module	Behind right kick panel. See Fig. 14.
Antenna Module	Behind right kick panel. See Fig. 9.
Climate Controlled Seat Backrest Module (Driver Side)	Under driver's seat. See Fig. 19.
Climate Controlled Seat Backrest Module (Passenger Side)	Under front passenger's seat. See Fig. 20.
Climate Controlled Seat Cushion Module (Driver Side)	Under driver's seat. See Fig. 19.
Climate Controlled Seat Cushion Module (Passenger Side)	Under front passenger's seat. See Fig. 20.
Climate Controlled Seat Module (Passenger Side)	Under front passenger's seat. See Fig. 20.
Cooling Fan Module (Edge)	Left front of engine compartment. See Fig. 3.
Cooling Fan Module (MKX)	Left front of engine compartment. See Fig. 5.
Driver Air Bag Module	In steering wheel. See Fig. 11.
Electronic Automatic Temperature Control (EATC) Module	Behind center of dash. See Fig. 10.
Front Blower Motor Speed Controller	On blower motor. See Fig. 9.
Fuel Pump Module	In fuel tank. See Fig. 15.
Heated Seat Module (Left Rear)	Under left rear seat. See Fig. 21.
Heated Seat Module (Passenger Side - Front)	Under front passenger's seat. See Fig. 20.
Manual Climate Control Module	Behind center of dash. See Fig. 10.
Memory Module	Under driver's seat. See Fig. 19.
Occupant Classification Sensor (OCS) Module	Under front passenger's seat. See Fig. 20.
Parking Aid Module (PAM)	Behind left rear quarterpanel. See Fig. 15.
Passenger Air Bag Module	Behind right side of dash. See Fig. 10.
Power Liftgate Module	In left "D" pillar. See Fig. 15.
Powertrain Control Module (PCM) (Edge)	Right front of engine. See Fig. 3.
Powertrain Control Module (PCM) (MKX)	Right front of engine. See Fig. 5.
Restraints Control Module	Under center console. See Fig. 10.
Side Air Bag Module (Left Front)	In left "B" pillar. See Fig. 13.
Side Air Bag Module (Right Front)	In right "B" pillar. See Fig. 14.
Side Air Curtain Module (Driver)	In left "D" pillar. See Fig. 15.
Side Air Curtain Module (Passenger)	In right "D" pillar. See Fig. 16.
Smart Wiper Module (Edge)	Left rear of engine compartment. See Fig. 4.
Smart Wiper Module (MKX)	Left rear of engine compartment. See Fig. 6.
Steering Angle Sensor Module (SASM)	On steering column. See Fig. 31.

MOTORS

MOTORS LOCATION

Component	Location

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

Blower Motor	Behind right side of dash. See Fig. 9 .
Door Lock Actuator (Left Front)	Rear of driver's door. See Fig. 22 .
Door Lock Actuator (Left Rear)	Rear of left rear door. See Fig. 24 .
Door Lock Actuator (Right Front)	Rear of front passenger's door. See Fig. 23 .
Door Lock Actuator (Right Rear)	Rear of right rear door. See Fig. 25 .
Driver Seat Backrest Motor	Under driver's seat. See Fig. 19 .
Driver Seat Front Height Motor	Under driver's seat. See Fig. 19 .
Driver Seat Horizontal Motor	Under driver's seat. See Fig. 19 .
Driver Seat Rear Height Motor	Under driver's seat. See Fig. 19 .
Electronic Throttle Control (ETC) Motor	On throttle body. See Fig. 8 .
Exterior Rear View Mirror (LH Side)	In driver's door. See Fig. 22 .
Exterior Rear View Mirror (RH Side)	In front passenger's door. See Fig. 23 .
Fresh/Recirculation Door Actuator	Middle of HVAC unit. See Fig. 30 .
Liftgate Drive Unit	In left "D" pillar. See Fig. 15 .
Lumbar Motor (Driver Seat)	Under driver's seat. See Fig. 19 .
Lumbar Motor (Passenger Seat)	Under front passenger's seat. See Fig. 20 .
Mode Door Actuator	Left side of HVAC unit. See Fig. 30 .
Passenger Backrest Motor	Under front passenger's seat. See Fig. 20 .
Passenger Seat Front Height Motor	Under front passenger's seat. See Fig. 20 .
Passenger Seat Horizontal Motor	Under front passenger's seat. See Fig. 20 .
Passenger Seat Rear Height Motor	Under front passenger's seat. See Fig. 20 .
Power Window Motor (Driver Side Front)	Middle of driver's door. See Fig. 22 .
Power Window Motor (Left Rear)	Middle of left rear door. See Fig. 24 .
Power Window Motor (Passenger Side Front)	Middle of front passenger's door. See Fig. 23 .
Power Window Motor (Right Rear)	Middle of right rear door. See Fig. 25 .
Rear Window Wiper Motor (Edge)	In liftgate. See Fig. 26 .
Rear Window Wiper Motor (MKX)	In liftgate. See Fig. 27 .
Seat Release Actuator (Left Rear)	Under left rear seat. See Fig. 15 .
Seat Release Actuator (Right Rear)	Under right rear seat. See Fig. 16 .
Starter Motor (Edge)	Left rear of engine. See Fig. 4 .
Starter Motor (MKX)	Left rear of engine. See Fig. 6 .
Temperature Blend Door Actuator	Middle front of HVAC unit. See Fig. 30 .
Temperature Blend Door Actuator (Driver)	Left side of HVAC unit. See Fig. 30 .
Windshield Washer Pump Motor (Edge)	On washer fluid reservoir. See Fig. 4 .
Windshield Washer Pump Motor (MKX)	On washer fluid reservoir. See Fig. 6 .

SENDING UNITS & SENSORS

SENDING UNITS & SENSORS LOCATION

Component	Location
Accelerator Pedal Position (APP) Sensor (Edge)	Top of accelerator pedal. See Fig. 3 .

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

Accelerator Pedal Position (APP) Sensor (MKX)	Top of accelerator pedal. See <u>Fig. 5.</u>
A/C Pressure Transducer Sensor (Edge)	Right front of engine compartment. See <u>Fig. 3.</u>
A/C Pressure Transducer Sensor (MKX)	Right front of engine compartment. See <u>Fig. 5.</u>
Camshaft Position Sensor 1	Rear of right cylinder bank. See <u>Fig. 7.</u>
Camshaft Position Sensor 2	Rear of left cylinder bank. See <u>Fig. 7.</u>
Crankshaft Position Sensor	Lower left rear of engine. See <u>Fig. 7.</u>
Crash Sensor (Left Rear)	Behind left rear quarterpanel. See <u>Fig. 15.</u>
Cylinder Head Temperature Sensor	Front of right cylinder bank. See <u>Fig. 8.</u>
Evaporator Discharge Air Temperature Sensor	Left side of HVAC unit. See <u>Fig. 30.</u>
Front Impact Sensor (Left) (Edge)	Left front of engine compartment. See <u>Fig. 3.</u>
Front Impact Sensor (Left) (MKX)	Left front of engine compartment. See <u>Fig. 5.</u>
Front Impact Sensor (Right) (Edge)	Right front of engine compartment. See <u>Fig. 3.</u>
Front Impact Sensor (Right) (MKX)	Right front of engine compartment. See <u>Fig. 5.</u>
Fuel Level Sensor	Top of fuel tank. See <u>Fig. 15.</u>
Fuel Tank Pressure Sensor	In fuel tank. See <u>Fig. 15.</u>
Heated Oxygen Sensor (HO2S) #11	Right rear side of engine. See <u>Fig. 8.</u>
Heated Oxygen Sensor (HO2S) #12	Right front side of engine. See <u>Fig. 8.</u>
Heated Oxygen Sensor (HO2S) #21	Left side of engine. See <u>Fig. 7.</u>
Heated Oxygen Sensor (HO2S) #22	Left rear side of engine. See <u>Fig. 7.</u>
In-Vehicle Temperature Sensor	Behind left side of dash. See <u>Fig. 10.</u>
Keyless Entry Keypad	Rear of driver's door. See <u>Fig. 22.</u>
Knock Sensor	Left rear of engine. See <u>Fig. 7.</u>
Liftgate Obstacle Detection Strip (Left)	Left side of liftgate. See <u>Fig. 27.</u>
Liftgate Obstacle Detection Strip (Right)	Right side of liftgate. See <u>Fig. 27.</u>
Light Sensor	Under top center of dash. See <u>Fig. 9.</u>
Mass Air Flow/Intake Air Temperature (MAF/IAT) Sensor (Edge)	On intake air duct. See <u>Fig. 4.</u>
Mass Air Flow/Intake Air Temperature (MAF/IAT) Sensor (MKX)	On intake air duct. See <u>Fig. 6.</u>
Occupant Classification Sensor (OCS) 1	Under right side of front passenger's seat. See <u>Fig. 20.</u>
Occupant Classification Sensor (OCS) 2	Under right side of front passenger's seat. See <u>Fig. 20.</u>
Occupant Classification Sensor (OCS) 3	Under left side of front passenger's seat. See <u>Fig. 20.</u>
Occupant Classification Sensor (OCS) 4	Under left side of front passenger's seat. See <u>Fig. 20.</u>
Outside Temperature Sensor (Edge)	Right front of engine compartment. See <u>Fig. 3.</u>
Outside Temperature Sensor (MKX)	Right front of engine compartment. See <u>Fig. 5.</u>
Parking Aid Sensor (Inner Left) (Edge)	Behind left side of rear bumper. See <u>Fig. 17.</u>
Parking Aid Sensor (Inner Left) (MKX)	Behind left side of rear bumper. See <u>Fig. 18.</u>

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

Parking Aid Sensor (Inner Right) (Edge)	Behind right side of rear bumper. See Fig. 17 .
Parking Aid Sensor (Inner Right) (MKX)	Behind right side of rear bumper. See Fig. 18 .
Parking Aid Sensor (Outer Left) (Edge)	Behind left end of rear bumper. See Fig. 17 .
Parking Aid Sensor (Outer Left) (MKX)	Behind left end of rear bumper. See Fig. 18 .
Parking Aid Sensor (Outer Right) (Edge)	Behind right end of rear bumper. See Fig. 17 .
Parking Aid Sensor (Outer Right) (MKX)	Behind right end of rear bumper. See Fig. 18 .
Passive Anti-Theft Transceiver	Behind left side of dash. See Fig. 10 .
Seat Track Position Sensor (Left Front)	Under driver's seat. See Fig. 19 .
Side Impact Sensor (Driver 1)	In left "B" pillar. See Fig. 13 .
Side Impact Sensor (Passenger 1)	Base of right "B" pillar. See Fig. 14 .
Side Impact Sensor (Right Rear)	Behind right rear quarterpanel. See Fig. 16 .
Stability Control Sensor Cluster	Under right rear seat. See Fig. 16 .
Steering Wheel Angle Sensor	On steering column. See Fig. 10 .
Wheel Speed Sensor (Left Front) (Edge)	On left front wheel hub. See Fig. 4 .
Wheel Speed Sensor (Left Front) (MKX)	On left front wheel hub. See Fig. 6 .
Wheel Speed Sensor (Left Rear)	On left rear wheel hub. See Fig. 16 .
Wheel Speed Sensor (Right Front) (Edge)	On right front wheel hub. See Fig. 4 .
Wheel Speed Sensor (Right Front) (MKX)	On right front wheel hub. See Fig. 6 .
Wheel Speed Sensor (Right Rear)	On right rear wheel hub. See Fig. 16 .

SOLENOIDS & SOLENOID VALVES

SOLENOIDS & SOLENOID VALVES LOCATION

Component	Location
A/C Clutch Field Coil (Edge)	On A/C compressor. See Fig. 4 .
A/C Clutch Field Coil (MKX)	On A/C compressor. See Fig. 6 .
EVAP Canister Purge Valve (Edge)	Right rear of engine. See Fig. 3 .
EVAP Canister Purge Valve (MKX)	Right rear of engine. See Fig. 5 .
EVAP Canister Vent Control Solenoid	Under left side of vehicle. See Fig. 13 .
Fuel Injector 1	Top right side of engine. See Fig. 8 .
Fuel Injector 2	Top right side of engine. See Fig. 8 .
Fuel Injector 3	Top right side of engine. See Fig. 8 .
Fuel Injector 4	Top left side of engine. See Fig. 7 .
Fuel Injector 5	Top left side of engine. See Fig. 7 .
Fuel Injector 6	Top left side of engine. See Fig. 7 .
Heated Positive Crankcase Ventilation (PCV) Valve	Top left side of engine. See Fig. 8 .
Intelligent Torque Control Coupling (ITCC) Solenoid	Under right rear of vehicle. See Fig. 16 .
Positive Crankcase Ventilation (PCV) Heated Fitting	Top right rear of engine. See Fig. 8 .
Variable Camshaft Timing (VCT) Valve 1	Top front of right cylinder bank. See Fig. 8 .

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

Variable Camshaft Timing (VCT) Valve 2

Top front of left cylinder bank. See [Fig. 7](#).

SWITCHES

SWITCHES LOCATION

Component	Location
Anti-Theft Hood Switch	Right front of engine compartment. See Fig. 5 .
Brake Fluid Level Switch (Edge)	On master cylinder reservoir. See Fig. 4 .
Brake Fluid Level Switch (MKX)	On master cylinder reservoir. See Fig. 6 .
Brake Pedal Position (BPP) Switch (Edge)	On brake pedal support bracket. See Fig. 4 .
Brake Pedal Position (BPP) Switch (MKX)	On brake pedal support bracket. See Fig. 6 .
Ignition Switch	On steering column. See Fig. 31 .
Inertia Fuel Shutoff (IFS) Switch	In left "D" pillar. See Fig. 15 .
Liftgate Ajar Switch (Edge)	Lower right side of liftgate. See Fig. 26 .
Liftgate Ajar Switch (MKX)	Lower right side of liftgate. See Fig. 27 .
Multifunction Switch	Top of steering column. See Fig. 31 .
Oil Pressure Switch	Lower left side of engine. See Fig. 7 .
Parking Brake Switch	Top of parking brake lever bracket. See Fig. 13 .
Power Steering Pressure Switch (Edge)	Right front of engine. See Fig. 4 .
Power Steering Pressure Switch (MKX)	Right front of engine. See Fig. 6 .
Safety Belt Buckle Switch (Driver)	Integral to driver's seat belt buckle. See Fig. 19 .
Safety Belt Buckle Switch (Passenger Side)	Integral to front passenger's seat belt buckle. See Fig. 20 .
Washer Fluid Level Switch (Edge)	On washer fluid reservoir. See Fig. 3 .
Washer Fluid Level Switch (MKX)	On washer fluid reservoir. See Fig. 5 .

MISCELLANEOUS

MISCELLANEOUS LOCATION

Component	Location
ABS Test Connector (C126) (Edge)	Left side of engine compartment. See Fig. 4 .
ABS Test Connector (C126) (MKX)	Left side of engine compartment. See Fig. 6 .
A/C Compressor Clutch Diode	In battery junction box (BJB). See Fig. 1 .
A/C Compressor Clutch Diode	In battery junction box (BJB). See Fig. 1 .
Battery (Edge)	Left side of engine compartment. See Fig. 3 .
Battery (MKX)	Left side of engine compartment. See Fig. 5 .
Blower Motor Resistor	Behind right side of dash. See Fig. 9 .
Clockspring	On steering column. See Fig. 31 .
Coil On Plug (COP) 1	Top right side of engine. See Fig. 8 .
Coil On Plug (COP) 2	Top right side of engine. See Fig. 8 .
Coil On Plug (COP) 3	Top right side of engine. See Fig. 8 .

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

Coil On Plug (COP) 4	Top left side of engine. See Fig. 7.
Coil On Plug (COP) 5	Top left side of engine. See Fig. 7.
Coil On Plug (COP) 6	Top left side of engine. See Fig. 7.
Data Link Connector (DLC)	Under left side of dash. See Fig. 10.
Fusible Link A (Edge)	Left side of engine compartment. See Fig. 4.
Fusible Link A (MKX)	Left side of engine compartment. See Fig. 6.
Generator (Edge)	Left front of engine. See Fig. 4.
Generator (MKX)	Left front of engine. See Fig. 6.
Horn (Edge)	Right front corner of engine compartment. See Fig. 4.
Horn (MKX)	Right front corner of engine compartment. See Fig. 6.
Ignition Transformer Capacitor 1	Right rear of engine. See Fig. 8.
Ignition Transformer Capacitor 2	Top left rear of engine. See Fig. 7.
Joint Connector 1 (Edge)	Left rear of luggage compartment. See Fig. 17.
Joint Connector 1 (MKX)	Left side of luggage compartment. See Fig. 18.
Joint Connector 2 (Edge)	Left rear of luggage compartment. See Fig. 17.
Joint Connector 2 (MKX)	Left side of luggage compartment. See Fig. 18.
Joint Connector 3	Behind right kick panel. See Fig. 14.
Joint Connector 4	Behind center of dash. See Fig. 9.
Joint Connector 5	Behind left side of dash. See Fig. 9.
Joint Connector 6	Behind left side of dash. See Fig. 9.
Joint Connector 7 (Edge)	Left rear of engine compartment. See Fig. 3.
Joint Connector 7 (MKX)	Left rear of engine compartment. See Fig. 5.
Joint Connector 8	In left "D" pillar. See Fig. 15.
Joint Connector 9	Behind right rear quarterpanel. See Fig. 16.
Safety Belt Buckle Pretensioner (Driver)	Base of seat belt buckle assembly. See Fig. 20.
Safety Belt Buckle Pretensioner (Passenger)	Base of seat belt buckle assembly. See Fig. 20.
Satellite Radio Receiver	Left rear of cargo area. See Fig. 15.
Seat Heater Element (Left Front)	In driver's seat cushion. See Fig. 19.
Seat Heater Element (Left Rear)	Under left rear seat. See Fig. 21.
Seat Heater Element (Right Front)	In front passenger's seat cushion. See Fig. 20.
THX Amplifier	Behind right rear quarterpanel. See Fig. 16.
Trailer Tow Connector (Edge)	Under center of rear bumper. See Fig. 17.
Trailer Tow Connector (MKX)	Under center of rear bumper. See Fig. 18.

CONNECTORS

CONNECTORS LOCATION

Component	Location
C110 (Edge) (8 Pin)	Left side of engine compartment. See Fig. 4.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

C110 (MKX) (8 Pin)	Left side of engine compartment. See <u>Fig. 6.</u>
C134 (Edge) (20 Pin)	Left front of engine compartment. See <u>Fig. 4.</u>
C134 (MKX) (20 Pin)	Left front of engine compartment. See <u>Fig. 5.</u>
C139 (70 Pin)	Top left side of engine. See <u>Fig. 7.</u>
C140 (16 Pin)	Top left side of engine. See <u>Fig. 7.</u>
C192 (2 Pin)	Top front of engine. See <u>Fig. 8.</u>
C210 (16 Pin)	Base of left "A" pillar. See <u>Fig. 13.</u>
C211 (20 Pin)	Base of left "A" pillar. See <u>Fig. 13.</u>
C212 (Edge) (57 Pin)	Left rear of engine compartment. See <u>Fig. 3.</u>
C212 (MKX) (57 Pin)	Left rear of engine compartment. See <u>Fig. 5.</u>
C213 (57 Pin)	Behind left side of dash. See <u>Fig. 9.</u>
C214 (20 Pin)	Behind right kick panel. See <u>Fig. 14.</u>
C215 (30 Pin)	Behind left side of dash. See <u>Fig. 9.</u>
C260 (4 Pin)	Behind right side of dash. See <u>Fig. 9.</u>
C263 (6 Pin)	Behind right side of dash. See <u>Fig. 9.</u>
C264 (16 Pin)	Behind right side of dash. See <u>Fig. 9.</u>
C265 (16 Pin)	Behind right side of dash. See <u>Fig. 9.</u>
C300 (20 Pin)	Under left rear seat. See <u>Fig. 21.</u>
C311 (57 Pin)	Under driver's seat. See <u>Fig. 13.</u>
C312 (12 Pin)	Under driver's seat. See <u>Fig. 13.</u>
C313 (10 Pin)	Under center floor console. See <u>Fig. 14.</u>
C313 (10 Pin)	Under front of center floor console. See <u>Fig. 12.</u>
C314 (12 Pin)	Under front passenger's seat. See <u>Fig. 14.</u>
C315 (14 Pin)	Under front passenger's seat. See <u>Fig. 20.</u>
C316 (30 Pin)	Under front passenger's seat. See <u>Fig. 20.</u>
C316 (30 Pin)	Under front passenger's seat. See <u>Fig. 14.</u>
C327 (2 Pin)	Under front passenger's seat. See <u>Fig. 14.</u>
C328 (2 Pin)	Under driver's seat. See <u>Fig. 13.</u>
C405 (16 Pin)	Under left rear of vehicle. See <u>Fig. 15.</u>
C406 (edge) (16 Pin)	Behind center of rear bumper. See <u>Fig. 17.</u>
C406 (16 Pin)	Behind center of rear bumper. See <u>Fig. 18.</u>
C510 (54 Pin)	Behind left kick panel. See <u>Fig. 13.</u>
C610 (54 Pin)	Behind right kick panel. See <u>Fig. 14.</u>
C700 (14 Pin)	In left "B" pillar. See <u>Fig. 13.</u>
C800 (14 Pin)	In right "B" pillar. See <u>Fig. 14.</u>
C913 (Edge) (2 Pin)	Top of liftgate. See <u>Fig. 26.</u>
C913 (MKX) (2 Pin)	Top of liftgate. See <u>Fig. 27.</u>
C919 (8 Pin)	Top of left "D" pillar. See <u>Fig. 15.</u>
C922 (8 Pin)	Top of left "D" pillar. See <u>Fig. 15.</u>
C925 (4 Pin)	Top of left "D" pillar. See <u>Fig. 15.</u>
C934 (6 Pin)	Top of left "D" pillar. See <u>Fig. 15.</u>

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

GROUND S

GROUND S LOCATION

Component	Location
G100 (Edge)	Left side of engine compartment. See Fig. 4 .
G100 (MKX)	Left side of engine compartment. See Fig. 6 .
G101 (Edge)	Right rear of engine. See Fig. 4 .
G101 (MKX)	Right rear of engine. See Fig. 6 .
G102 (Edge)	Left side of engine compartment. See Fig. 3 .
G102 (MKX)	Left side of engine compartment. See Fig. 5 .
G103 (Edge)	Left side of engine compartment. See Fig. 3 .
G103 (MKX)	Left side of engine compartment. See Fig. 5 .
G104 (Edge)	Left front of engine compartment. See Fig. 4 .
G104 (MKX)	Left front of engine compartment. See Fig. 6 .
G105 (Edge)	Left front of engine compartment. See Fig. 4 .
G105 (MKX)	Left front of engine compartment. See Fig. 6 .
G106 (Edge)	Right front of engine compartment. See Fig. 3 .
G106 (MKX)	Right front of engine compartment. See Fig. 5 .
G107 (Edge)	Right front of engine compartment. See Fig. 3 .
G107 (MKX)	Right front of engine compartment. See Fig. 5 .
G108 (Edge)	Right rear of engine compartment. See Fig. 3 .
G108 (MKX)	Right rear of engine compartment. See Fig. 5 .
G109 (Edge)	Front of engine. See Fig. 3 .
G109 (MKX)	Front of engine. See Fig. 5 .
G110 (Edge)	Right front of engine. See Fig. 4 .
G110 (MKX)	Right front of engine. See Fig. 6 .
G111 (Edge)	Right rear of engine compartment. See Fig. 4 .
G111 (MKX)	Right rear of engine compartment. See Fig. 6 .
G200	Behind left kick panel. See Fig. 13 .
G201	Behind left kick panel. See Fig. 13 .
G202	Behind right kick panel. See Fig. 14 .
G203	Behind right side of dash. See Fig. 9 .
G204	Behind left side of dash. See Fig. 9 .
G205	Behind left side of dash. See Fig. 9 .
G206	Behind left side of dash. See Fig. 9 .
G207	In steering wheel. See Fig. 11 .
G300	Behind left rear seat. See Fig. 15 .
G301	In left "B" pillar. See Fig. 13 .
G302	In right "B" pillar. See Fig. 14 .
G400	In left "D" pillar. See Fig. 15 .
G401	In left "D" pillar. See Fig. 15 .

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

G402	Behind right rear quarterpanel. See Fig. 16.
G403	Behind right rear quarterpanel. See Fig. 16.
G404	In right "D" pillar. See Fig. 16.

SPLICES

SPLICES LOCATION

Component	Location
S100 (Edge)	In dash panel wiring harness to headlight junction, near breakout to C110. See Fig. 4.
S100 (MKX)	In dash panel wiring harness to headlight junction, near breakout to C110. See Fig. 6.
S101 (Edge)	In dash panel wiring harness to headlight junction, near breakout to C110. See Fig. 4.
S101 (MKX)	In dash panel wiring harness to headlight junction, near breakout to C110. See Fig. 6.
S102 (Edge)	In battery wiring harness, near breakout to battery. See Fig. 4.
S102 (MKX)	In battery wiring harness, near breakout to battery. See Fig. 6.
S103 (Edge)	In battery wiring harness, near breakout to starter motor. See Fig. 4.
S103 (MKX)	In battery wiring harness, near breakout to starter motor. See Fig. 6.
S104 (Edge)	In dash panel wiring harness to headlight junction, near breakout to C110. See Fig. 4.
S104 (MKX)	In dash panel wiring harness to headlight junction, near breakout to C110. See Fig. 6.
S105 (Edge)	In dash panel wiring harness to headlight junction, near breakout to battery junction box. See Fig. 4.
S105 (MKX)	In dash panel wiring harness to headlight junction, near breakout to battery junction box. See Fig. 6.
S106 (Edge)	In dash panel wiring harness to headlight junction, near breakout to battery junction box. See Fig. 4.
S106 (MKX)	In dash panel wiring harness to headlight junction, near breakout to battery junction box. See Fig. 6.
S107	In dash panel wiring harness to headlight junction, near breakout to battery junction box. See Fig. 6.
S108	In dash panel wiring harness to headlight junction, near breakout to ABS test connector. See Fig. 6.
S109 (Edge)	In dash panel wiring harness to headlight junction, near breakout to ABS test connector. See Fig. 4.
S109 (MKX)	In dash panel wiring harness to headlight junction,

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

	near breakout to ABS test connector. See <u>Fig. 6.</u>
S110	In dash panel wiring harness to headlight junction, near breakout to left headlight. See <u>Fig. 6.</u>
S111 (Edge)	In dash panel wiring harness to headlight junction, near breakout to C134. See <u>Fig. 4.</u>
S111 (MKX)	In dash panel wiring harness to headlight junction, near breakout to C134. See <u>Fig. 6.</u>
S112 (Edge)	In dash panel wiring harness to headlight junction, near breakout to cooling fan module. See <u>Fig. 4.</u>
S112 (MKX)	In dash panel wiring harness to headlight junction, near breakout to cooling fan module. See <u>Fig. 6.</u>
S113 (Edge)	In dash panel wiring harness to headlight junction, near breakout to cooling fan module. See <u>Fig. 4.</u>
S113 (MKX)	In dash panel wiring harness to headlight junction, near breakout to cooling fan module. See <u>Fig. 6.</u>
S114 (Edge)	In dash panel wiring harness to headlight junction, near breakout to mass air flow/intake air temperature sensor. See <u>Fig. 4.</u>
S114 (MKX)	In dash panel wiring harness to headlight junction, near breakout to mass air flow/intake air temperature sensor. See <u>Fig. 6.</u>
S115 (Edge)	In dash panel wiring harness to headlight junction, near breakout to mass air flow/intake air temperature sensor. See <u>Fig. 4.</u>
S115 (MKX)	In dash panel wiring harness to headlight junction, near breakout to mass air flow/intake air temperature sensor. See <u>Fig. 6.</u>
S116 (Edge)	In dash panel wiring harness to headlight junction, near breakout to A/C pressure transducer sensor. See <u>Fig. 4.</u>
S116 (MKX)	In dash panel wiring harness to headlight junction, near breakout to A/C pressure transducer sensor. See <u>Fig. 6.</u>
S117 (Edge)	In dash panel wiring harness to headlight junction, near breakout to G108. See <u>Fig. 4.</u>
S117 (MKX)	In dash panel wiring harness to headlight junction, near breakout to G108. See <u>Fig. 6.</u>
S118 (Edge)	In dash panel wiring harness to headlight junction, near breakout to G110. See <u>Fig. 4.</u>
S118 (MKX)	In dash panel wiring harness to headlight junction, near breakout to G110. See <u>Fig. 6.</u>
S119	In dash panel wiring harness to headlight junction, near breakout to G109. See <u>Fig. 4.</u>
S120 (Edge)	In dash panel wiring harness to headlight junction,

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

	near breakout to G109. See <u>Fig. 4.</u>
S120 (MKX)	In dash panel wiring harness to headlight junction, near breakout to G109. See <u>Fig. 6.</u>
S121 (Edge)	In dash panel wiring harness to headlight junction, near breakout to powertrain control module. See <u>Fig. 4.</u>
S121 (MKX)	In dash panel wiring harness to headlight junction, near breakout to powertrain control module. See <u>Fig. 6.</u>
S122 (Edge)	In dash panel wiring harness to headlight junction, near breakout to powertrain control module. See <u>Fig. 4.</u>
S122 (MKX)	In dash panel wiring harness to headlight junction, near breakout to powertrain control module. See <u>Fig. 6.</u>
S123	In engine control sensor & fuel charge wiring harness, near breakout to coil on plug No. 3. See <u>Fig. 8.</u>
S124	In engine control sensor & fuel charge wiring harness, near breakout to ignition transformer capacitor No. 1. See <u>Fig. 8.</u>
S125	In engine control sensor & fuel charge wiring harness, near breakout to fuel injector No. 6. See <u>Fig. 7.</u>
S126	In engine control sensor & fuel charge wiring harness, near breakout to fuel injector No. 6. See <u>Fig. 7.</u>
S127	In engine control sensor & fuel charge wiring harness, near breakout to fuel injector No. 6. See <u>Fig. 7.</u>
S128	In engine control sensor & fuel charge wiring harness, near breakout to fuel injector No. 6. See <u>Fig. 7.</u>
S129	In engine control sensor & fuel charge wiring harness, near breakout to fuel injector No. 5. See <u>Fig. 7.</u>
S130	In engine control sensor & fuel charge wiring harness, near breakout to C139. See <u>Fig. 7.</u>
S131	In engine control sensor & fuel charge wiring harness, near breakout to camshaft position sensor No. 2. See <u>Fig. 7.</u>
S200	In body main wiring harness, near breakout to C510. See <u>Fig. 13.</u>
S201	In body main wiring harness, near breakout to C212. See <u>Fig. 13.</u>

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

S202	In body main wiring harness, near breakout to C212. See <u>Fig. 13.</u>
S203	In body main wiring harness, near breakout to C212. See <u>Fig. 13.</u>
S204	In body main wiring harness, near breakout to C214. See <u>Fig. 14.</u>
S205	In body main wiring harness, near breakout to restraints control module. See <u>Fig. 9.</u>
S206	In body main wiring harness, near breakout to restraints control module. See <u>Fig. 9.</u>
S207	In body main wiring harness, near breakout to audio unit. See <u>Fig. 9.</u>
S208	In body main wiring harness, near breakout to audio unit. See <u>Fig. 9.</u>
S209	In body main wiring harness, near breakout to in-vehicle temperature sensor. See <u>Fig. 9.</u>
S210	In body main wiring harness, near breakout to C210. See <u>Fig. 9.</u>
S211 (Edge)	In dash panel wiring harness to headlight junction, near breakout to joint connector No. 7. See <u>Fig. 4.</u>
S211 (MKX)	In dash panel wiring harness to headlight junction, near breakout to joint connector No. 7. See <u>Fig. 6.</u>
S212	In steering wheel jumper wiring harness, in breakout to left steering wheel switch. See <u>Fig. 11.</u>
S213	In steering wheel jumper wiring harness, in breakout to left steering wheel switch. See <u>Fig. 11.</u>
S214	In steering wheel jumper wiring harness, in breakout to right steering wheel switch. See <u>Fig. 11.</u>
S215	In steering wheel jumper wiring harness, in breakout to right steering wheel switch. See <u>Fig. 11.</u>
S216	In air conditioning wiring harness, near breakout to C263. See <u>Fig. 9.</u>
S217	In air conditioning wiring harness, near breakout to fresh/recirculation door actuator. See <u>Fig. 30.</u>
S218	In air conditioning wiring harness, near breakout to fresh/recirculation door actuator. See <u>Fig. 30.</u>
S219	In main wiring harness, near breakout to G205. See <u>Fig. 9.</u>
S300	In seat heated pad wiring harness, near breakout to C300. See <u>Fig. 21.</u>
S301	In seat heated pad wiring harness, near breakout to C300. See <u>Fig. 21.</u>
S302	In seat heated pad wiring harness, near breakout to left rear seat heater element. See <u>Fig. 21.</u>

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

S304	In body main wiring harness, near breakout to left rear side impact sensor. See <u>Fig. 15.</u>
S305	In body main wiring harness, near breakout to left rear side impact sensor. See <u>Fig. 15.</u>
S306	In body main wiring harness, near breakout to G300. See <u>Fig. 15.</u>
S307	In body main wiring harness, near breakout to C700. See <u>Fig. 13.</u>
S308	In body main wiring harness, near breakout to left front side impact sensor. See <u>Fig. 13.</u>
S309	In body main wiring harness, near breakout to left front side impact sensor. See <u>Fig. 13.</u>
S310	In body main wiring harness, near breakout to left front side impact sensor. See <u>Fig. 13.</u>
S311	In body main wiring harness, near breakout to G200. See <u>Fig. 13.</u>
S312	In body main wiring harness, near breakout to G200. See <u>Fig. 13.</u>
S313	In body main wiring harness, near breakout to G200. See <u>Fig. 13.</u>
S314	In body main wiring harness, near breakout to G200. See <u>Fig. 13.</u>
S315	In body main wiring harness, near breakout to G311. See <u>Fig. 13.</u>
S316	In body main wiring harness, near breakout to G311. See <u>Fig. 13.</u>
S317	In body main wiring harness, near breakout to G311. See <u>Fig. 19.</u>
S318	In body main wiring harness, near breakout to G311. See <u>Fig. 19.</u>
S319	In body main wiring harness, near breakout to G311. See <u>Fig. 19.</u>
S320	In power seats wiring harness, near breakout to driver side climate controlled seat cushion module. See <u>Fig. 19.</u>
S322	In power seats wiring harness, near breakout to driver's safety belt buckle pretensioner. See <u>Fig. 19.</u>
S323	In power seats wiring harness, near breakout to driver's safety belt buckle pretensioner. See <u>Fig. 19.</u>
S324	In power seats wiring harness, near breakout to driver's safety belt buckle pretensioner. See <u>Fig. 19.</u>
S325	In body main wiring harness, near breakout to C311. See <u>Fig. 13.</u>
	In body main wiring harness, near breakout to

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

S326	C313. See <u>Fig. 14.</u>
S327	In body main wiring harness, in breakout to C314. See <u>Fig. 14.</u>
S328	In body main wiring harness, in breakout to C314. See <u>Fig. 14.</u>
S329	In power seats wiring harness, in breakout to passenger's safety belt buckle pretensioner. See <u>Fig. 20.</u>
S330	In power seats wiring harness, near breakout to passenger's safety belt buckle pretensioner. See <u>Fig. 20.</u>
S331	In power seats wiring harness, near breakout to passenger side climate controlled seat module. See <u>Fig. 20.</u>
S332	In power seats wiring harness, near breakout to C327. See <u>Fig. 20.</u>
S333	In power seats wiring harness, near breakout to C327. See <u>Fig. 20.</u>
S334	In power seats wiring harness, near breakout to C327. See <u>Fig. 20.</u>
S335	In power seats wiring harness, in breakout to C316. See <u>Fig. 20.</u>
S336	In power seats wiring harness, in breakout to C314. See <u>Fig. 20.</u>
S337	In power seats wiring harness, in breakout to C314. See <u>Fig. 20.</u>
S338	In body main wiring harness, near breakout to C316. See <u>Fig. 14.</u>
S339	In body main wiring harness, near breakout to right rear side impact sensor. See <u>Fig. 16.</u>
S340	In body main wiring harness, near breakout to joint connector No. 9. See <u>Fig. 16.</u>
S341	In power seats wiring harness, in breakout to C311. See <u>Fig. 19.</u>
S342	In power seats wiring harness, in breakout to C311. See <u>Fig. 19.</u>
S343	In power seats wiring harness, in breakout to C316. See <u>Fig. 20.</u>
S344	In body main wiring harness, near breakout to C214. See <u>Fig. 14.</u>
S345	In body main wiring harness, near breakout to C214. See <u>Fig. 14.</u>
S400 (Edge)	In tailgate warning switch wiring harness, in breakout to liftgate ajar switch. See <u>Fig. 26.</u>

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

S400 (MKX)	In tailgate warning switch wiring harness, in breakout to liftgate/decklid switch. See <u>Fig. 27.</u>
S401	In tailgate warning switch wiring harness, in breakout to liftgate/decklid switch. See <u>Fig. 27.</u>
S402	In body main wiring harness, near breakout to cargo area power point. See <u>Fig. 15.</u>
S403 (Edge)	In back-up alarm wiring harness, near breakout to inner right parking aid sensor. See <u>Fig. 17.</u>
S403 (MKX)	In back-up alarm wiring harness, near breakout to inner right parking aid sensor. See <u>Fig. 18.</u>
S404	In back-up alarm wiring harness, near breakout to left license plate light. See <u>Fig. 18.</u>
S405 (Edge)	In back-up alarm wiring harness, near breakout to inner left parking aid sensor. See <u>Fig. 17.</u>
S405 (MKX)	In back-up alarm wiring harness, near breakout to inner left parking aid sensor. See <u>Fig. 18.</u>
S406	In back-up alarm wiring harness, near breakout to left license plate light. See <u>Fig. 18.</u>
S407	In body main wiring harness, near breakout to G402. See <u>Fig. 16.</u>
S408	In body main wiring harness, near breakout to right rear park/stop/turn light. See <u>Fig. 16.</u>
S409	In body main wiring harness, near breakout to power liftgate module. See <u>Fig. 15.</u>
S500	In left front window regulator wiring harness, near breakout to C510. See <u>Fig. 22.</u>
S501	In left front window regulator wiring harness, near breakout to left front tweeter. See <u>Fig. 22.</u>
S502	In left front window regulator wiring harness, near breakout to keyless entry keypad. See <u>Fig. 22.</u>
S503	In left front window regulator wiring harness, near breakout to keyless entry keypad. See <u>Fig. 22.</u>
S504	In left front window regulator wiring harness, near breakout to memory set switch. See <u>Fig. 22.</u>
S600	In right front window regulator wiring harness, near breakout to right front tweeter. See <u>Fig. 23.</u>
S601	In right front window regulator wiring harness, near breakout to right front tweeter. See <u>Fig. 23.</u>
S602	In right front window regulator wiring harness, near breakout to right front tweeter. See <u>Fig. 23.</u>
S603	In right front window regulator wiring harness, near breakout to right front door lock actuator. See <u>Fig. 23.</u>
	In right front window regulator wiring harness, near

2008 Ford Edge SE


2008 FORD MOTOR CO. Edge & MKX

S604	breakout to right front door lock actuator. See <u>Fig. 23.</u>
S605	In right front window regulator wiring harness, near breakout to right front door lock actuator. See <u>Fig. 23.</u>
S700	In left rear window regulator wiring harness, near breakout to left rear window adjust switch. See <u>Fig. 24.</u>
S701	In left rear window regulator wiring harness, near breakout to left rear speaker. See <u>Fig. 24.</u>
S800	In right rear window regulator wiring harness, near breakout to right rear window adjust switch. See <u>Fig. 25.</u>
S801	In right rear window regulator wiring harness, near breakout to right rear speaker. See <u>Fig. 25.</u>
S900 (Except Panoramic Vista Roof)	In interior lights wiring harness, near breakout to left vanity mirror light. See <u>Fig. 28.</u>
S900 (W/Panoramic Vista Roof)	In interior lights wiring harness, near breakout to left vanity mirror light. See <u>Fig. 29.</u>
S901 (Except Panoramic Vista Roof)	In interior lights wiring harness, near breakout to left vanity mirror light. See <u>Fig. 28.</u>
S901 (W/Panoramic Vista Roof)	In interior lights wiring harness, near breakout to left vanity mirror light. See <u>Fig. 29.</u>
S902 (Except Panoramic Vista Roof)	In interior lights wiring harness, near breakout to left vanity mirror light. See <u>Fig. 28.</u>
S902 (W/Panoramic Vista Roof)	In interior lights wiring harness, near breakout to left vanity mirror light. See <u>Fig. 29.</u>
S903 (Except Panoramic Vista Roof)	In interior lights wiring harness, near breakout to front interior lights. See <u>Fig. 28.</u>
S903 (W/Panoramic Vista Roof)	In interior lights wiring harness, near breakout to front interior lights. See <u>Fig. 29.</u>
S904 (Except Panoramic Vista Roof)	In interior lights wiring harness, near breakout to front interior lights. See <u>Fig. 28.</u>
S904 (W/Panoramic Vista Roof)	In interior lights wiring harness, near breakout to front interior lights. See <u>Fig. 29.</u>
S905 (Except Panoramic Vista Roof)	In interior lights wiring harness, near breakout to front interior lights. See <u>Fig. 28.</u>
S905 (W/Panoramic Vista Roof)	In interior lights wiring harness, near breakout to front interior lights. See <u>Fig. 29.</u>
S906 (Except Panoramic Vista Roof)	In interior lights wiring harness, near breakout to front interior lights. See <u>Fig. 28.</u>
S906 (W/Panoramic Vista Roof)	In interior lights wiring harness, near breakout to front interior lights. See <u>Fig. 29.</u>

COMPONENT LOCATION GRAPHICS

NOTE: Figures may show multiple component locations. Refer to appropriate table for proper figure references.

BATTERY JUNCTION BOX (BJB)

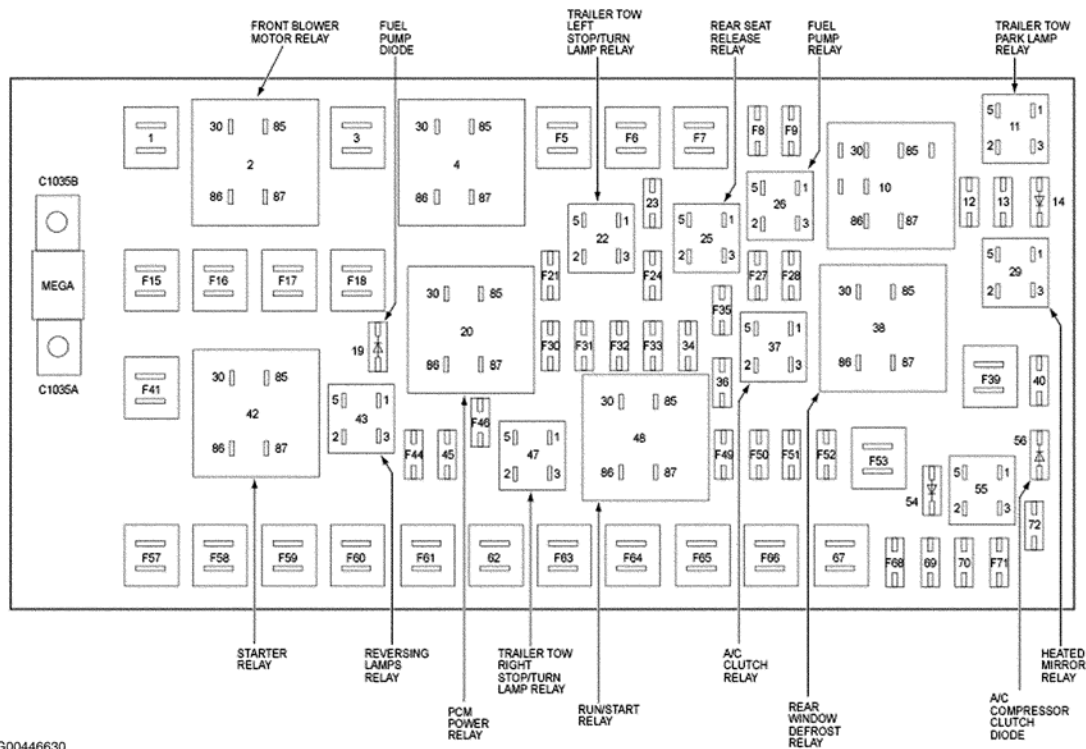

G00446630

Fig. 1: Battery Junction Box (BJB)
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

SMART JUNCTION BOX (SJB)

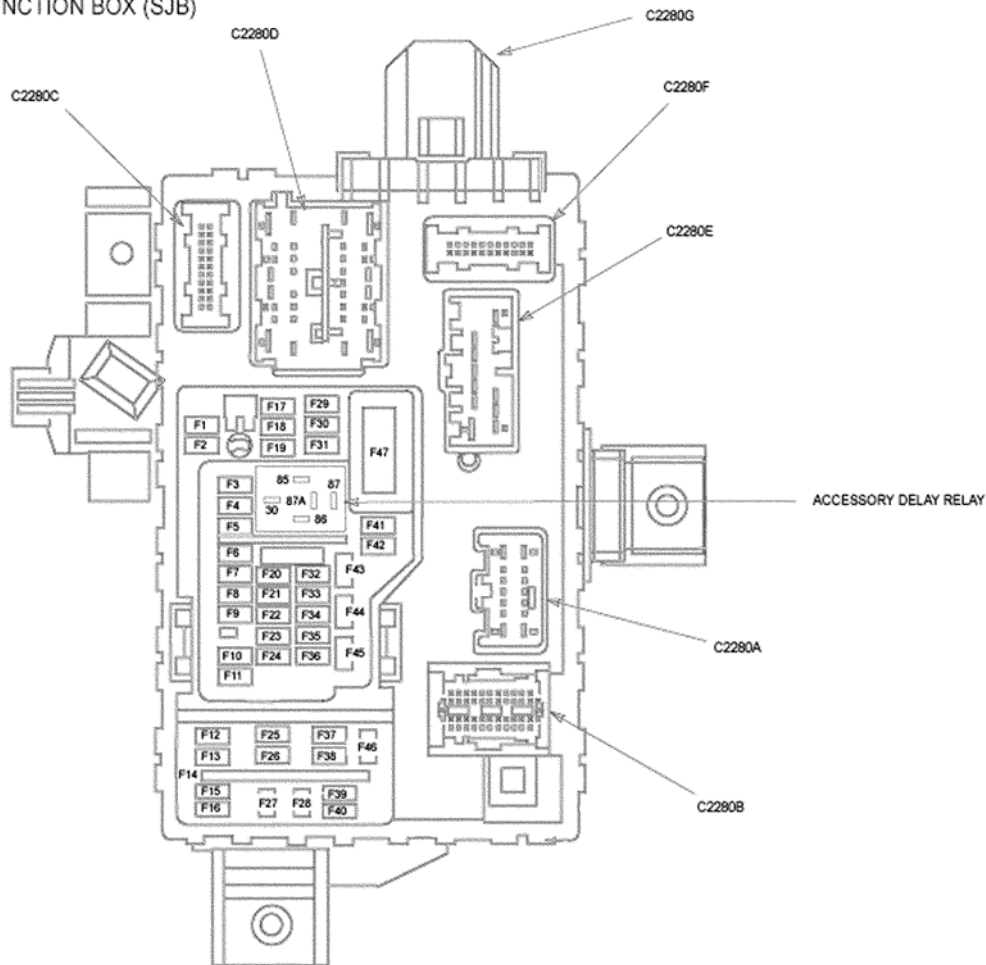


Fig. 2: Smart Junction Box (SJB)
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

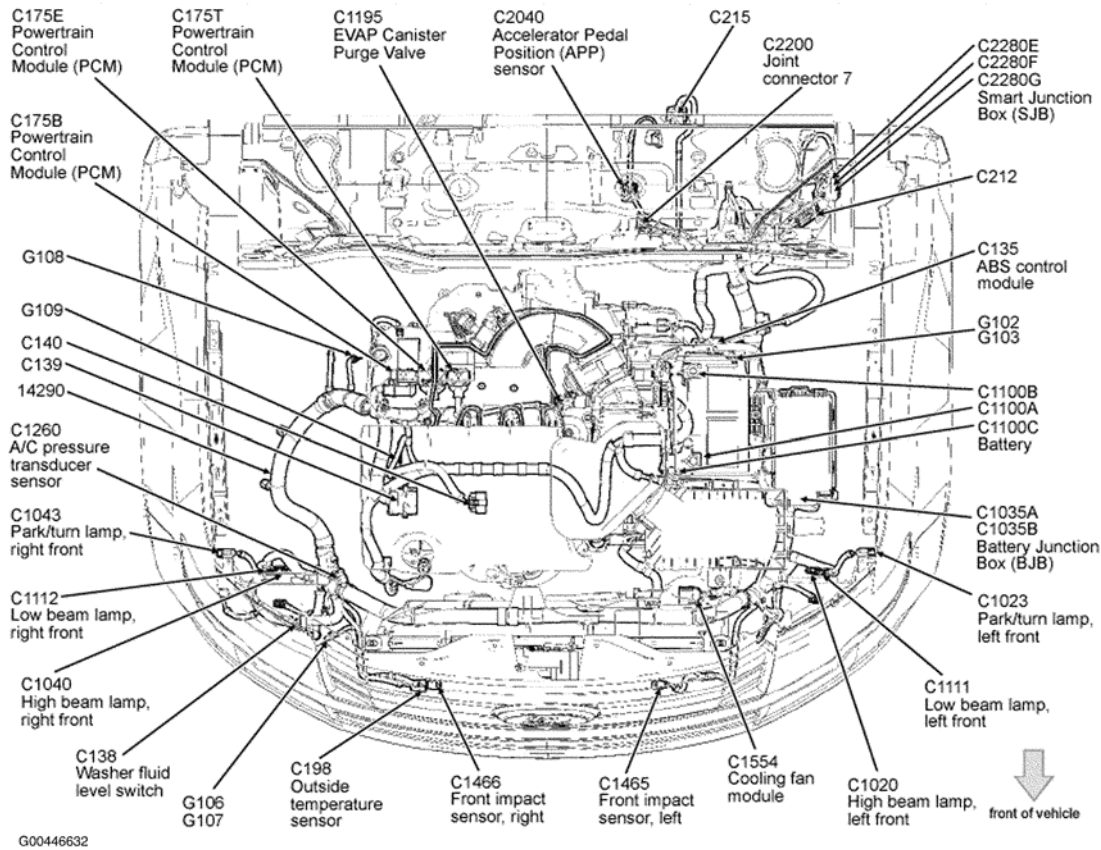


Fig. 3: Engine Compartment (Edge)
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

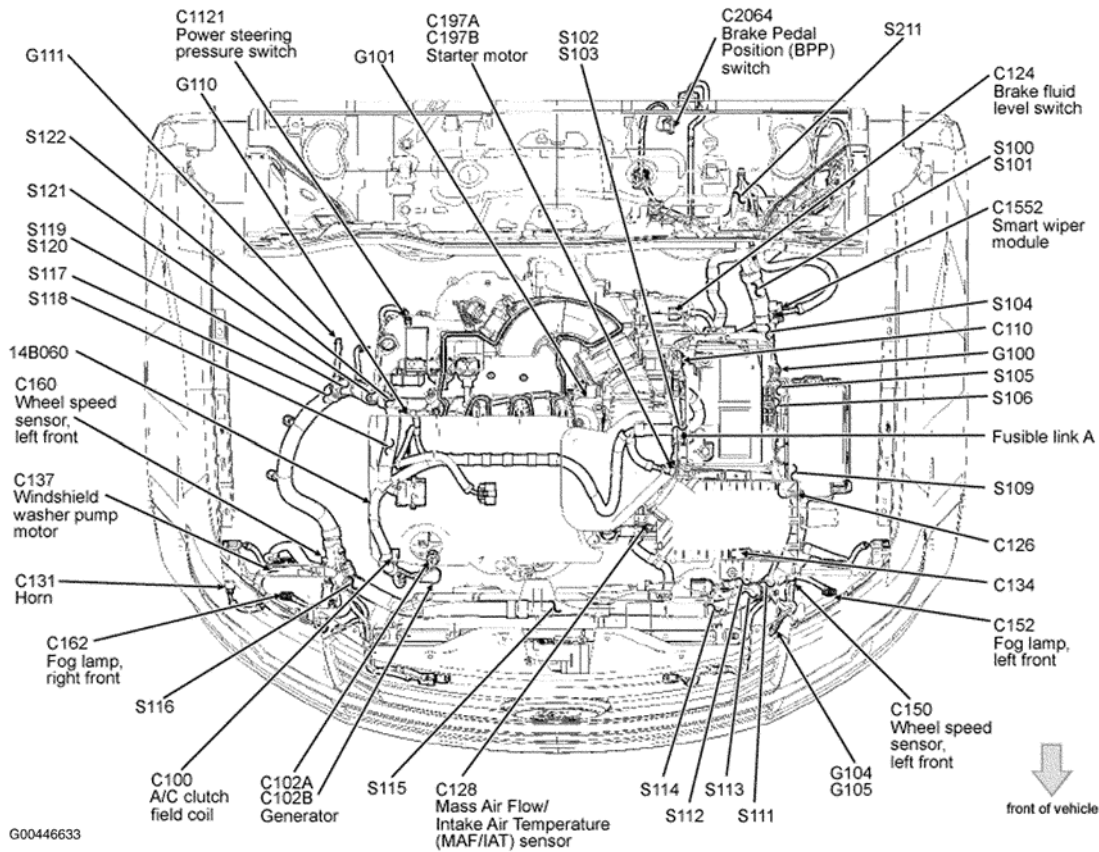


Fig. 4: Engine Compartment (Edge)
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

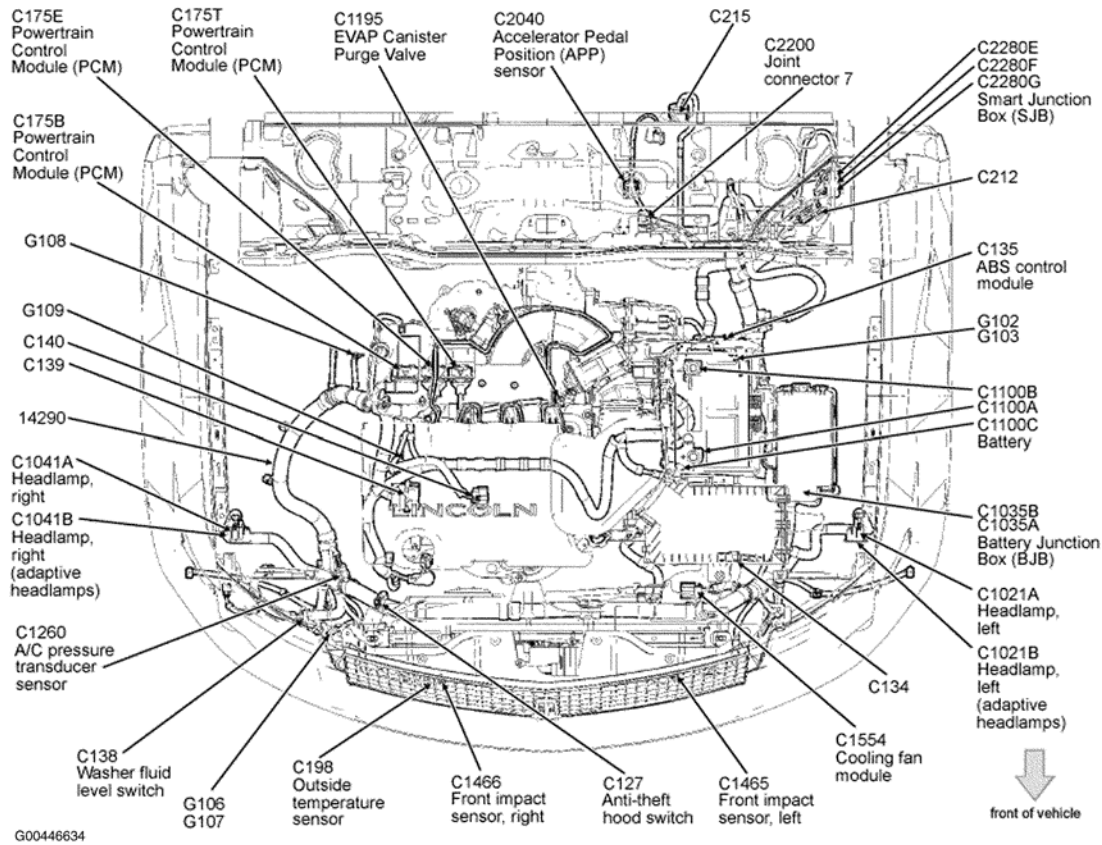


Fig. 5: Engine Compartment (MKX)
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX


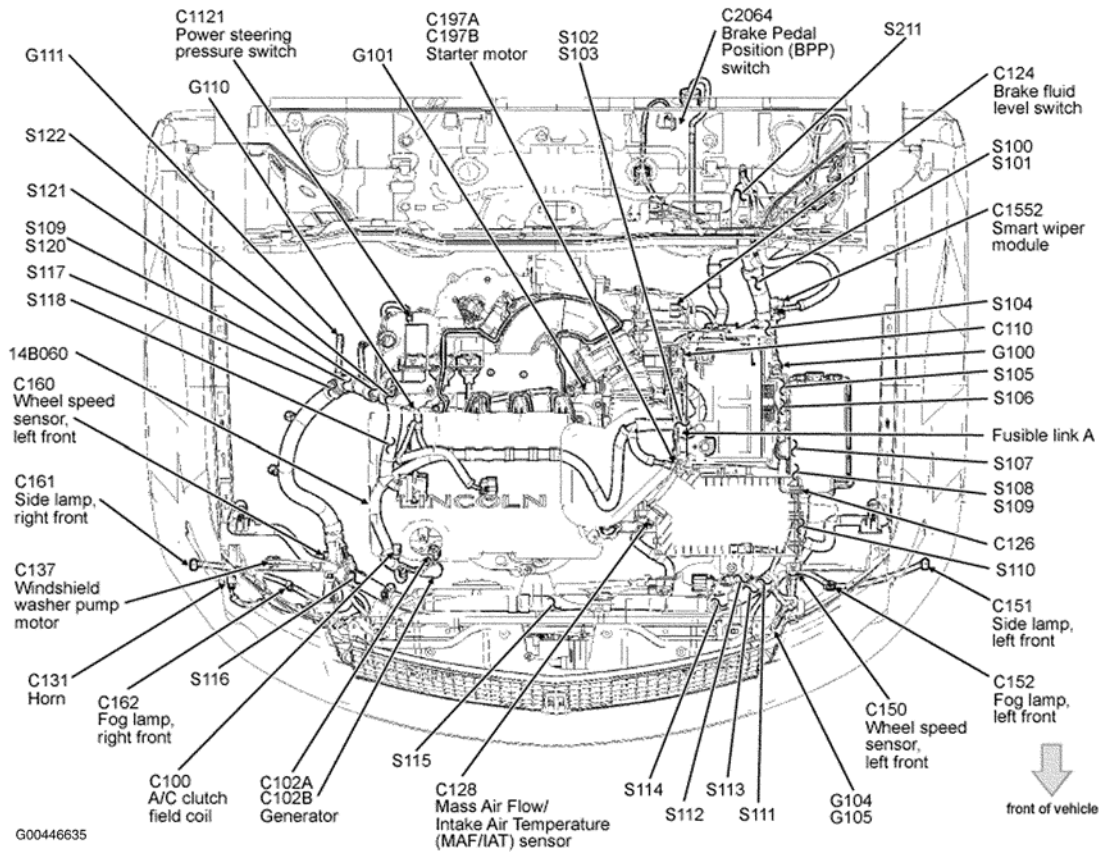


Fig. 6: Engine Compartment (MKX)
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

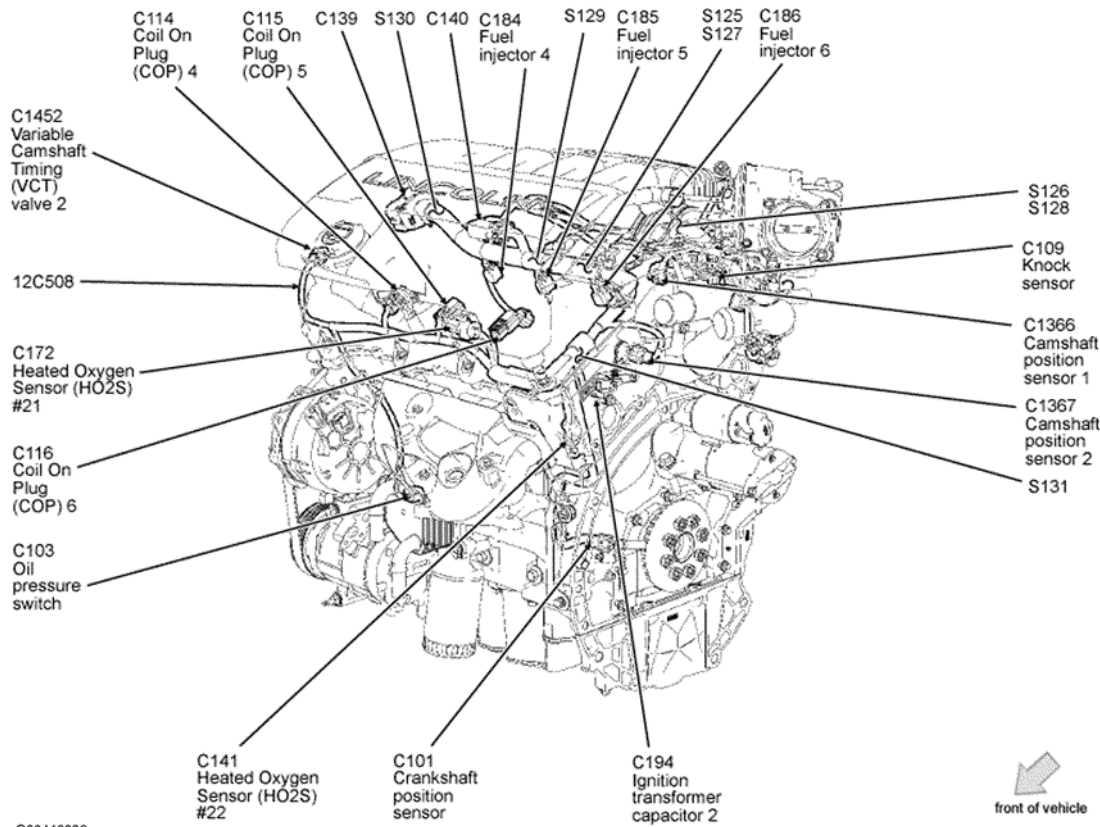

G00446636

Fig. 7: Left Side Of Engine
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX


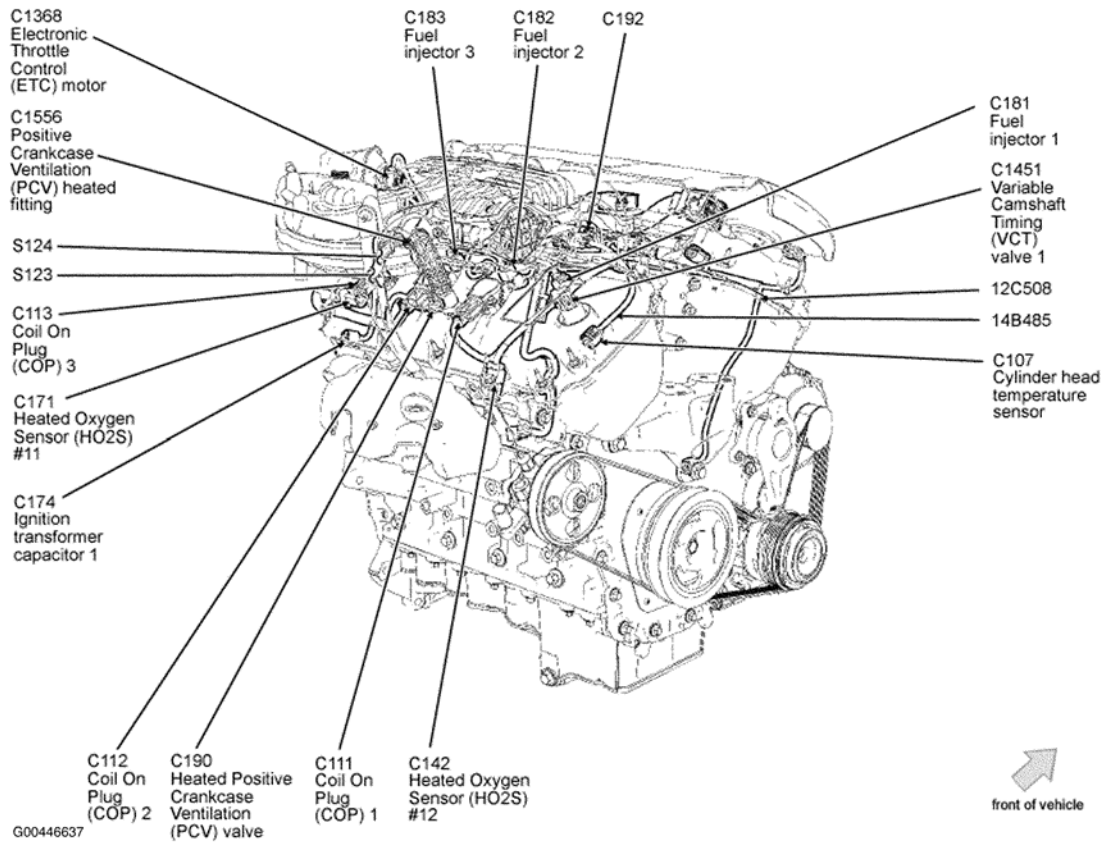


Fig. 8: Right Side Of Engine
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

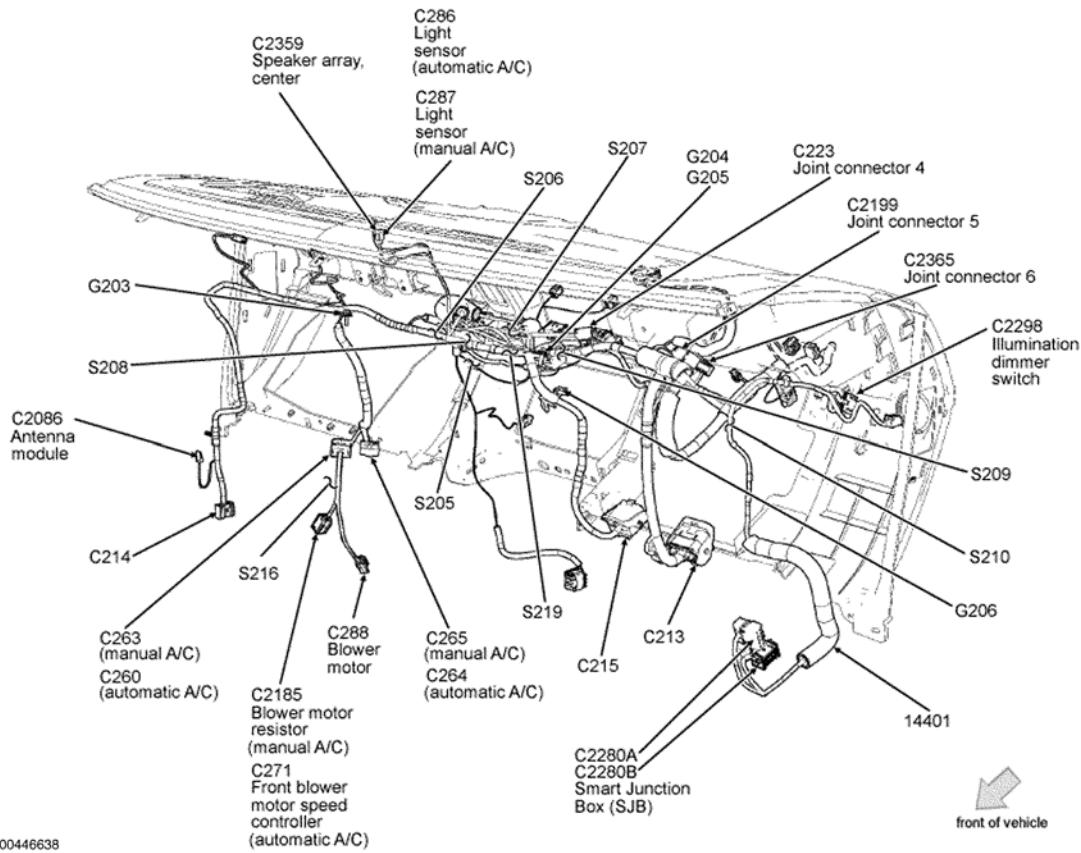


G00446638

Fig. 9: Dash
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

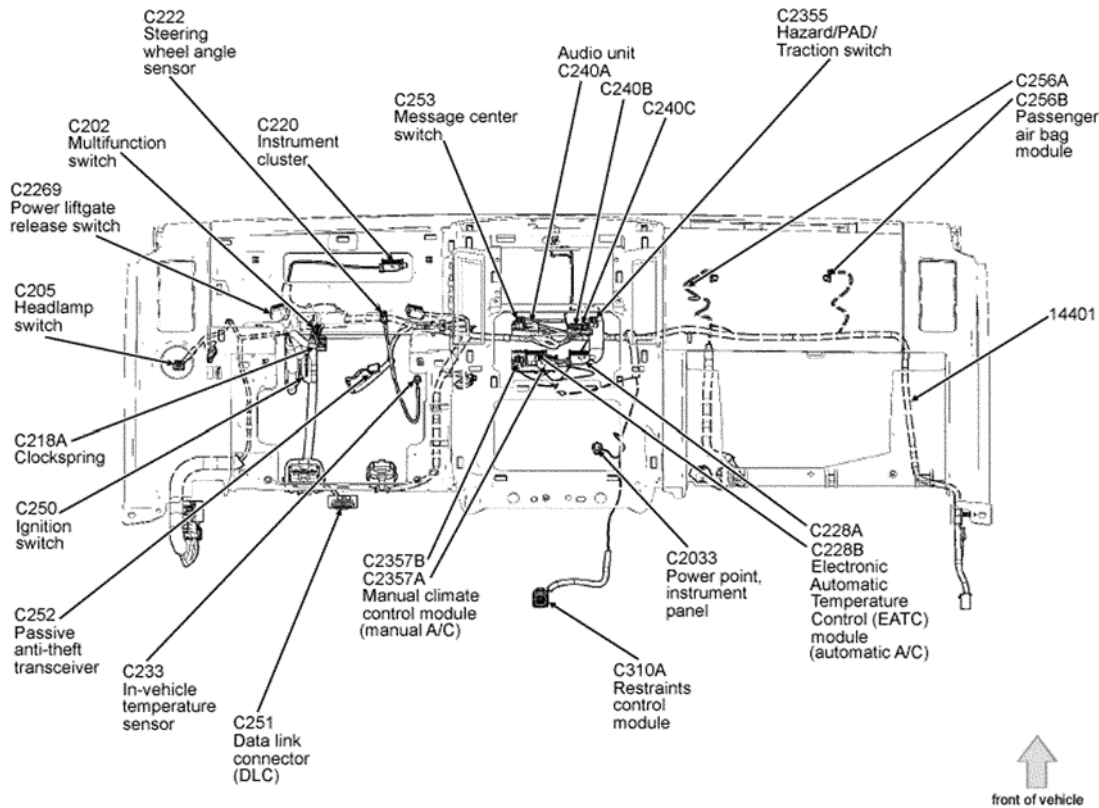


G00446639

Fig. 10: Dash
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

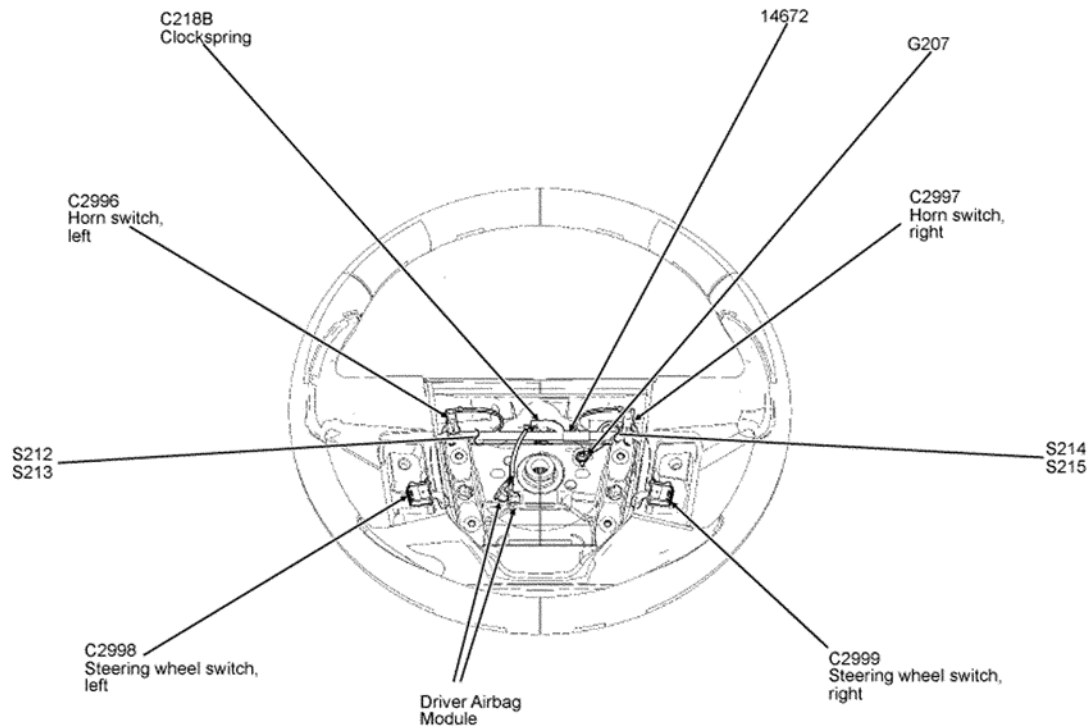

G00446640

Fig. 11: Steering Wheel
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

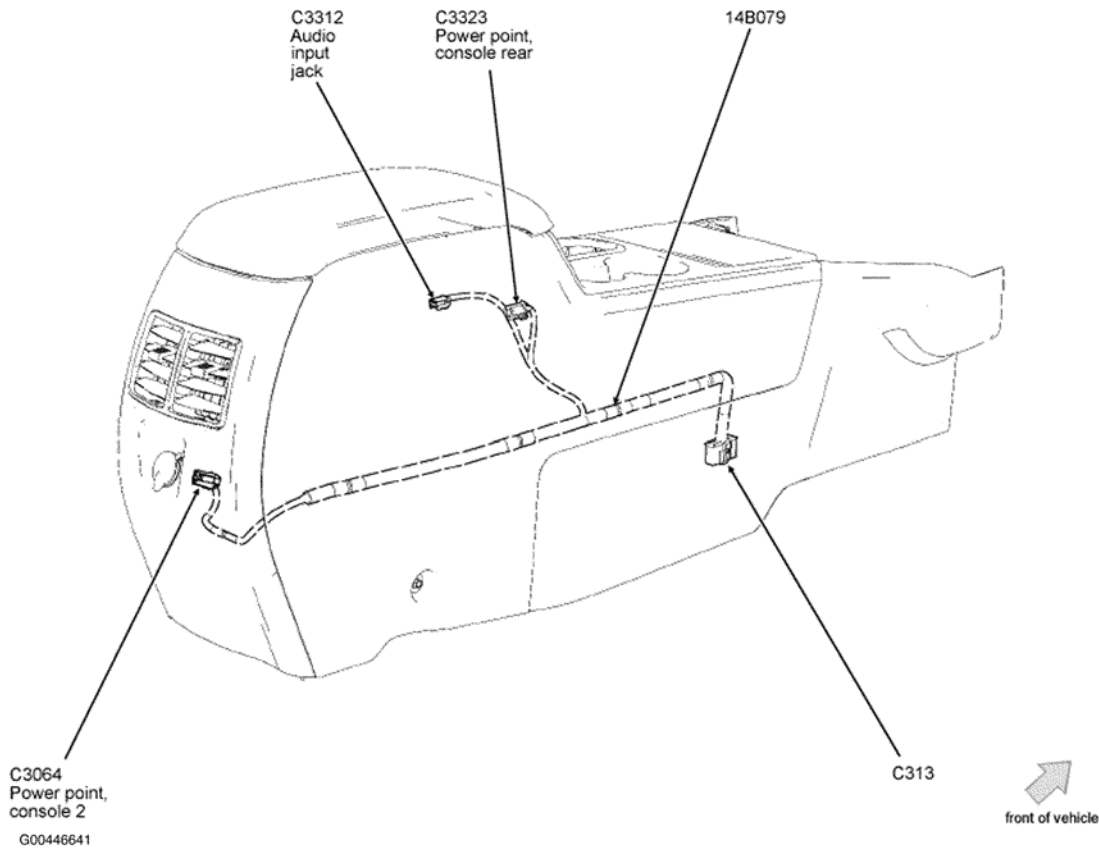


Fig. 12: Center Floor Console
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

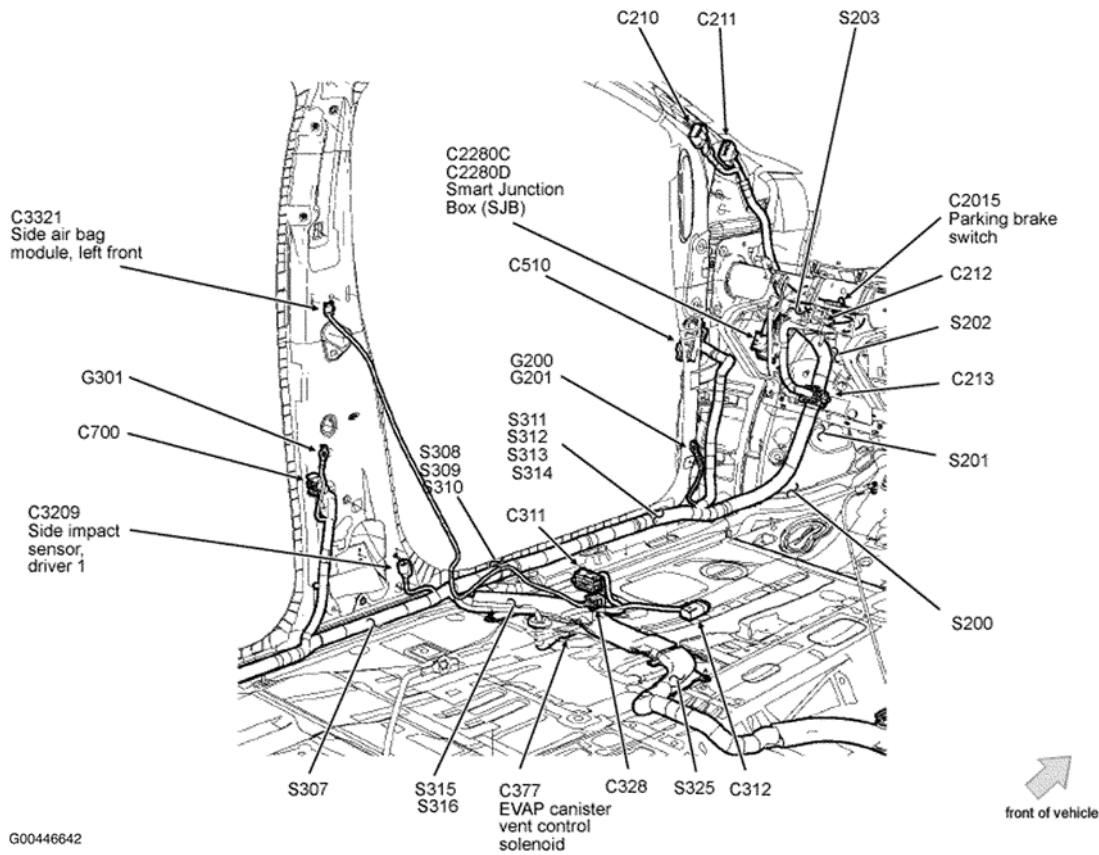


Fig. 13: Left Front Interior Of Vehicle
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

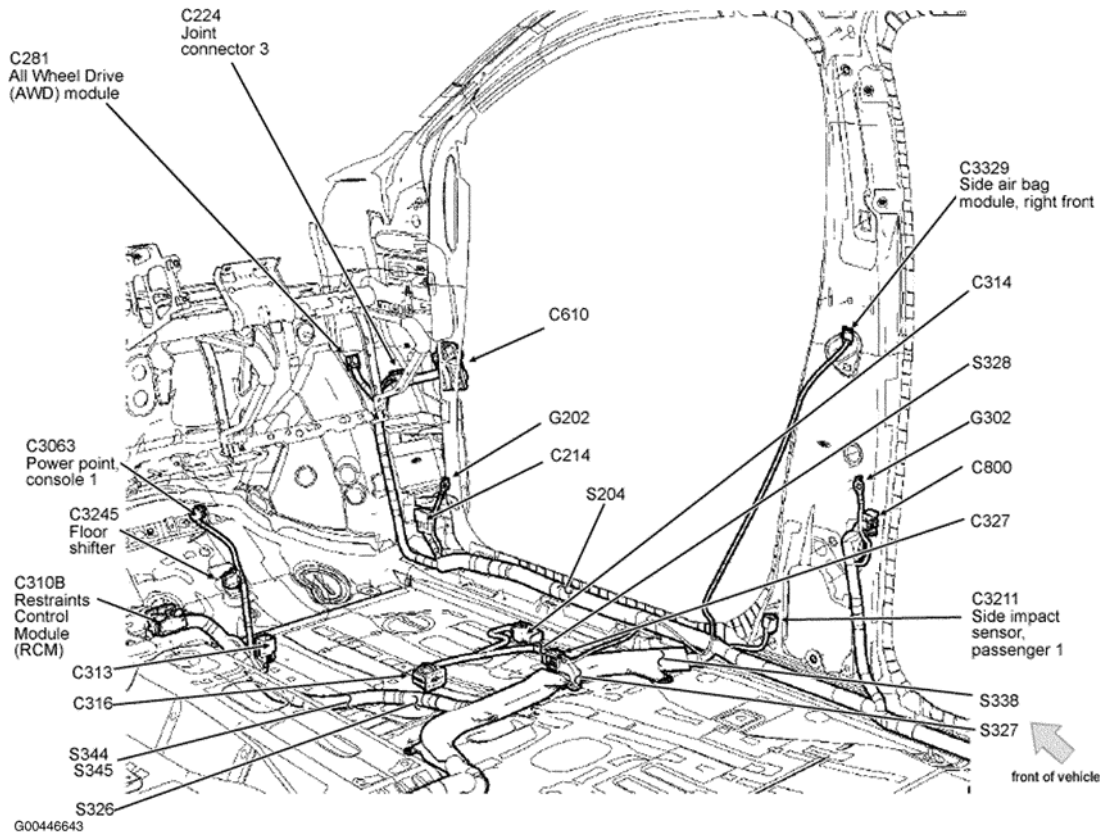


Fig. 14: Right Front Interior Of Vehicle
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

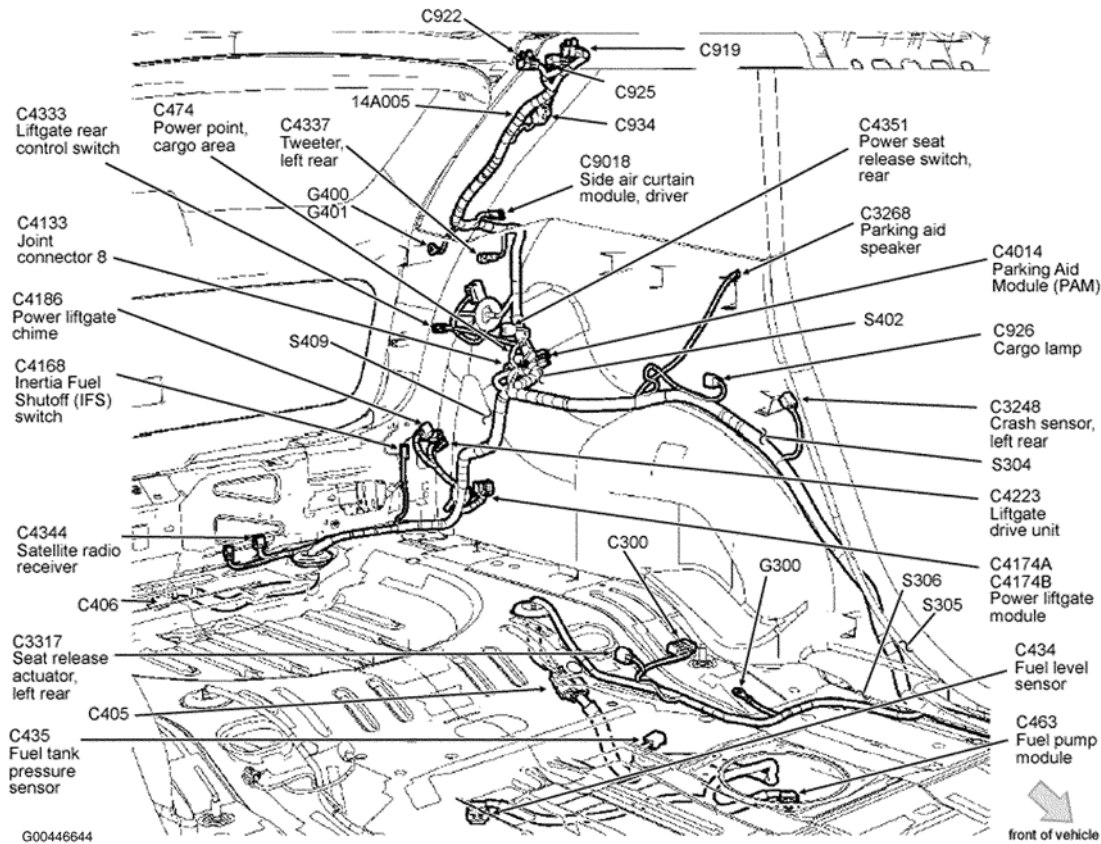


Fig. 15: Left Rear Interior Of Vehicle
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

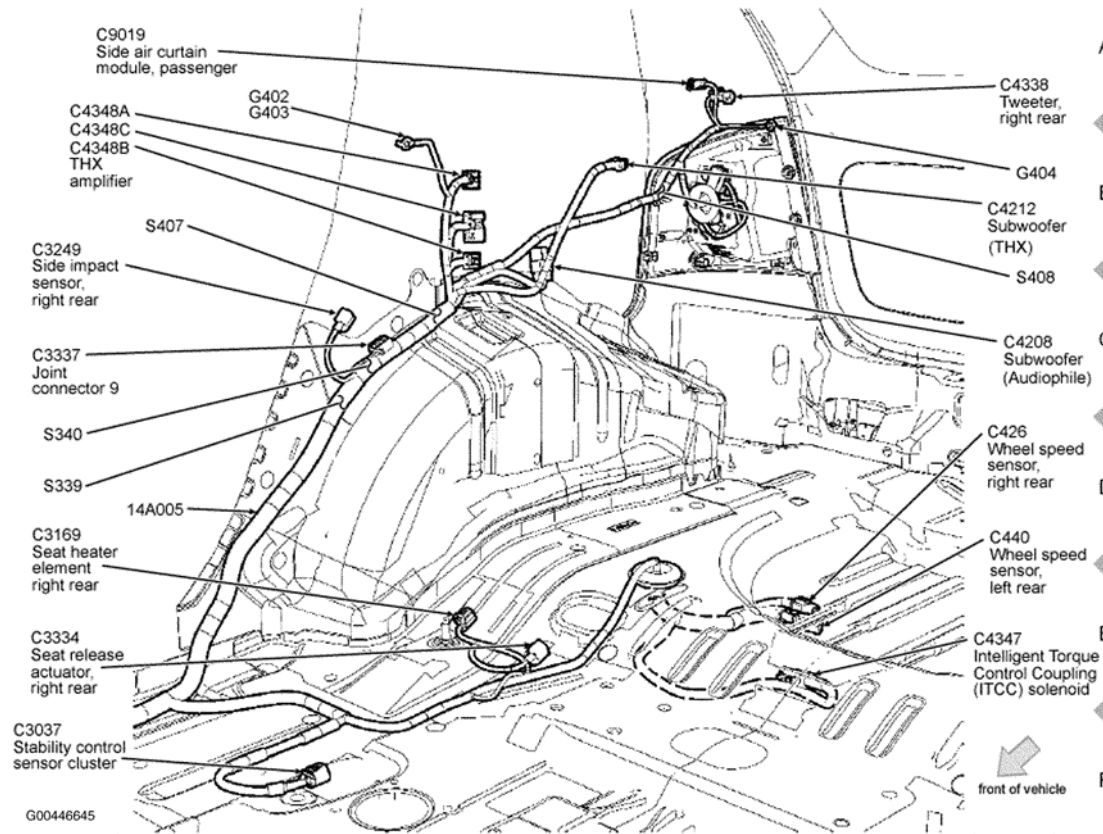


Fig. 16: Right Rear Interior Of Vehicle
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

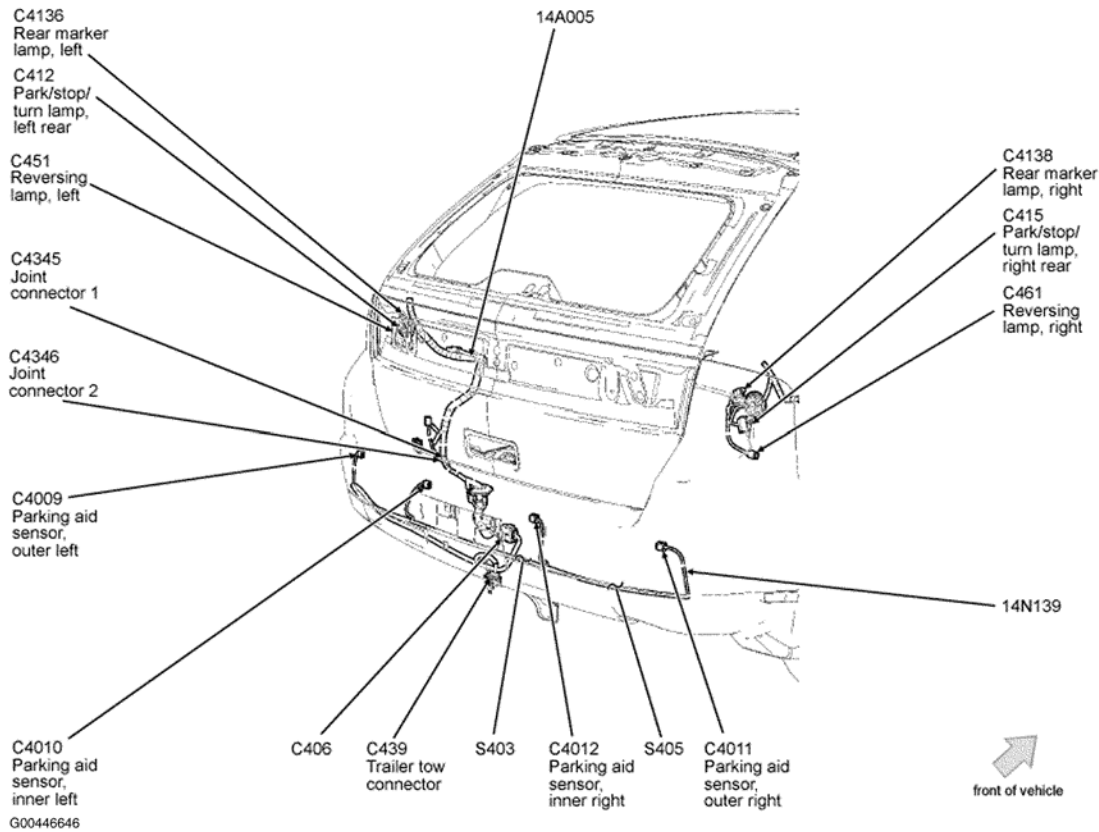


Fig. 17: Rear Of Vehicle (Edge)
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

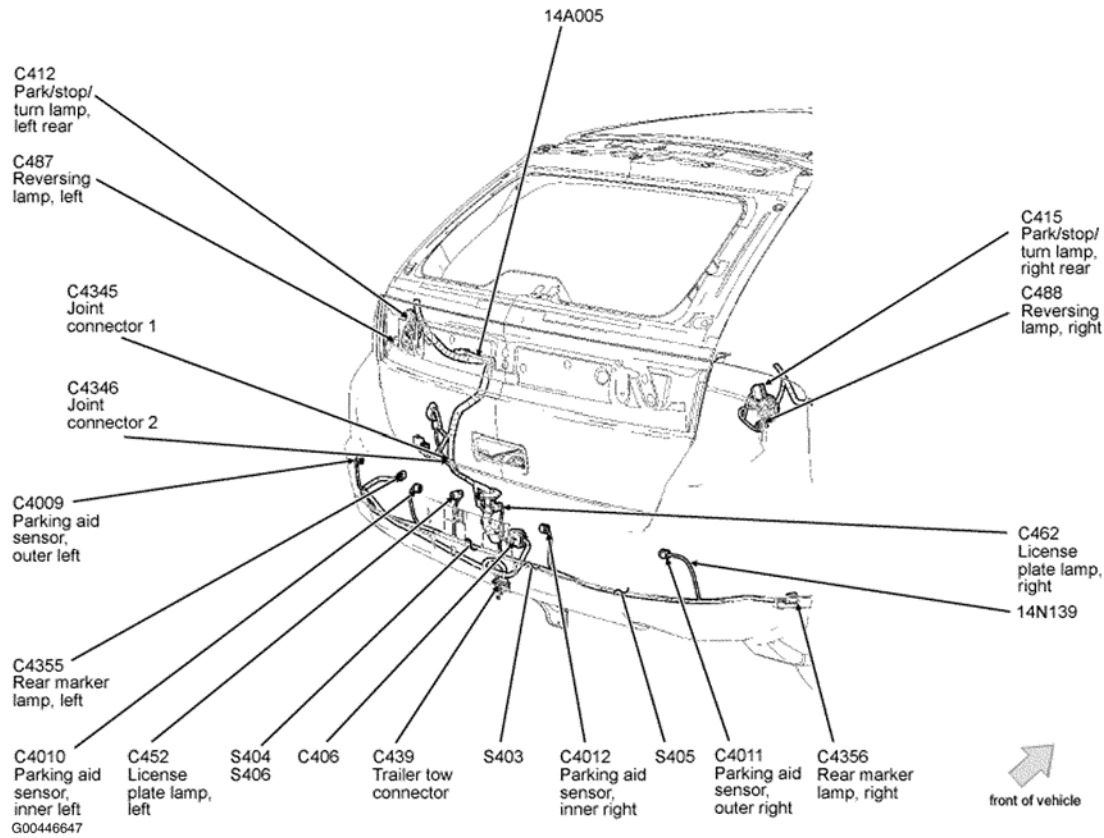


Fig. 18: Rear Of Vehicle (MKX)
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

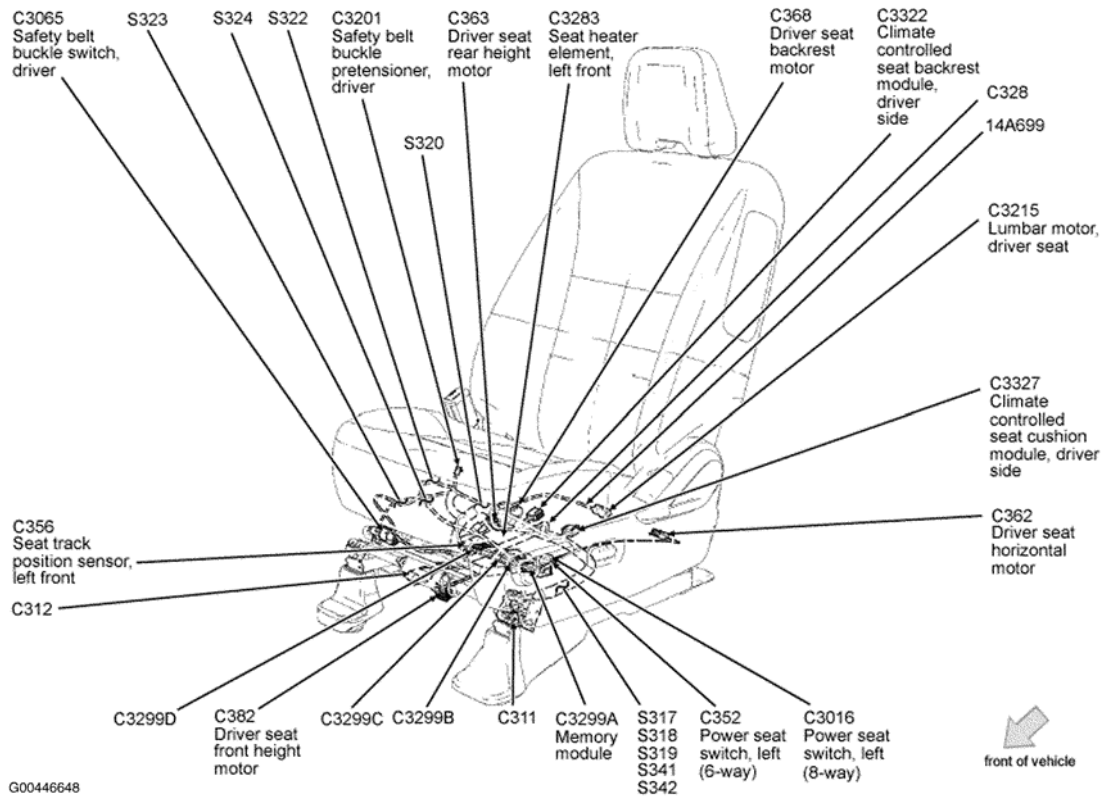


Fig. 19: Driver's Seat
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX


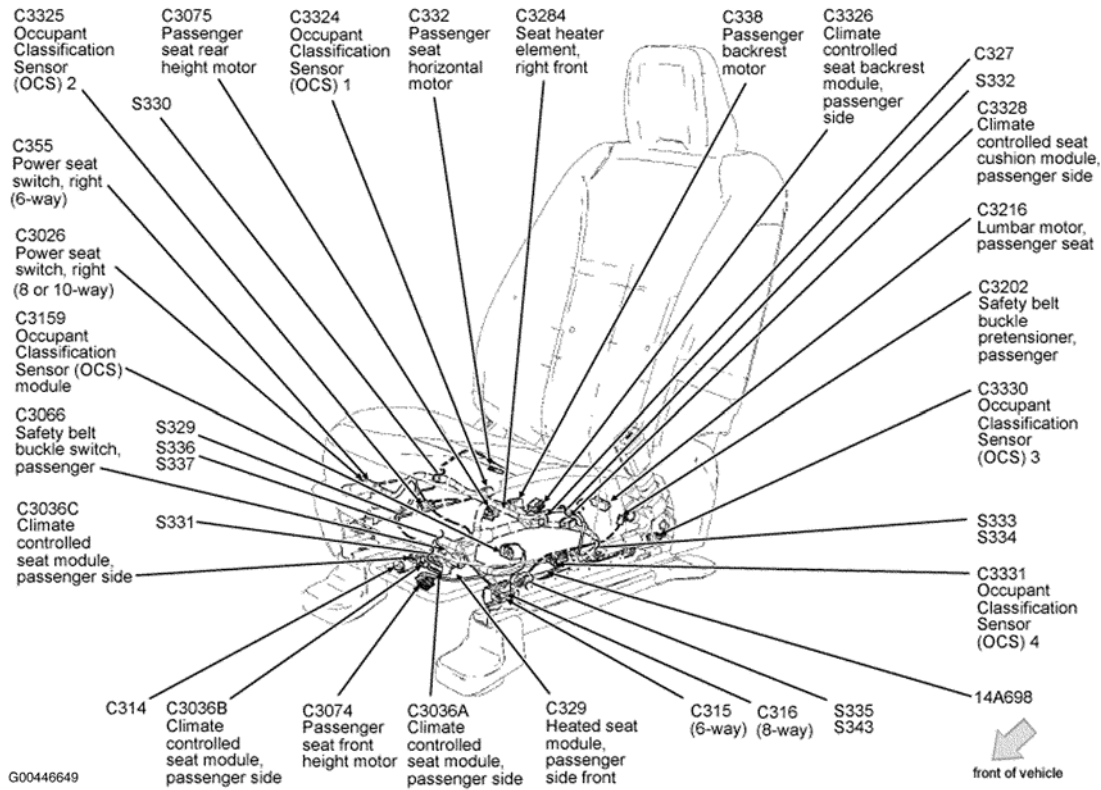


Fig. 20: Front Passenger's Seat
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

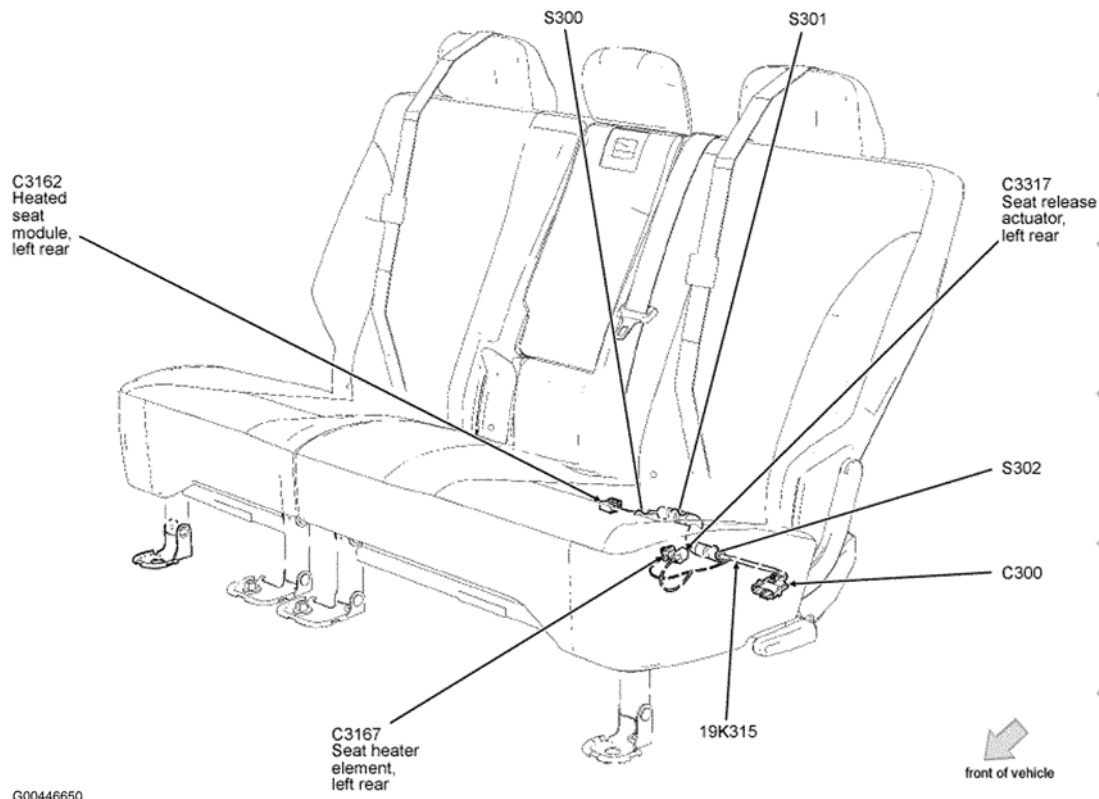

G00446650

Fig. 21: Rear Seats
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

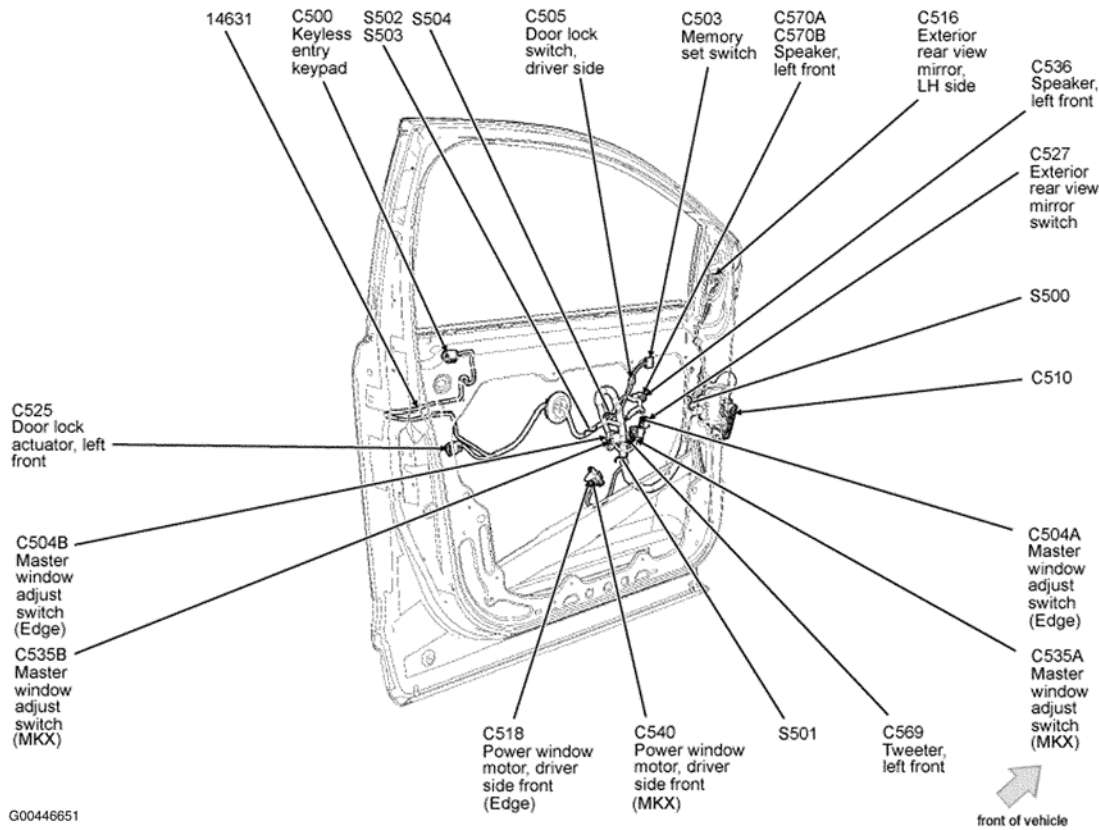


Fig. 22: Driver's Door
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

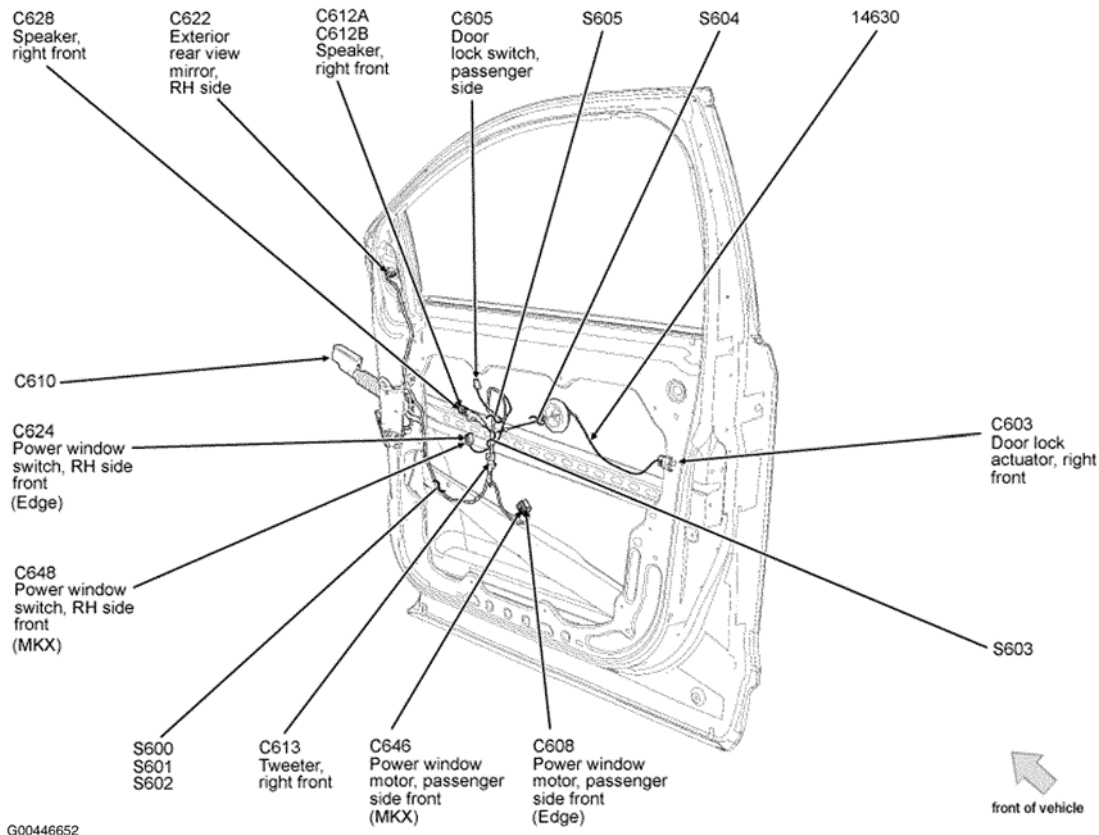


Fig. 23: Front Passenger's Door
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

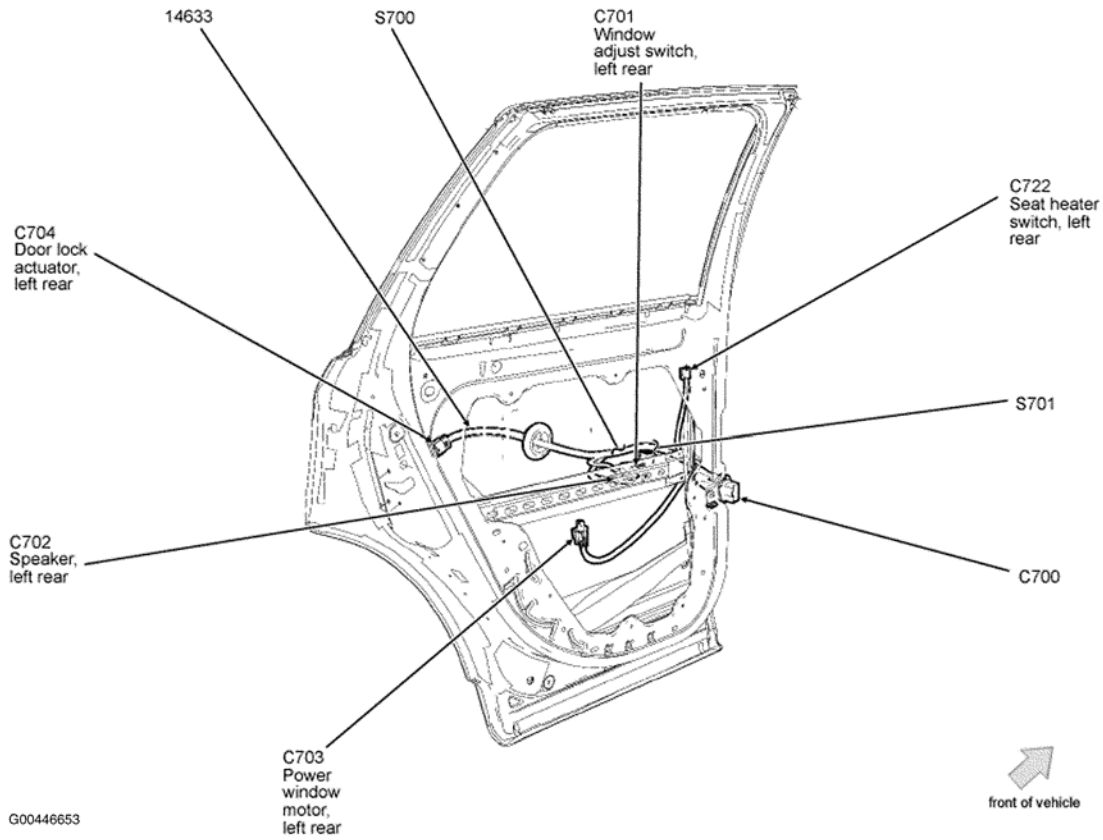


Fig. 24: Left Rear Door
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX


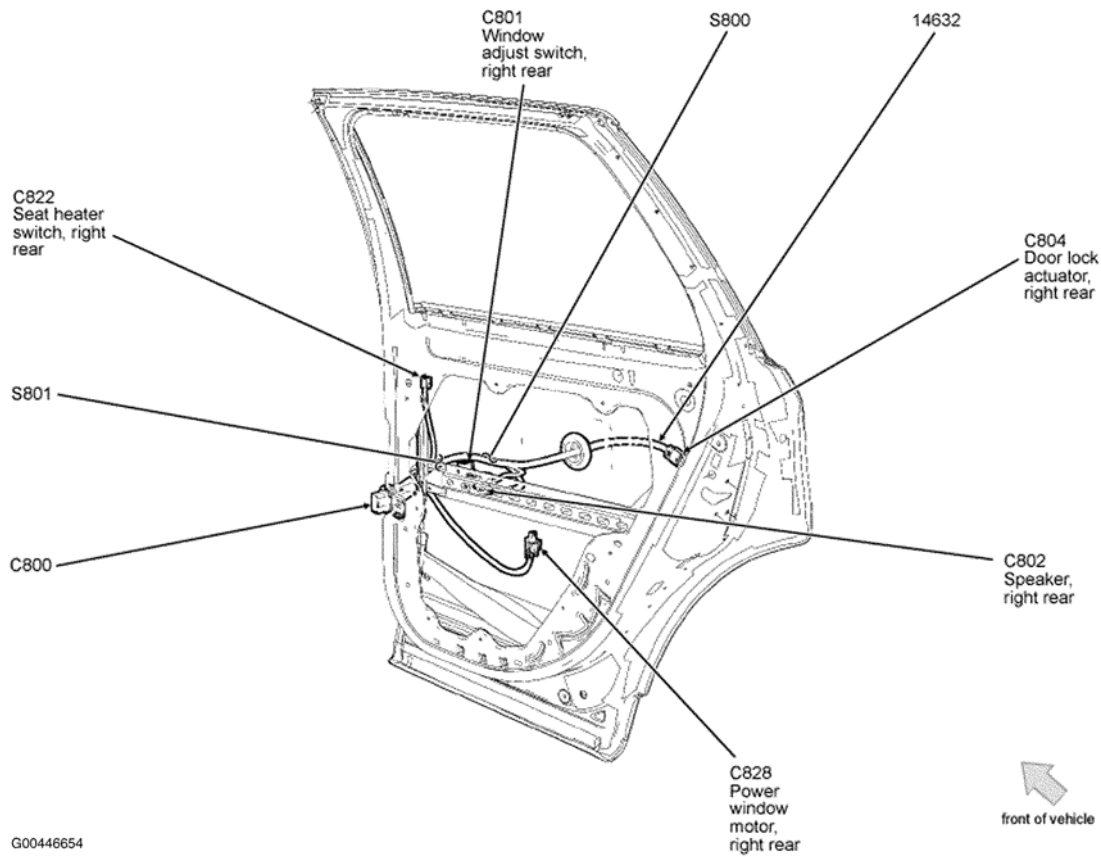


Fig. 25: Right Rear Door
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

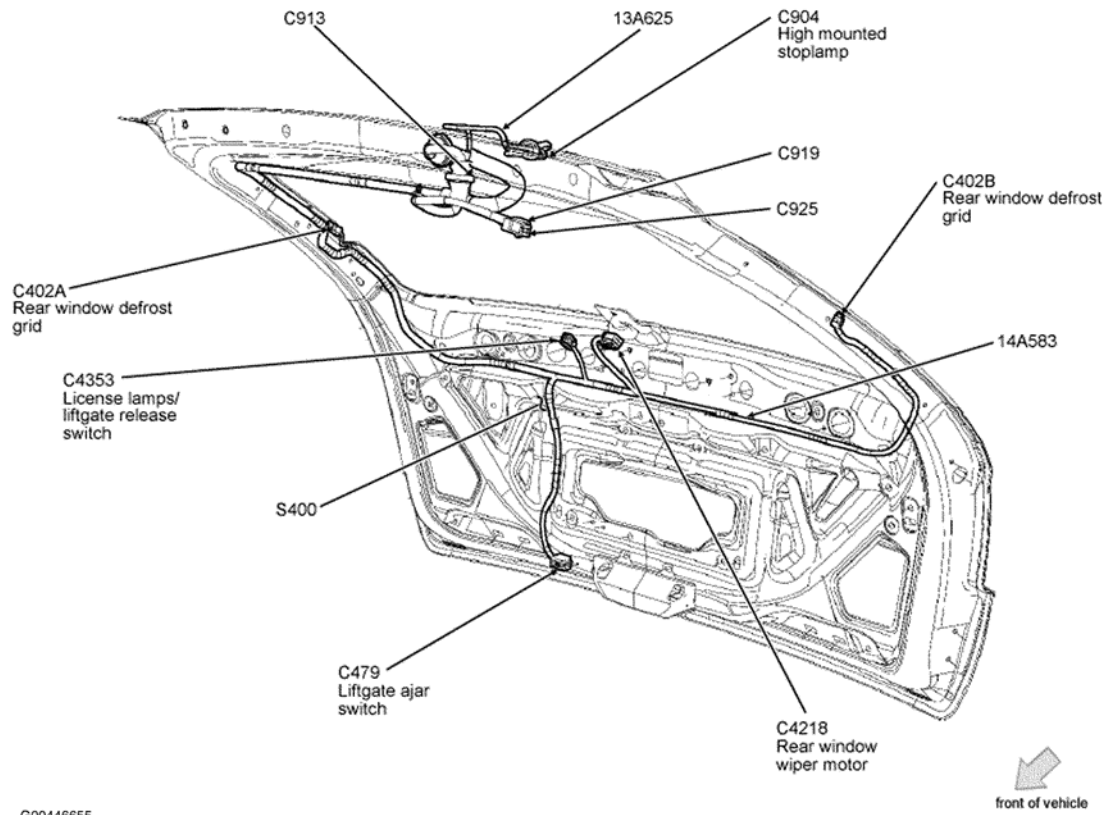

G00446655

Fig. 26: Liftgate (Edge)
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

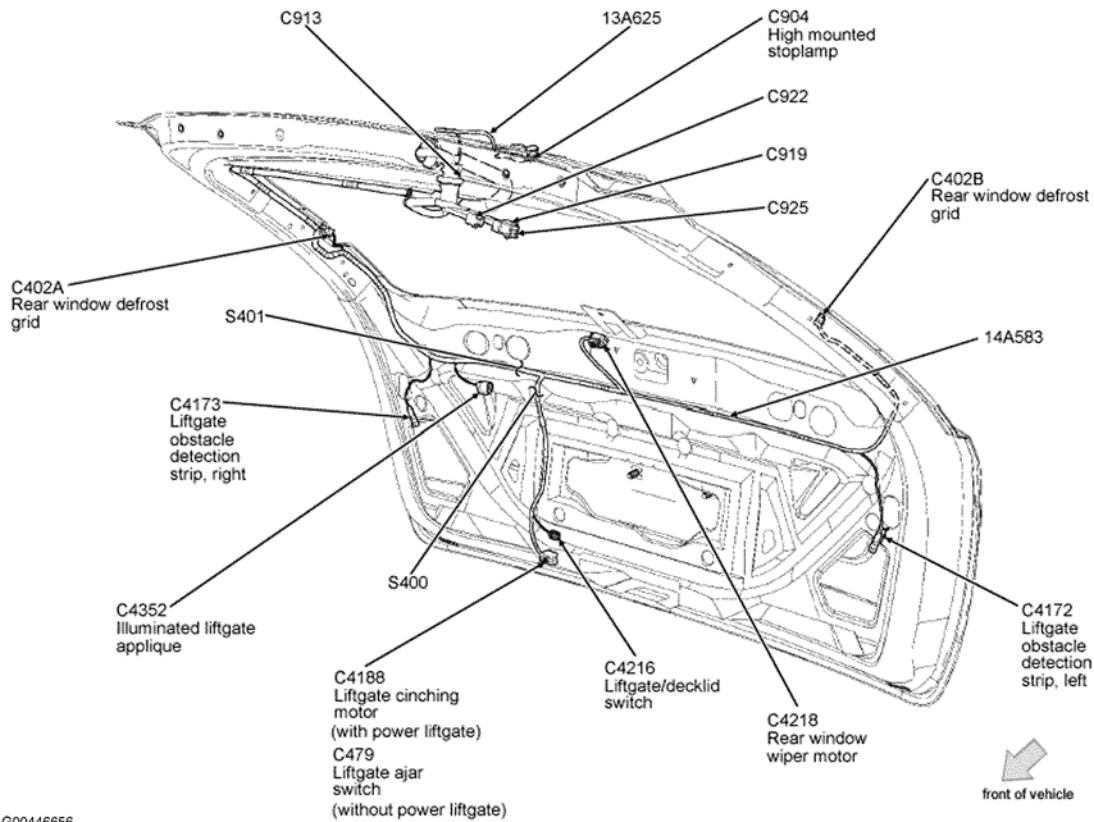


Fig. 27: Liftgate (MKX)
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

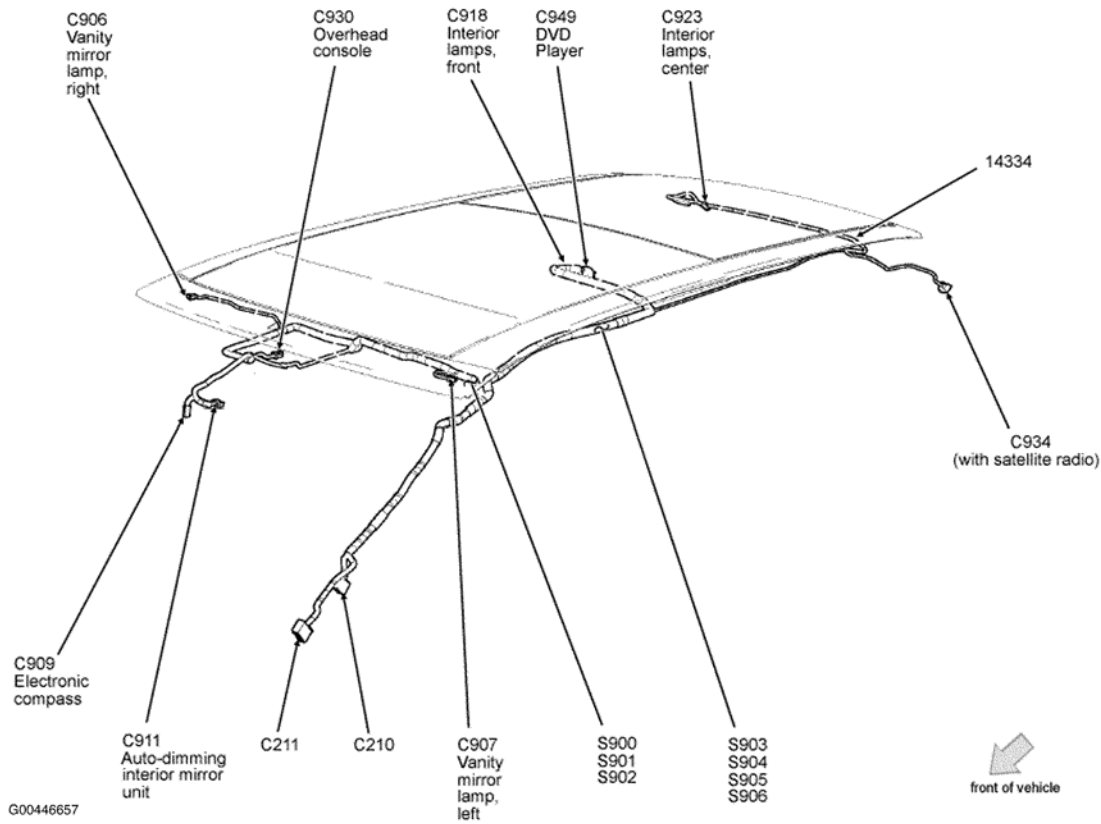


Fig. 28: Roof (Except Panoramic Vista Roof)
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

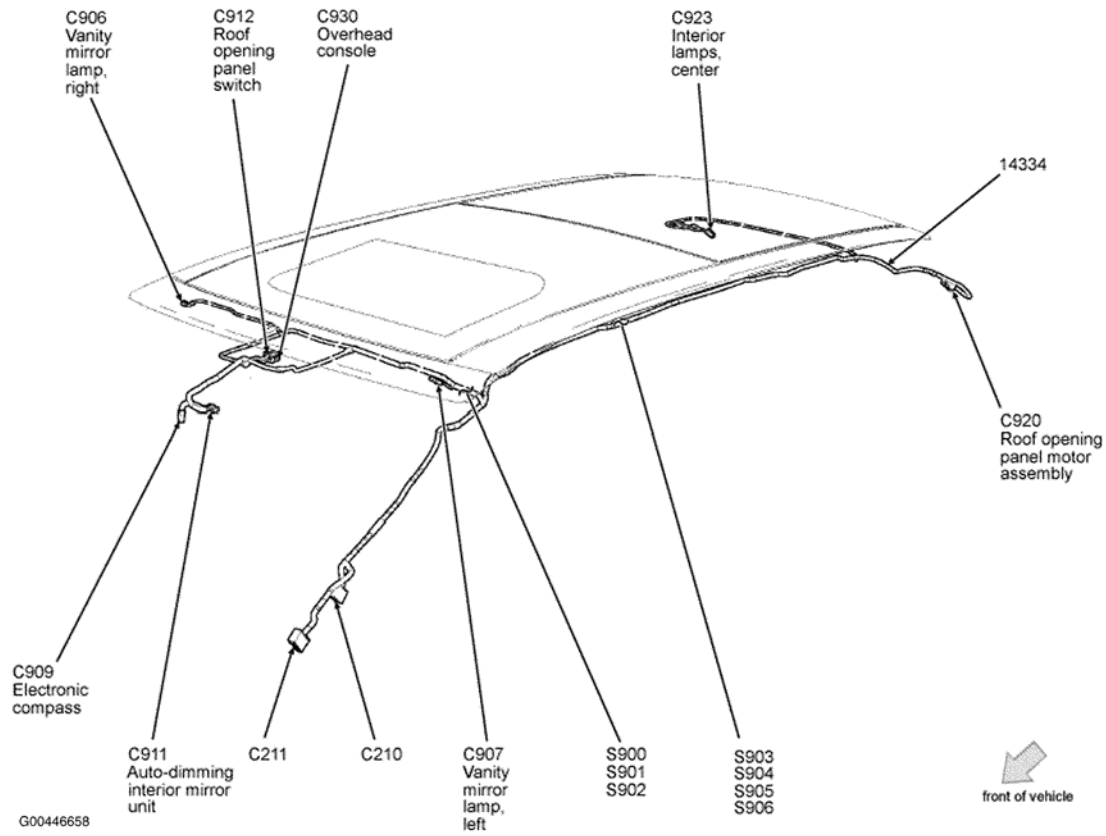


Fig. 29: Roof (W/Panoramic Vista Roof)
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

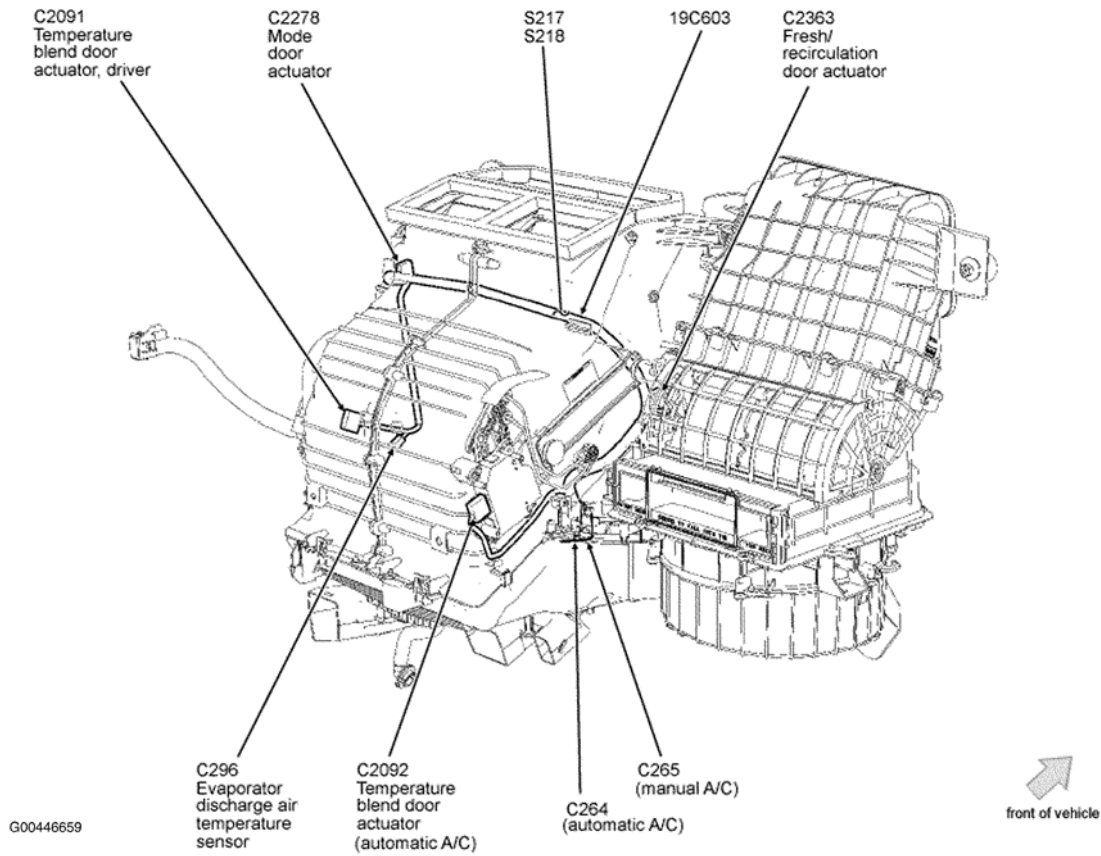


Fig. 30: HVAC Unit
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 FORD MOTOR CO. Edge & MKX

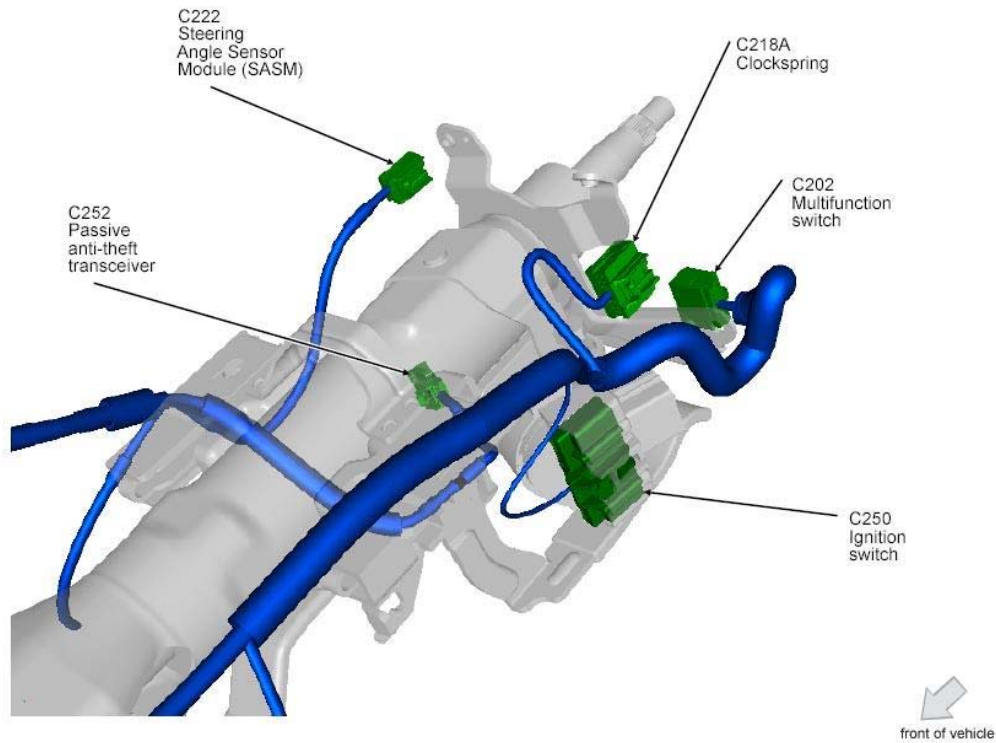


Fig. 31: Steering Column
Courtesy of FORD MOTOR CO.