

2008 Ford Edge SE

2008 SUSPENSION Front Suspension - Edge & MKX

2008 SUSPENSION

Front Suspension - Edge & MKX

SPECIFICATIONS

TORQUE SPECIFICATIONS

Description	Nm	lb-ft	lb-in
Brake caliper anchor plate bolt	133	98	-
Brake flexible hose bracket bolt	20	15	-
Driveshaft bolts	70	52	-
Engine roll restrictor heat shield nut	11	8	-
Engine roll restrictor-to-subframe bolt	103	76	-
Exhaust flexible pipe nuts	40	30	-
Front lower bumper-to-subframe nuts	9	-	80
Halfshaft nut	275	203	-
Lower arm-to-frame forward bolt	150	111	-
Lower arm-to-frame rearward bolt	80	59	-
Lower ball joint nut	55	41	-
Lower steering shaft coupler bolt	25	18	-
Outer tie-rod end nuts	48	35	-
Power steering fluid cooler hose bracket bolt	9	-	80
Steering shaft coupler bolt	25	18	-
Shock absorber lower nuts	225	166	-
Shock absorber rod nut	115	85	-
Shock absorber upper mount nuts	30	22	-
Stabilizer bar bracket bolts	63	46	-
Stabilizer bar link upper and lower nuts	90	66	-
Subframe nuts	133	98	-
Subframe support bracket bolts	90	66	-
Subframe support bracket nuts	133	98	-
Wheel speed sensor bolt	7	-	62
Y-pipe clamp	40	30	-

DESCRIPTION AND OPERATION

FRONT SUSPENSION

The front suspension consists of the following components:

- Wheel bearings
- Wheel hubs

- Wheel studs
- Lower arms
- Stabilizer bar
- Stabilizer bar brackets
- Stabilizer bar bushings
- Stabilizer bar links
- Shock absorber and spring assemblies
- Wheel knuckles

The front suspension system incorporates a strut assembly that takes the place of the upper arm and ball joint. The strut carries out the function of a shock absorber and is encompassed by a coil spring. The strut and spring assembly supports the weight of the vehicle and is also the pivot point for the steering spindle. This system uses a lower control arm and ball joint for the lower (unloaded) pivot point of the steering wheel knuckle. The stabilizer bar and links are included to control lean/sway during turns.

DIAGNOSTIC TESTS



FRONT SUSPENSION

Refer to **SUSPENSION SYSTEM - GENERAL INFORMATION** article.

REMOVAL AND INSTALLATION

WHEEL BEARING AND WHEEL HUB

Special Tools

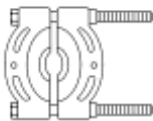Illustration	Tool Name	Tool Number
 ST1895-A	Pinion Bearing Cone Remover	205-D002 (D79L-4621-A) or equivalent
 ST2446-A	Installer, Wheel Hub Bearing Cup	205-147
 ST2446-A	Remover/Installer, Wheel Hub Cup	204-020

2008 Ford Edge SE

2008 SUSPENSION Front Suspension - Edge & MKX



ST2446-A

Stop Plate

205-117

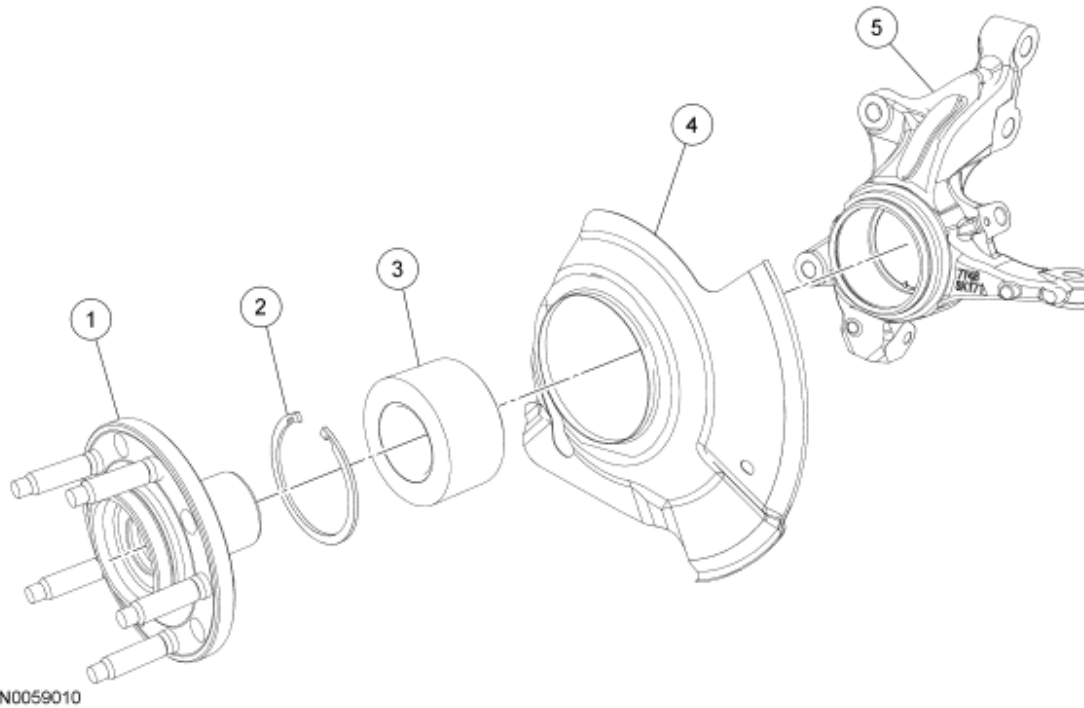


Fig. 1: Exploded View Of Wheel Bearing & Wheel Hub
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	1104	Wheel hub
2	3B625	Snap ring
3	1215	Wheel bearing
4	2K005 LH/ 2K004 RH	Brake disc shield
5	3K171 LH/ 3K170 RH	Wheel knuckle

REMOVAL

NOTE: If removing the wheel hub, the wheel bearing must be replaced.

1. Remove the wheel knuckle. For additional information, refer to **Wheel Knuckle**.
2. Using the special tool, press the wheel hub from the wheel bearing.

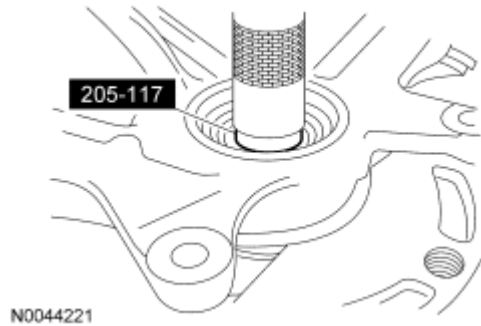


Fig. 2: Pressing Wheel Hub From Wheel Bearing Using Special Tool (205-117)
Courtesy of FORD MOTOR CO.

NOTE: This step may not be necessary if the inner wheel bearing race remains in the wheel knuckle after removing the wheel hub.

3. Using the special tool, press the inner wheel bearing race from the wheel hub.

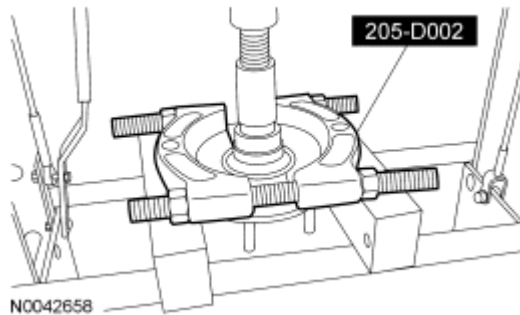


Fig. 3: Pressing Inner Wheel Bearing Race From Wheel Hub Using Special Tool (205-D002)
Courtesy of FORD MOTOR CO.

4. Remove the snap ring.
5. Using the special tool, press the outer wheel bearing race from the wheel knuckle.

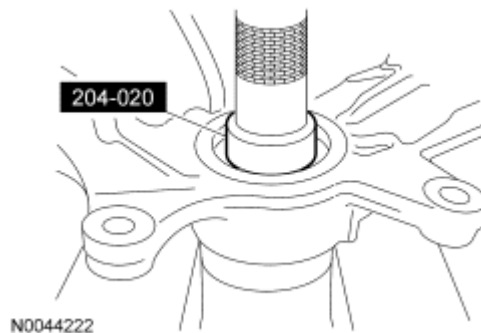


Fig. 4: Pressing Outer Wheel Bearing Race From Wheel Knuckle Using Special Tool (204-020)
Courtesy of FORD MOTOR CO.

INSTALLATION

1. Using the special tool, press the wheel bearing into the wheel knuckle.

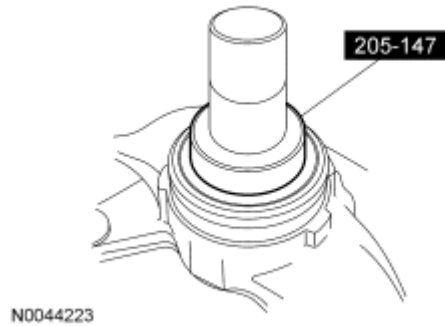


Fig. 5: Pressing Wheel Bearing Into Wheel Knuckle Using Special Tool (205-147)
Courtesy of FORD MOTOR CO.

2. Install the snap ring.
3. Using the special tools, press the wheel hub into the wheel bearing.

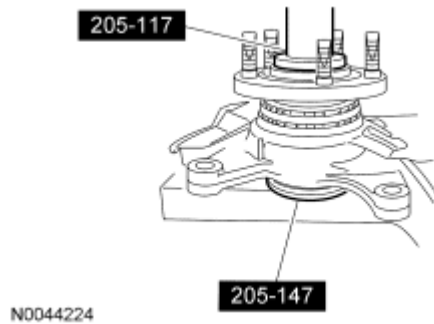


Fig. 6: Pressing Wheel Hub Into Wheel Bearing Using Special Tools (205-117) & (205-147)
Courtesy of FORD MOTOR CO.

4. Install the wheel knuckle. For additional information, refer to **Wheel Knuckle**.


WHEEL STUDS

Fig. 7: Exploded View Of Wheel Studs
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	1107	Wheel stud
2	1104	Wheel hub

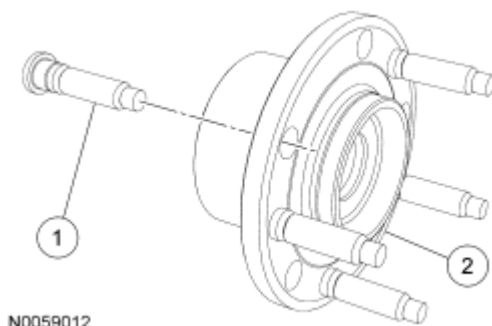REMOVAL

1. Remove the wheel bearing and wheel hub. For additional information, refer to **Wheel Bearing and Wheel Hub**.
2. Using a press, remove the wheel stud from the wheel bearing and hub assembly.

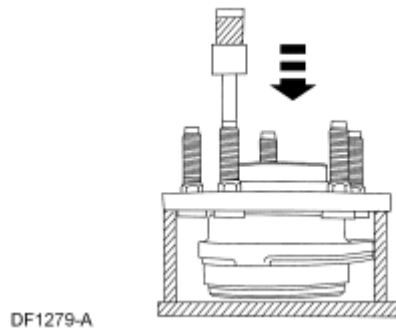


Fig. 8: Removing Wheel Stud From Wheel Bearing & Hub Assembly
Courtesy of FORD MOTOR CO.

INSTALLATION

1. Position the new wheel stud in the wheel hub, aligning the serrations in the wheel hub flange made by the original wheel stud.
2. Using a press, install a new wheel stud.

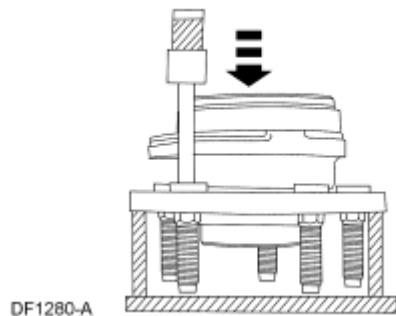


Fig. 9: Installing New Wheel Stud Using A Press
Courtesy of FORD MOTOR CO.

3. Install the wheel bearing and wheel hub. For additional information, refer to **Wheel Bearing and Wheel**

2008 Ford Edge SE

2008 SUSPENSION Front Suspension - Edge & MKX

Hub.

LOWER ARM

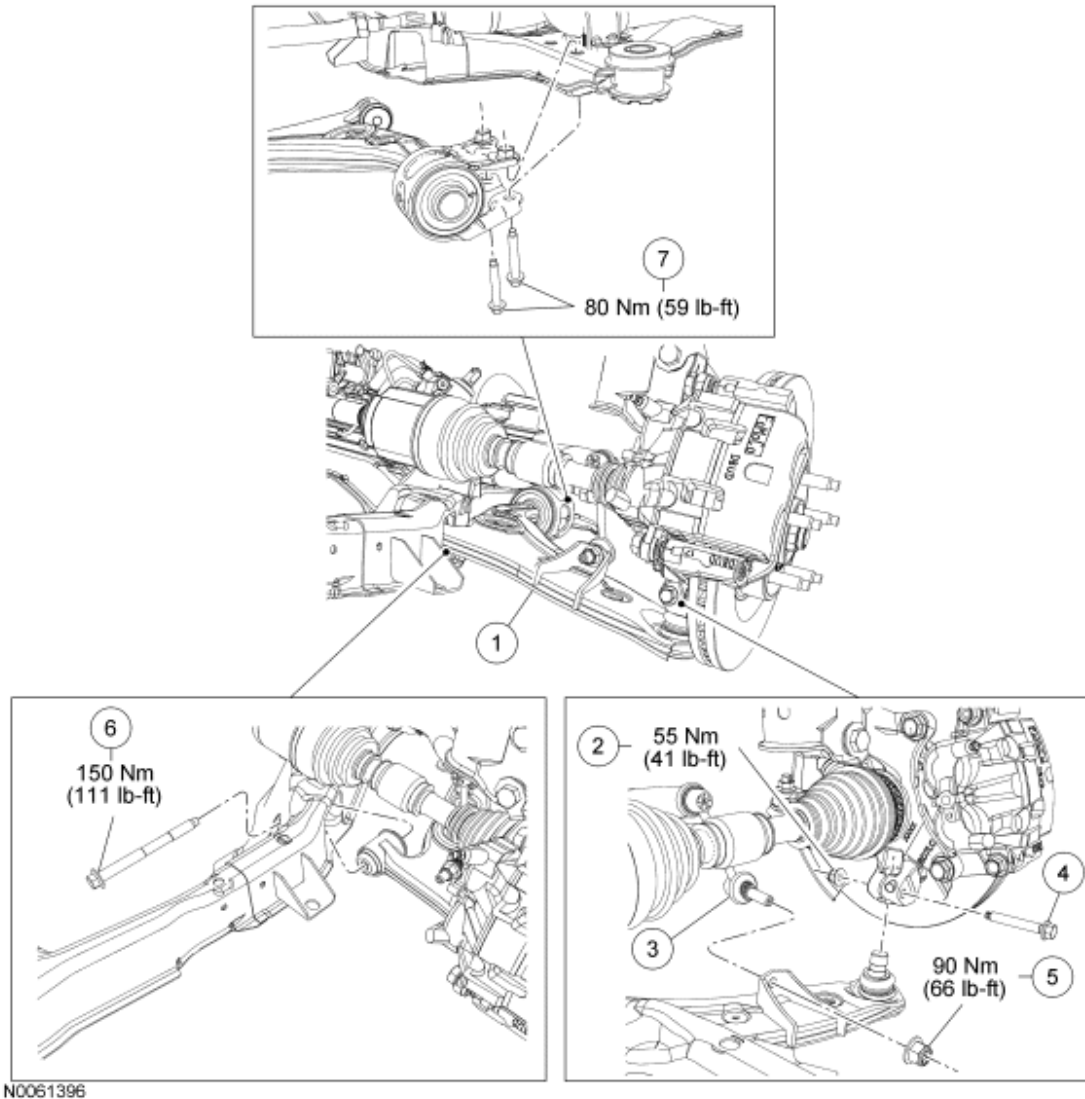


Fig. 10: Exploded View Of Lower Arm Components With Torque Specifications
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	3A423 RH/ 3A424 LH	Lower arm
2	W520213	Lower ball joint nut
3	3B438	Stabilizer bar link
4	W712481	Lower ball joint bolt
5	W520214	Stabilizer bar link nut
6	W712734	Lower arm-to-frame forward bolt

2008 Ford Edge SE

2008 SUSPENSION Front Suspension - Edge & MKX

7

W712850

Lower arm-to-frame rearward bolts (2 required)

REMOVAL

CAUTION: Suspension fasteners are critical parts because they affect performance of vital components and systems and their failure may result in major service expense. New parts must be installed with the same part numbers or equivalent part, if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to make sure correct retention of these parts.

1. Remove the wheel and tire. For additional information, refer to **WHEELS AND TIRES** article.
2. Remove and discard the stabilizer bar link lower nut.
3. Remove and discard the lower ball joint nut and bolt.
4. Remove the lower arm-to-frame forward bolt and spacer.
 - Discard the bolt.
5. Remove the 2 lower arm-to-frame rearward bolts and the lower arm.
 - Discard the 2 bolts.

INSTALLATION

NOTE: Do not tighten the bolt at this time.

1. Position the lower arm and loosely install the 2 lower arm-to-frame rearward bolts.

NOTE: Do not tighten the bolts at this time.

2. Loosely install the lower arm-to-frame forward bolt and spacer.
3. Install the lower arm ball joint bolt and nut.
 - Tighten to 55 Nm (41 lb-ft).
4. Install the stabilizer bar link lower nut.
 - Tighten to 90 Nm (66 lb-ft).
5. Install the wheel and tire. For additional information, refer to **WHEELS AND TIRES** article.
6. With the weight of the vehicle resting on the wheels and tires, tighten the lower arm-to-frame forward bolts to 150 Nm (111 lb-ft).
7. With the weight of the vehicle resting on the wheels and tires, tighten the 2 lower arm-to-frame rearward bolts to 80 Nm (59 lb-ft).
8. Check and, if necessary, align the front end. For additional information, refer to **WHEELS AND TIRES** article.

STABILIZER BAR AND LINK

2008 Ford Edge SE

2008 SUSPENSION Front Suspension - Edge & MKX

Special Tools

Illustration	Tool Name	Tool Number
 ST1408-A	Tie-Rod End Remover	211-105 (T85M-3395-A)

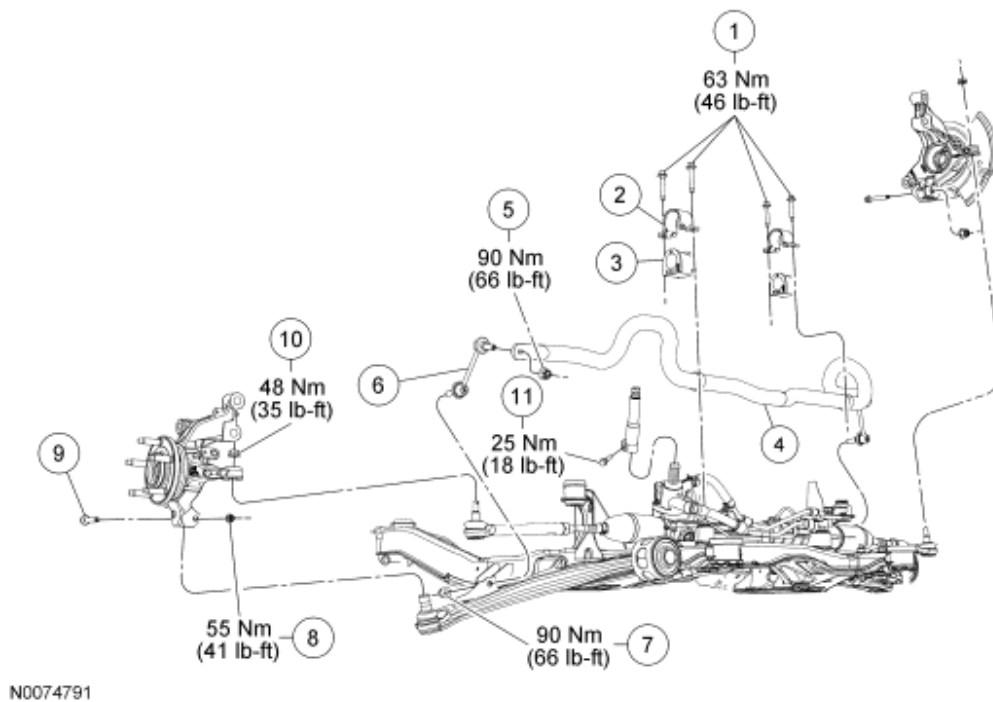


Fig. 11: Replacing Bar & Link With Torque Specifications (1 Of 4)
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	W712802	Stabilizer bar bracket bolts (4 required)
2	5486	Stabilizer bar bracket (2 required)
3	5484	Stabilizer bar bushing (2 required)
4	5494	Stabilizer bar
5	W520214	Stabilizer bar link upper nut (2 required)
6	3B438	Stabilizer bar link (2 required)
7	W520214	Stabilizer bar link lower nut (2 required)
8	W712481	Lower ball joint bolt
9	W520213	Lower ball joint nut (2 required)
10	W711889	Outer tie-rod end nut (2 required)
11	-	Lower steering shaft coupler bolt

2008 Ford Edge SE

2008 SUSPENSION Front Suspension - Edge & MKX


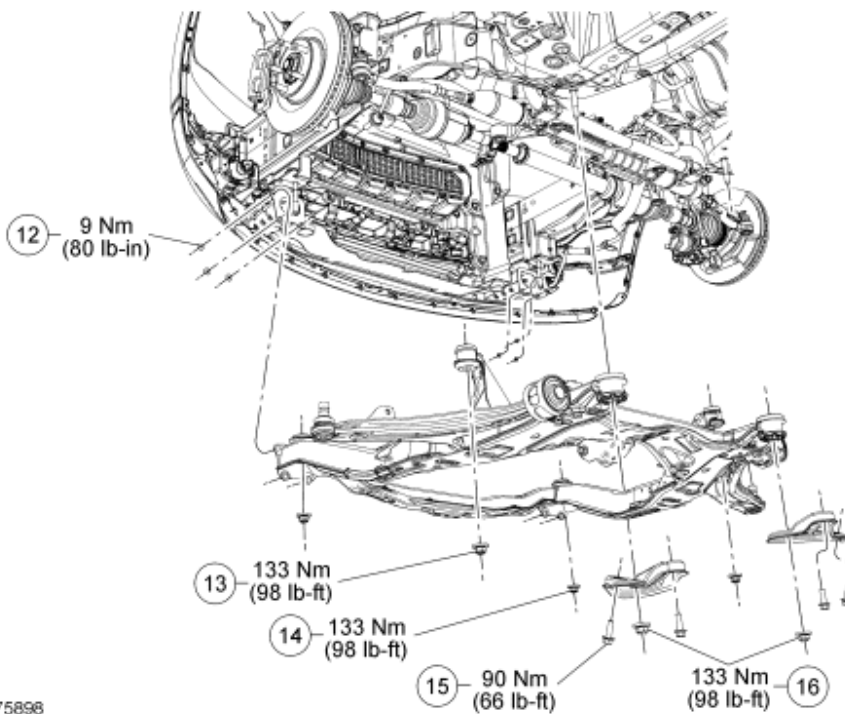


Fig. 12: Replacing Stabilizer Bar & Link With Torque Specifications (2 Of 4)
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
12	W708229	Front lower bumper-to-subframe nut (6 required)
13	W712858	Front subframe mounting nut (2 required)
14	W712858	Front subframe mounting nut (2 required)
15	W712858	Subframe support bracket bolt (4 required)
16	W712733	Subframe support bracket nut (2 required)

2008 Ford Edge SE

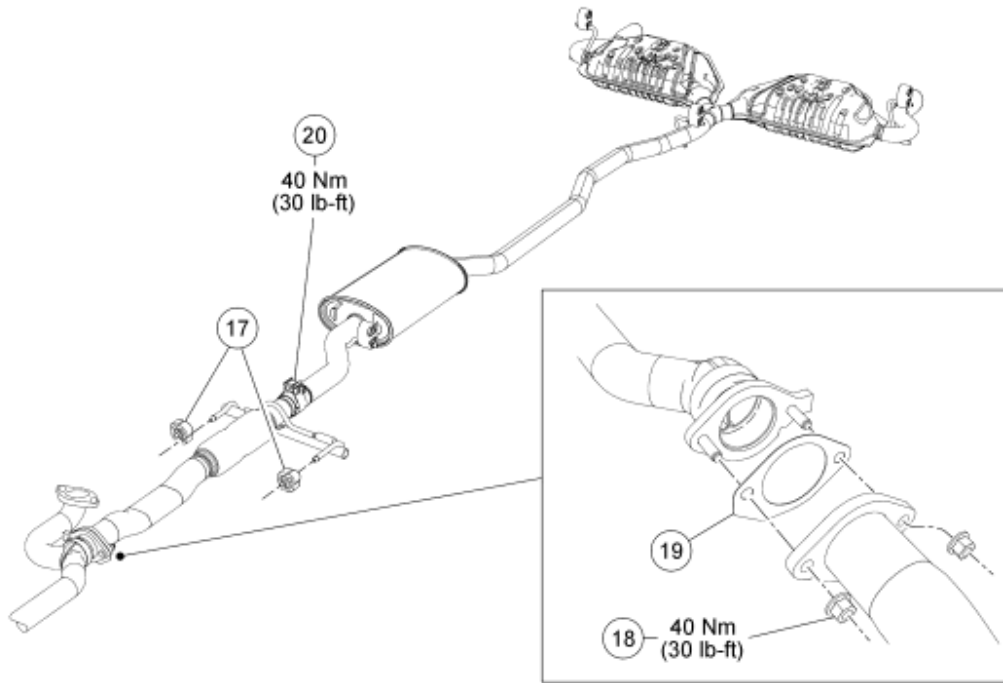2008 SUSPENSION Front Suspension - Edge & MKX




N0074686

Fig. 13: Replacing Stabilizer Bar & Link With Torque Specifications (3 Of 4)
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
17	5F262	Exhaust flexible pipe isolators (2 required)
18	W705443	Exhaust flexible pipe-to-exhaust Y-pipe nut (2 required)
19	9451	Gasket
20	9451	Y-pipe clamp

2008 Ford Edge SE

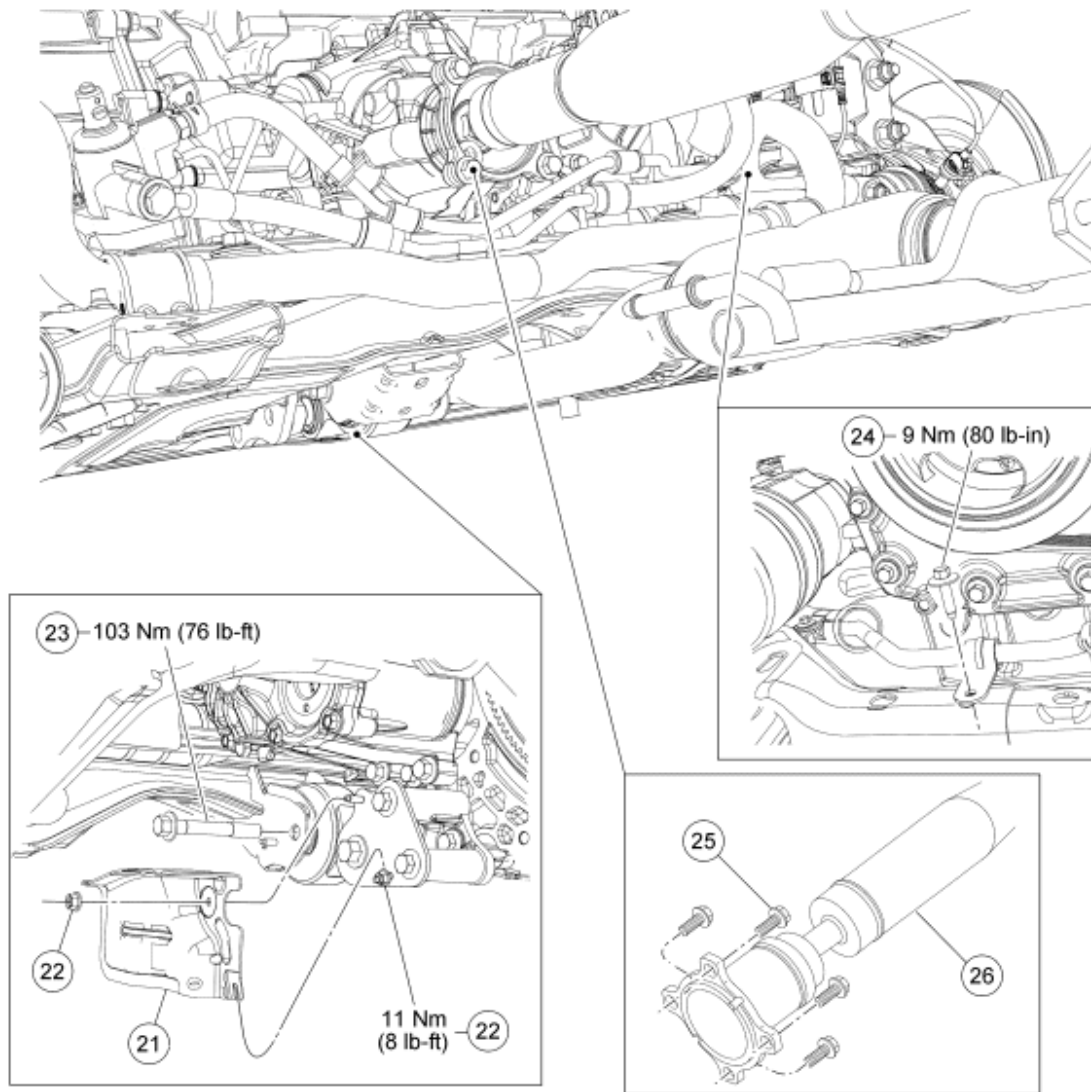2008 SUSPENSION Front Suspension - Edge & MKX



N0074682

Fig. 14: Replacing Stabilizer Bar & Link With Torque Specifications (4 Of 4)
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
21	6C038	Roll restrictor heat shield
22	W700101	Roll restrictor heat shield nuts (2 required)
23	W711843	Roll restrictor-to-subframe bolt
24	W711787	Power steering cooler hose bracket bolt
25	W711918	Driveshaft bolts (4 required)
26	4K357	Driveshaft assembly

REMOVAL AND INSTALLATION

CAUTION: Suspension fasteners are critical parts because they affect performance of vital components and systems and their failure may result in major service expense. New parts must be installed with the same part numbers or equivalent part, if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to make sure correct retention of these parts.

NOTE: If replacing only the stabilizer bar bushings, proceed to Step 23 of this procedure.

All vehicles

1. Remove the wheel and tire. For additional information, refer to **WHEELS AND TIRES** article.
2. Remove the lower steering shaft coupler bolt and disconnect the coupler from the steering gear.
 - To install, tighten to 25 Nm (18 lb-ft).
3. Index-mark the relationship of the front subframe to the underbody at the mounting locations.
4. Remove the 4 pin-type retainers and the RH fender splash shield.

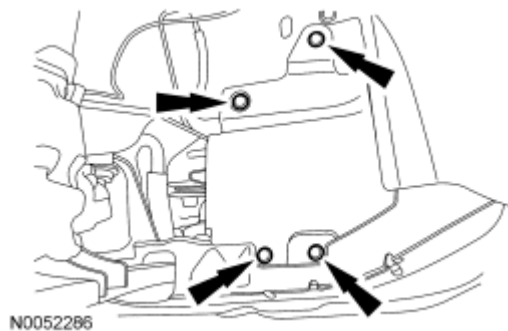


Fig. 15: Locating Pin-Type Retainers On RH Fender Splash Shield
Courtesy of FORD MOTOR CO.

5. Remove the 3 pushpin fasteners, the 7 screws and the front splash shield.

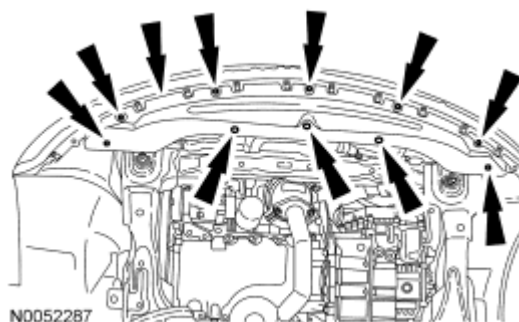


Fig. 16: Locating Push Pin Fasteners & Front Splash Shield Screws
Courtesy of FORD MOTOR CO.

6. Remove the 3 RH front lower bumper-to-subframe nuts.
 - To install, tighten to 9 Nm (80 lb-in).
7. Remove the 3 LH front lower bumper-to-subframe nuts and separate the lower bumper from the subframe.
 - To install, tighten to 9 Nm (80 lb-in).
8. Remove the power steering fluid cooler hose bracket bolt.
 - To install, tighten to 9 Nm (80 lb-in).
9. Loosen the Y-pipe clamp and disconnect the 2 exhaust hangers.
 - To install, tighten to 40 Nm (30 lb-ft).
10. Remove the 2 nuts and separate the flex pipe from the Y-pipe assembly.
 - To install, tighten to 40 Nm (30 lb-ft).

All wheel drive (AWD) vehicles

11. Index-mark the driveshaft, remove the 4 bolts and position the driveshaft aside.
 - To install, tighten to 70 Nm (52 lb-ft).

All vehicles

NOTE: Use the holding feature to prevent the ball stud from turning while removing or installing the stabilizer bar link nuts.

12. Remove the stabilizer link upper and lower nuts and the stabilizer links.
 - Discard the nuts.
 - To install, tighten to 90 Nm (66 lb-ft).
13. Remove the 2 outer tie-rod end nuts.
 - To install, tighten to 48 Nm (35 lb-ft).
14. Using the special tool, separate the outer tie-rod ends from the wheel knuckles.

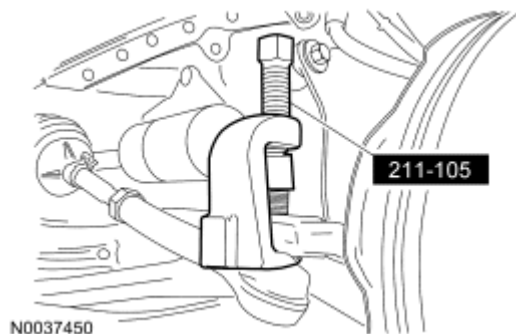


Fig. 17: Separating Tie-Rod Ends From Wheel Knuckles Using Special Tool (211-105)
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 SUSPENSION Front Suspension - Edge & MKX

NOTE: RH shown, LH similar.

15. Remove the 2 lower ball joint bolts and nuts and separate the lower ball joints from the wheel knuckles.
 - Discard the bolts and nuts.
 - To install, tighten to 55 Nm (41 lb-ft).
16. Remove the upper nut, loosen the lower nut and remove the engine roll restrictor heat shield.
 - To install, tighten to 11 Nm (8 lb-ft).
17. Remove the engine roll restrictor-to-subframe bolt.
 - To install, tighten to 103 Nm (76 lb-ft).
18. Using a suitable jack, support the subframe.
 - Support the subframe in the center rear area of the subframe.

NOTE: During installation, the subframe brackets are loosely installed with the support bracket bolts. Align the index marks made in Step 2, then tighten the rear subframe nuts prior to tightening the support bracket bolts.

19. Remove the 2 nuts, 4 bolts and the subframe support brackets.
 - Discard the nuts and bolts.
 - To install, tighten the nuts to 133 Nm (98 lb-ft).
 - To install, tighten the bolts to 90 Nm (66 lb-ft).
20. Remove and discard the 4 subframe nuts.
 - To install, tighten to 133 Nm (98 lb-ft).
21. Using the jack, lower the subframe approximately 76.2 mm (3 in).
22. Remove the 4 bolts, 2 stabilizer bar brackets and bushings.
 - Discard the bolts.
 - To install, tighten to 63 Nm (46 lb-ft).
23. Remove the stabilizer bar.
24. To install, reverse the removal procedure.
25. Check and, if necessary, align the front end. For additional information, refer to **SUSPENSION SYSTEM - GENERAL INFORMATION** article.

WHEEL KNUCKLE

Special Tools

Illustration	Tool Name	Tool Number
	Remover, Front Hub	205-D070 (D93P-1175-B) or equivalent

2008 Ford Edge SE


2008 SUSPENSION Front Suspension - Edge & MKX



ST1408-A

Remover, Tie-Rod End

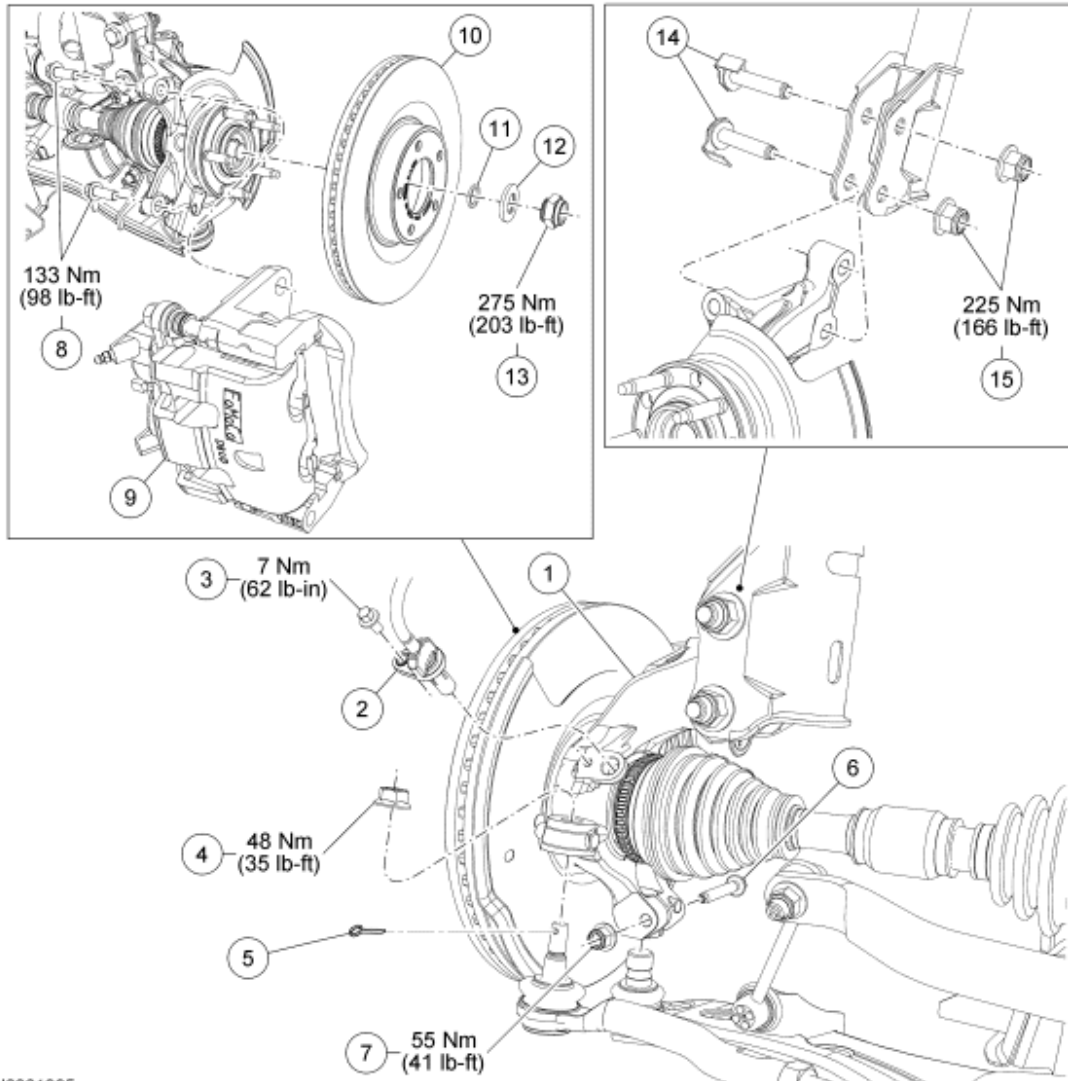211-105 (T85M-3395-A)



N0061395

Fig. 18: Exploded View Of Wheel Knuckle With Torque Specifications
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	3K171 LH/ 3K170 RH	Wheel knuckle
2	2C204 RH/ 2C205 LH	Wheel speed sensor
3	W500222	Wheel speed sensor bolt
4	W711889	Tie-rod end nut

2008 Ford Edge SE

2008 SUSPENSION Front Suspension - Edge & MKX

5	3K176	Tie-rod end cotter pin
6	W520216	Lower ball joint bolt
7	W712981	Lower ball joint nut
8	2248	Brake caliper anchor plate bolts (2 required)
9	-	Brake caliper and anchor plate assembly
10	1032	Brake disc
11	-	Halfshaft hub seal
12	-	Halfshaft hub washer
13	3N404	Halfshaft nut
14	W713856	Lower shock absorber flag bolts (2 required)
15	W520216	Lower shock absorber nuts (2 required)

REMOVAL

CAUTION: Suspension fasteners are critical parts because they affect performance of vital components and systems and their failure may result in major service expense. New parts must be installed with the same part numbers or equivalent part, if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to make sure correct retention of these parts.

1. Remove the wheel and tire. For additional information, refer to **WHEELS AND TIRES** article.

NOTE: Apply the brake to keep the halfshaft from rotating.

2. Remove the halfshaft nut, halfshaft hub seal and halfshaft washer.
 - Discard the nut, seal and washer.
3. Remove the wheel speed sensor bolt and position the wheel speed sensor aside.

CAUTION: Do not allow the caliper and anchor plate assembly to hang from the brake hose or damage to the hose can occur.

4. Remove the 2 bolts and position the caliper and anchor plate assembly aside.
 - Support the caliper and anchor plate assembly using mechanic's wire.
5. Remove the brake disc.
6. Using the special tool, separate the halfshaft from the wheel hub.

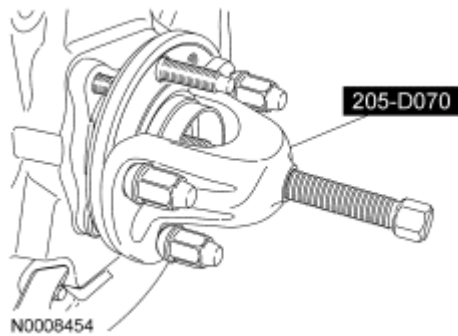


Fig. 19: Pressing Halfshaft From Wheel Bearing & Hub
Courtesy of FORD MOTOR CO.

7. Remove and discard the tie-rod end cotter pin and nut.

CAUTION: Do not use a hammer to separate the tie-rod end from the wheel knuckle or damage to the wheel knuckle can result.

8. Using the special tool, separate the tie-rod end from the wheel knuckle.

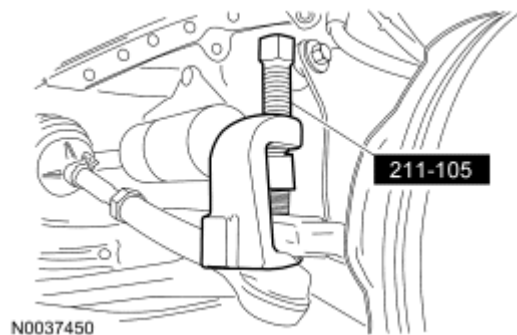


Fig. 20: Separating Tie-Rod Ends From Wheel Knuckles Using Special Tool (211-105)
Courtesy of FORD MOTOR CO.

9. Remove the shock absorber lower nuts and flag bolts.
 - Discard the nuts and flag bolts.
10. Remove the lower ball joint bolt, nut and the wheel knuckle.
 - Discard the bolt and nut.

INSTALLATION

1. Position the wheel knuckle and install the lower ball joint bolt and nut.
 - Tighten the nut to 55 Nm (41 lb-ft).
2. Install the shock absorber lower nuts and flag bolts.
 - Tighten to 225 Nm (166 lb-ft).
3. Position the tie-rod end and install the nut and cotter pin.

2008 Ford Edge SE

2008 SUSPENSION Front Suspension - Edge & MKX

- Tighten to 48 Nm (35 lb-ft).
4. Position the wheel speed sensor and install the bolt.
 - Tighten to 7 Nm (62 lb-in).
 5. Install the brake disc.
 6. Position the brake caliper and anchor plate assembly and install the 2 bolts.
 - Tighten to 133 Nm (98 lb-ft).
 7. Using a suitable installation tool, install the halfshaft into the wheel hub.

CAUTION: Do not tighten the halfshaft nut with the vehicle on the ground. The nut must be tightened to specification before the vehicle is lowered onto the wheels. Wheel bearing damage will occur if the wheel bearing is loaded with the weight of the vehicle applied.

NOTE: Apply the brake to keep the halfshaft from rotating.

8. Install the halfshaft hub seal, washer and nut.
 - Tighten to 275 Nm (203 lb-ft).
9. Install the wheel and tire. For additional information, refer to **WHEELS AND TIRES** article.
10. Check and, if necessary, align the front end. For additional information, refer to **SUSPENSION SYSTEM - GENERAL INFORMATION** article.

SHOCK ABSORBER AND SPRING ASSEMBLY

2008 Ford Edge SE

2008 SUSPENSION Front Suspension - Edge & MKX

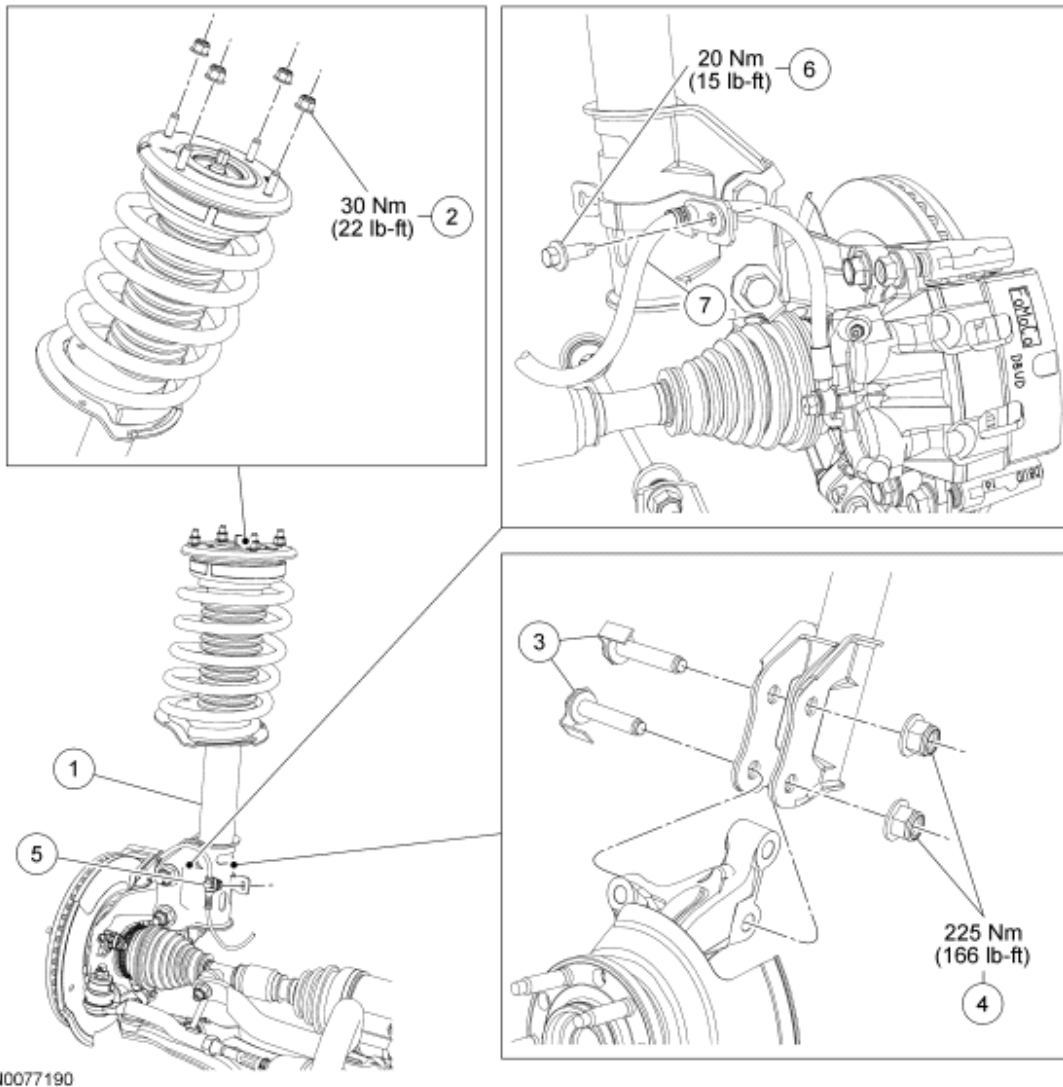


Fig. 21: Exploded View Of Shock Absorber & Spring Assembly With Torque Specifications
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	-	Shock absorber and spring assembly
2	W704790	Shock absorber upper mount nut (4 required)
3	W713856	Shock absorber lower flag bolts (2 required)
4	W520216	Shock absorber lower nuts (2 required)
5	-	Wheel speed sensor harness clip
6	W708004	Brake flexible hose bracket bolt
7	2078	Brake flexible hose

REMOVAL AND INSTALLATION

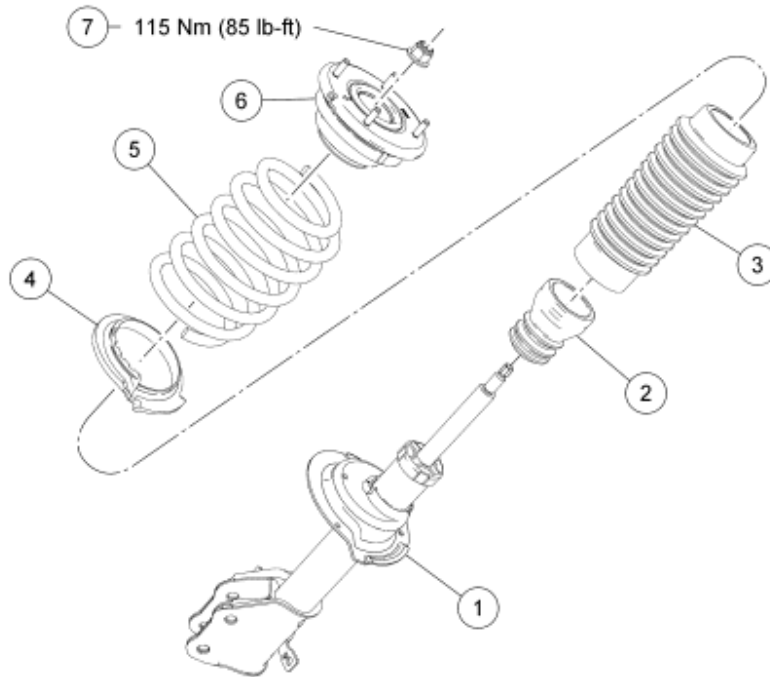
CAUTION: Suspension fasteners are critical parts because they affect performance of vital components and systems and their failure may result in major service expense. New parts must be installed with the same part numbers or equivalent part, if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to make sure correct retention of these parts.

1. Remove and discard the 4 shock absorber upper mount nuts.
 - To install, tighten to 30 Nm (22 lb-ft).
2. Remove the wheel and tire. For additional information, refer to **WHEELS AND TIRES** article.
3. Remove the brake flexible hose bracket bolt and disconnect the hose from the shock absorber.
 - To install, tighten to 20 Nm (15 lb-ft).
4. Disconnect the wheel speed sensor harness from the shock absorber bracket.
5. Remove the shock absorber lower nuts, flag bolts and the shock absorber and spring assembly.
 - Discard the nuts and flag bolts.
 - To install, tighten to 225 Nm (166 lb-ft).
6. To install, reverse the removal procedure.
7. Check and, if necessary, align the front end. For additional information, refer to **SUSPENSION SYSTEM - GENERAL INFORMATION** article.

DISASSEMBLY AND ASSEMBLY**SHOCK ABSORBER AND SPRING ASSEMBLY**

2008 Ford Edge SE

2008 SUSPENSION Front Suspension - Edge & MKX



N0058130

Fig. 22: Exploded View Of Shock Absorber & Spring Assembly With Torque Specification
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	18K001 LH/ 18045 RH	Shock absorber
2	18061	Jounce bumper
3	3K036	Dust boot
4	5A307	Spring lower seat
5	5310	Spring
6	18183	Spring upper mount and seat
7	W520215	Shock absorber rod nut

DISASSEMBLY

WARNING: Do not apply heat or flame to the shock absorber or strut tube. The shock absorber and strut tube are gas pressurized and could explode if heated. Failure to follow this instruction may result in serious personal injury.

WARNING: Keep all body parts clear of shock absorbers or strut rods. Shock absorbers or struts can extend unassisted. Failure to follow this instruction may result in serious personal injury.

WARNING: The coil spring is under extreme load. Care must be taken at all times when removing or installing a loaded spring. Failure to follow this

2008 Ford Edge SE

2008 SUSPENSION Front Suspension - Edge & MKX

instruction may result in serious personal injury.

WARNING: Always wear eye protection when servicing a vehicle. Failure to follow this instruction may result in serious personal injury.

CAUTION: The coil spring is coated with long-term corrosion protective paint. Do not damage the paint during component servicing or spring failure may result.

CAUTION: Suspension fasteners are critical parts because they affect performance of vital components and systems and their failure may result in major service expense. New parts must be installed with the same part numbers or equivalent part, if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to make sure correct retention of these parts.

1. Remove the shock absorber and spring assembly. For additional information, refer to **Shock Absorber and Spring Assembly**.

WARNING: Always wear eye protection when servicing a vehicle. Failure to follow this instruction may result in serious personal injury.

2. Position the shock and spring assembly in a suitable spring compressor.
3. Compress the spring enough to relieve the tension on the shock and spring assembly.

CAUTION: Do not use an impact wrench on the shock absorber rod nut or damage to the shock absorber may occur.

NOTE: Use the holding feature to prevent the shock absorber rod from turning while removing the nut.

4. While holding the shock absorber rod, remove and discard the rod nut.
5. Remove the shock absorber assembly and spring lower seat.
6. Remove the dust boot and jounce bumper.
7. Remove the shock absorber upper mount and spring upper seat.
8. Carefully release the tension on the spring compressor and remove the spring.

ASSEMBLY

1. Install the lower spring seat, jounce bumper and dust boot onto the shock absorber.
2. Position the shock and spring assembly in a suitable spring compressor.
3. Install the spring, shock absorber upper mount and spring upper seat.

4. Align the arrow on the upper mount perpendicular to the center of the shock absorber lower mount.

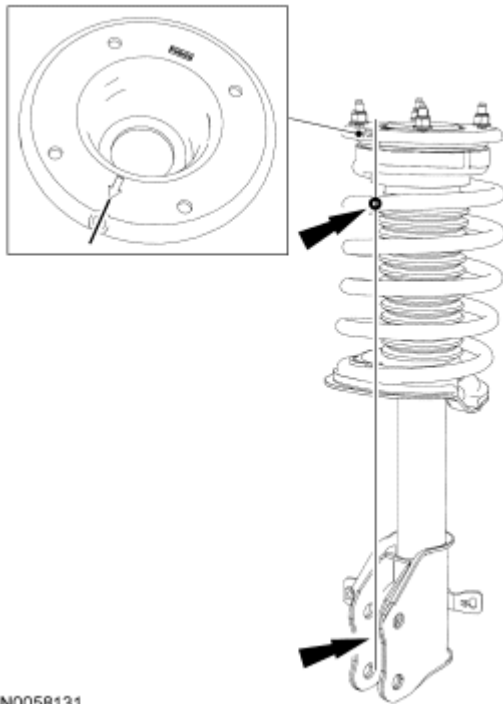


Fig. 23: Aligning Arrow On Upper Mount Perpendicular To Center Of Shock Absorber Lower Mount

Courtesy of FORD MOTOR CO.

5. Compress the spring enough to relieve the tension on the shock and spring assembly.
6. Position the end of spring within 0-10 mm (0-0.39 in) of the upper spring mount.

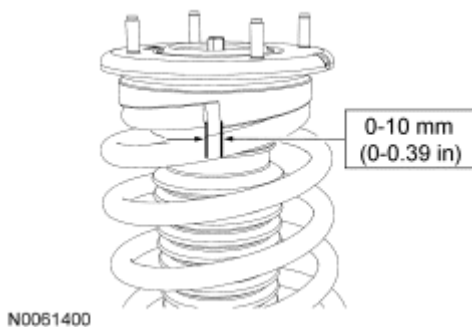


Fig. 24: Positioning End Of Spring With Specifications

Courtesy of FORD MOTOR CO.

NOTE: Before tightening the shock absorber rod nut, position the end of the spring within 0-10 mm (0-0.39 in) of the step on the lower spring mount.

NOTE: Use the holding feature to prevent the shock absorber rod from turning while installing the nut.

7. Install the shock absorber rod nut.
 - Tighten to 115 Nm (85 lb-ft).

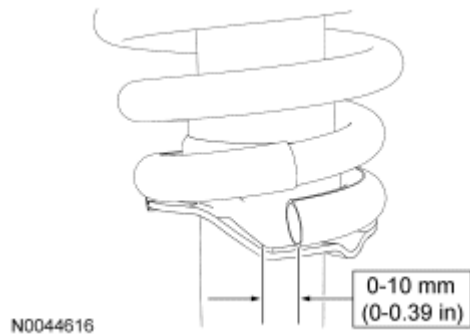


Fig. 25: Positioning End Of Spring Step With Specifications
Courtesy of FORD MOTOR CO.

8. Release the tension on the shock and spring assembly.
9. Install the shock absorber and spring assembly. For additional information, refer to **Shock Absorber and Spring Assembly**.