

2008 Ford Edge SE

2008 ENGINE Fuel Tank & Lines - Edge & MKX

2008 ENGINE

Fuel Tank & Lines - Edge & MKX

SPECIFICATIONS

MATERIAL SPECIFICATIONS

Item	Specification	Fill Capacity
Motorcraft SAE 5W-20 Premium Synthetic Blend Motor Oil XO-5W20-QSP (US); Motorcraft SAE 5W-20 Super Premium Motor Oil CXO-5W20-LSP12 (Canada); or equivalent	WSS-M2C930-A	-

GENERAL SPECIFICATIONS

Item	Specification
Fuel tank capacity (all wheel drive [AWD] vehicles)	76L (20 gal)
Fuel tank capacity (front wheel drive [FWD] vehicles)	72L (19 gal)

TORQUE SPECIFICATIONS

Description	Nm	lb-ft	lb-in
Evaporative emission (EVAP) shield bolts	9	-	80
Fuel tank bolts	25	18	-
Fuel tank bracket bolts	25	18	-
Fuel tank filler pipe bracket bolts	9	-	80
Fuel tank filler pipe flange screws	3	-	27
Fuel tank filler pipe hose clamps	4	-	35
Inertia fuel shutoff (IFS) switch bolts	2	-	18
Parking brake cable bracket bolts	23	17	-

DESCRIPTION AND OPERATION

FUEL TANK AND LINES

WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related

component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Before working on or disconnecting any of the fuel tubes or fuel system components, relieve the fuel system pressure to prevent accidental spraying of fuel. Fuel in the fuel system remains under high pressure, even when the engine is not running. Failure to follow this instruction may result in serious personal injury.

WARNING: When handling fuel, always observe fuel handling precautions and be prepared in the event of fuel spillage. Spilled fuel may be ignited by hot vehicle components or other ignition sources. Failure to follow these instructions may result in serious personal injury.

The fuel system consists of:

- an all wheel drive (AWD) saddle-type or front wheel drive (FWD) L-shaped fuel tank.
- fuel, vapor and brake tubes in an integrated bundle assembly.
- quick connect fuel and vapor tube couplings.
- a fuel tank filler pipe assembly, which cannot be modified in any way, that also contains a restrictor plate to permit only unleaded fuel to be pumped into the tank.
- a 1/4 turn-type fuel tank filler cap.
- an inertia fuel shutoff (IFS) switch.
- a mechanical returnless fuel system.
- a separate fuel level sensor assembly on AWD saddle-type fuel tank.
- a fuel pump (FP) module containing:
 - the electric FP module which provides pressurized fuel to the engine.
 - a serviceable fuel level sender.
 - a check valve which maintains system pressure after the pump is shut off.
 - a pressure relief for overpressure protection in the event of restricted airflow.
 - a fuel filter providing filtration to protect the fuel injectors from foreign material.

The FP module is controlled by the PCM. Electrical power to the FP module is provided through the IFS switch located under the LH rear quarter trim panel.


DIAGNOSTIC TESTS

FUEL TANK AND LINES

Refer to the **Introduction - Gasoline Engines** article.

REMOVAL AND INSTALLATION

FUEL TANK AND FILLER PIPE - EXPLODED VIEW

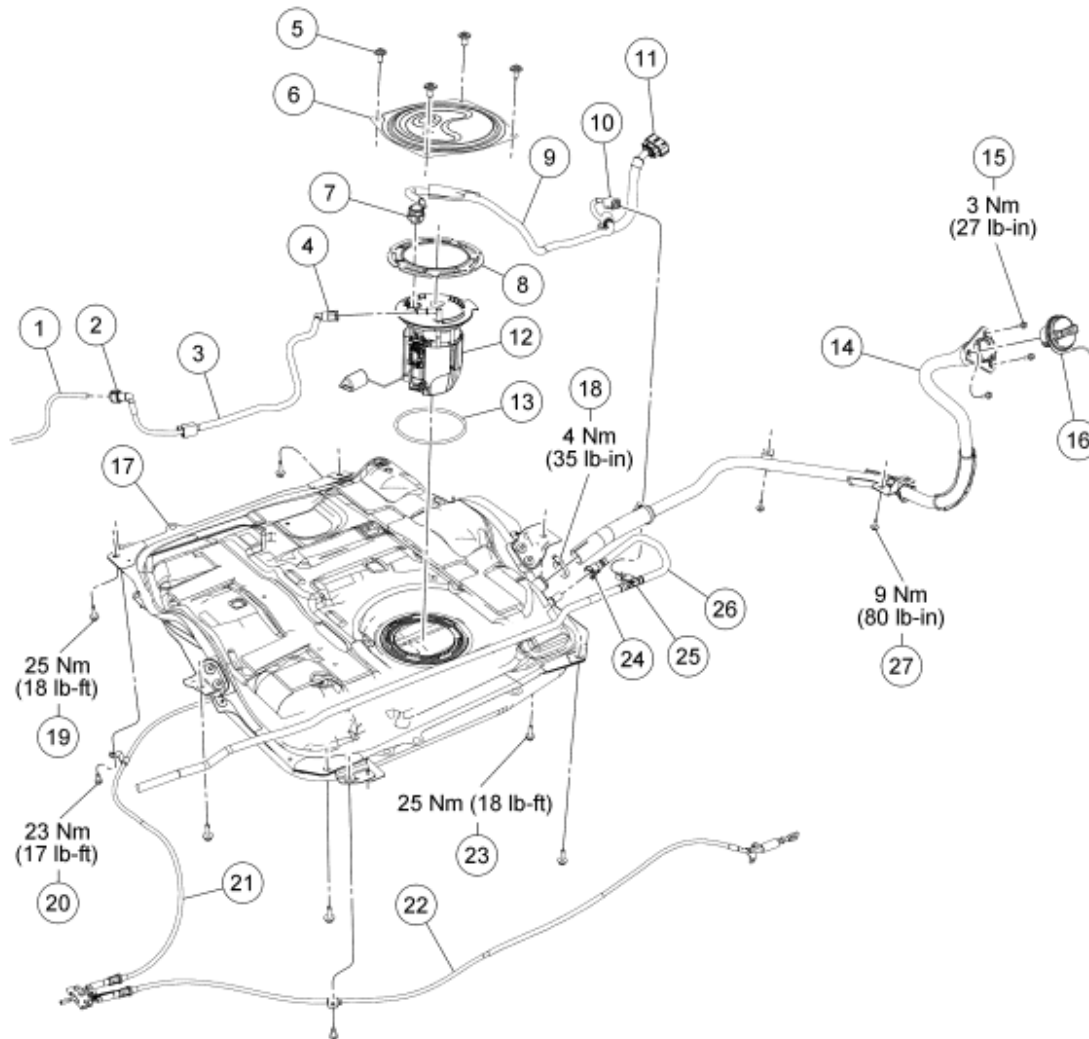

N0072404

Fig. 1: Exploded View Of Fuel Tank & Filler Pipe With Torque Specifications - Front Wheel Drive (FWD) Vehicle

Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	9S284	Fuel tube
2	-	Fuel tank jumper tube-to-fuel tube quick connect coupling (part of 9324A)
3	9324A	Fuel tank jumper tube
		Fuel tank jumper tube-to-fuel pump (FP)


2008 Ford Edge SE

2008 ENGINE Fuel Tank & Lines - Edge & MKX

4	-	module quick connect coupling (part of 9324A)
5	W705909	FP module access cover bolt (4 required)
6	9C335	FP module access cover
7	-	FP module electrical connector (part of 14407A)
8	9C385	FP module lock ring
9	14407A	Fuel tank wiring harness
10	-	Fuel tank pressure (FTP) sensor electrical connector (part of 14407A)
11	-	Fuel tank wiring harness electrical connector (part of 14407A)
12	9H307	FP module
13	9276A	FP module O-ring seal
14	9034A	Fuel tank filler pipe
15	W505253	Fuel tank filler pipe flange screw (3 required)
16	9030A	Fuel tank filler cap
17	9K007	Fuel tank
18	W525937	Fuel tank filler pipe hose clamp (2 required)
19	W713928	Fuel tank bolt (4 required)
20	W708004	Parking brake cable bracket bolt (2 required)
21	2A604	Rear, RH parking brake cable
22	2A823	Rear, LH parking brake cable
23	W713928	Fuel tank bracket bolt (2 required)
24	-	Fuel vapor tube assembly-to-fuel tank quick connect coupling (part of 9S284)
25	-	FTP sensor (part of 9S284)
26	9S284	Fuel vapor tube assembly
27	W710330	Fuel tank filler pipe bracket bolt (2 required)

2008 Ford Edge SE

2008 ENGINE Fuel Tank & Lines - Edge & MKX

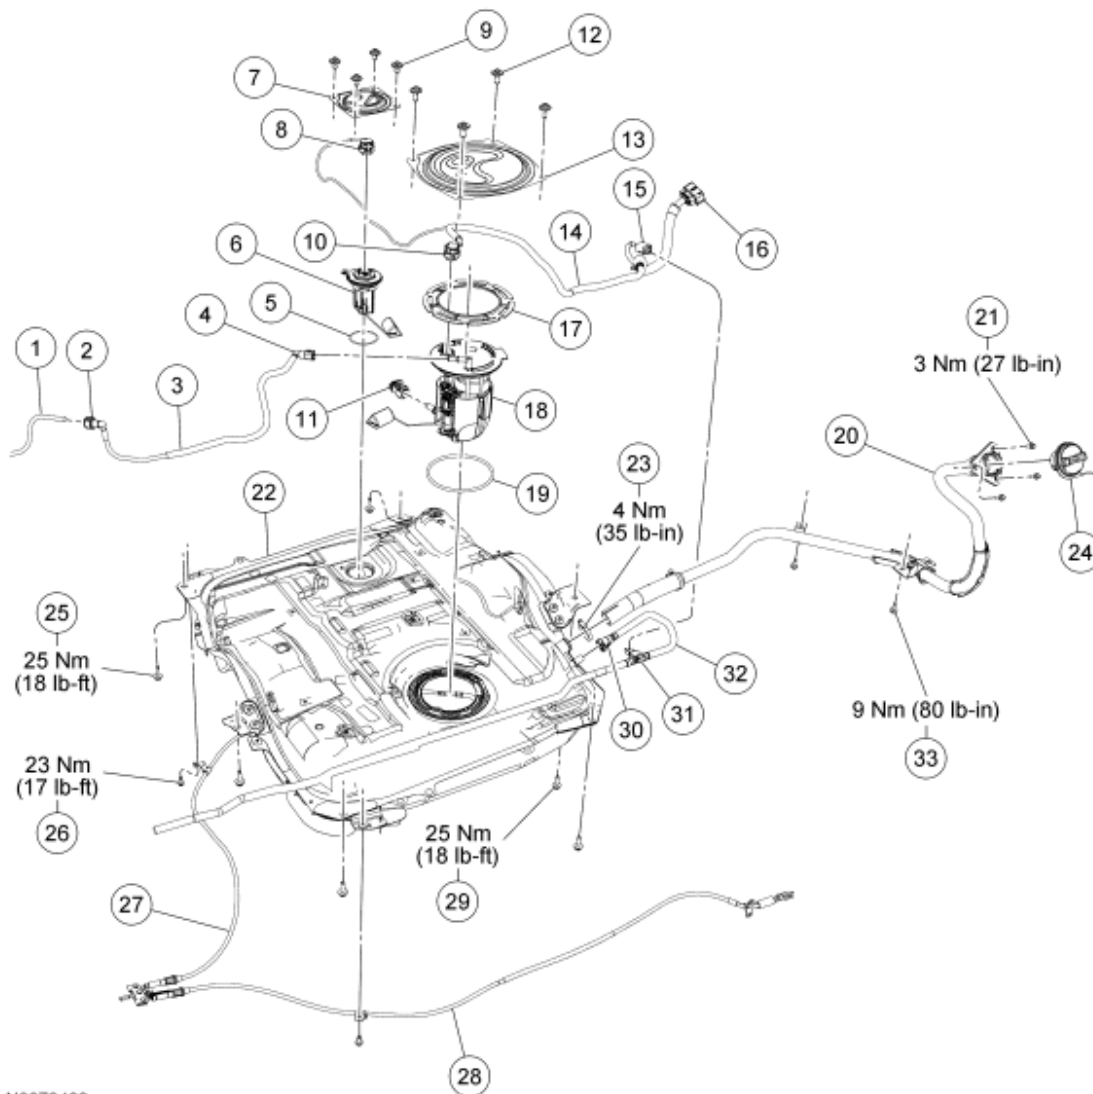

N0072403

Fig. 2: Exploded View Of Fuel Tank & Filler Pipe With Torque Specifications - All Wheel Drive (AWD) Vehicle

Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	9S284	Fuel tube
2	-	Fuel tank jumper tube-to-fuel tube quick connect coupling (part of 9324A)
3	9324A	Fuel tank jumper tube
4	-	Fuel tank jumper tube-to-fuel pump (FP) module quick connect coupling (part of 9324A)
5	-	Fuel level sensor O-ring seal (part of 9275B)


2008 Ford Edge SE

2008 ENGINE Fuel Tank & Lines - Edge & MKX

6	9275B	Fuel level sensor
7	9C335	Fuel level sensor access cover
8	-	Fuel level sensor electrical connector (part of 14407A)
9	W705909	Fuel level sensor access cover bolt (4 required)
10	-	FP module electrical connector (part of 14407A)
11	-	Internal fuel tube-to-FP module quick connect coupling (part of 9K007)
12	W705909	FP module access cover bolt (4 required)
13	9C355	FP module access cover
14	14407A	Fuel tank wiring harness
15	-	Fuel tank pressure (FTP) sensor electrical connector (part of 14407A)
16	-	Fuel tank wiring harness electrical connector (part of 14407A)
17	9C385	FP module lock ring
18	9H307	FP module
19	9276A	FP module O-ring seal
20	9034A	Fuel tank filler pipe
21	W505253	Fuel tank filler pipe flange screw (3 required)
22	9K007	Fuel tank
23	W525937	Fuel tank filler pipe hose clamp (2 required)
24	9030A	Fuel tank filler cap
25	W713928	Fuel tank bolt (4 required)
26	W708004	Parking brake cable bracket bolt (2 required)
27	2A604	Rear, RH parking brake cable
28	2A823	Rear, LH parking brake cable
29	W713928	Fuel tank bracket bolt (2 required)
30	-	Fuel vapor tube assembly-to-fuel tank quick connect coupling (part of 9S284)
31	-	FTP sensor (part of 9S284)
32	9S284	Fuel vapor tube assembly
33	W710330	Fuel tank filler pipe bracket bolt (2 required)

2008 Ford Edge SE

2008 ENGINE Fuel Tank & Lines - Edge & MKX

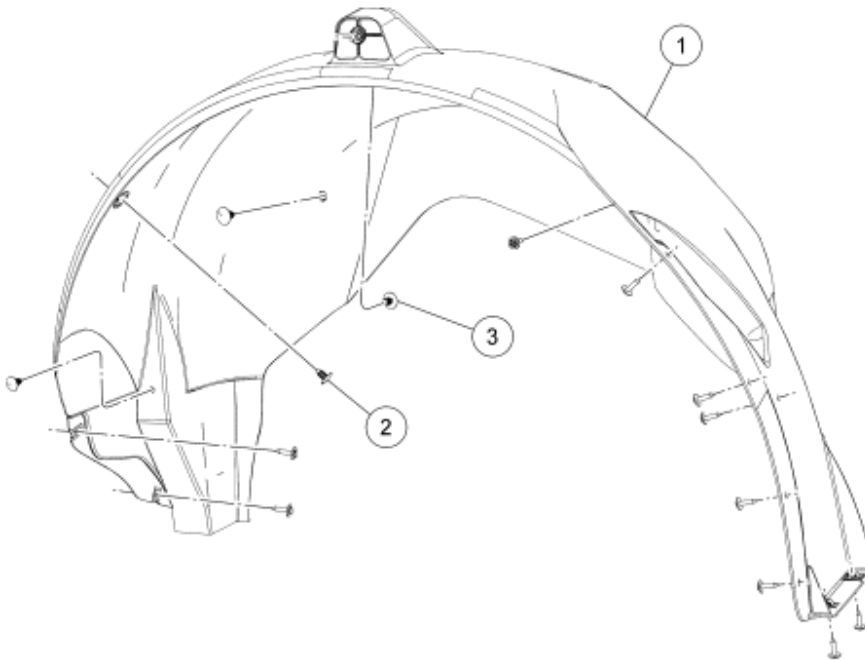

N0072560

Fig. 3: Exploded View Of Fuel Tank & Filler Pipe - All Vehicles
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	-	LH rear splash shield
2	W712196	Splash shield pin-type retainer (4 required)
3	W706805	Splash shield screw (10 required)

1. For additional information, refer to the appropriate procedure.

FUEL TANK

REMOVAL AND INSTALLATION

WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

2008 Ford Edge SE

2008 ENGINE Fuel Tank & Lines - Edge & MKX

WARNING: Before working on or disconnecting any of the fuel tubes or fuel system components, relieve the fuel system pressure to prevent accidental spraying of fuel. Fuel in the fuel system remains under high pressure, even when the engine is not running. Failure to follow this instruction may result in serious personal injury.

WARNING: Remove the fuel filler cap slowly. The fuel system may be under pressure. If the fuel filler cap is venting vapor or if you hear a hissing sound, wait until it stops before completely removing the fuel filler cap. Otherwise, fuel may spray out. Failure to follow these instructions may result in serious personal injury.

WARNING: When handling fuel, always observe fuel handling precautions and be prepared in the event of fuel spillage. Spilled fuel may be ignited by hot vehicle components or other ignition sources. Failure to follow these instructions may result in serious personal injury.

All vehicles

1. Drain the fuel tank. For additional information, refer to **FUEL SYSTEM - GENERAL INFORMATION** article.

All wheel drive (AWD) vehicles

2. Remove the muffler and tailpipe. For additional information, refer to **EXHAUST SYSTEM** article.
3. Remove the driveshaft. For additional information, refer to **DRIVESHAFT** article.

All vehicles

4. Install a suitable lifting device under the fuel tank.
5. Disconnect the fuel tank wiring harness electrical connector.
6. Disconnect the fuel tank pressure (FTP) sensor electrical connector.
7. Disconnect the fuel vapor tube assembly-to-fuel tank quick connect coupling. For additional information, refer to **FUEL SYSTEM - GENERAL INFORMATION** article.
8. Release the clamp and disconnect the fuel tank filler pipe hose from the fuel tank.
 - To install, tighten to 4 Nm (35 lb-in).
9. Disconnect the fuel tank jumper tube-to-fuel tube quick connect coupling. For additional information, refer to **FUEL SYSTEM - GENERAL INFORMATION** article.
10. Remove the 2 parking brake cable bracket bolts and position cables aside.
 - To install, tighten to 23 Nm (17 lb-ft).

CAUTION: Remove all bolts prior to lowering the fuel tank. Fuel tank damage can occur if all of the bolts are not removed.

2008 Ford Edge SE

2008 ENGINE Fuel Tank & Lines - Edge & MKX

11. Remove the 2 fuel tank bracket bolts and the 4 fuel tank bolts.
 - To install, tighten to 25 Nm (18 lb-ft).

NOTE: All wheel drive (AWD) vehicles require the fuel tank to be positioned forward, past the rear differential unit (RDU), then lowered.

12. Completely lower and remove the fuel tank.
13. To install, reverse the removal procedure.

FUEL TANK FILLER PIPE

Special Tools

Illustration	Tool Name	Tool Number
 ST1134A	Fuel Storage Tanker	164-R3202 or equivalent

REMOVAL AND INSTALLATION

WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Remove the fuel filler cap slowly. The fuel system may be under pressure. If the fuel filler cap is venting vapor or if you hear a hissing sound, wait until it stops before completely removing the fuel filler cap. Otherwise, fuel may spray out. Failure to follow these instructions may result in serious personal injury.

WARNING: When handling fuel, always observe fuel handling precautions and be prepared in the event of fuel spillage. Spilled fuel may be ignited by hot vehicle components or other ignition sources. Failure to follow these instructions may result in serious personal injury.

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to **JACKING AND LIFTING** article.
2. Disconnect the battery ground cable. For additional information, refer to **BATTERY, MOUNTING AND CABLES** article.
3. Release the fuel tank filler cap and position aside.
4. Insert a suitable fuel drain tube into the fuel tank filler pipe until it enters the fuel tank.

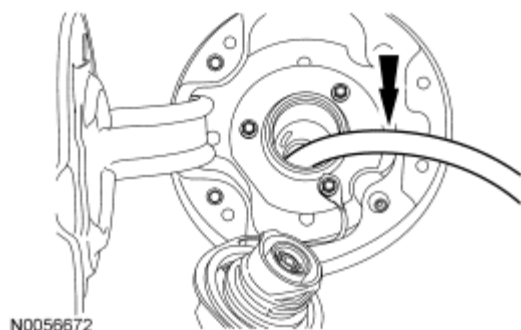


Fig. 4: Inserting Suitable Fuel Drain Tube Into Fuel Tank Filler Pipe
Courtesy of FORD MOTOR CO.

NOTE: If the fuel tank is completely full, this step will lower the fuel level below the fuel tank inlet.

5. Attach the fuel storage tanker to the fuel drain tube and drain approximately 1/8 of the fuel from the tank.
6. Remove the 3 fuel tank filler pipe flange retaining screws.
 - To install, tighten to 3 Nm (27 lb-in).
7. Remove the LH rear wheel and tire. For additional information, refer to **WHEELS AND TIRES** article.
8. Remove the 10 screws, 4 pin-type retainers and the LH rear splash shield.
9. Release the clamp and disconnect the fuel tank filler pipe from the fuel tank.
 - To install, tighten to 4 Nm (35 lb-in).
10. Remove the 2 fuel tank filler pipe bracket bolts.
 - To install, tighten to 9 Nm (80 lb-in).
11. Remove the fuel tank filler pipe from the vehicle.
12. To install, reverse the removal procedure.

FUEL PUMP MODULE

Special Tools

Illustration	Tool Name	Tool Number
	Fuel Storage Tanker	164-R3202 or equivalent

2008 Ford Edge SE
2008 ENGINE Fuel Tank & Lines - Edge & MKX

 ST1134A		
 ST2803-A	Wrench, Fuel Tank Sender Unit	310-123

Material

Item	Specification
Motorcraft SAE 5W-20 Premium Synthetic Blend Motor Oil XO-5W20-QSP (US); Motorcraft SAE 5W-20 Super Premium Motor Oil CXO-5W20-LSP12 (Canada); or equivalent	WSS-M2C930-A

REMOVAL AND INSTALLATION

WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Before working on or disconnecting any of the fuel tubes or fuel system components, relieve the fuel system pressure to prevent accidental spraying of fuel. Fuel in the fuel system remains under high pressure, even when the engine is not running. Failure to follow this instruction may result in serious personal injury.

NOTE: The fuel pump (FP) module has a serviceable fuel level sender. For additional information, refer to Fuel Level Sender.

All vehicles

1. Release the fuel system pressure. For additional information, refer to **FUEL SYSTEM - GENERAL**

INFORMATION article.

2. Disconnect the battery ground cable. For additional information, refer to **BATTERY, MOUNTING AND CABLES** article.
3. Release the fuel tank filler cap and position aside.
4. Insert a suitable fuel drain tube into the fuel tank filler pipe until it enters the fuel tank.

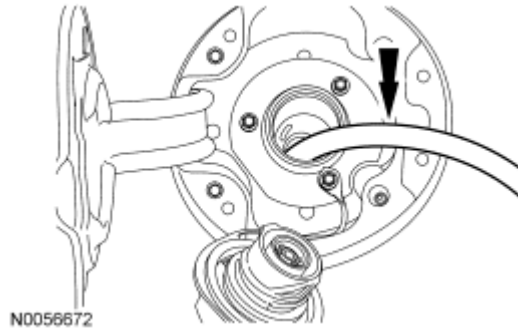


Fig. 5: Inserting Suitable Fuel Drain Tube Into Fuel Tank Filler Pipe
Courtesy of FORD MOTOR CO.

NOTE: If the fuel tank is completely full, this step will lower the fuel level below the FP module mounting flange.

5. Attach the fuel storage tanker to the fuel drain tube and drain approximately 1/8 of the fuel from the tank.
6. Remove the rear seat. For additional information, refer to **SEATING** article.
7. Remove the 4 bolts and the FP module access cover.

NOTE: Clean the FP module connection, coupling, flange surface and the immediate surrounding area of any dirt or foreign material.

8. Disconnect the FP module electrical connector.
9. Disconnect the fuel tank jumper tube-to-FP module quick connect coupling. For additional information, refer to **FUEL SYSTEM - GENERAL INFORMATION** article.

NOTE: Place absorbent pads on the floor pan in the immediate area in case of fuel spills. Carefully remove the FP module from the vehicle to avoid fuel spillage inside the vehicle.

10. Using the special tool, remove the FP module lock ring.

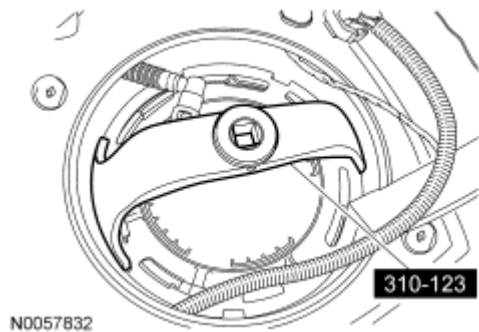


Fig. 6: Removing FP Module Lock Ring Using Special Tool (310-123)
Courtesy of FORD MOTOR CO.

All wheel drive (AWD) vehicles

CAUTION: The fuel pump (FP) module must be handled carefully to avoid damage to the FP module and/or float arm.

11. Carefully lift the FP module out of the fuel tank enough to access and disconnect the internal fuel tube-to-FP module quick connect coupling. For additional information, refer to **FUEL SYSTEM - GENERAL INFORMATION** article.

All vehicles

NOTE: The FP module will have residual fuel remaining internally, drain into a suitable container.

12. Completely remove the FP module from the fuel tank.

NOTE: Inspect the mating surfaces of the FP module flange and the fuel tank O-ring seal contact surfaces. Do not polish or adjust the O-ring seal contact area of the fuel tank flange or the fuel tank. Install a new FP module or fuel tank if the O-ring seal contact area is bent, scratched or corroded.

NOTE: Make sure to install a new FP module O-ring seal. Install a new lock ring if it is bent, damaged or corroded.

NOTE: To install, apply clean engine oil to the O-ring seal.

13. Remove the FP module O-ring seal.

NOTE: Make sure the alignment tab on the FP module and the fuel tank meet before tightening the FP module lock ring.

2008 Ford Edge SE

2008 ENGINE Fuel Tank & Lines - Edge & MKX

14. To install, reverse the removal procedure.

FUEL LEVEL SENSOR

Special Tools

Illustration	Tool Name	Tool Number
 ST1134A	Fuel Storage Tanker	164-R3202 or equivalent

Material

Item	Specification
Motorcraft SAE 5W-20 Premium Synthetic Blend Motor Oil XO-5W20-QSP (US); Motorcraft SAE 5W-20 Super Premium Motor Oil CXO-5W20-LSP12 (Canada); or equivalent	WSS-M2C930-A

REMOVAL AND INSTALLATION

WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: When handling fuel, always observe fuel handling precautions and be prepared in the event of fuel spillage. Spilled fuel may be ignited by hot vehicle components or other ignition sources. Failure to follow these instructions may result in serious personal injury.

WARNING: When working on or near the evaporative emission (EVAP) system, disconnect the battery ground cable from the battery. The EVAP system contains fuel vapor and condensed fuel vapor, so an electrical spark may cause a fire or explosion. Failure to follow this instruction may result in serious personal injury.

1. Release the fuel system pressure. For additional information, refer to **FUEL SYSTEM - GENERAL INFORMATION** article.
2. Disconnect the battery ground cable. For additional information, refer to **BATTERY, MOUNTING AND CABLES** article.
3. Release the fuel tank filler cap and position aside.
4. Insert a suitable fuel drain tube into the fuel tank filler pipe until it enters the fuel tank.

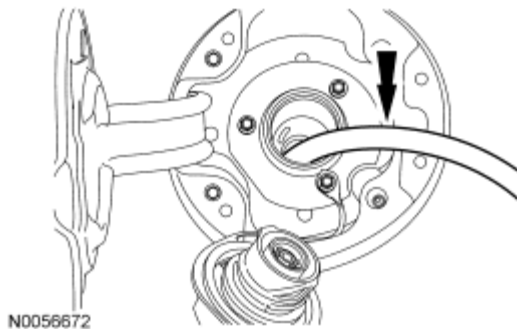


Fig. 7: Inserting Suitable Fuel Drain Tube Into Fuel Tank Filler Pipe
Courtesy of FORD MOTOR CO.

NOTE: If the fuel tank is completely full, this step will lower the fuel level below the fuel level sensor mounting flange.

5. Attach the fuel storage tanker to the fuel drain tube and drain approximately 1/8 of the fuel from the tank.
6. Remove the rear seat. For additional information, refer to **SEATING** article.
7. Remove the 4 bolts and the fuel level sensor access cover.

NOTE: Clean the fuel level sensor connection, flange surface and the immediate surrounding area of any dirt or foreign material.

8. Disconnect the fuel level sensor electrical connector.

NOTE: Place absorbent pads in the general work area in case of fuel spillage.

9. Release the lock tab, and using a suitable tool, rotate the fuel level sensor counterclockwise approximately 1/4 turn and lift upward.

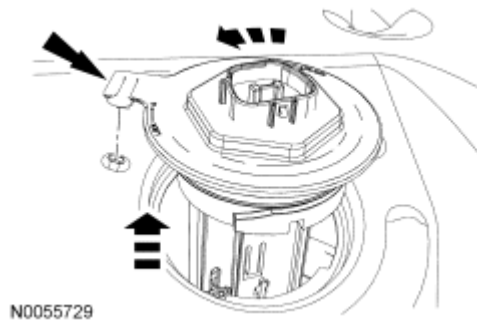


Fig. 8: Rotating Fuel Level Sensor Counterclockwise Approximately 1/4 Turn & Lift Upward
Courtesy of FORD MOTOR CO.

CAUTION: The fuel level sensor must be handled carefully to avoid damage to the float arm.

CAUTION: Carefully remove the fuel level sensor from the fuel tank to avoid fuel spillage inside the vehicle.

10. Carefully lift and remove the fuel level sensor from the fuel tank.

NOTE: Inspect the mating surfaces of the fuel level sensor flange and the fuel tank O-ring seal contact surfaces. Do not polish or adjust the O-ring seal contact area of the fuel tank flange or the fuel tank. Install a new fuel level sensor or fuel tank if the O-ring seal contact area is bent, scratched or corroded.

NOTE: To install, apply clean engine oil to the O-ring seal.


NOTE: Upon installation, correctly seat and press down firmly on the fuel level sensor, rotate it clockwise until the lock arrow on the sensor aligns with the notch on the tank. Torque should not exceed 15 Nm (11 lb-ft).

11. To install, reverse the removal procedure.

FUEL LEVEL SENDER

2008 Ford Edge SE

2008 ENGINE Fuel Tank & Lines - Edge & MKX

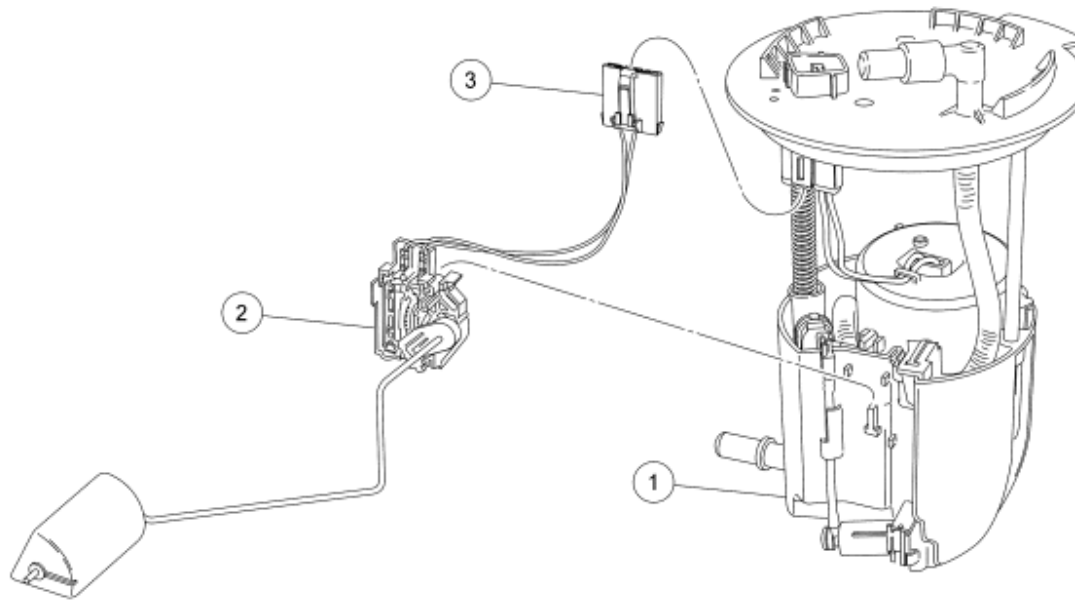

N0073706

Fig. 9: Exploded View Of Fuel Level Sender
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	9H307	Fuel pump (FP) module
2	9A299	Fuel level sender
3	-	Fuel level sender electrical connector (part of 9A299)


REMOVAL AND INSTALLATION

WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

1. Remove the fuel pump (FP) module. For additional information, refer to **Fuel Pump Module**.
2. Disconnect the fuel level sender electrical connector.

3. Depress the lock tab and slide the fuel level sender upwards and remove.

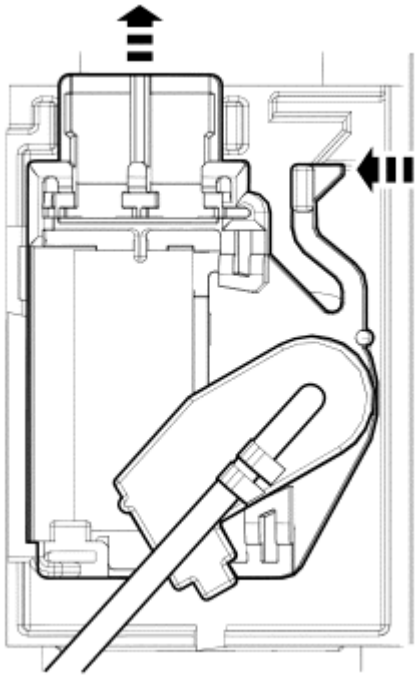

N0073592


Fig. 10: Depressing Lock Tab & Sliding Fuel Level Sender Upwards
Courtesy of FORD MOTOR CO.

4. To install, reverse the removal procedure.

FUEL LINES

2008 Ford Edge SE

2008 ENGINE Fuel Tank & Lines - Edge & MKX

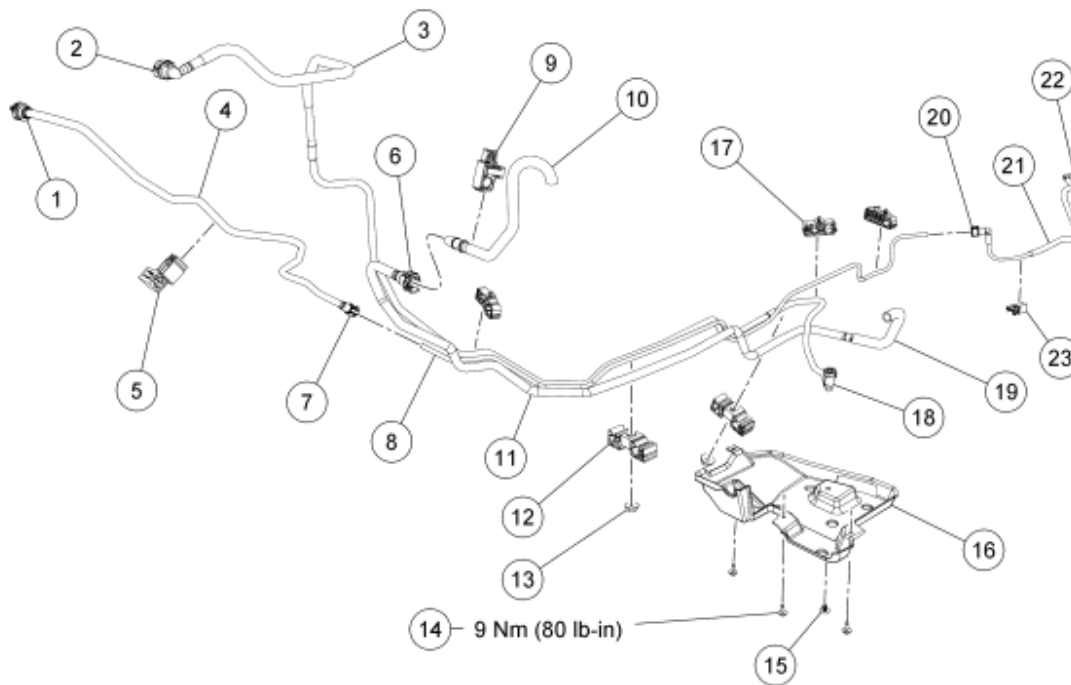

N0073529

Fig. 11: Exploded View Of Fuel Lines With Torque Specifications
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	-	Fuel supply tube-to-fuel rail quick connect coupling (part of 9J280)
2	-	Fuel vapor tube-to-evaporative emission (EVAP) canister purge valve quick connect coupling (part of 9S284)
3	9S284	Fuel vapor tube
4	9J280	Fuel supply tube
5	-	Fuel supply tube retainer clip (part of 9J280)
6	-	Fresh air tube-to-fuel vapor vent tube quick connect coupling (part of 9S284)
7	-	Fuel supply tube-to-fuel tube quick connect coupling (part of 9J280)
8	9S284	Fuel tube
9	-	Fuel vapor vent tube retainer clip (part of 9S327)
10	9S327	Fuel vapor vent tube
11	9S284	Fresh air tube
12	9F931	Bundle retainer clip (2 required)
13	W707137	Bundle retainer clip nut (2 required)

2008 Ford Edge SE

2008 ENGINE Fuel Tank & Lines - Edge & MKX

14	W710330	EVAP shield bolt (3 required)
15	W705681	EVAP shield pin-type retainer
16	9H296	EVAP shield
17	9F931	Bundle retainer clip (3 required)
18	-	Fuel vapor tube-to-EVAP canister quick connect coupling (part of 9S284)
19	9E857	Fuel vapor tube
20	-	Fuel tank jumper tube-to-fuel tube quick connect coupling (part of 9324)
21	9324	Fuel tank jumper tube
22	-	Fuel tank jumper tube-to-fuel pump (FP) module quick connect coupling (part of 9324)
23	9F931	Fuel tank jumper tube retainer clip

REMOVAL AND INSTALLATION

WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.


WARNING: Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Before working on or disconnecting any of the fuel tubes or fuel system components, relieve the fuel system pressure to prevent accidental spraying of fuel. Fuel in the fuel system remains under high pressure, even when the engine is not running. Failure to follow this instruction may result in serious personal injury.

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to **JACKING AND LIFTING** article.
2. Release the fuel system pressure. For additional information, refer to **FUEL SYSTEM - GENERAL INFORMATION** article.
3. Disconnect the fuel supply tube-to-fuel rail quick connect coupling. For additional information, refer to **FUEL SYSTEM - GENERAL INFORMATION** article.
4. Disconnect the fuel supply tube-to-fuel tube quick connect coupling. For additional information, refer to **FUEL SYSTEM - GENERAL INFORMATION** article.
5. Release the retainer clip and remove the fuel supply tube.

6. Remove the 3 bolts, pin-type retainer and the evaporative emission (EVAP) shield.
 - To install, tighten to 9 Nm (80 lb-in).
7. Disconnect the fresh air tube-to-fuel vapor vent tube quick connect coupling. For additional information, refer to **FUEL SYSTEM - GENERAL INFORMATION** article.
8. Release the retainer clip and remove the fuel vapor vent tube.
9. Disconnect the fuel vapor tube-to-EVAP canister purge valve quick connect coupling. For additional information, refer to **FUEL SYSTEM - GENERAL INFORMATION** article.
10. Remove the 2 nuts and the 2 bundle retainer clips.
 - To install, tighten to 9 Nm (80 lb-in).
11. Disconnect the fuel vapor tube-to-EVAP canister quick connect coupling. For additional information, refer to **FUEL SYSTEM - GENERAL INFORMATION** article.
12. Disconnect the fuel vapor tube from the dust separator.
13. Disconnect the fuel tank jumper tube-to-fuel tube quick connect coupling. For additional information, refer to **FUEL SYSTEM - GENERAL INFORMATION** article.
14. Release the 3 bundle retainer clips and remove the fuel tube, fuel vapor tube and the fresh air tube.
15. Disconnect the fuel tank jumper tube-to-fuel pump (FP) module quick connect coupling. For additional information, refer to **FUEL SYSTEM - GENERAL INFORMATION** article.
16. Release the retainer clip and remove the fuel tank jumper tube.
17. To install, reverse the removal procedure.

INERTIA FUEL SHUTOFF (IFS) SWITCH

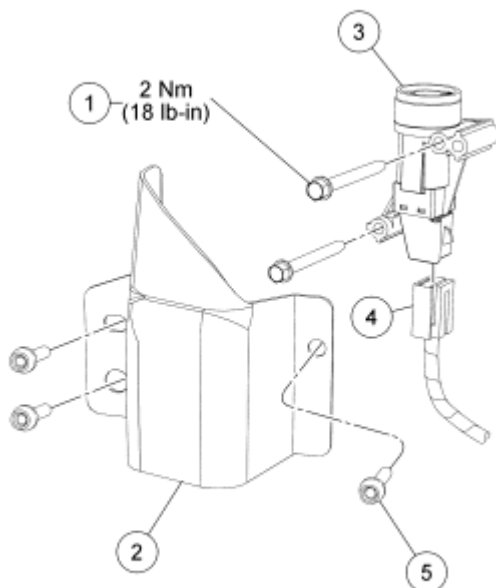

2008 Ford Edge SE

2008 ENGINE Fuel Tank & Lines - Edge & MKX

Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	W504169	Inertia fuel shutoff (IFS) switch bolt (2 required)
2	-	IFS switch shield
3	9341	IFS switch
4	14489A	IFS switch electrical connector
5	-	IFS switch shield rivet (3 required)

REMOVAL AND INSTALLATION

1. Remove the LH rear quarter trim panel. For additional information, refer to **INTERIOR TRIM AND ORNAMENTATION** article.
2. Remove the 3 rivets and the inertia fuel shutoff (IFS) switch shield.
3. Disconnect the IFS switch electrical connector.

CAUTION: Do not overtighten the fasteners or damage to the switch will occur.

4. Remove the 2 bolts and the IFS switch.
 - To install, tighten to 2 Nm (18 lb-in).
5. To install, reverse the removal procedure.