

2008 Ford Edge SE

2008 ENGINE PERFORMANCE Intake Air Distribution and Filtering - Edge & MKX

2008 ENGINE PERFORMANCE

Intake Air Distribution and Filtering - Edge & MKX

SPECIFICATIONS

TORQUE SPECIFICATIONS

Description	Nm	lb-in
Air cleaner bolt	9	80
Air cleaner outlet pipe-to-air cleaner cover clamp	5	44
Air cleaner outlet pipe-to-throttle body (TB) clamp	5	44

DESCRIPTION AND OPERATION

INTAKE AIR DISTRIBUTION AND FILTERING

The air intake system consists of the:

- air cleaner inlet.
- air cleaner element.
- mass air flow (MAF) sensor.
- air cleaner outlet pipe.

The air intake system:

- cleans intake air with a replaceable, dry-type air cleaner element.
- measures airflow and air temperature with the MAF sensor.

DIAGNOSTIC TESTS

INTAKE AIR DISTRIBUTION AND FILTERING


Refer to the [Introduction - Gasoline Engines](#) article.

REMOVAL AND INSTALLATION

INTAKE AIR SYSTEM COMPONENTS - EXPLODED VIEW

2008 Ford Edge SE

2008 ENGINE PERFORMANCE Intake Air Distribution and Filtering - Edge & MKX

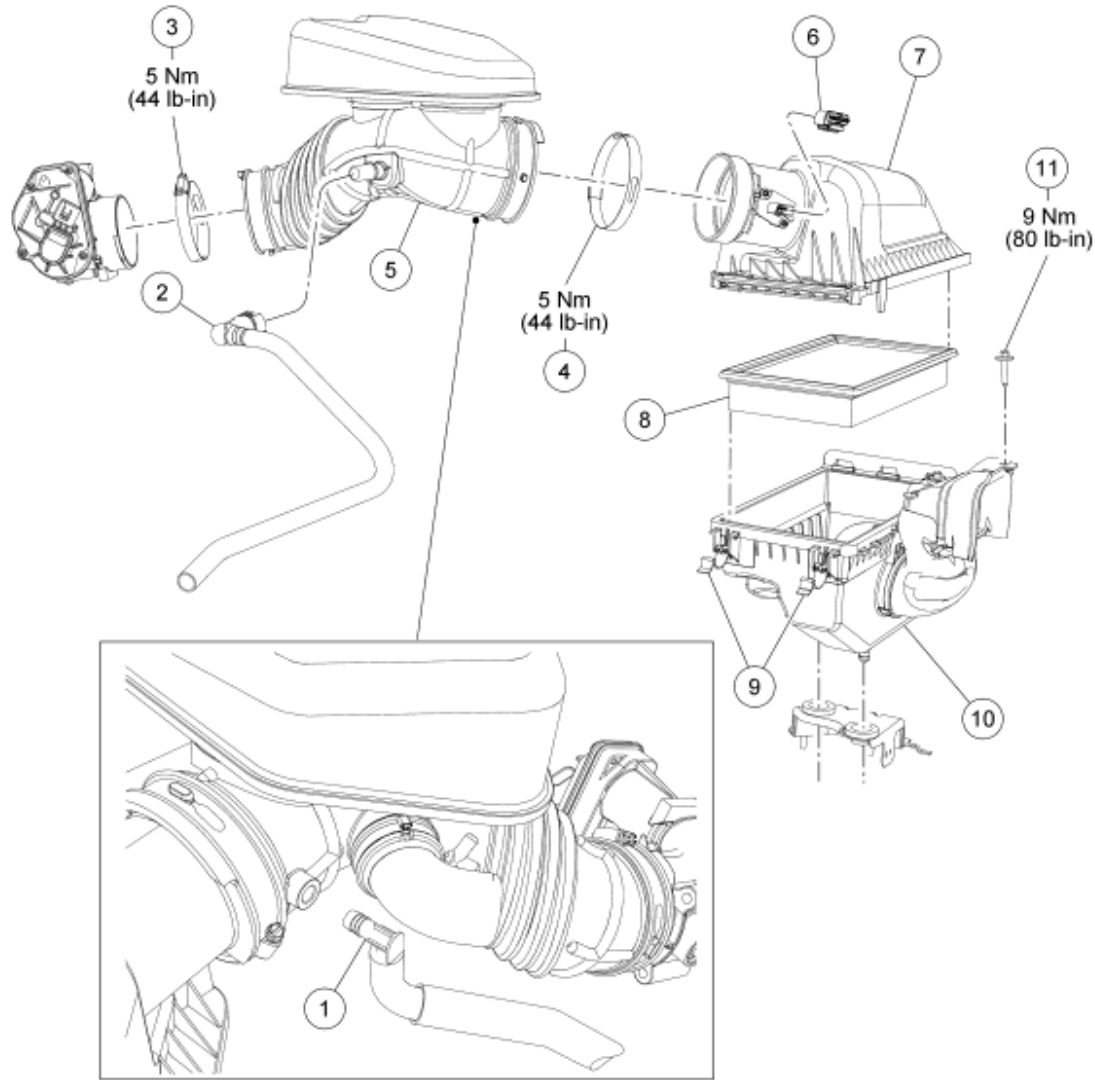

N0060552

Fig. 1: Exploded View Of Intake Air System Components With Torque Specifications
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	9Y432	Vacuum tube
2	6758	Crankcase vent tube
3	9C632	Air cleaner outlet pipe-to-throttle body (TB) clamp
4	9C632	Air cleaner outlet pipe-to-air cleaner cover clamp
5	9F805	Air cleaner outlet pipe
6	14A464	Mass air flow (MAF) sensor electrical connector
7	9661	Air cleaner cover

2008 Ford Edge SE

2008 ENGINE PERFORMANCE Intake Air Distribution and Filtering - Edge & MKX

8	9601	Air cleaner element
9	9628	Air cleaner tray assembly-to-air cleaner cover clamps
10	9A600	Air cleaner tray assembly
11	N606678	Air cleaner bolt

1. For additional information, refer to the procedures in this article.

AIR CLEANER

REMOVAL AND INSTALLATION

1. Disconnect the mass air flow (MAF) sensor electrical connector.
2. Loosen the clamp and disconnect the air cleaner outlet pipe from the air cleaner.
 - To install, tighten to 5 Nm (44 lb-in).
3. Remove the air cleaner bolt.
 - To install, tighten to 9 Nm (80 lb-in).

NOTE: No tools are needed to remove the air cleaner assembly. Removal should be carried out using hands only.

4. Separate the 2 air cleaner feet from the rubber grommets and remove the air cleaner assembly.

NOTE: Make sure that the 2 air cleaner feet are seated into the rubber grommets under the air cleaner assembly.

NOTE: The air cleaner outlet pipe should be securely sealed to prevent unmetered air from entering the engine.

5. To install, reverse the removal procedure.

AIR CLEANER OUTLET PIPE

REMOVAL AND INSTALLATION

1. Disconnect the crankcase vent tube and vacuum tube from the air cleaner outlet pipe.
2. Loosen the air cleaner outlet pipe-to-air cleaner cover clamp.
 - To install, tighten to 5 Nm (44 lb-in).
3. Loosen the air cleaner outlet pipe-to-throttle body clamp.
 - Remove the air cleaner outlet pipe.
 - To install, tighten to 5 Nm (44 lb-in).

2008 Ford Edge SE

2008 ENGINE PERFORMANCE Intake Air Distribution and Filtering - Edge & MKX

NOTE: **The air cleaner outlet pipe should be securely sealed to prevent unmetered air from entering the engine.**

4. To install, reverse the removal procedure.