

2008 Ford Edge SE
2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

2008 ACCESSORIES & BODY, CAB

Interior Lighting - Edge & MKX

DESCRIPTION AND OPERATION

INTERIOR LIGHTING

NOTE: **The smart junction box (SJB) is also known as the generic electronic module (GEM).**

The interior lighting system consists of the following components:

- SJB
- Liftgate/trunk module (LTM) (if equipped)
- Dimmer control switch
- Interior/map lamps
- Puddle lamps
- Cargo lamp
- Vanity mirror lamps
- Door ajar switches

The interior lighting system consists of 2 subsystems:

- Courtesy lamps
- Demand lamps

The courtesy lamps are controlled by the SJB. The SJB supplies voltage to the courtesy lamps. The courtesy lamp subsystem consists of the interior dome lamps, the overhead console lamps, the cargo lamp, and the puddle lamps (if equipped).

The SJB supplies voltage to the demand lamps. The demand lamps subsystem consists of the front map lamps, and the left and right vanity mirror lamps.

The SJB supplies power to the interior lighting system. The SJB and the LTM (if equipped) set DTCs if certain circuit failures exist with the interior lighting system.

DIAGNOSTIC TESTS


INTERIOR LIGHTING

SPECIAL TOOLS

Illustration	Tool Name	Tool Number

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

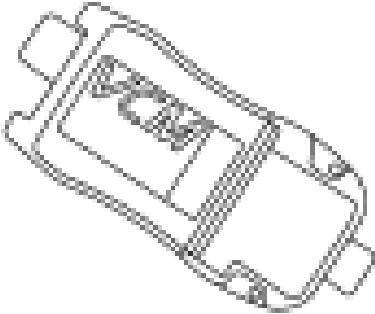 ST1137-A	73III Automotive Meter	105-R0057 or equivalent
 ST2834-A	Vehicle Communication Module (VCM) and Integrated Diagnostic System (IDS) software with appropriate hardware, or equivalent scan tool	-
 ST2574-A	Flex Probe Kit	105-R025C or equivalent

Principles of Operation

NOTE: The smart junction box (SJB) is also known as the generic electronic module (GEM).

The SJB supplies voltage to the interior lighting system. The interior lighting system illuminates the courtesy lamps to enhance visibility of the interior while a vehicle door is open or ajar, and the vehicle speed is less than 15 km/h (9 mph) or 5 km/h (3 mph) for puddle lamps. The SJB controls all interior lighting functions and timing by monitoring inputs from the door ajar switches, instrument panel dimmer switch and vehicle speed.

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

Interior Lighting Delay

The interior lighting delay feature provides temporary illumination of the courtesy lamps after the doors are opened and then closed. The interior lighting delay feature keeps the courtesy lamps on for a period of 25 seconds after all the doors are closed. If during the 25-second delay time, the SJB detects that the ignition has been turned out of OFF, or if the vehicle is locked using the remote keyless entry (RKE) transmitter or the keypad, the courtesy lamp illumination is discontinued.

Illuminated Entry

The illuminated entry requests the courtesy lamps to be illuminated (when the ignition is off) and either the RKE transmitter UNLOCK button is pressed, or the vehicle is unlocked using the keypad. The illuminated entry requests the courtesy lamps off after 25 seconds have elapsed, the ignition is switched out of off, the RKE transmitter LOCK button is pressed, or the vehicle is locked using the keypad or door lock cylinder.

Illuminated Exit

The illuminated exit requests the courtesy lamps to be illuminated for 25 seconds when all doors are closed and the ignition key is removed from the ignition lock cylinder. The illuminated exit requests the courtesy lamps to be deactivated when the ignition key is inserted into the ignition lock cylinder, 25 seconds have elapsed or a door or liftgate is opened.

Theater Lighting

The theater lighting option ramps-up the courtesy lamps over 0.7 second when courtesy lamp activation is requested. The theater lighting feature ramps-down the courtesy lamps over 1.7 seconds when interior lighting deactivation is requested by any feature other than the panic alarm or battery saver.

Interior Lamp Arbitrator

The SJB chooses between the interior lighting, interior mode, interior lighting delay, illuminated entry, illuminated exit and battery saver to determine which feature has precedence of activating and deactivating the interior lamps.

The features are prioritized as follows:

- Perimeter alarm/panic alarm
- Demand lighting
- Battery saver
- Interior lighting
- Interior light delay
- Illuminated entry
- Illuminated exit

Battery Saver

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

The SJB provides automatic shut-off of the demand lamps (cargo lamp, vanity lamps, map lamps and cargo lamp) and courtesy lamps after a time-out period in order to save battery voltage. A timer in the SJB is started when the ignition is turned to the OFF position, and all the doors, the liftgate and the liftgate glass are closed. When the time-out period for the lamps has elapsed, the voltage is automatically shut off to the lamps by the SJB. While the SJB has voltage disabled, if the ignition is turned to any position other than OFF, any door becomes ajar, or the UNLOCK button of the RKE transmitter is pressed, a valid keypad code is entered, an unlock request from the cylinder is received, or the dome lamp switch is turned on, the SJB restores voltage and starts the timer again.

NOTE: Time-out is 1 minute if the vehicle has less than 80 km (50 miles).

The battery saver time-outs are as follows:

- Courtesy lamps = 10 minutes
- Demand lamps = 10 minutes

Field-Effect Transistor (FET) Protection

The SJB utilizes a FET protective circuit strategy for many of its outputs (for example, the headlamp output circuit). Output loads (current level) are monitored for excessive current (typically short circuits) and are shut down (turns off the voltage or ground provided by the module) when a fault is detected. A continuous DTC is stored at that time of the fault. The circuit then resets after an ignition cycle or customer demand of the function (switching the component on, 30-minute battery saver being energized). When an excessive circuit load occurs several times, the module shuts down the output until a repair procedure is carried out. At the same time, the continuous DTC that was stored on the first failure cannot be cleared by a command to clear the continuous DTCs. The module does not allow this code to be cleared or the circuit restored to normal until a successful on-demand self-test proves that the fault has been repaired. After the on-demand self-test has successfully completed (no on-demand DTCs present), the continuous DTC clears and the circuit function returns.

Each circuit has 3 predefined levels of short circuit tolerance established in the module based on each circuits' capability. When the first or second level is reached, the continuous DTC associated with the circuit sets along with DTC B106E. These DTCs may be cleared using the Clear DTC operation on the scan tool as long as the fault itself has been corrected. If any of the circuits are shorted past the third level, then DTCs B106F and B1342 set along with the associated continuous DTC. This DTC cannot be cleared and a new module must be installed.

The SJB FET protected output circuits for the interior lighting system are for the puddle lamps and courtesy lamp output circuits.

Inspection and Verification

1. Verify the customer concern.
2. Visually inspect for obvious signs of mechanical or electrical damage.

VISUAL INSPECTION CHART

Mechanical	Electrical

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

• Courtesy lamps • Map lamps • Cargo lamp • Vanity lamps	• Smart junction box (SJB) fuse(s): ○ 9 (15A) ○ 10 (15A) ○ 25 (10A) • Wiring, terminals or connectors • Ajar switch(es) (integral to latch) • Courtesy lamp(s) • Map lamp(s) • Puddle lamp(s) • Cargo lamp • Vanity lamp(s) • Overhead console • Instrument panel dimmer switch • SJB
--	--

3. If an obvious cause for an observed or reported concern is found, correct the cause (if possible) before proceeding to the next step.

NOTE: **Make sure to use the latest scan tool release software.**

4. If the cause is not visually evident, connect the scan tool to the data link connector (DLC).

NOTE: **The vehicle communication module (VCM) LED prove-out confirms power and ground from the DLC are provided to the VCM.**

5. If the scan tool does not communicate with the VCM:
- Check the VCM connection to the vehicle.
 - Check the scan tool connection to the VCM.
 - Refer to **MODULE COMMUNICATIONS NETWORK** article, No Power To The Scan Tool, to diagnose no communication with the scan tool.
6. If the scan tool does not communicate with the vehicle:
- Verify the ignition key is in the ON position.
 - Verify the scan tool operation with a known good vehicle.
 - Refer to **MODULE COMMUNICATIONS NETWORK** article to diagnose no response from the PCM.
7. Carry out the network test.

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

- If the scan tool responds with no communication with the SJB, refer to **MODULE COMMUNICATIONS NETWORK** article.
 - If the network test passes, retrieve and record the continuous memory DTCs.
8. Clear the continuous DTCs and carry out the self-test diagnostics for the SJB and the liftgate/trunk module (LTM) (if equipped).
 9. If the DTCs retrieved are related to the concern, go to DTC Charts. For all other DTCs, refer to **MULTIFUNCTION ELECTRONIC MODULES** article.
 10. If no DTCs related to the concern are retrieved, go to **SYMPTOM CHART**.

DTC Charts

SMART JUNCTION BOX (SJB) DTC CHART

DTC	Description	Action
B1320	Driver Door Ajar Circuit Open	Go to Pinpoint Test C .
B1328	Passenger Door Ajar Circuit Open	Go to Pinpoint Test C .
B1336	Door Ajar RR Circuit Open	Go to Pinpoint Test C .
B1572	Door Ajar LR Circuit Open	Go to Pinpoint Test C .
B1688	Lamp Dome Input Circuit Short to Ground	Go to Pinpoint Test C .
B2077	Liftgate Ajar Sw Circuit Failure	Go to Pinpoint Test C .
B2A35	Interior Lighting Output Circuit Open	If the courtesy lamps are inoperative, go to Pinpoint Test A . If the courtesy lamps stay on continuously, go to Pinpoint Test C .
B2A36	Interior Lighting Output Circuit Short to Ground	Go to Pinpoint Test A .
B2A39	Puddle Lamp Output Circuit Open	If the puddle lamps are inoperative, go to Pinpoint Test I . If the puddle lamps are always on, go to Pinpoint Test J .
B2A3A	Puddle Lamp Output Circuit Short to Ground	Go to Pinpoint Test I .
All other DTCs	-	REFER to <u>MULTIFUNCTION ELECTRONIC MODULES</u> article.

LIFTGATE/TRUNK MODULE (LTM) DTC CHART

DTC	Description	Action
B2718	Liftgate/Decklid Ajar Output Short to Battery	Go to Pinpoint Test C .
B2721	Liftgate/Decklid Ajar Output Short to	If interior lamps are inoperative, go to Pinpoint Test L .

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

	Ground or Open	If interior lamps are always on, go to Pinpoint Test C .
All other DTCs -		REFER to <u>MULTIFUNCTION ELECTRONIC MODULES</u> article.

Symptom Chart

SYMPTOM CHART

Condition	Possible Sources	Action
No communication with the smart junction box (SJB)	- Wiring, terminals or connectors - SJB	REFER to <u>MODULE COMMUNICATIONS NETWORK</u> article.
No communication with the liftgate/trunk module (LTM)	- Wiring, terminals or connectors - LTM	REFER to <u>MODULE COMMUNICATIONS NETWORK</u> article.
The courtesy lamps flash on and off	The SJB is not configured correctly.	CONFIGURE the SJB. REFER to <u>MODULE CONFIGURATION</u> article. TEST the system for normal operation.
The courtesy lamps are inoperative	- Fuse - Wiring, terminals or connectors - SJB	Go to Pinpoint Test A .
An individual courtesy lamp is inoperative	- Wiring, terminals or connectors - Interior lamp	Go to Pinpoint Test B .
The courtesy lamps stay on continuously	- Wiring, terminals or connectors - Door ajar switch - Liftgate ajar switch - Instrument panel dimmer switch - LTM - SJB	Go to Pinpoint Test C .
The courtesy lamps do not turn on with one door open	- Wiring, terminals or connectors - Door ajar switch - SJB	Go to Pinpoint Test D .
The demand lamps are	- Fuse - Wiring, terminals	

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

inoperative	or connectors • SJB	• Go to Pinpoint Test E .
• An individual demand lamp is inoperative	• Wiring, terminals or connectors • Interior lamp	• Go to Pinpoint Test F .
• The illuminated entry is inoperative when using the remote keyless entry (RKE) transmitter	• RKE system • SJB	• Go to Pinpoint Test G .
• The battery saver does not deactivate after time-out	• Wiring, terminals or connectors • SJB	• Go to Pinpoint Test H .
• The puddle lamp(s) are inoperative	• Fuse • Wiring, terminals or connectors • Exterior mirror • SJB	• Go to Pinpoint Test I .
• The puddle lamps stay on continuously	• Wiring, terminals or connectors • SJB	• Go to Pinpoint Test J .
• The courtesy lamps are inoperative - from the instrument panel dimmer switch	• Wiring, terminals or connectors • Instrument panel dimmer switch • SJB	• Go to Pinpoint Test K .
• The courtesy lamps do not turn on with the liftgate open	• Wiring, terminals or connectors • Liftgate ajar switch • LTM • SJB	• Go to Pinpoint Test L .

Pinpoint Tests

Pinpoint Test A: The Courtesy Lamps Are Inoperative

Refer to appropriate SYSTEM WIRING DIAGRAMS article for Interior Lamps schematic and connector information.

Normal Operation

Power is supplied to the courtesy lamps through the smart junction box (SJB) fuse 9 (15A), and SJB fuse 25

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

(10A) for the demand lamps. When any door is opened, the ajar switch opens, signaling the SJB. The SJB monitors the ajar circuits, and based on the ajar status, the SJB supplies voltage to the courtesy lamps on circuit VLN33 (GY/VT). Ground is supplied through circuit GD133 (BK) for the courtesy lamps, and circuit GD126 (BK/WH) for the cargo lamp.

- DTC B2A35 (Interior Lighting Output Circuit Open) - is an on-demand DTC that sets when the SJB detects an open from the interior lighting circuit.
- DTC B2A36 (Interior Lighting Output Circuit Short to Ground) - is a continuous and on-demand DTC that sets when the SJB detects a short to ground from the interior lighting circuit.

This pinpoint test is intended to diagnose the following:

- Fuse
- Wiring, terminals or connectors
- SJB

PINPOINT TEST A: THE COURTESY LAMPS ARE INOPERATIVE

CAUTION: Use the correct probe adapter(s) when making measurements. Failure to use the correct probe adapter(s) may damage the connector.

A1 CHECK THE SJB DTCs FROM BOTH THE CONTINUOUS AND THE ON-DEMAND SELF-TESTS

- Use the recorded results from the SJB continuous and on-demand self-test.
- **Are any SJB DTCs recorded?**

YES : For DTC B2A35 or B2A36, go to A2 .

For all other DTCs, REFER to DTC Charts in this service information.

NO : Go to A3.

A2 CHECK CIRCUIT VLN33 (GY/VT) FOR AN OPEN

- Key in OFF position.
- Disconnect: SJB C2280a

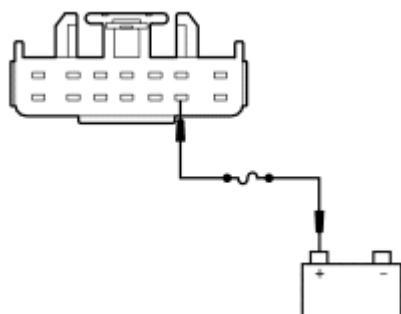


Fig. 1: Checking Circuit For Open
Courtesy of FORD MOTOR CO.

NOTE: If the jumper wire fails, repair circuit VLN33 for a short to ground.

- Connect a fused (10A) jumper wire between the SJB C2280a-9, circuit VLN33 (GY/VT), harness side and battery positive.
- **Do the courtesy lamps illuminate?**
YES : VERIFY the SJB fuse 9 (15A) is OK. If OK, go to A3 .
NO : REPAIR the circuit. RUN the on-demand self-test (required to clear certain DTCs).
CORRECT any unresolved DTCs. CLEAR all DTCs. TEST the system for normal operation.

A3 CHECK FOR CORRECT SJB OPERATION

- Disconnect all the SJB connectors.
- Check for:
 - corrosion
 - damaged pins
 - pushed-out pins
- Connect all the SJB connectors and make sure they seat correctly.
- Operate the system and verify the concern is still present.
- **Is the concern still present?**
YES : INSTALL a new SJB. REFER to **MULTIFUNCTION ELECTRONIC MODULES** article. TEST the system for normal operation.
NO : The system is operating correctly at this time. The concern may have been caused by a loose or corroded connector.

Pinpoint Test B: An Individual Courtesy Lamp Is Inoperative

Refer to appropriate SYSTEM WIRING DIAGRAMS article for Interior Lamps schematic and connector information.

Normal Operation

The smart junction box (SJB) provides voltage to the courtesy lamps on circuit VLN33 (GY/VT). The courtesy lamps are grounded through circuit GD133 (BK). The cargo lamp is also on the courtesy lamp circuit. Circuit VLN33 (GY/VT) provides voltage to the cargo lamp, and is grounded through circuit GD126 (BK/WH).

This pinpoint test is intended to diagnose the following:

- Wiring, terminals or connectors
- Interior lamp

PINPOINT TEST B: AN INDIVIDUAL COURTESY LAMP IS INOPERATIVE

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

CAUTION: Use the correct probe adapter(s) when making measurements. Failure to use the correct probe adapter(s) may damage the connector.

B1 CHECK THE INTERIOR LAMP

- Key in OFF position.
- Disconnect: Suspect Interior Lamp
- Open the driver door.
- Measure the voltage between the suspect interior lamp connector, harness side as follows:

Location	Connector-Pin/ Circuit	Connector-Pin/ Circuit
Overhead console	C930-2 VLN33 (GY/VT)	C930-1 GD133 (BK)
Rear interior lamp	C923-1 VLN33 (GY/VT)	C923-2 GD133 (BK)
Cargo lamp	C926-1 VLN33 (GY/VT)	C926-2 GD126 (BK/WH)

- **Is the voltage greater than 10 volts?**

YES : INSTALL a new interior lamp for the lamp in question. REFER to **Interior Lamp**. TEST the system for normal operation.

NO : Go to B2.

B2 CHECK CIRCUIT VLN33 (GY/VT) FOR VOLTAGE

- Measure the voltage between the suspect interior lamp, harness side and ground as follows:

Location	Connector-Pin	Circuit
Overhead console	C930-2	VLN33 (GY/VT)
Rear interior lamp	C923-1	VLN33 (GY/VT)
Cargo lamp	C926-2	VLN33 (GY/VT)

- **Is the voltage greater than 10 volts?**

YES : INSTALL a new interior lamp for the lamp in question. REFER to **Interior Lamp**. TEST the system for normal operation.

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

NO : REPAIR circuit VLN33 (GY/VT) for the lamp in question. TEST the system for normal operation.

Pinpoint Test C: The Courtesy Lamps Stay On Continuously

Refer to appropriate SYSTEM WIRING DIAGRAMS article for Interior Lamps schematic and connector information.

Refer to appropriate SYSTEM WIRING DIAGRAMS article for Power Liftgate schematic and connector information.

Refer to appropriate SYSTEM WIRING DIAGRAMS article for Remote Keyless Entry and Alarm schematic and connector information.

Normal Operation

When any door or the liftgate is opened, the ajar switch (or the liftgate/trunk module [LTM], if equipped) opens the circuit to the smart junction box (SJB). The SJB monitors the ajar circuits, and based on the ajar status, supplies voltage to the courtesy lamps on circuit VLN33 (GY/VT).

DTC Description	Fault Trigger Conditions
B1320 - Driver Door Ajar Circuit Open	An on-demand DTC that sets when the SJB detects an open from the LH front door ajar circuit.
B1328 - Passenger Door Ajar Circuit Open	An on-demand DTC that sets when the SJB detects an open from the RH front door ajar circuit.
B1336 - Door Ajar RR Circuit Open	An on-demand DTC that sets when the SJB detects an open from the RH rear door ajar circuit.
B1572 - Door Ajar LR Circuit Open	An on-demand DTC that sets when the SJB detects an open from the LH rear door ajar circuit.
B1688 - Lamp Dome Input Circuit Short To Ground	An on-demand DTC that sets when the SJB detects a short to ground from the instrument panel dimmer switch circuit.
B2077 - Liftgate Ajar Sw Circuit Failure	An on-demand DTC that sets when the SJB detects an open from the liftgate ajar circuit.
B2A35 - Interior Lighting Output Circuit Open	An on-demand DTC that sets when the SJB detects a short to voltage from the courtesy lamp output circuit.
B2718 - Liftgate/Decklid Ajar Output Short to Battery	An continuous and on-demand DTC that sets when the LTM detects a short to voltage from the liftgate ajar input circuit

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

	to the SJB.
B2721 - Liftgate/Decklid Ajar Output Short to Ground or Open	An continuous and on-demand DTC that sets when the LTM detects an open from the liftgate ajar input circuit to the SJB.

This pinpoint test is intended to diagnose the following:

- Wiring, terminals or connectors
- Door ajar switch
- Liftgate ajar switch
- Instrument panel dimmer switch
- LTM
- SJB

PINPOINT TEST C: THE COURTESY LAMPS STAY ON CONTINUOUSLY

CAUTION: Use the correct probe adapter(s) when making measurements. Failure to use the correct probe adapter(s) may damage the connector.

C1 CHECK THE SJB DTCs FROM BOTH THE CONTINUOUS AND THE ON-DEMAND SELF-TESTS

- Use the recorded results from the SJB continuous and the on-demand self-test.
- **Are any SJB DTCs recorded?**

YES : For DTC B1320, B1328, B1336, or B1572, go to C2.

For DTC B1688, go to C5.

For DTC B2A35, go to C7.

For DTC B2077 (manual liftgate), go to C8.


For DTC B2077 (power liftgate), go to C12.

NO : If equipped with a power liftgate, go to C11.

If equipped with a manual liftgate, go to C14.

C2 CHECK THE DOOR AJAR GROUND CIRCUITS FOR AN OPEN

- Key in OFF position.
- Disconnect: Suspect Ajar Switch

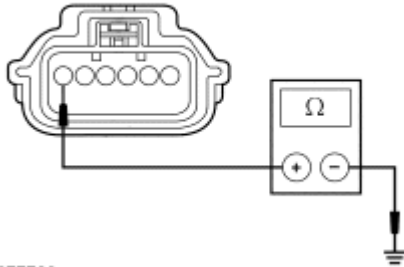

N0077780

Fig. 2: Measuring Resistance Between Suspect Door Ajar Switch And Ground
 Courtesy of FORD MOTOR CO.

- Measure the resistance between the suspect ajar switch connector, harness side and ground as follows:


Location	Connector-Pin	Circuit
LF	C525-6	GD133 (BK)
RF	C603-6	GD140 (BK/GN)
LR	C704-6	GD126 (BK/WH)
RR	C804-6	GD145 (BK/BU)

- Is the resistance less than 5 ohms?

YES : Go to C3.

NO : REPAIR the circuit in question. CLEAR the DTCs. REPEAT the self-test.

C3 CHECK THE DOOR AJAR SWITCH OPERATION

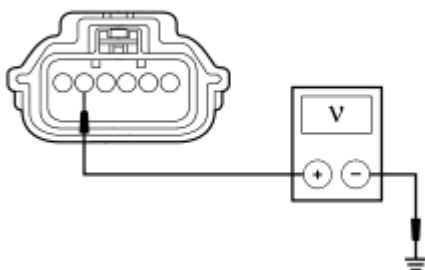

N0077781

Fig. 3: Measuring Voltage Between Suspect Door Ajar Switch And Ground
 Courtesy of FORD MOTOR CO.

- Measure the voltage between the suspect door ajar switch, harness side and ground as follows:

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

Location	Connector-Pin	Circuit
LF	C525-5	CPL26 (GN/VT)
RF	C603-5	CPL31 (WH)
LR	C704-5	CPL36 (GN)
RR	C804-5	CPL39 (YE)

- **Is the voltage greater than 10 volts?**

YES : INSTALL a new door latch for the switch in question. REFER to **HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS** article. CLEAR the DTCs. REPEAT the self-test.

NO : Go to C4.

C4 CHECK THE DOOR AJAR SWITCH CIRCUIT FOR AN OPEN

- Disconnect: SJB C2280c
- Measure the resistance between the suspect door ajar switch, harness side and the SJB, harness side as follows:

Location	SJB Connector-Pin	Suspect Door Ajar Switch Connector-Pin	Circuit
LF	C2280c-14	C525-5	CPL26 (GN/VT)
RF	C2280c-2	C603-5	CPL31 (WH)
LR	C2280c-3	C704-5	CPL36 (GN)
RR	C2280c-15	C804-5	CPL39 (YE)

- **Is the resistance less than 5 ohms?**

YES : Go to C14.

NO : REPAIR the circuit in question. CLEAR the DTCs. REPEAT the self-test.

C5 CHECK THE INSTRUMENT PANEL DIMMER SWITCH

- Key in OFF position.
- Disconnect: Instrument Panel Dimmer Switch C2298
- **Are the courtesy lamps still illuminated?**

YES : Go to C6.

NO : INSTALL a new instrument panel dimmer switch. REFER to **INSTRUMENT CLUSTER AND PANEL ILLUMINATION** article. CLEAR the DTCs. REPEAT the self-test.

C6 CHECK CIRCUIT CLN28 (GN/BU) FOR A SHORT TO GROUND

- Disconnect: SJB C2280b

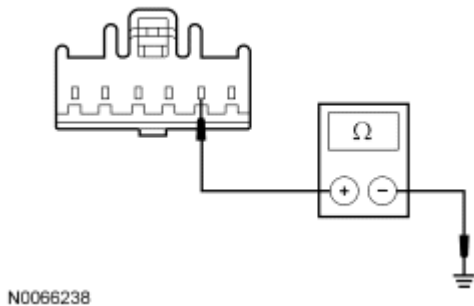


Fig. 4: Measuring Resistance Between Dimmer Switch C2298-2 Circuit CLN28 (GN/BU) & Ground

Courtesy of FORD MOTOR CO.


- Measure the resistance between the instrument panel dimmer switch C2298-2 circuit CLN28 (GN/BU), harness side and ground.
- **Is the resistance greater than 10,000 ohms?**
YES : Go to C14.
NO : REPAIR the circuit. CLEAR the DTCs. REPEAT the self-test.

C7 CHECK CIRCUIT VLN33 (GY/VT) FOR A SHORT TO VOLTAGE

- Key in OFF position.
- Disconnect: SJB C2280a
- Key in ON position.
- Observe the courtesy lamps.
- **Are the courtesy lamps still illuminated?**
YES : REPAIR the circuit. CLEAR the DTCs. REPEAT the self-test.
NO : Go to C14.

C8 CHECK CIRCUIT GD149 (BK/GY) FOR AN OPEN (MANUAL LIFTGATE)

- Key in OFF position.
- Disconnect: Liftgate Latch C479

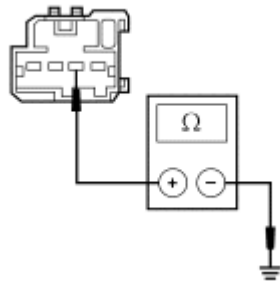


N0057308

Fig. 5: Measuring Resistance Between Liftgate Latch C479-3, Circuit GD149 (BK/GY) & Ground
Courtesy of FORD MOTOR CO.

- Measure the resistance between the liftgate latch C479-3, circuit GD149 (BK/GY), harness side and ground.
- **Is the resistance less than 5 ohms?**
YES : Go to C9.
NO : REPAIR the circuit. CLEAR the DTCs. REPEAT the self-test.

C9 CHECK THE LIFTGATE AJAR SWITCH OPERATION (MANUAL LIFTGATE)

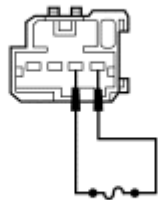

N0057309

Fig. 6: Connecting Fused Jumper Wire
Courtesy of FORD MOTOR CO.

- Connect a (5A) jumper wire between the liftgate latch C479-4, circuit CPL60 (BN/YE), harness side and the liftgate latch C479-3, circuit GD149 (BK/GY), harness side.
- **Do the courtesy lamps turn off?**
YES : REMOVE the jumper wire. INSTALL a new manual liftgate latch. REFER to **HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS** article. CLEAR the DTCs. REPEAT the self-test.
NO : LEAVE the jumper wire connected. Go to C10.

C10 CHECK CIRCUIT CPL60 (BN/YE) FOR AN OPEN (MANUAL LIFTGATE)

- Disconnect: SJB C2280c

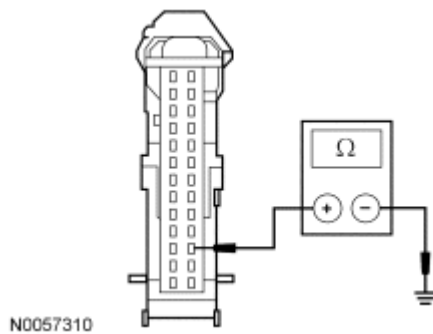


Fig. 7: Measuring Resistance Between SJB C2280C-16, Circuit CPL60 (BN/YE), Harness Side & Ground
 Courtesy of FORD MOTOR CO.

- Measure the resistance between the SJB C2280c-16, circuit CPL60 (BN/YE), harness side and ground.
- **Is the resistance less than 5 ohms?**
YES : REMOVE the jumper wire. Go to C14.
NO : REMOVE the jumper wire. REPAIR the circuit. CLEAR the DTCs. REPEAT the self-test.

C11 CHECK THE LTM DTCs FROM BOTH THE CONTINUOUS AND THE ON-DEMAND SELF-TESTS

- Use the recorded results from the LTM continuous and the on-demand self-test.
- **Are any LTM DTCs recorded?**
YES : For DTCs B2718 or B2721, go to C12.

For all other DTCs, REFER to MULTIFUNCTION ELECTRONIC MODULES article.

NO : Go to C14.

C12 CHECK THE LTM

- Key in OFF position.
- Disconnect: LTM C4174b

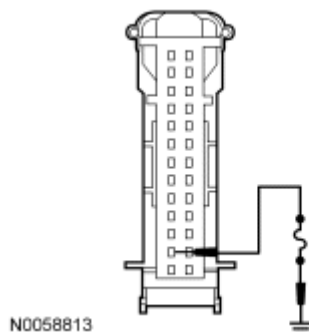


Fig. 8: Connecting Fused Jumper Wire
 Courtesy of FORD MOTOR CO.

NOTE: If the fuse fails, repair the circuit for a short to voltage.

- Connect a fused (5A) jumper wire between the LTM C4174b-2, circuit CPL60 (BN/YE), harness side and ground.
- **Do the courtesy lamps turn off?**
YES : REMOVE the jumper wire. Go to C15.
NO : LEAVE the jumper wire connected. Go to C13.

C13 CHECK CIRCUIT CPL60 (BN/YE) FOR AN OPEN

- Disconnect: SJB C2280c

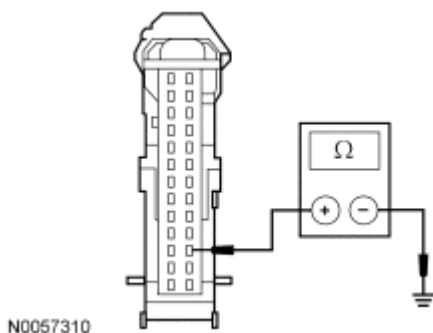


Fig. 9: Measuring Resistance Between SJB C2280C-16, Circuit CPL60 (BN/YE), Harness Side & Ground

Courtesy of FORD MOTOR CO.

- Measure the resistance between the SJB C2280c-16, circuit CPL60 (BN/YE), harness side and ground.
- **Is the resistance less than 5 ohms?**
YES : REMOVE the jumper wire. Go to C14.
NO : REMOVE the jumper wire. REPAIR the circuit. CLEAR the DTCs. REPEAT the self-test.

C14 CHECK FOR CORRECT SJB OPERATION

- Disconnect all the SJB connectors.
- Check for:
 - corrosion
 - damaged pins
 - pushed-out pins
- Connect all the SJB connectors and make sure they seat correctly.
- Operate the system and verify the concern is still present.
- **Is the concern still present?**
YES : INSTALL a new SJB. REFER to MULTIFUNCTION ELECTRONIC MODULES article. TEST the system for normal operation.
NO : The system is operating correctly at this time. The concern may have been caused by a loose or corroded connector. CLEAR the DTCs. REPEAT the self-test.

C15 CHECK FOR CORRECT LTM OPERATION

- Disconnect all the LTM connectors.
- Check for:
 - corrosion
 - damaged pins
 - pushed-out pins
- Connect all the LTM connectors and make sure they seat correctly.
- Operate the system and verify the concern is still present.
- **Is the concern still present?**

YES : INSTALL a new LTM. REFER to **BODY CLOSURES** article. TEST the system for normal operation.

NO : The system is operating correctly at this time. The concern may have been caused by a loose or corroded connector. CLEAR the DTCs. REPEAT the self-test.

Pinpoint Test D: The Courtesy Lamps Do Not Turn On With One Door Open

Refer to appropriate SYSTEM WIRING DIAGRAMS article for Remote Keyless Entry and Alarm schematic and connector information.

Normal Operation

When any door is opened, the ajar switch opens the circuit to the smart junction box (SJB). The SJB monitors the ajar circuits, and based on the ajar status, supplies voltage to the courtesy lamps on circuit VLN33 (GY/VT).

This pinpoint test is intended to diagnose the following:

- Wiring, terminals or connectors
- Door ajar switch
- SJB

PINPOINT TEST D: THE COURTESY LAMPS DO NOT TURN ON WITH ONE DOOR OPEN

CAUTION: Use the correct probe adapter(s) when making measurements. Failure to use the correct probe adapter(s) may damage the connector.

D1 CHECK THE DOOR AJAR PIDs

- Key in ON position.
- Enter the following diagnostic mode on the diagnostic tool: SJB DataLogger
- Check the SJB door ajar switch PIDs (D_DR_SW, P_DR_SW, LRDR_SW, and RRDR_SW) while opening and closing all the doors.
- **Do all the door ajar switch PID values agree with the door positions?**

YES : Go to D4.

NO : Go to D2.

D2 CHECK THE AJAR SWITCH OPERATION

- Disconnect: Suspect Ajar Switch
- **Do the courtesy lamps illuminate?**

YES : INSTALL a new door latch for the ajar switch in question. REFER to **HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS** article. TEST the system for normal operation.

NO : Go to D3.

D3 CHECK THE AJAR SWITCH CIRCUIT FOR A SHORT TO GROUND

- Key in OFF position.
- Disconnect: SJB C2280c

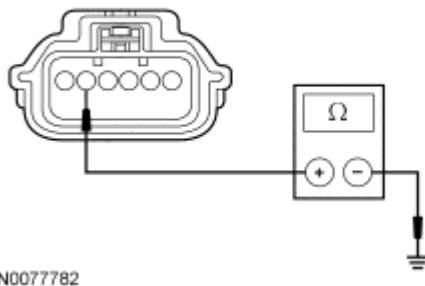


Fig. 10: Measuring Resistance Between Suspect Door Ajar Switch And Ground
Courtesy of FORD MOTOR CO.

- Measure the resistance between the suspect ajar switch, harness side and ground as follows:

Location	Connector-Pin	Circuit
LF	C525-5	CPL26 (GN/VT)
RF	C603-5	CPL31 (WH)
LR	C704-5	CPL36 (GN)
RR	C804-5	CPL39 (YE)

- **Is the resistance greater than 10,000 ohms?**

YES : Go to D4.

NO : REPAIR the circuit in question. TEST the system for normal operation.

D4 CHECK FOR CORRECT SJB OPERATION

- Disconnect all the SJB connectors

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

- Check for:
 - corrosion
 - damaged pins
 - pushed-out pins
- Connect all the SJB connectors and make sure they seat correctly.
- Operate the system and verify the concern is still present.
- **Is the concern still present?**

YES : INSTALL a new SJB. REFER to **MULTIFUNCTION ELECTRONIC MODULES** article. TEST the system for normal operation.

NO : The system is operating correctly at this time. The concern may have been caused by a loose or corroded connector.

Pinpoint Test E: The Demand Lamps Are Inoperative

Refer to appropriate SYSTEM WIRING DIAGRAMS article for Interior Lamps schematic and connector information.

Normal Operation

The smart junction box (SJB) supplies voltage to the demand lamps on circuit CLN09 (YE/GN). The demand lamps are grounded through circuit GD133 (BK).

This pinpoint test is intended to diagnose the following:

- Fuse
- Wiring, terminals or connectors
- SJB

PINPOINT TEST E: THE DEMAND LAMPS ARE INOPERATIVE

CAUTION: Use the correct probe adapter(s) when making measurements. Failure to use the correct probe adapter(s) may damage the connector.

E1 CHECK THE OPERATION OF THE COURTESY LAMPS


- Open the driver door.
- **Do the courtesy lamps illuminate?**

YES : Go to E2.

NO : Go to **Pinpoint Test A** .

E2 CHECK CIRCUIT CLN09 (YE/GN) FOR AN OPEN

- Key in OFF position.
- Disconnect: SJB C2280d

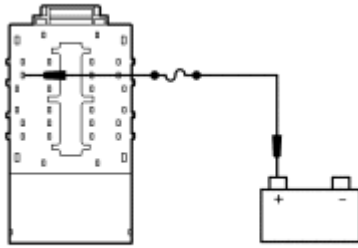

N0056178

Fig. 11: Checking Circuit For Open
Courtesy of FORD MOTOR CO.

NOTE: If the fuse fails, repair circuit CLN09 (YE/GN) for a short to ground.

- Connect a fused (10A) jumper wire between the SJB C2280d-21, circuit CLN09 (YE/GN), harness side and battery positive.

- **Do the demand lamps illuminate when switched on?**

YES : VERIFY the SJB fuse 25 (10A) is OK. If OK, go to E3.

NO : REPAIR the circuit. TEST the system for normal operation.

E3 CHECK FOR CORRECT SJB OPERATION

- Disconnect all the SJB connectors.
- Check for:
 - corrosion
 - damaged pins
 - pushed-out pins
- Connect all the SJB connectors and make sure they seat correctly.
- Operate the system and verify the concern is still present.
- **Is the concern still present?**

YES : INSTALL a new SJB. REFER to **MULTIFUNCTION ELECTRONIC MODULES** article. TEST the system for normal operation.

NO : The system is operating correctly at this time. The concern may have been caused by a loose or corroded connector.

Pinpoint Test F: An Individual Demand Lamp Is Inoperative

Refer to appropriate SYSTEM WIRING DIAGRAMS article for Interior Lamps schematic and connector information.

Normal Operation

The smart junction box (SJB) supplies voltage to the demand lamps on circuit CLN09 (YE/GN). The demand lamps are grounded through circuit GD133 (BK).

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

This pinpoint test is intended to diagnose the following:

- Wiring, terminals or connectors
- Interior lamp

PINPOINT TEST F: AN INDIVIDUAL DEMAND LAMP IS INOPERATIVE

CAUTION: Use the correct probe adapter(s) when making measurements. Failure to use the correct probe adapter(s) may damage the connector.

F1 CHECK CIRCUIT CLN09 (YE/GN) FOR AN OPEN

- Key in OFF position.
- Disconnect: Suspect Demand Lamp
- Key in ON position.
- Measure the voltage between the suspect demand lamp, harness side and ground as follows:

Location	Connector-Pin	Circuit
RH vanity mirror lamp	C906-1	CLN09 (YE/GN)
LH vanity mirror lamp	C907-1	CLN09 (YE/GN)
Overhead console	C930-3	CLN09 (YE/GN)
Rear interior lamp	C923-3	CLN09 (YE/GN)

- **Is the voltage greater than 10 volts?**

YES : Go to F2.

NO : REPAIR the circuit. TEST the system for normal operation.

F2 CHECK THE GROUND CIRCUIT FOR AN OPEN

- Measure the resistance between the suspect demand lamp, harness side and ground as follows:

Location	Connector-Pin	Circuit
RH vanity mirror	C906-2	GD133 (BK)

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

lamp		
LH vanity mirror lamp	C907-2	GD133 (BK)
Overhead console	C930-1	GD133 (BK)
Rear interior lamp	C923-2	GD133 (BK)

- **Is the resistance less than 5 ohms?**

YES : INSTALL a new interior lamp for the lamp in question. REFER to **Interior Lamp**. TEST the system for normal operation.

NO : REPAIR circuit GD133 (BK). TEST the system for normal operation.

Pinpoint Test G: The Illuminated Entry Is Inoperative When Using The Remote Keyless Entry (RKE) Transmitter

Normal Operation

The illuminated entry provides interior lighting whenever the smart junction box (SJB) receives a doors unlock request from the remote keyless entry (RKE) transmitter. The SJB provides voltage on circuit VLN33 (GY/VT) for the courtesy lamps.

This pinpoint test is intended to diagnose the following:

- RKE system
- SJB

PINPOINT TEST G: THE ILLUMINATED ENTRY IS INOPERATIVE WHEN USING THE REMOTE KEYLESS ENTRY (RKE) TRANSMITTER

G1 CHECK FOR CORRECT RKE OPERATION

- Using the RKE transmitter, lock and unlock the doors.
- **Do the doors lock and unlock?**

YES : Go to G2.

NO : REFER to **HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS** article to continue diagnosis of the RKE system.

G2 CHECK FOR CORRECT SJB OPERATION

- Disconnect all the SJB connectors.
- Check for:
 - corrosion

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

- damaged pins
- pushed-out pins
- Connect all the SJB connectors and make sure they seat correctly.
- Operate the system and verify the concern is still present.
- **Is the concern still present?**

YES : INSTALL a new SJB. REFER to **MULTIFUNCTION ELECTRONIC MODULES** article. TEST the system for normal operation.

NO : The system is operating correctly at this time. The concern may have been caused by a loose or corroded connector. TEST the system for normal operation.

Pinpoint Test H: The Battery Saver Does Not Deactivate After Time-Out

Refer to appropriate SYSTEM WIRING DIAGRAMS article for Interior Lamps schematic and connector information.

Normal Operation

The smart junction box (SJB) provides a battery saver function. The battery saver function provides automatic shutoff of the interior lamps (courtesy lamps and demand lamps) after a predetermined time has elapsed in order to save battery power.

This pinpoint test is intended to diagnose the following:

- Wiring, terminals or connectors
- SJB

PINPOINT TEST H: THE BATTERY SAVER DOES NOT DEACTIVATE AFTER TIME-OUT

H1 CHECK THE SJB IGNITION SWITCH PID

- Key in ON position.
- Enter the following diagnostic mode on the diagnostic tool: SJB DataLogger
- Monitor the SJB ignition switch PIDs (IGN_A_ECU, IGN_O_ECU, IGN_R_ECU and IGN_S_ECU) while rotating the ignition switch through all positions.
- **Do the ignition switch PIDs agree with the ignition switch positions?**

YES : Go to H2.

NO : REFER to **STEERING COLUMN SWITCHES** article.

H2 CHECK CIRCUIT CLN09 (YE/GN) FOR A SHORT TO VOLTAGE

- Key in OFF position.
- Disconnect: SJB C2280d
- Key in ON position.
- Operate the demand lamps.
- **Do the demand lamps illuminate?**

YES : REPAIR the circuit. TEST the system for normal operation.

NO : Go to H3.

H3 CHECK FOR CORRECT SJB OPERATION

- Disconnect all the SJB connectors.
- Check for:
 - corrosion
 - damaged pins
 - pushed-out pins
- Connect all the SJB connectors and make sure they seat correctly.
- Operate the system and verify the concern is still present.
- **Is the concern still present?**

YES : INSTALL a new SJB. REFER to **MULTIFUNCTION ELECTRONIC MODULES** article. TEST the system for normal operation.

NO : The system is operating correctly at this time. The concern may have been caused by a loose or corroded connector.

Pinpoint Test I: The Puddle Lamp(s) are Inoperative

Refer to appropriate SYSTEM WIRING DIAGRAMS article for Interior Lamps schematic and connector information.

Normal Operation

The smart junction box (SJB) provides voltage to the puddle lamps through circuit CLN25 (VT). The puddle lamps have separate ground circuits. The LH exterior mirror is grounded through circuit GD133 (BK) and the RH exterior mirror is grounded through circuit GD140 (BK/GN).

- DTC B2A39 (Puddle Lamp Output Circuit Open) - is an on-demand DTC that sets when the SJB detects an open on the puddle lamp output circuit.
- DTC B2A3A (Puddle Lamp Output Circuit Short to Ground) - is a continuous and on-demand DTC that sets when the SJB detects a short to ground on the puddle lamp output circuit. This DTC also sets as a result when the SJB fuse 10 (15A) has failed or is removed.

This pinpoint test is intended to diagnose the following:

- Fuse
- Wiring, terminals or connectors
- Exterior mirror
- SJB

PINPOINT TEST I: THE PUDDLE LAMP(S) ARE INOPERATIVE

CAUTION: Use the correct probe adapter(s) when making measurements. Failure to use the correct probe adapter(s) may damage the connector.

I1 CHECK THE PUDDLE LAMP OPERATION

- Open any door and observe the puddle lamps.
- **Are both the puddle lamps inoperative?**

YES : Go to I2.

NO : Go to I3.

I2 CHECK CIRCUIT CLN25 (VT) FOR AN OPEN

- Key in OFF position.
- Disconnect: SJB C2280c

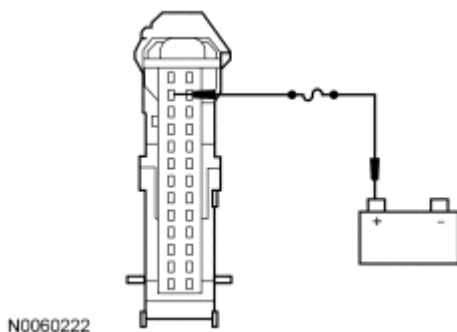


Fig. 12: Connecting Fused (10A) Jumper Wire Between SJB C2280C-12, Circuit CLN25 (VT) & Battery Positive

Courtesy of FORD MOTOR CO.

NOTE: If the fuse fails, repair circuit CLN25 (VT) for a short to ground.

- Connect a fused (10A) jumper wire between the SJB C2280c-12, circuit CLN25 (VT), harness side and battery positive.

- **Do the puddle lamps illuminate?**

YES : REMOVE the jumper wire. Go to I5.

NO : REMOVE the jumper wire. REPAIR the circuit. RUN the on-demand self-test (required to clear certain DTCs). CORRECT any unresolved DTCs. CLEAR all DTCs. TEST the system for normal operation.

I3 CHECK CIRCUIT CLN25 (VT) FOR AN OPEN

- Disconnect: Suspect Exterior Mirror

NOTE: The courtesy lamps must be active during this test.

- Open any door.

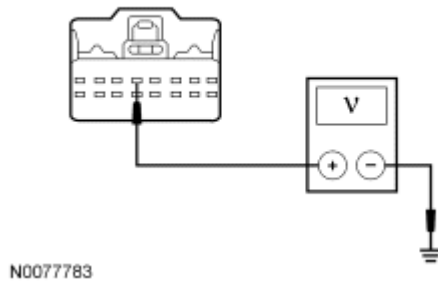


Fig. 13: Measuring Voltage Between Suspect Exterior Mirror Connector, Harness Side And Ground
Courtesy of FORD MOTOR CO.

- Measure the voltage between the suspect exterior mirror connector, harness side and ground as follows:

Location	Connector-Pin	Circuit
RH exterior mirror	C622-5	CLN25 (VT)
LH exterior mirror	C516-5	CLN25 (VT)

- **Is the voltage greater than 10 volts?**

YES : Go to I4.

NO : REPAIR the circuit. TEST the system for normal operation.

I4 CHECK THE GROUND CIRCUIT FOR AN OPEN

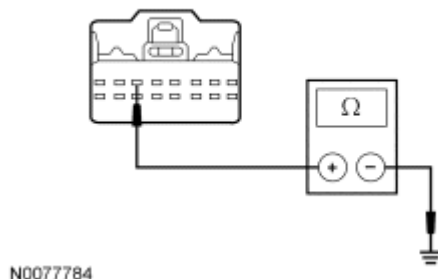


Fig. 14: Measuring Resistance Between Suspect Exterior Mirror Connector, Harness Side And Ground
Courtesy of FORD MOTOR CO.

- Measure the resistance between the suspect exterior mirror connector, harness side and ground as

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

follows:

Location	Connector-Pin	Circuit
RH exterior mirror	C622-6	GD140 (BK/GN)
LH exterior mirror	C516-6	GD133 (BK)

- **Is the resistance less than 5 ohms?**

YES : INSTALL a new exterior mirror in question. REFER to **REAR VIEW MIRRORS** article. TEST the system for normal operation.

NO : REPAIR the circuit in question. TEST the system for normal operation.

I5 CHECK FOR CORRECT SJB OPERATION

- Disconnect all the SJB connectors.
- Check for:
 - corrosion
 - damaged pins
 - pushed-out pins
- Connect all the SJB connectors and make sure they seat correctly.
- Operate the system and verify the concern is still present.
- **Is the concern still present?**

YES : INSTALL a new SJB. REFER to **MULTIFUNCTION ELECTRONIC MODULES** article. TEST the system for normal operation.

NO : The system is operating correctly at this time. The concern may have been caused by a loose or corroded connector. RUN the on-demand self-test (required to clear certain DTCs). CORRECT any unresolved DTCs. CLEAR all DTCs. TEST the system for normal operation.

Pinpoint Test J: The Puddle Lamps Stay On Continuously

Refer to appropriate SYSTEM WIRING DIAGRAMS article for Interior Lamps schematic and connector information.

Normal Operation

The smart junction box (SJB) provides voltage to the puddle lamps through circuit CLN25 (VT). The puddle lamps have separate ground circuits. The LH exterior mirror is grounded through circuit GD133 (BK) and the RH exterior mirror is grounded through circuit GD140 (BK/GN).

- DTC B2A39 (Puddle Lamp Output Circuit Open) - is an on-demand DTC that sets when the SJB detects a short to voltage on the puddle lamp output circuit.

This pinpoint test is intended to diagnose the following:

- Wiring, terminals or connectors
- SJB

PINPOINT TEST J: THE PUDDLE LAMPS STAY ON CONTINUOUSLY

CAUTION: Use the correct probe adapter(s) when making measurements. Failure to use the correct probe adapter(s) may damage the connector.

J1 CHECK CIRCUIT CLN25 (VT) FOR A SHORT TO VOLTAGE

- Disconnect: SJB C2280c
- **Do the puddle lamps continue to illuminate?**
YES : REPAIR the circuit. CLEAR the DTCs. REPEAT the self-test.
NO : Go to J2.

J2 CHECK FOR CORRECT SJB OPERATION

- Disconnect all the SJB connectors.
- Check for:
 - corrosion
 - damaged pins
 - pushed-out pins
- Connect all the SJB connectors and make sure they seat correctly.
- Operate the system and verify the concern is still present.
- **Is the concern still present?**
YES : INSTALL a new SJB. REFER to **MULTIFUNCTION ELECTRONIC MODULES** article. TEST the system for normal operation.
NO : The system is operating correctly at this time. The concern may have been caused by a loose or corroded connector. CLEAR the DTCs. REPEAT the self-test.

Pinpoint Test K: The Courtesy Lamps Are Inoperative From The Instrument Panel Dimmer Switch

Refer to appropriate SYSTEM WIRING DIAGRAMS article for Interior Lamps schematic and connector information.

Normal Operation

The smart junction box (SJB) monitors the instrument panel dimmer switch status on circuit CLN28 (GN/BU) to determine if the courtesy lamps are requested. Based on the instrument panel dimmer switch status, the SJB supplies voltage to the courtesy lamps through circuit VLN33 (GY/VT).

This pinpoint test is intended to diagnose the following:

- Wiring, terminals or connectors
- Instrument panel dimmer switch
- SJB

PINPOINT TEST K: THE COURTESY LAMPS ARE INOPERATIVE FROM THE INSTRUMENT PANEL DIMMER SWITCH

CAUTION: Use the correct probe adapter(s) when making measurements. Failure to use the correct probe adapter(s) may damage the connector.

K1 CHECK THE DIMMABLE BACKLIGHTING DTCs


- Key in ON position.
- Use the recorded results from the SJB continuous and on-demand self-test.
- **Are any DTCs recorded?**

YES : REFER to MULTIFUNCTION ELECTRONIC MODULES article.

NO : Go to K2.

K2 CHECK THE INSTRUMENT PANEL DIMMER SWITCH

- Key in OFF position.
- Disconnect: Instrument Panel Dimmer Switch C2298

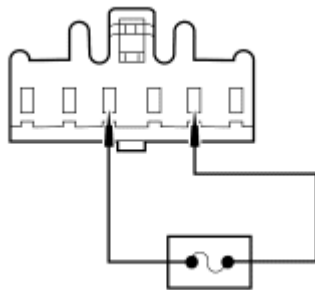

N0023508

Fig. 15: Checking Dimmer Control Switch
Courtesy of FORD MOTOR CO.

- Connect a fused (5A) jumper wire between the instrument panel dimmer switch C2298-2, circuit CLN28 (GN/BU), harness side and the instrument panel dimmer switch C2298-4, circuit CLN27 (WH/BN), harness side.


- **Do the courtesy lamps illuminate?**

YES : REMOVE the jumper wire. INSTALL a new instrument panel dimmer switch. REFER to INSTRUMENT CLUSTER AND PANEL ILLUMINATION article. TEST the system for normal operation.

NO : REMOVE the jumper wire. Go to K3.

K3 CHECK CIRCUIT CLN28 (GN/BU) FOR AN OPEN

- Disconnect: SJB C2280b

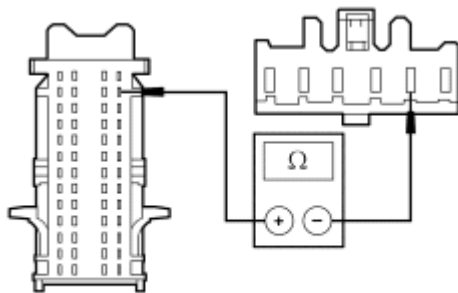

N0060128

Fig. 16: Measuring Resistance Between SJB C2280B-51, Circuit CLN28 (GN/BU) & Dimmer Switch C2298-2
Courtesy of FORD MOTOR CO.

- Measure the resistance between the SJB C2280b-51, circuit CLN28 (GN/BU), harness side and the instrument panel dimmer switch C2298-2, circuit CLN28 (GN/BU), harness side.

- **Is the resistance less than 5 ohms?**

YES : Go to K4.

NO : REPAIR the circuit. TEST the system for normal operation.

K4 CHECK FOR CORRECT SJB OPERATION

- Disconnect all the SJB connectors.
- Check for:
 - corrosion
 - damaged pins
 - pushed-out pins
- Connect all the SJB connectors and make sure they seat correctly.
- Operate the system and verify the concern is still present.
- **Is the concern still present?**

YES : INSTALL a new SJB. REFER to **MULTIFUNCTION ELECTRONIC MODULES** article. TEST the system for normal operation.

NO : The system is operating correctly at this time. The concern may have been caused by a loose or corroded connector.

Pinpoint Test L: The Courtesy Lamps Do Not Turn On With the Liftgate Open

Refer to appropriate SYSTEM WIRING DIAGRAMS article for Power Liftgate schematic and connector information.

Refer to appropriate SYSTEM WIRING DIAGRAMS article for Remote Keyless Entry and Alarm schematic and connector information.

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

Normal Operation

When the liftgate is opened, the ajar switch (or liftgate/trunk module (LTM), if equipped) opens the circuit to the smart junction box (SJB). The SJB monitors the ajar circuit, and based on the ajar status, supplies voltage to the courtesy lamps on circuit VLN33 (GY/VT).

- DTC B2721 (Liftgate/Decklid Ajar Output Short to Ground or Open) - is a continuous and on-demand DTC that sets when the LTM detects a short to ground from the SJB, or liftgate ajar circuit.

This pinpoint test is intended to diagnose the following:

- Wiring, terminals or connectors
- Liftgate ajar switch
- LTM
- SJB

PINPOINT TEST L: THE COURTESY LAMPS DO NOT TURN ON WITH THE LIFTGATE OPEN

CAUTION: Use the correct probe adapter(s) when making measurements. Failure to use the correct probe adapter(s) may damage the connector.

L1 CHECK THE LTM OR THE LIFTGATE LATCH

- Key in OFF position.
- Disconnect: LTM C4174b or Liftgate Latch C479
- **Do the courtesy lamps illuminate?**

YES : If equipped with a power liftgate, go to L4.

If equipped with a manual liftgate, **INSTALL** a new manual liftgate latch. REFER to **HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS** article. TEST the system for normal operation.

NO : Go to L2.

L2 CHECK CIRCUIT CPL60 (BN/YE) FOR A SHORT TO GROUND

- Disconnect: SJB C2280c

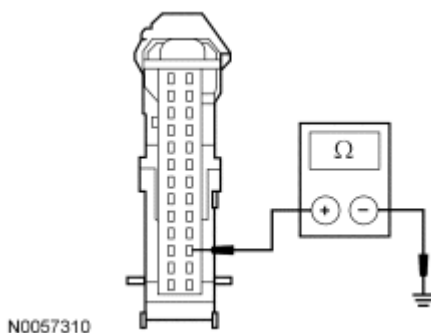


Fig. 17: Measuring Resistance Between SJB C2280C-16, Circuit CPL60 (BN/YE), Harness Side & Ground**Courtesy of FORD MOTOR CO.**

- Measure the resistance between the SJB C2280c-16, circuit CPL60 (BN/YE), harness side and ground.
- **Is the resistance greater than 10,000 ohms?**
YES : Go to L3.
NO : REPAIR the circuit. CLEAR the DTCs. REPEAT the self-test.

L3 CHECK FOR CORRECT SJB OPERATION

- Disconnect all the SJB connectors.
- Check for:
 - corrosion
 - damaged pins
 - pushed-out pins
- Connect all the SJB connectors and make sure they seat correctly.
- Operate the system and verify the concern is still present.
- **Is the concern still present?**
YES : INSTALL a new SJB. REFER to **MULTIFUNCTION ELECTRONIC MODULES** article. TEST the system for normal operation.
NO : The system is operating correctly at this time. The concern may have been caused by a loose or corroded connector. CLEAR the DTCs. REPEAT the self-test.

L4 CHECK FOR CORRECT LTM OPERATION

- Disconnect all the LTM connectors.
- Check for:
 - corrosion
 - damaged pins
 - pushed-out pins
- Connect all the LTM connectors and make sure they seat correctly.
- Operate the system and verify the concern is still present.
- **Is the concern still present?**
YES : INSTALL a new LTM. REFER to **BODY CLOSURES** article. TEST the system for normal operation.
NO : The system is operating correctly at this time. The concern may have been caused by a loose or corroded connector. CLEAR the DTCs. REPEAT the self-test.

REMOVAL AND INSTALLATION**INTERIOR LAMP**

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX


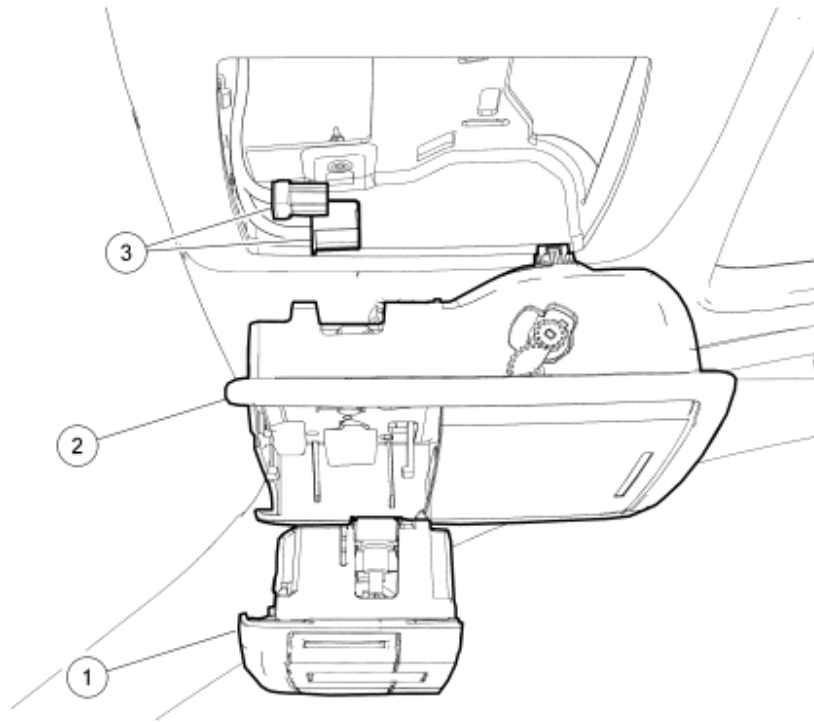


Fig. 18: Identifying Front Interior Lamp With Overhead Console
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	13776	Lamp assembly
2	54519A70	Overhead console
3	-	Overhead console electrical connectors (part of 17K745)

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Lighting - Edge & MKX

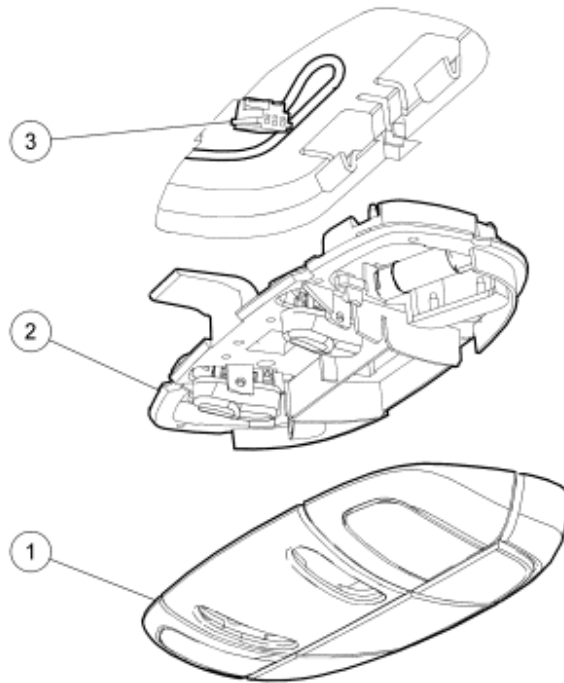

N0038713

Fig. 19: Exploded View Of Rear Interior Lamp
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	13783	Interior lamp lens
2	13776	Interior lamp
3	-	Interior lamp electrical connector (part of 14334)

REMOVAL AND INSTALLATION

Front

NOTE: Do not pull down on the front of the overhead console.

1. Pull down on the rear of the overhead console to remove the overhead console from the retaining clips.
 - Disconnect the electrical connectors.
2. Release the 4 retaining clips and remove the lamp assembly from the overhead console.

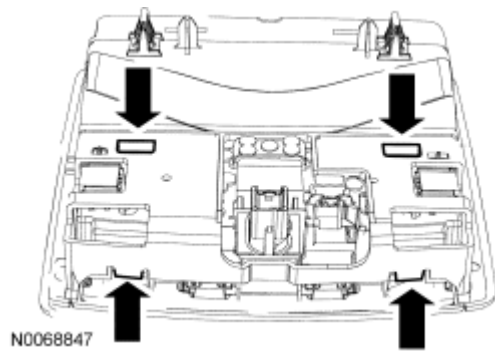


Fig. 20: Locating Retaining Clips On Lamp Assembly From Overhead Console
Courtesy of FORD MOTOR CO.

3. Release the 6 retaining clips and remove the lens from the lamp assembly.

NOTE: The bulbs can be pushed out from the backside of the lamp assembly.

- Replace the bulb(s) as necessary.

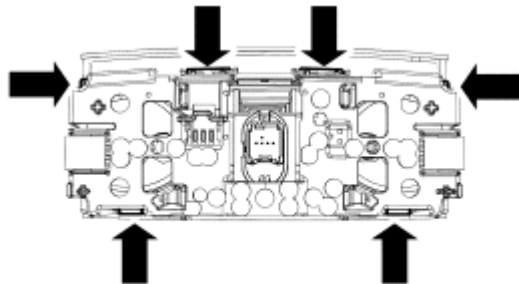


Fig. 21: Locating Retaining Clips On Lens From Lamp Assembly
Courtesy of FORD MOTOR CO.

REAR

4. Remove the interior lamp lens.

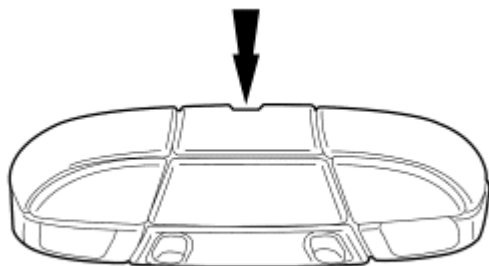


Fig. 22: Identifying Rear Interior Lamp Lens
Courtesy of FORD MOTOR CO.

5. Release the 2 retaining clips (through the access holes) and remove the interior lamp.
 - Disconnect the electrical connector.

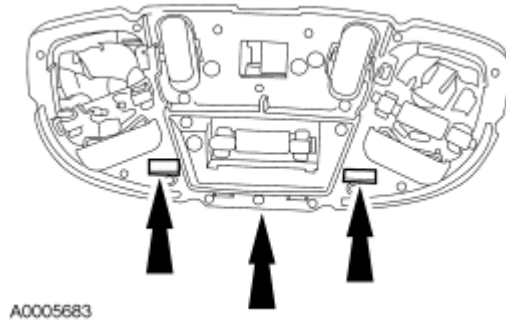


Fig. 23: Locating Electrical Connector Retaining Clips
Courtesy of FORD MOTOR CO.

Any interior lamps

6. To install, reverse the removal procedure.

2008 Ford Edge SE
2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Edge & MKX

2008 ACCESSORIES & BODY, CAB

Interior Trim & Ornamentation - Edge & MKX

SPECIFICATIONS

TORQUE SPECIFICATIONS

Description	Nm	lb-ft	lb-in
Assist handle bolts	9	-	80
B-pillar upper trim panel screw	9	-	80
C-pillar trim panel screw	9	-	80
D-ring safety belt bolt	54	40	-
Liftgate rod nut	11	8	-
Safety belt anchor bolt	54	40	-

REMOVAL AND INSTALLATION

INTERIOR TRIM - EXPLODED VIEW

NOTE: Edge shown, MKX similar.

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Edge & MKX

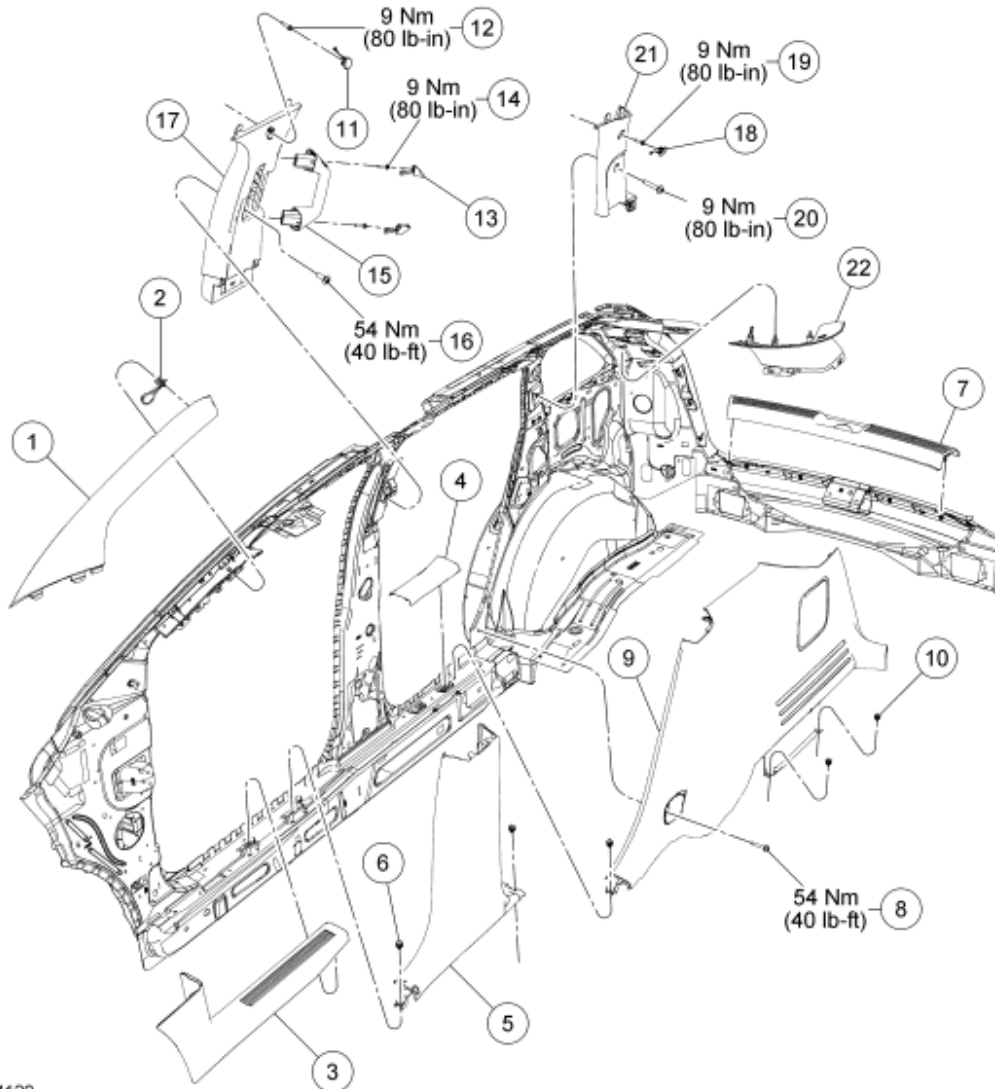


Fig. 1: Exploded View Of Interior Trim With Torque Specifications
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	03598 RH/ 03599 LH	A-pillar trim panel
2	-	A-pillar trim panel tether (part of 03598 RH/ 03599 LH)
3	13208 RH/ 13209 LH	Front door scuff plate
4	13244 RH/ 13245 LH	Rear door scuff plate
5	24346 RH/ 24347 LH	B-pillar lower trim panel
6	-	B-pillar lower trim panel pushpin retainer (2 required)
7	42624	Liftgate scuff plate
8	-	Quarter trim panel safety belt anchor bolt

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Edge & MKX

9	31012 RH/ 31013 LH	Quarter trim panel
10	-	Quarter trim panel pushpin retainer (3 required)
11	-	B-pillar upper trim panel screw cover
12	W712518	B-pillar upper trim panel screw
13	31458 Upper/ 31459 Lower	B-pillar assist handle bolt cover (2 required)
14	W712518	B-pillar assist handle bolt (2 required)
15	31406 RH/ 31407 LH	B-pillar assist handle
16	-	B-pillar trim panel safety belt D-ring bolt
17	24346 RH/ 24347 LH	B-pillar upper trim panel
18	-	C-pillar trim panel screw cover
19	W712518	C-pillar trim panel screw
20	-	C-pillar trim panel safety belt D-ring bolt
21	31004 RH/ 31005 LH	C-pillar trim panel
22	31010 RH/ 31011 LH	D-pillar trim panel

1. For additional information, refer to the appropriate procedure.

A-PILLAR TRIM PANEL

REMOVAL

1. Position the door opening weatherstrip aside.

CAUTION: The LH and RH A-pillar trim panels are attached to the A-pillar with a safety tether. During a side air curtain deployment, the A-pillar trim panel tether helps prevent the trim panel from striking the occupant. The tether must be detached from the A-pillar trim panel before the A-pillar trim panel can be removed. Failure to detach the tether will result in damage to the tether or the A-pillar trim panel.

2. Gently pull the upper A-pillar trim panel toward the center of the vehicle to release the A-pillar trim panel retaining clips.



Fig. 2: Pulling A-pillar Trim Panel

Courtesy of FORD MOTOR CO.

NOTE: The A-pillar trim panel tether is removed from the A-pillar for clarity.

3. Remove the A-pillar trim panel tether from the A-pillar trim panel.
 - Carefully route the A-pillar trim panel tether end through the hole in the A-pillar trim panel.

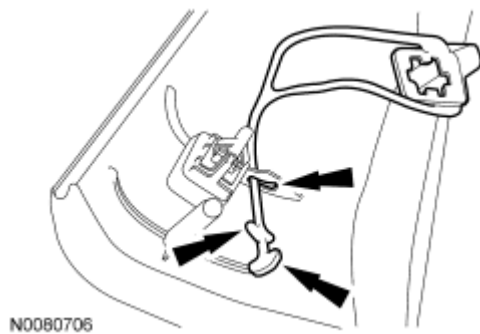


Fig. 3: Identifying A-pillar Trim Panel Tether

Courtesy of FORD MOTOR CO.

4. Remove the A-pillar trim panel.

INSTALLATION

1. Install the lower A-pillar trim panel in the instrument panel.

WARNING: A new A-pillar trim panel tether must be installed if the tether is damaged or does not fasten correctly. During a side air curtain deployment the A-pillar trim panel tether helps prevent the trim from striking the occupant. Failure to follow this instruction may result in serious injury to vehicle occupant(s).

2. Carefully route the A-pillar trim panel tether end through the hole in the A-pillar trim panel.
3. Install the A-pillar trim panel onto the A-pillar.
4. Install the door opening weatherstrip.

B-PILLAR TRIM PANEL

REMOVAL AND INSTALLATION

1. Position the front seats in the full forward position.

NOTE: Inspect the safety belt D-ring cover for damage. If the safety belt D-ring cover does not remain in place, install a new cover.

2. Remove the safety belt D-ring cover and remove the safety belt bolt.
 - To install, tighten to 54 N.m (40 lb-ft).

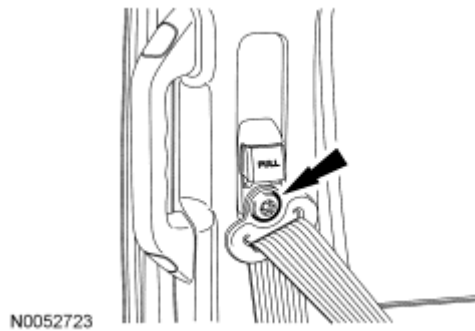


Fig. 4: Locating Safety Belt Bolt
Courtesy of FORD MOTOR CO.

3. Remove the front door scuff plate trim panel.
4. Remove the rear door scuff plate trim panel.
5. Remove the lower B-pillar trim panel.
6. Position the front and rear door weatherstrips aside.
7. Remove the upper B-pillar trim panel assist handle, if equipped.
 - Remove the bolt covers.
 - Remove the bolts.
 - To install, tighten to 9 N.m (80 lb-in).

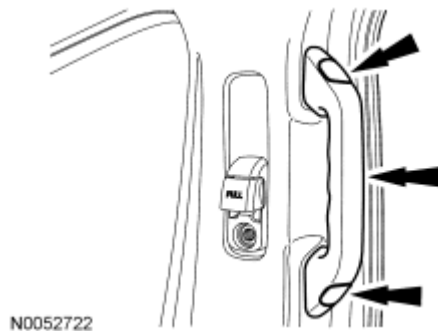


Fig. 5: Identifying Upper B-Pillar Trim Panel Assist Handle & Bolt Covers
Courtesy of FORD MOTOR CO.

8. Remove the B-pillar trim panel.
 - Remove the screw cover.
 - Remove the screw.
 - To install, tighten to 9 N.m (80 lb-in).
9. To install, reverse the removal procedure.

C-PILLAR TRIM PANEL**REMOVAL AND INSTALLATION**

NOTE: **Inspect the safety belt D-ring cover for damage. If the safety belt D-ring cover does not remain in place, install a new cover.**

1. Remove the safety belt D-ring cover and remove the safety belt bolt.
 - To install, tighten to 54 N.m (40 lb-ft).
2. Remove the screw cover.
3. Remove the screw.
 - To install, tighten to 9 N.m (80 lb-in).
4. Position the quarter trim panel aside to allow C-pillar trim panel removal.
5. Remove the C-pillar trim panel.
 - Pull outward and downward to remove the panel.
6. To install, reverse the removal procedure.

D-PILLAR TRIM PANEL

1. Remove the quarter trim panel. For additional information, refer to **Quarter Trim Panel**.
2. Remove the D-pillar trim panel.
 - Disengage the trim panel from the retainers.
 - Disconnect the speaker wire connector from the trim panel, if equipped.

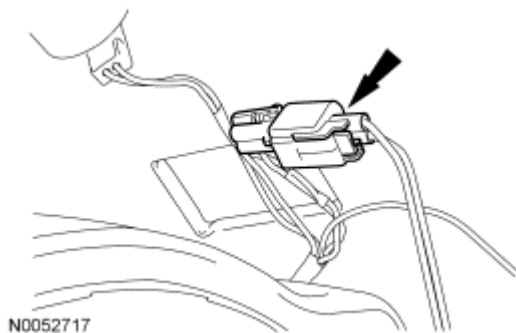


Fig. 6: Identifying Speaker Wire Connector
Courtesy of FORD MOTOR CO.

3. To install, reverse the removal procedure.

QUARTER TRIM PANEL**LH side with power liftgate**

1. Remove the cover and the switch from the LH quarter trim panel.

- Disconnect the electrical connector.

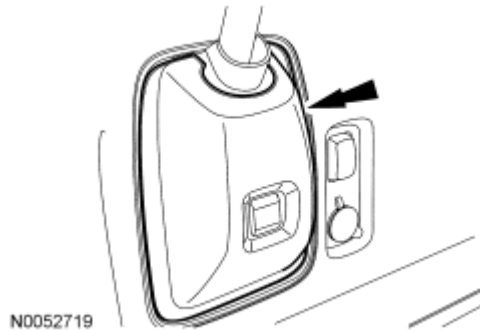


Fig. 7: Identifying LH Quarter Trim Panel
Courtesy of FORD MOTOR CO.

2. Remove the power liftgate rod-to-liftgate cover and nut.
 - To install, tighten to 11 N.m (8 lb-ft).

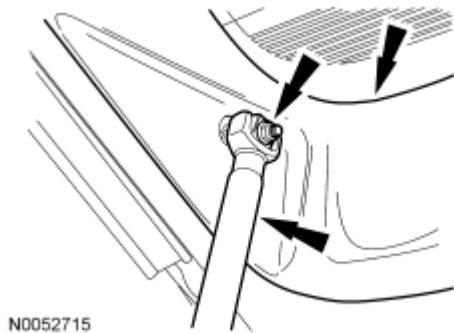


Fig. 8: Identifying Strut From Liftgate
Courtesy of FORD MOTOR CO.

All vehicles

3. Remove the rear cargo load area.
 - Remove the foam blocks from the spare tire well.

NOTE: Inspect the safety belt lower anchor bolt cover for damage. If the safety belt lower anchor bolt cover does not remain in place, install a new cover.

4. Remove the safety belt lower anchor bolt cover and remove the safety belt lower anchor bolt.
 - To install, tighten to 54 N.m (40 lb-ft).

NOTE: Make sure the pushpin retainers are removed with the quarter trim panel.

5. Remove the RH or LH quarter trim panel.

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Edge & MKX

- Disconnect the electrical connectors, if equipped.

6. To install, reverse the removal procedure.

DOOR TRIM PANEL - FRONT

NOTE: MKX shown, Edge similar.

NOTE: RH door shown, LH door similar.

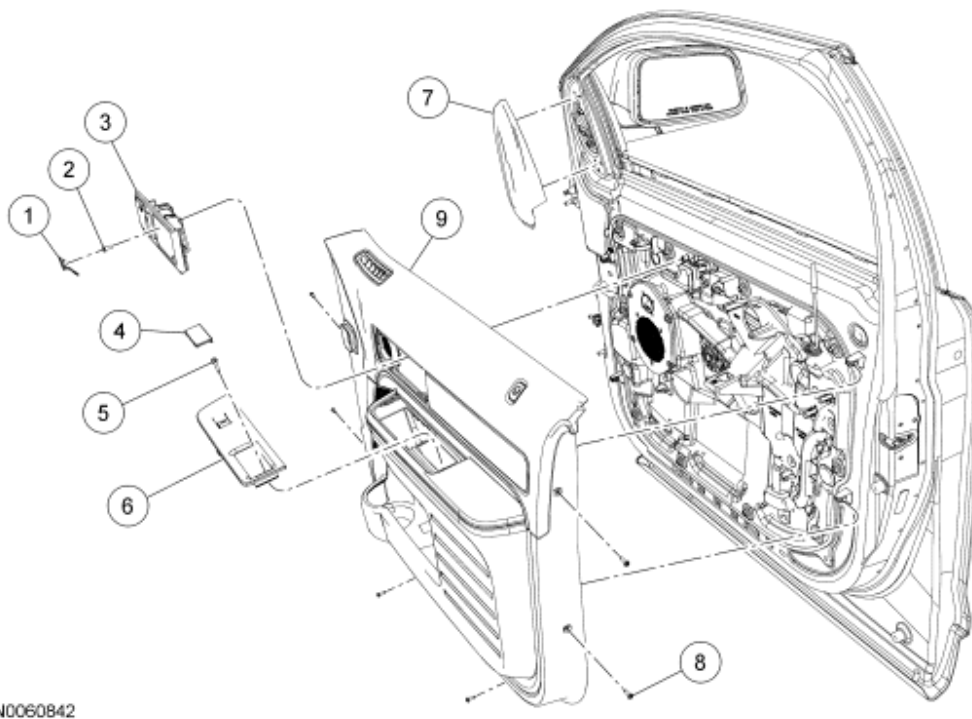


Fig. 9: Exploded View Of Front Door Trim Panel
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	-	Front door handle bezel screw cover
2	W712934	Front door handle bezel screw
3	22620 RH/ 22621 LH	Front door handle bezel
4	22670	Front door window control switch bezel screw cover (MKX only)
5	W503904	Front door window control switch bezel screw
6	14524 RH/ 14525 LH	Front door window control switch bezel
7	17D720 RH/ 17D721 LH	Front door trim sail panel
8	W708412	Front door trim panel screw (6 required)

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Edge & MKX

9	23942 RH/ 23943 LH	Front door trim panel
---	--------------------	-----------------------

REMOVAL AND INSTALLATION

All vehicles

1. Remove the front door handle bezel.
 - Remove the screw cover.
 - Remove the screw.
 - Remove the front door handle bezel.
 - Disconnect the electrical connectors, if equipped.

MKX only

2. Remove the screw cover.

All vehicles

3. Remove the screw.
4. Remove the 6 front door trim panel screws.
5. Disengage the bottom of the door trim panel from the door.
 - Pull outward to disengage the push nuts from the retainers.
6. Lift the top of the door trim panel edge upward and out of the beltline molding.
7. Pull the lock rod through the lock rod grommet.
8. Remove the front door trim panel.
 - Disconnect the electrical connectors.
9. To install, reverse the removal procedure.

DOOR TRIM PANEL - REAR

NOTE: MKX shown, Edge similar.

NOTE: RH door shown, LH door similar.

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Edge & MKX

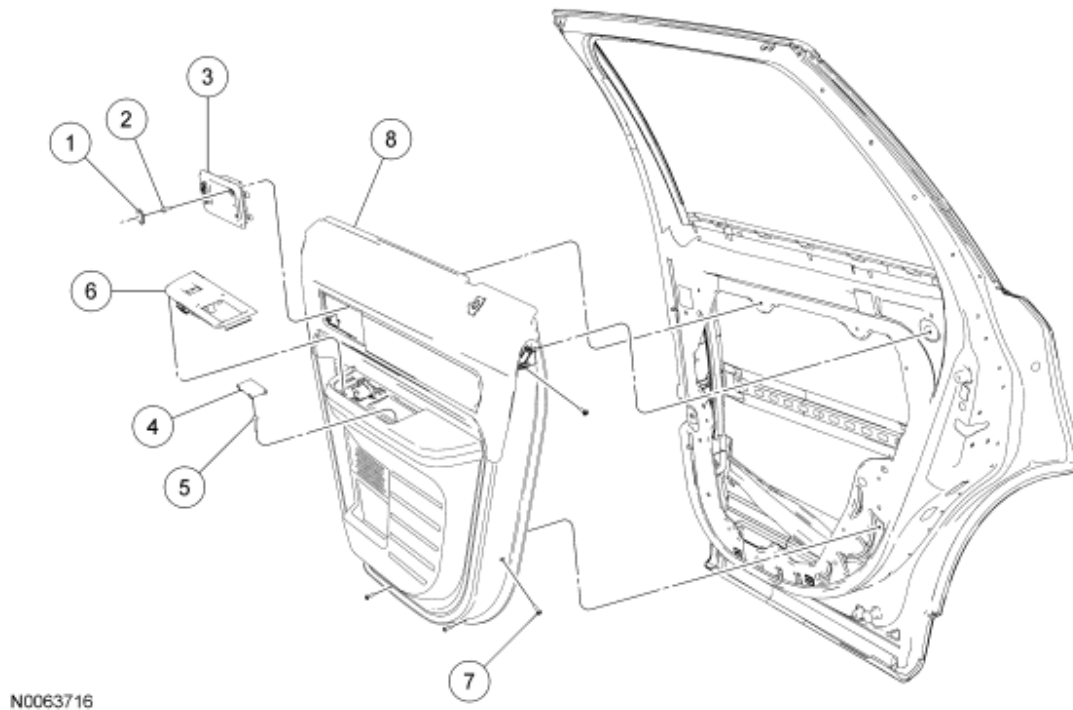


Fig. 10: Exploded View Of Rear Door Trim Panel
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	-	Rear door handle bezel screw cover
2	W712934	Rear door handle bezel screw
3	22620 RH/ 22621 LH	Rear door handle bezel
4	22670	Rear door trim pull handle cup screw cover (MKX only)
5	W503904	Rear door trim pull handle cup screw
6	14524 RH/ 14525 LH	Rear door trim window control switch bezel
7	W708412	Rear door trim panel screw (6 required)
8	27406 RH/ 27407 LH	Rear door trim panel

REMOVAL AND INSTALLATION

All vehicles

1. Remove the rear door handle bezel.
 - Remove the screw cover.
 - Remove the screw.
 - Remove the rear door handle bezel.
 - Disconnect the electrical connector, if equipped.

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Edge & MKX

MKX only

2. Remove the screw cover.

All vehicles


3. Remove the screw.
4. Remove the 6 trim panel screws.
5. Disengage the bottom of the door trim panel from the door.
 - Pull outward to disengage the push nuts from the retainers.
6. Lift the top of the door trim panel edge upward and out of the beltline molding.
7. Pull the lock rod through the lock rod grommet.
8. Remove the rear door trim panel.
 - Disconnect the electrical connectors.
9. To install, reverse the removal procedure.

LIFTGATE TRIM PANEL

NOTE: **Non-powered liftgate shown, powered liftgate similar.**

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Edge & MKX

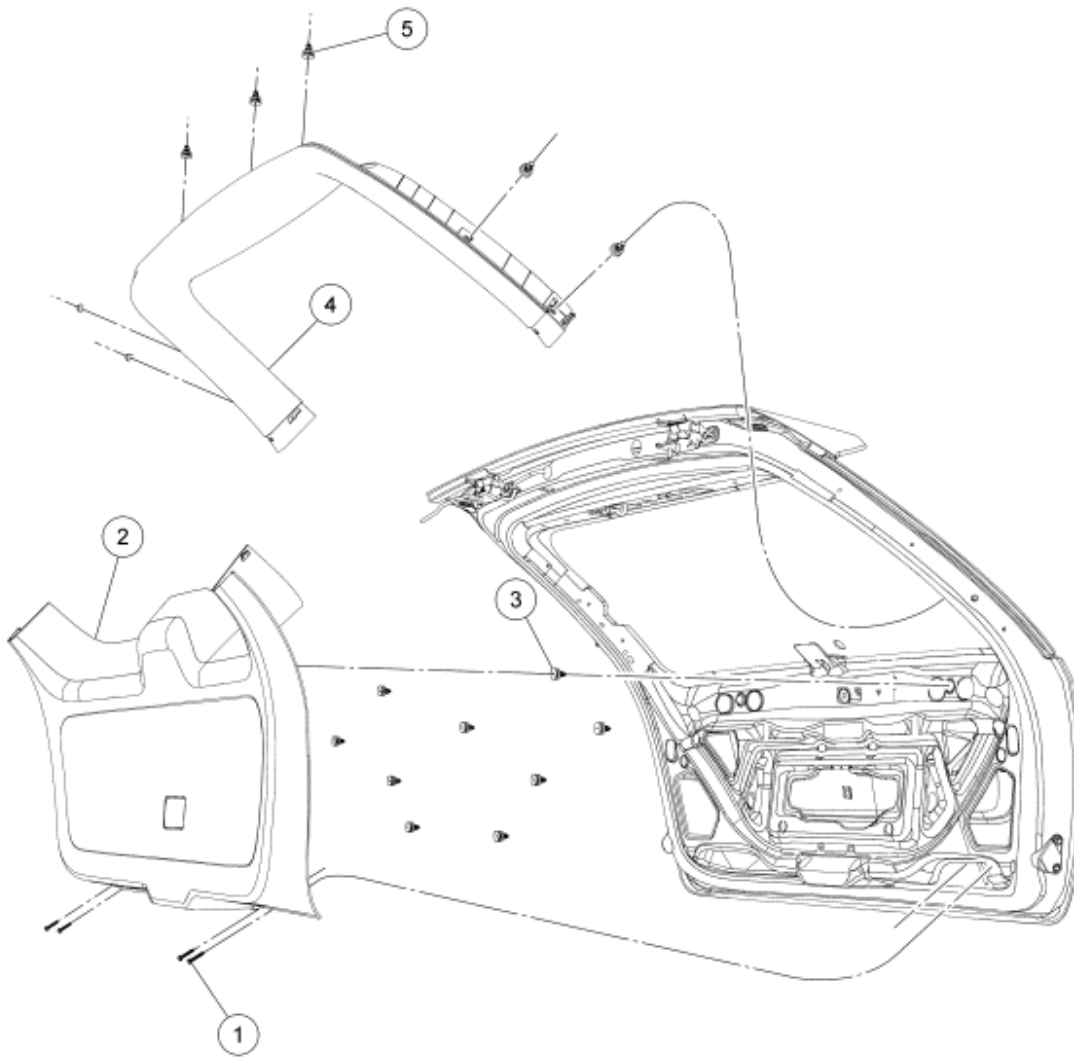

N0080042

Fig. 11: Identifying Liftgate Trim Panel
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	W711043	Liftgate lower trim panel screw (4 required)
2	46404	Liftgate lower trim panel
3	W711043	Liftgate lower trim panel retainer (11 required)
4	42410	Liftgate upper trim panel
5	W711043	Liftgate upper trim panel retainer (7 required)

1. Remove the power liftgate rod-to-liftgate cover and nut, if equipped.

- To install, tighten to 11 N.m (8 lb-ft).

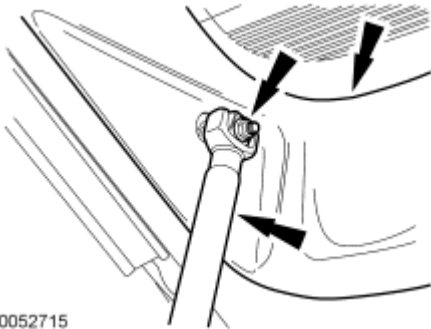


Fig. 12: Identifying Strut From Liftgate
Courtesy of FORD MOTOR CO.

NOTE: The back of the liftgate trim panel is shown indicating the location of the liftgate trim panel retainers.

2. Remove the liftgate lower trim panel.
 - Remove the 4 liftgate lower trim panel screws.
 - Pull outward on the liftgate lower trim panel to release the liftgate lower trim panel retainers.



Fig. 13: Identifying Liftgate Lower Trim Panel Retainers
Courtesy of FORD MOTOR CO.

3. Remove the liftgate upper trim panel.
4. To install, reverse the removal procedure.

POWER POINT

Special Tools

Illustration	Tool Name	Tool Number
	Remover, Power Point Socket	501-039 or equivalent

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Edge & MKX




ST3024-A

REMOVAL

NOTE: Power point cover may differ depending on location.


1. Open the power point cover.
2. Install the Power Point Socket Remover in one of the power point socket slots.

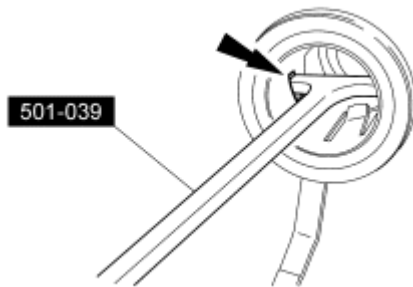

N0061767

Fig. 14: Installing Special Tool In Power Point Socket Slot
Courtesy of FORD MOTOR CO.

3. Position the Power Point Socket Remover so that it engages in the adjacent slot.

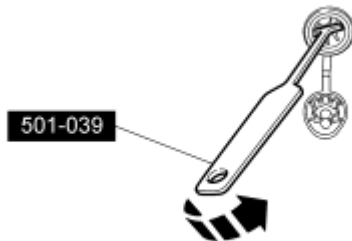

N0061768

Fig. 15: Positioning Special Tool To Engage In Adjacent Slot
Courtesy of FORD MOTOR CO.

4. Using the Power Point Socket Remover, pull the power point socket out of the retainer.

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Edge & MKX

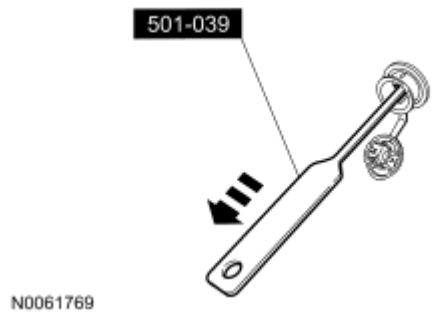


Fig. 16: Pulling Power Point Socket Out Of Retainer
Courtesy of FORD MOTOR CO.

5. Disconnect the electrical connector.

INSTALLATION


1. Connect the electrical connector.
2. Slide the power point socket into the retainer.

HEADLINER

NOTE: Headliner with roof opening panel shown, headliner without roof opening panel similar.

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Edge & MKX

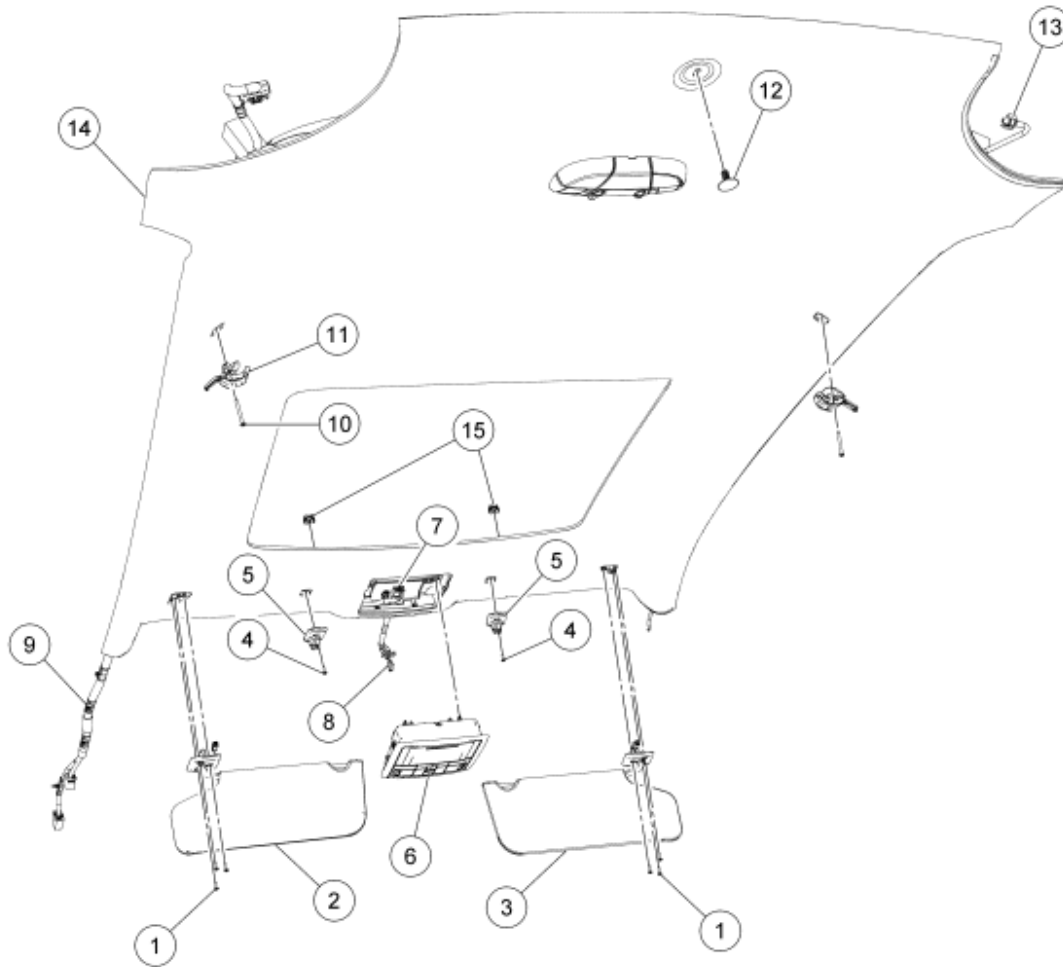

N0080538

Fig. 17: Identifying Headliner With Roof Opening Panel
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	W504242	Sun visor screws (6 required)
2	04101	LH sun visor
3	04100	RH sun visor
4	W504242	Sun visor arm clip screws (2 required)
5	04132	Sun visor arm clips
6	519A58	Overhead console
7	-	Overhead console electrical connector
8	-	Rear view mirror electrical connector
9	14334	Headliner wiring harness
10	W504349	Garment hanger screw

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Edge & MKX

11	29024	Garment hanger
12	W708761	Headliner pushpin retainer
13	17409	Headliner washer fluid hose
14	51944	Headliner
15	-	Headliner magnets

REMOVAL

1. If equipped, remove the rear entertainment module (RETM). For additional information, refer to **INFORMATION & ENTERTAINMENT SYSTEMS** article.
2. Remove the LH and RH A-pillar trim panels. For additional information, refer to **A-Pillar Trim Panel**.
3. Remove the LH and RH B-pillar trim panels. For additional information, refer to **B-Pillar Trim Panel**.
4. Remove the LH and RH C-pillar trim panels. For additional information, refer to **C-Pillar Trim Panel**.
5. Remove the LH and RH D-pillar trim panels. For additional information, refer to **D-Pillar Trim Panel**.
6. Remove the LH and RH quarter trim panels. For additional information, refer to **Quarter Trim Panel**.
7. If equipped, remove the power liftgate rod from the power liftgate motor assembly.
 - Squeeze the clip as shown to release and pull the power liftgate rod assembly upward.

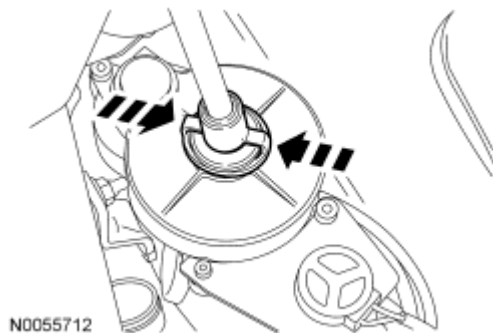


Fig. 18: Squeezing Clip To Release & Position Rod Assembly Upward
Courtesy of FORD MOTOR CO.

8. If equipped, disconnect the electrical connectors from the interior rear view mirror and compass.
9. Disconnect the electrical connectors from the wiring harness on the LH A-pillar and remove the harness from the A-pillar.

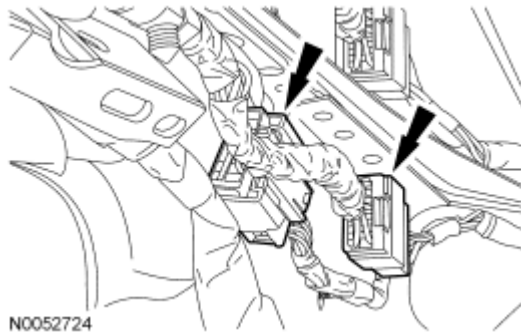


Fig. 19: Identifying Electrical Connectors From Wiring Harness On LH A-Pillar
Courtesy of FORD MOTOR CO.

10. Remove the overhead console, if equipped. For additional information, refer to **INSTRUMENT PANEL & CONSOLE** article.
11. Position the front and rear door weatherstrips aside.
12. Remove the LH and RH sun visors.
 - Remove the LH and RH sun visor screws.
 - If equipped, disconnect the electrical connector.
13. Disconnect the rear washer fluid hose connector on the RH A-pillar.

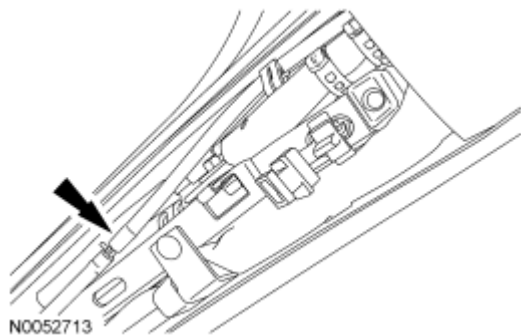


Fig. 20: Locating Rear Washer Fluid Hose Connector On RH A-Pillar
Courtesy of FORD MOTOR CO.

14. Remove the LH and RH garment hangers.
 - Remove the LH and RH garment hanger screws.
15. Position the liftgate weatherstrip aside.
16. Disconnect the rear washer fluid hose connector on the RH D-pillar.

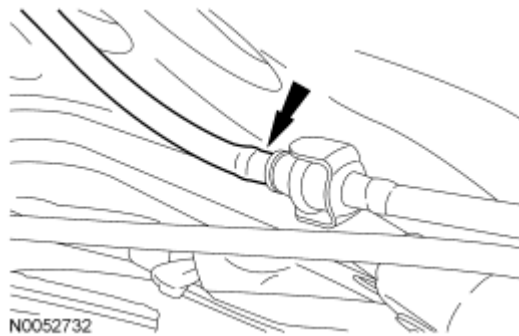


Fig. 21: Locating Rear Washer Fluid Hose Routing
Courtesy of FORD MOTOR CO.

17. Remove the headliner rear pushpin.
18. Lower the headliner and disconnect the electrical connectors on the LH D-pillar.

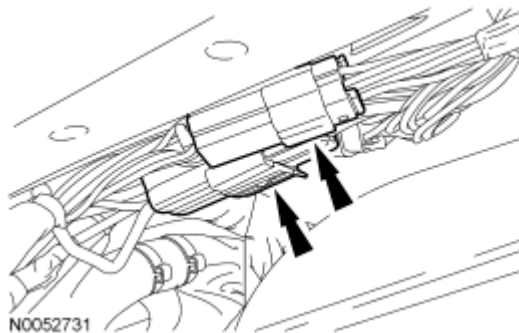


Fig. 22: Identifying Electrical Connectors On LH D-Pillar
Courtesy of FORD MOTOR CO.

CAUTION: To avoid damaging the headliner, an assistant is required for this step.

19. Remove the headliner through the liftgate opening.

INSTALLATION

Installing a new headliner

1. Using a suitable marking tool, mark the new headliner with the routing and exit points of the wire harness from the original headliner.
2. Carefully remove the wire harness from the original headliner.

CAUTION: Make sure not to damage the wire harness when cutting the excess adhesive from the wire harness.

2008 Ford Edge SE


2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Edge & MKX

3. Cut and remove any excessive adhesive from the wire harness.

CAUTION: Make sure to provide enough length to the wire harness connector ends when positioning the wire harness onto the headliner. Otherwise, the wire harness connector ends will not be able to be connected when the headliner is installed into the vehicle.

NOTE: Headliner with RETM opening shown, all other headliners similar.

4. Position the wire harness onto the new headliner and apply tape to temporarily attach the wire harness onto the headliner.

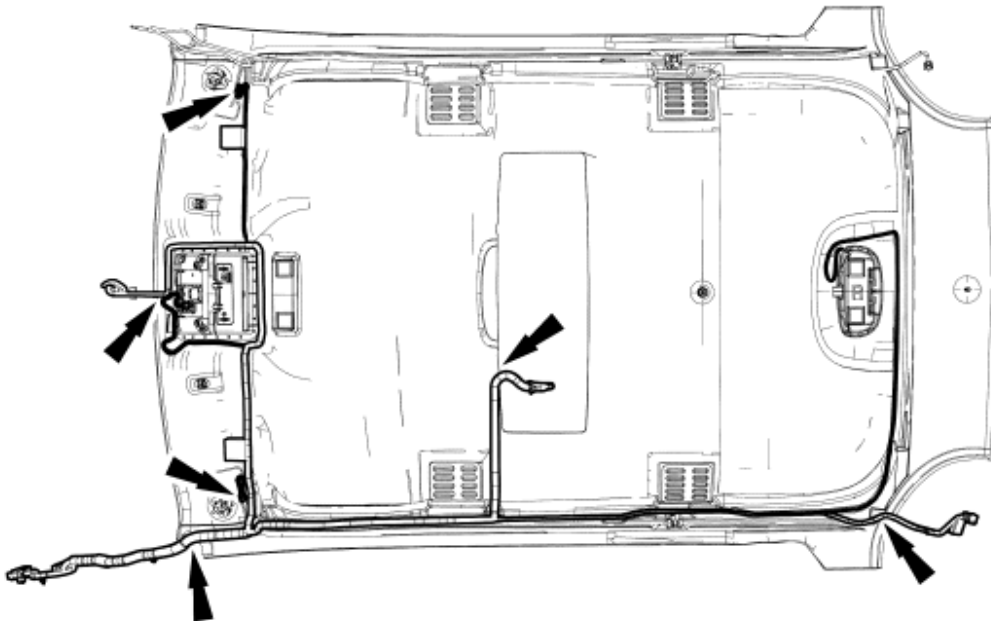

N0080539

Fig. 23: Identifying Wire Harness
Courtesy of FORD MOTOR CO.

NOTE: The 3M Duramix 4747 Super Fast Adhesive will set in 22 seconds. Continually make sure that the wire harness is routed correctly when applying the adhesive.

NOTE: Apply adhesive to the entire length of the wire harness when fastening the wire harness to the headliner. Otherwise, the wire harness can loosen from the headliner and a vibration or rattle can occur.

5. Obtain 3M Duramix 4747 Super Fast Adhesive commercially and apply onto the headliner and wire harness.

6. Transfer parts as needed.

All headliners

CAUTION: To avoid damaging the headliner, an assistant is required for this step.

7. Install the headliner through the liftgate opening.
8. Connect the electrical connectors on the LH D-pillar.

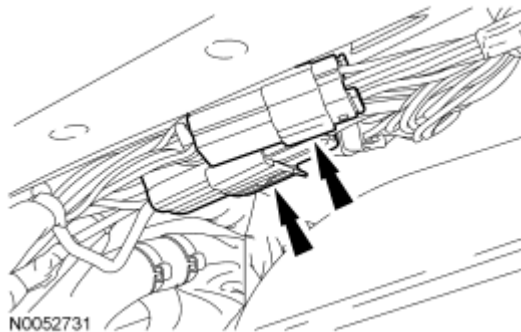


Fig. 24: Identifying Electrical Connectors On LH D-Pillar
Courtesy of FORD MOTOR CO.

9. Install the headliner rear pushpin.
10. Connect the rear washer fluid hose connector on the RH D-pillar.

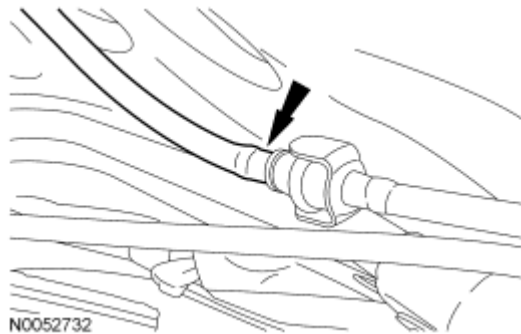


Fig. 25: Locating Rear Washer Fluid Hose Routing
Courtesy of FORD MOTOR CO.

11. Install the liftgate weatherstrip.
12. Install the LH and RH garment hangers.
 - Install and tighten the LH and RH garment hanger screws.
13. Connect the rear washer fluid hose connector on the RH A-pillar.

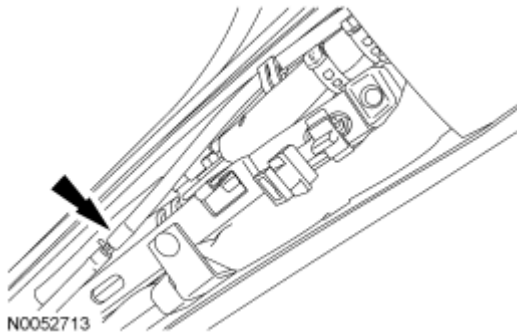


Fig. 26: Locating Rear Washer Fluid Hose Connector On RH A-Pillar
Courtesy of FORD MOTOR CO.

14. Install the LH and RH sun visors in the following sequence.
 1. If equipped, connect the electrical connector.
 2. Install and tighten the LH and RH sun visor screws.
15. Install the front and rear door weatherstrips.
16. If equipped, install the overhead console. For additional information, refer to **INSTRUMENT PANEL & CONSOLE** article.
17. Connect the electrical connectors on the LH A-pillar and attach the wire harness onto the A-pillar.



Fig. 27: Identifying Electrical Connectors From Wiring Harness On LH A-Pillar
Courtesy of FORD MOTOR CO.

18. If equipped, connect the electrical connectors to the interior rear view mirror and compass.
19. If equipped, install the power liftgate rod.
20. Install the LH and RH quarter trim panels. For additional information, refer to **Quarter Trim Panel**.
21. Install the LH and RH D-pillar trim panels. For additional information, refer to **D-Pillar Trim Panel**.
22. Install the LH and RH C-pillar trim panels. For additional information, refer to **C-Pillar Trim Panel**.
23. Install the LH and RH B-pillar trim panels. For additional information, refer to **B-Pillar Trim Panel**.
24. Install the LH and RH A-pillar trim panels. For additional information, refer to **A-Pillar Trim Panel**.
25. If equipped, install the RETM. For additional information, refer to **INFORMATION & ENTERTAINMENT SYSTEMS** article.