# ErgoDox EZ Default Firmware Keymap

V1.1, Implemented in Quantum (QMK) Firmware

## Base layer

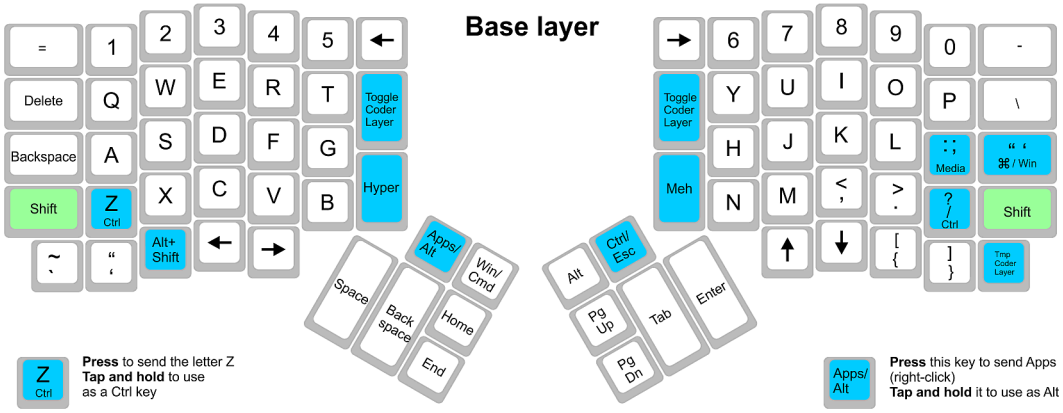


**Z Ctrl** — **Press** to send the letter Z **Tap and hold** to use as a Ctrl key

**Hyper** — Sends Alt+Ctrl+Shift+Cmd. Useful for setting system-wide hotkeys,as these won't conflict with any hotkeys on your current application.

**Meh** — Similar to Hyper, but not quite so hyper: Sends Alt+Ctrl+Shift, for applications that don't recognize Cmd (Win) as a modifier.

**Toggle Coder Layer** — Activates the Coder layer. Press once to activate, press again to switch off.

**Apps/ Alt** — **Press** this key to send Apps (right-click) **Tap and hold** it to use as Alt

**Alt+ Shift** — A single key to send Alt+Shift, useful for bilingual users and custom shortcuts.

**Ctrl/ Esc** — **Press** to send Esc **Tap and hold** to use as Ctrl

**: ; Media** — **Press** to send a semicolon **Tap and hold** to activate the media layer

**Tmp Coder Layer** — **Tap** to activate the toggle layer. **Tap and hold** to temporarily activate the coder layer (let go to deactivate)

**? / Ctrl** — **Press** to send a slash **Tap and hold** to use as a Ctrl key

**Shift** — Still works as you'd expect. So Shift+0 sends ) and so on.

**" ' ⌘ / Win** — **Press** to send a quote **Tap and hold** to use as a Cmd (Mac) or Win key

## Coder layer

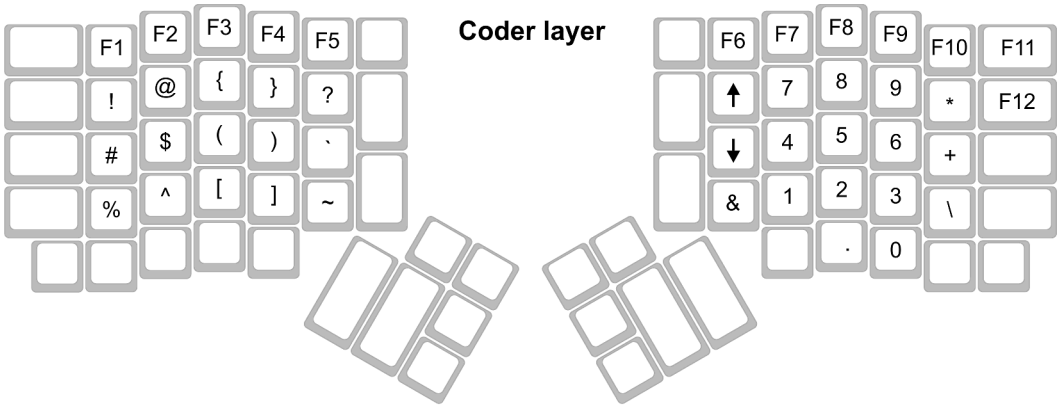


## Media & Mouse Layer

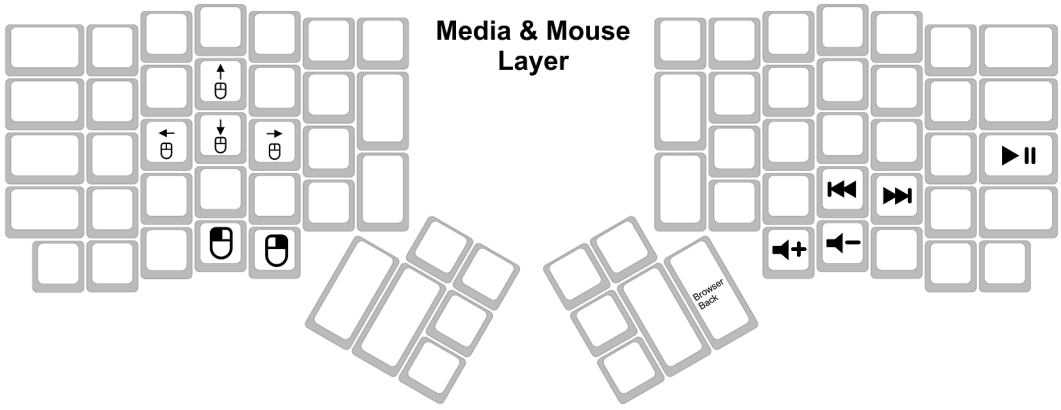


* Any key which is not defined (white) in a layer falls back to the base layer.
So pressing the Space key (for example) still sends Space.