
OVERVIEW

Find your way: pages, settings, link and fault status.

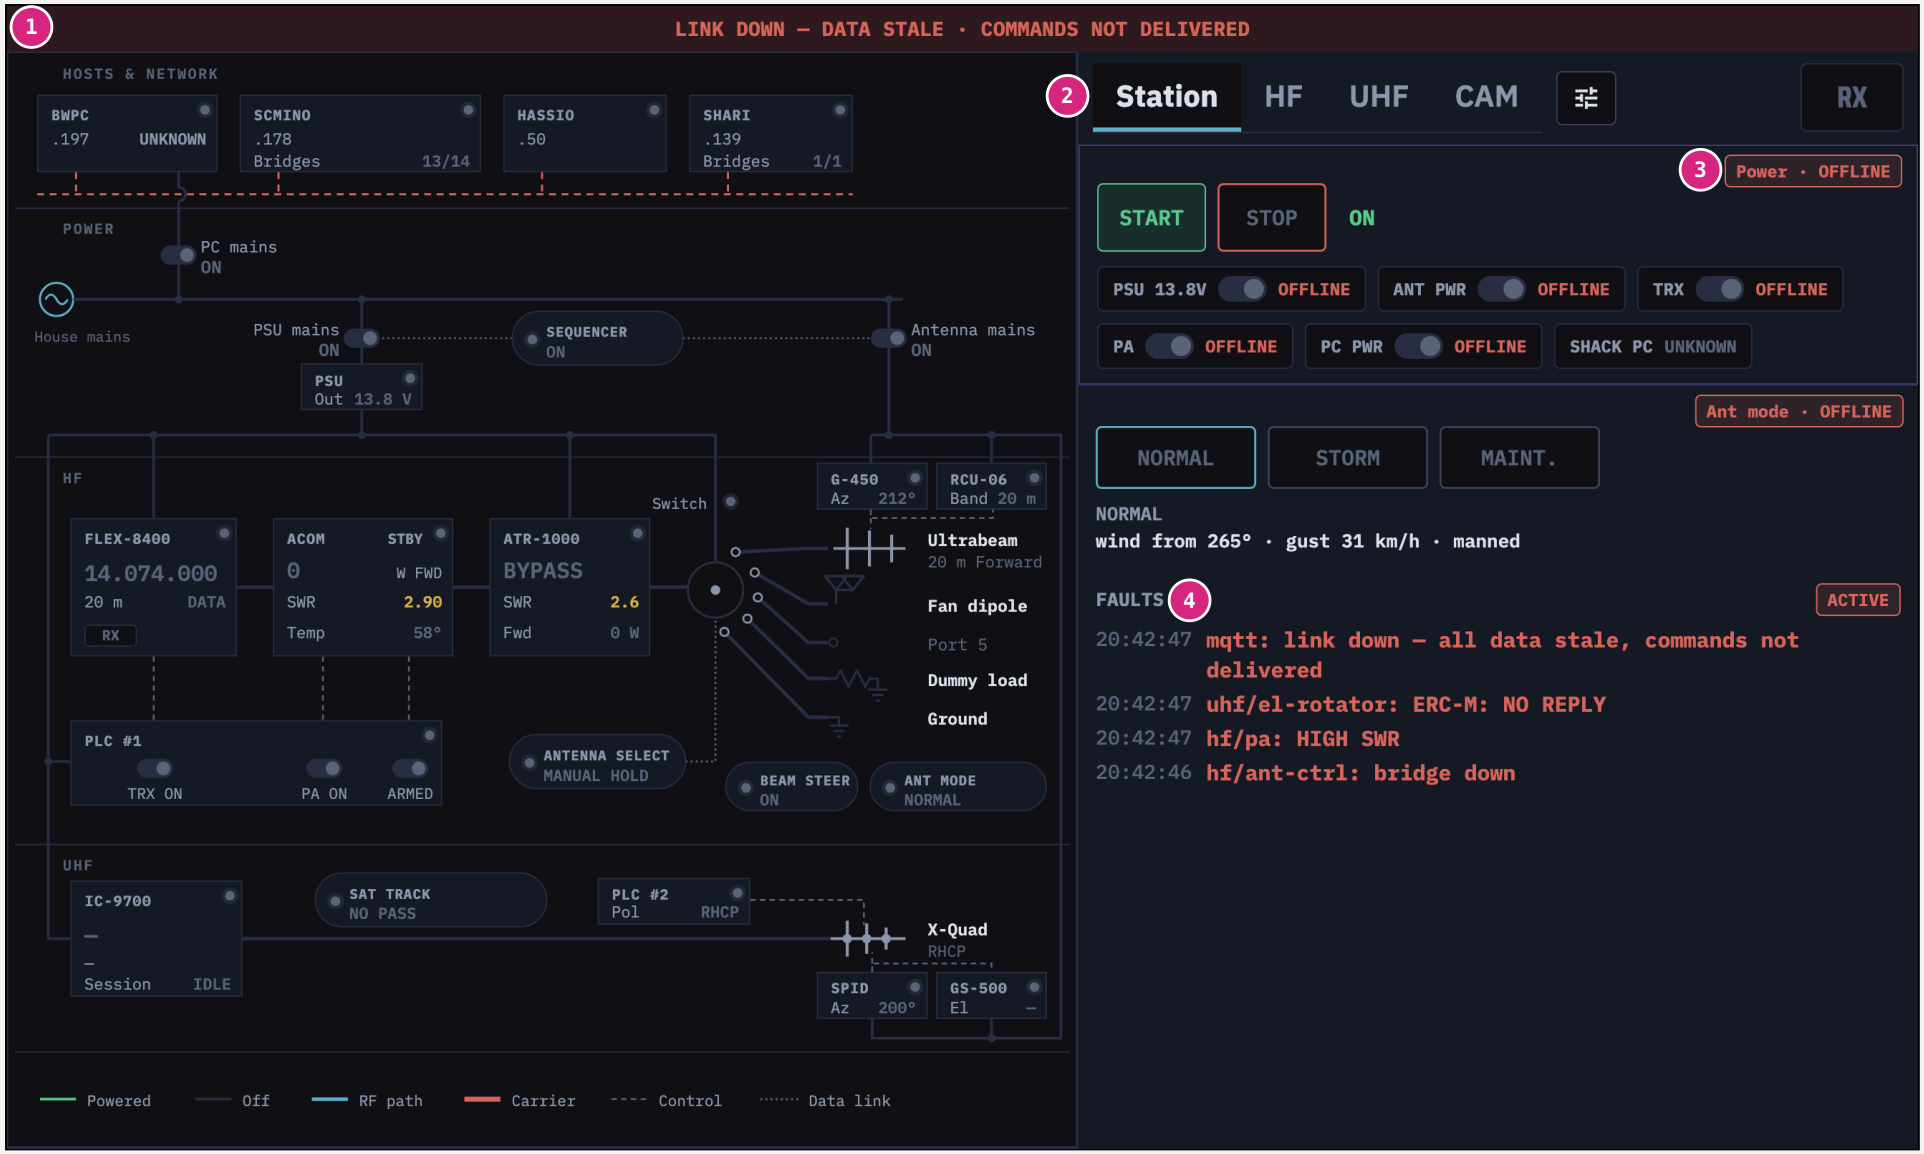

1 LINK DOWN banner
This console lost the broker; bus commands dropped, not queued

2 Station · HF · UHF · CAM
These are the page buttons: tap a name to switch

3 Status pill
Any one device down or unpowered turns the pill OFFLINE


4 FAULTS
Grey: cleared, or antenna gear unpowered on purpose

Everything that is not specifically labeled does what you think it does™

cyan = active / selected · green = healthy · amber = attention / hold · red = danger · TX · offline

HF PAGE

Aim the beam, pick the antenna, drive PA, tuner and FLEX.

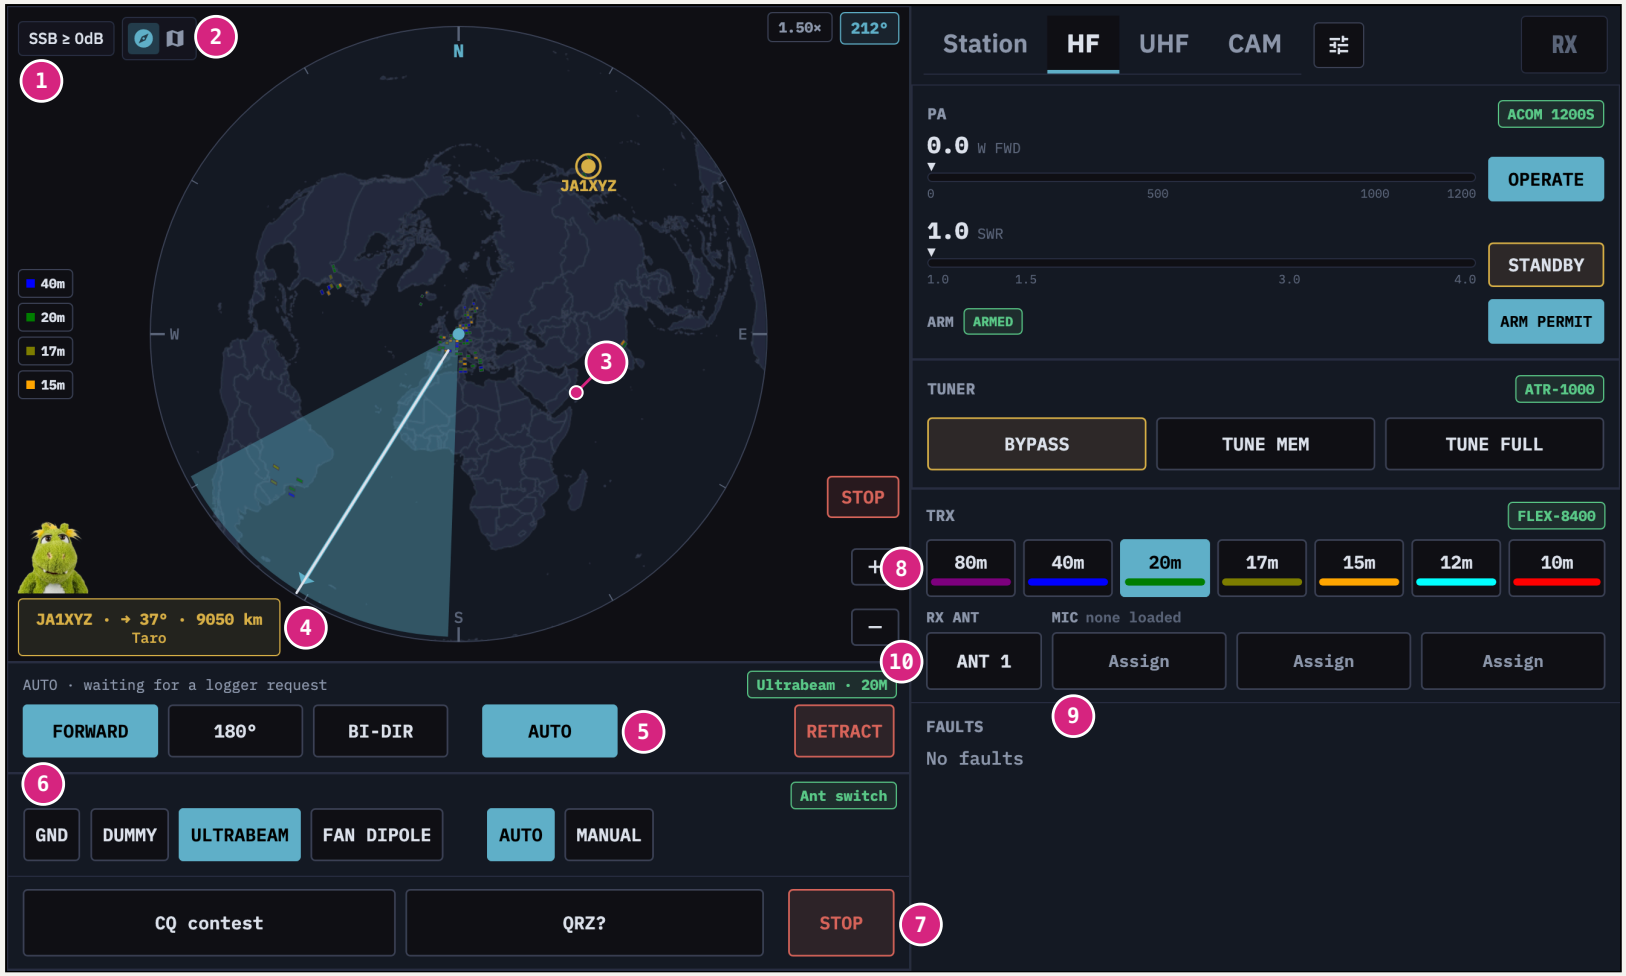


1. **Spot filter (SSB ≥ 0dB)**
   Spot SNR gate follows radio mode: SSB 0 dB, CW –15 dB
2. **Azimuthal / Mercator**
   Map projection; beam and tap-to-aim on azimuthal only
3. **Compass**
   Tap to aim; arrow = boom, cone = radiation lobe
4. **Selected station**
   Call keyed in DXLog/Log4OM; tap to aim at it
5. **AUTO (beam steering)**
   Logger/map aims flip 180° if behind, turn only outside ±30°
6. **Antenna ports**
   30-min idle grounds unless MANUAL tapped
7. **Voice keyer (DVK)**
   Double-tap: pick memory + repeat time. Hold 0.7 s: auto-repeat [n] countdown; TX pauses it, tap resumes, hold exits
8. **Band selection**
   Re-tap active band: SSB↔CW; stripe = spot colour on map
9. **MIC profiles**
   Hold to rebind; MIC line shows only console-loaded profiles
10. **RX ANT**
    Tap: ANT 1 ↔ RX A on the slice you hear; amber = set in SmartSDR

Everything that is not specifically labeled does what you think it does™

cyan = active / selected · green = healthy · amber = attention / hold · red = danger · TX · offline

STATION PAGE

Power the station up and down, set the antenna mode; see what runs where.

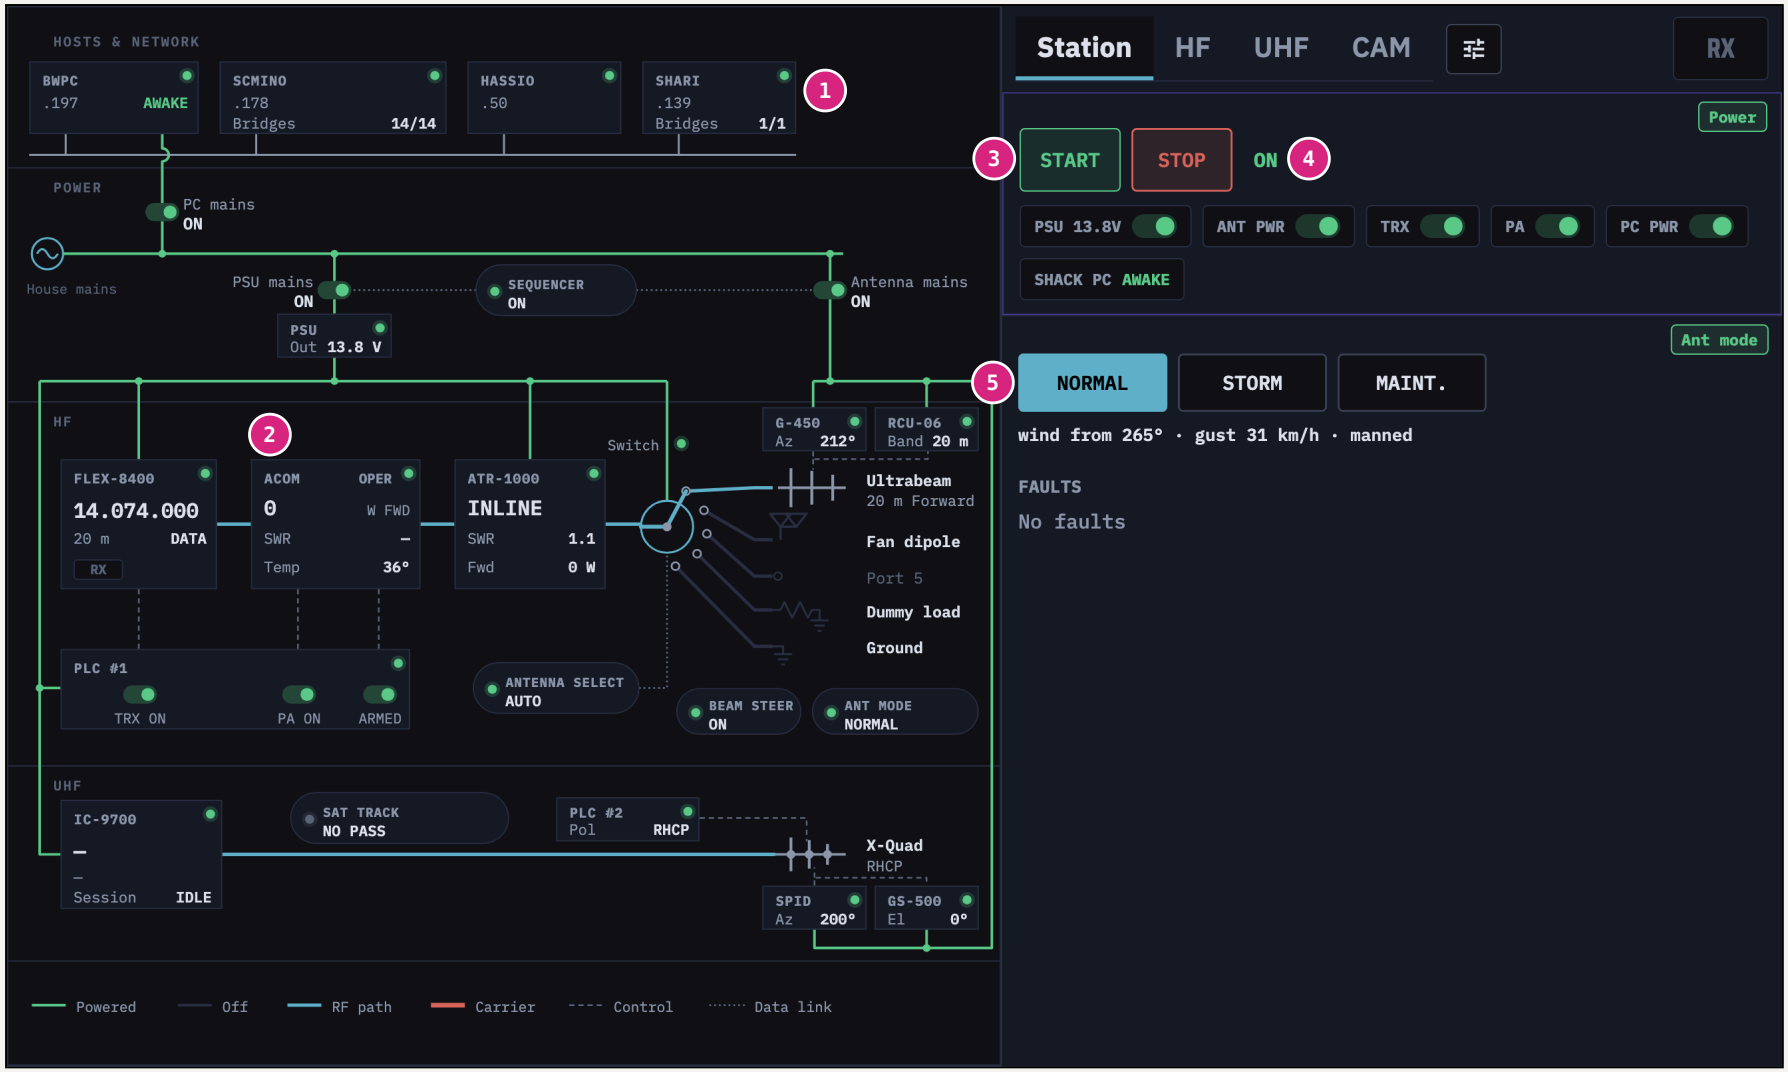

1 Bridges n/m
Up / expected bridges on that host; tap lists each

2 Schematic block (tap)
Tap any block for bridge, host, all values; no controls

3 START / STOP
START also wakes STANDBY; STOP leaves PC mains on

4 Phase (ON / STANDBY)
Unused station drops to STANDBY; a FLEX VFO change wakes it


5 NORMAL / STORM / MAINT.
STORM/MAINT.: ground, retract, park, lock until NORMAL; MAINT. ±5° nudge on the HF compass

Everything that is not specifically labeled does what you think it does™

cyan = active / selected · green = healthy · amber = attention / hold · red = danger · TX · offline

UHF PAGE

Point the satellite antennas, watch the IC-9700, set polarisation.

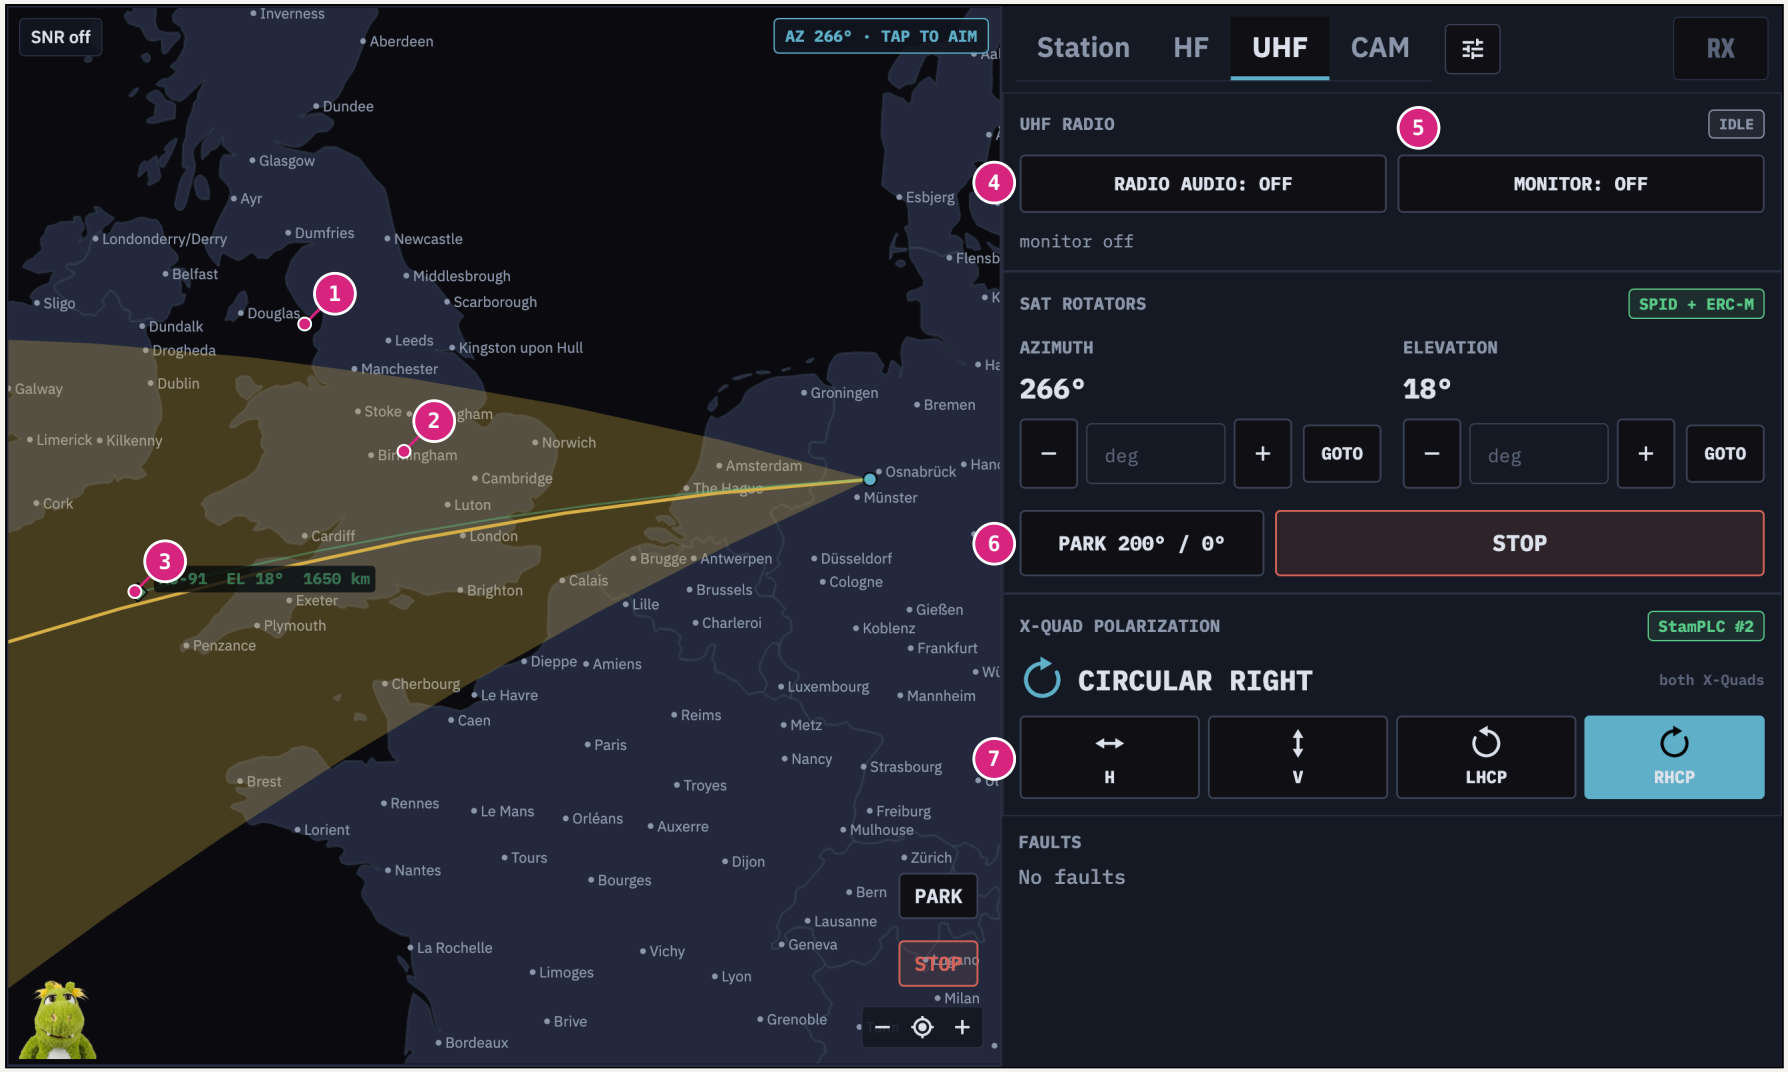

1 Map tap
Sets azimuth only (great-circle bearing); elevation unchanged

2 Beam wedge
Rotator beam ±20°, amber while a satellite is tracked

3 Satellite
OscarWatch sub-satellite point; dimmed while below horizon

4 RADIO AUDIO
Feeds CAM stream; auto-off after 60 s; wfview blocks it

5 MONITOR
Read-only CI-V readout; unavailable here, press shows ERR

6 PARK 200° / 0°
Also retunes IC-9700 (sat mode off), X-Quads to V


7 H / V / LHCP / RHCP
Manual only (PARK sets Vertical)

Everything that is not specifically labeled does what you think it does™

cyan = active / selected · green = healthy · amber = attention / hold · red = danger · TX · offline

CAM PAGE

Watch the antennas, record the stream, control IC-9700 audio.

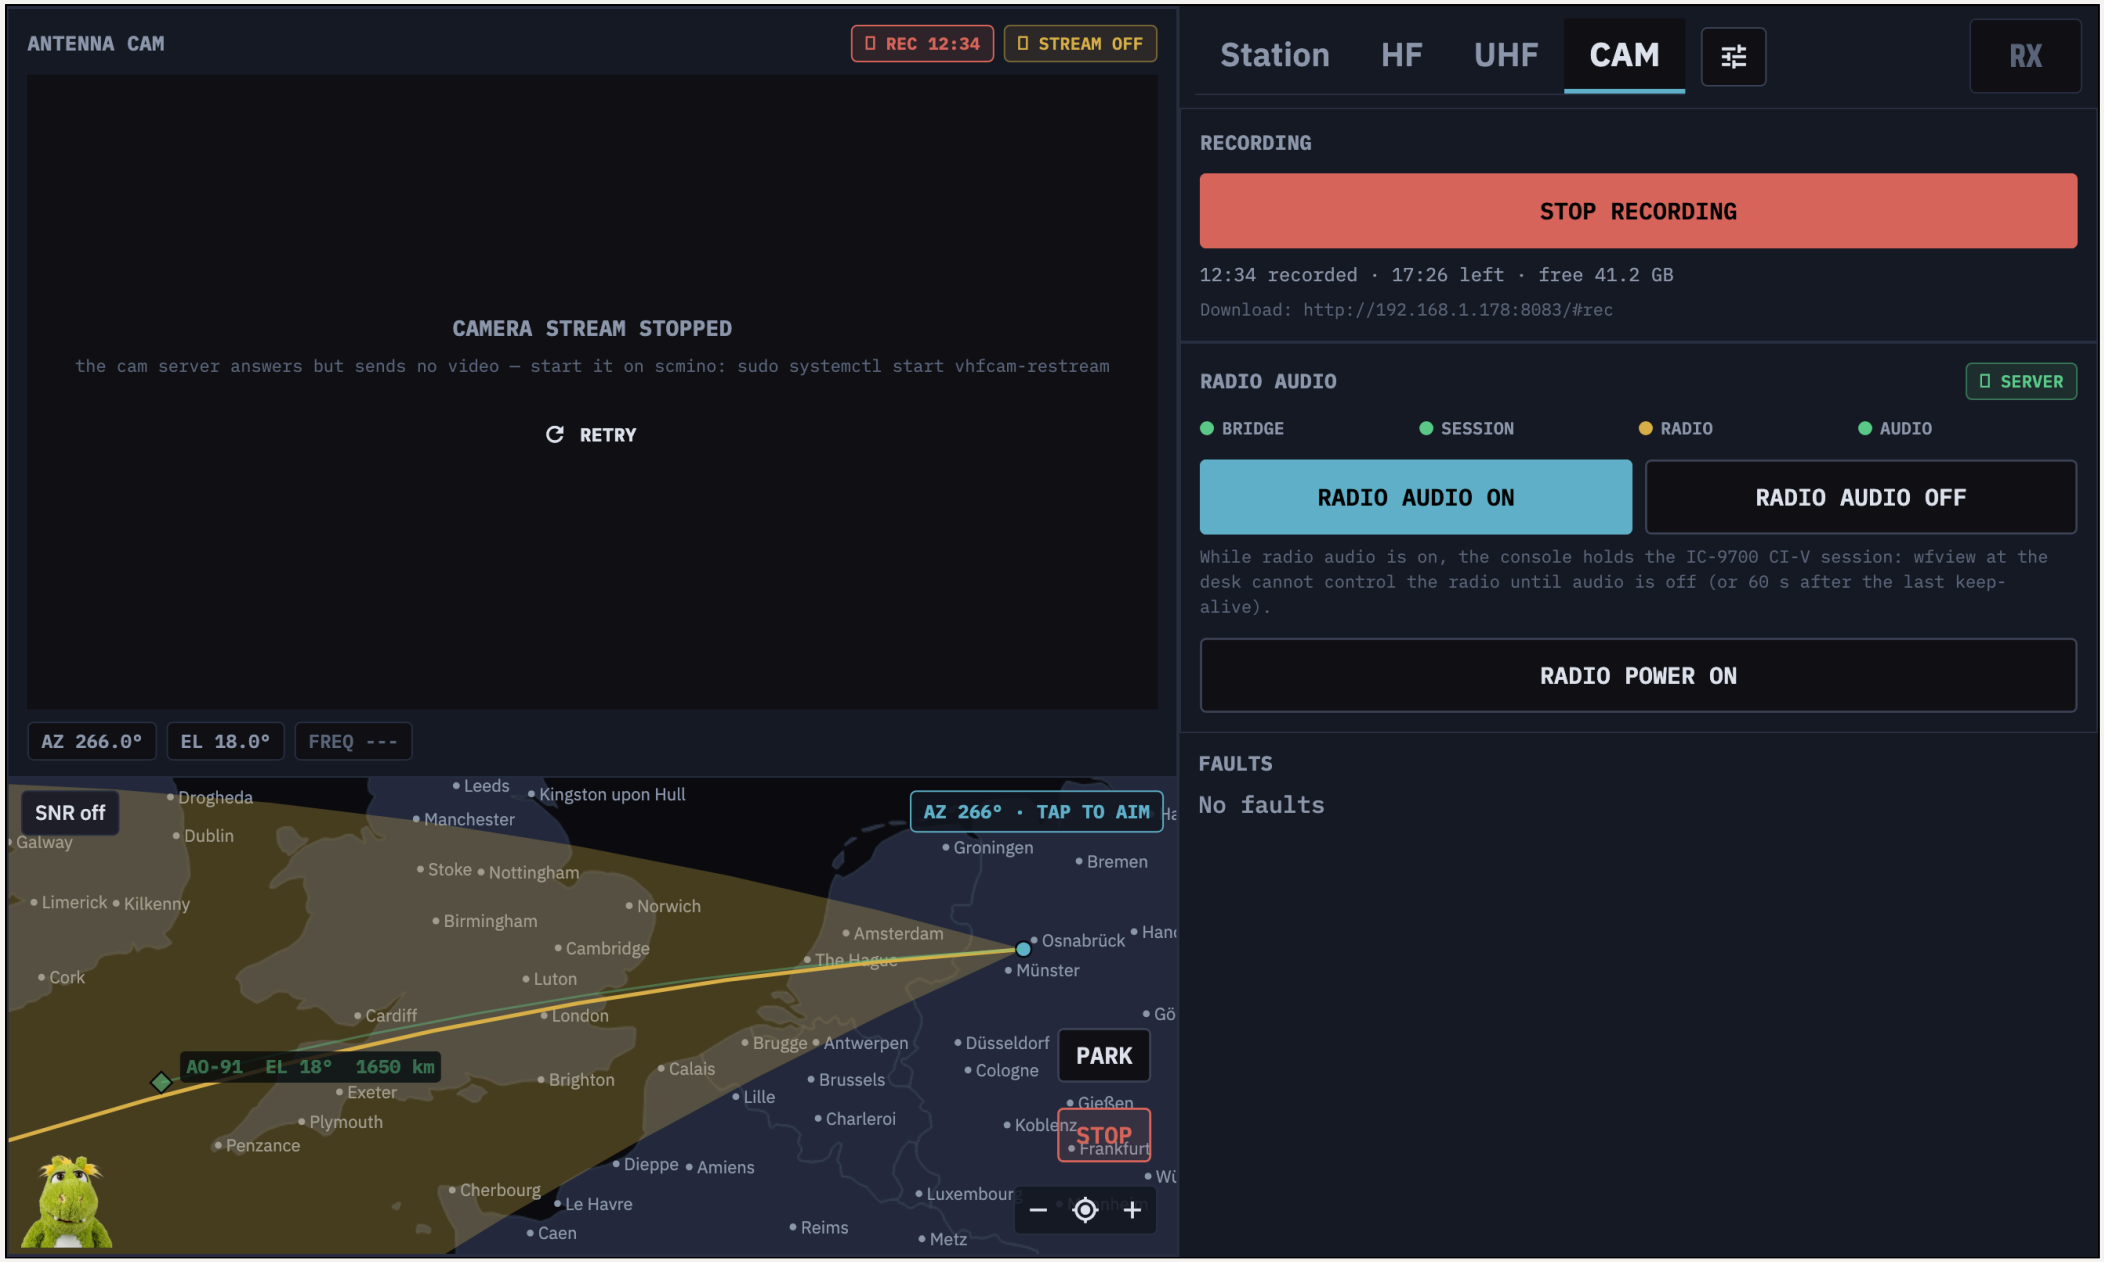

Everything that is not specifically labeled does what you think it does™

cyan = active / selected · green = healthy · amber = attention / hold · red = danger · TX · offline