
OVERVIEW

Find your way: pages, settings, link and fault status.

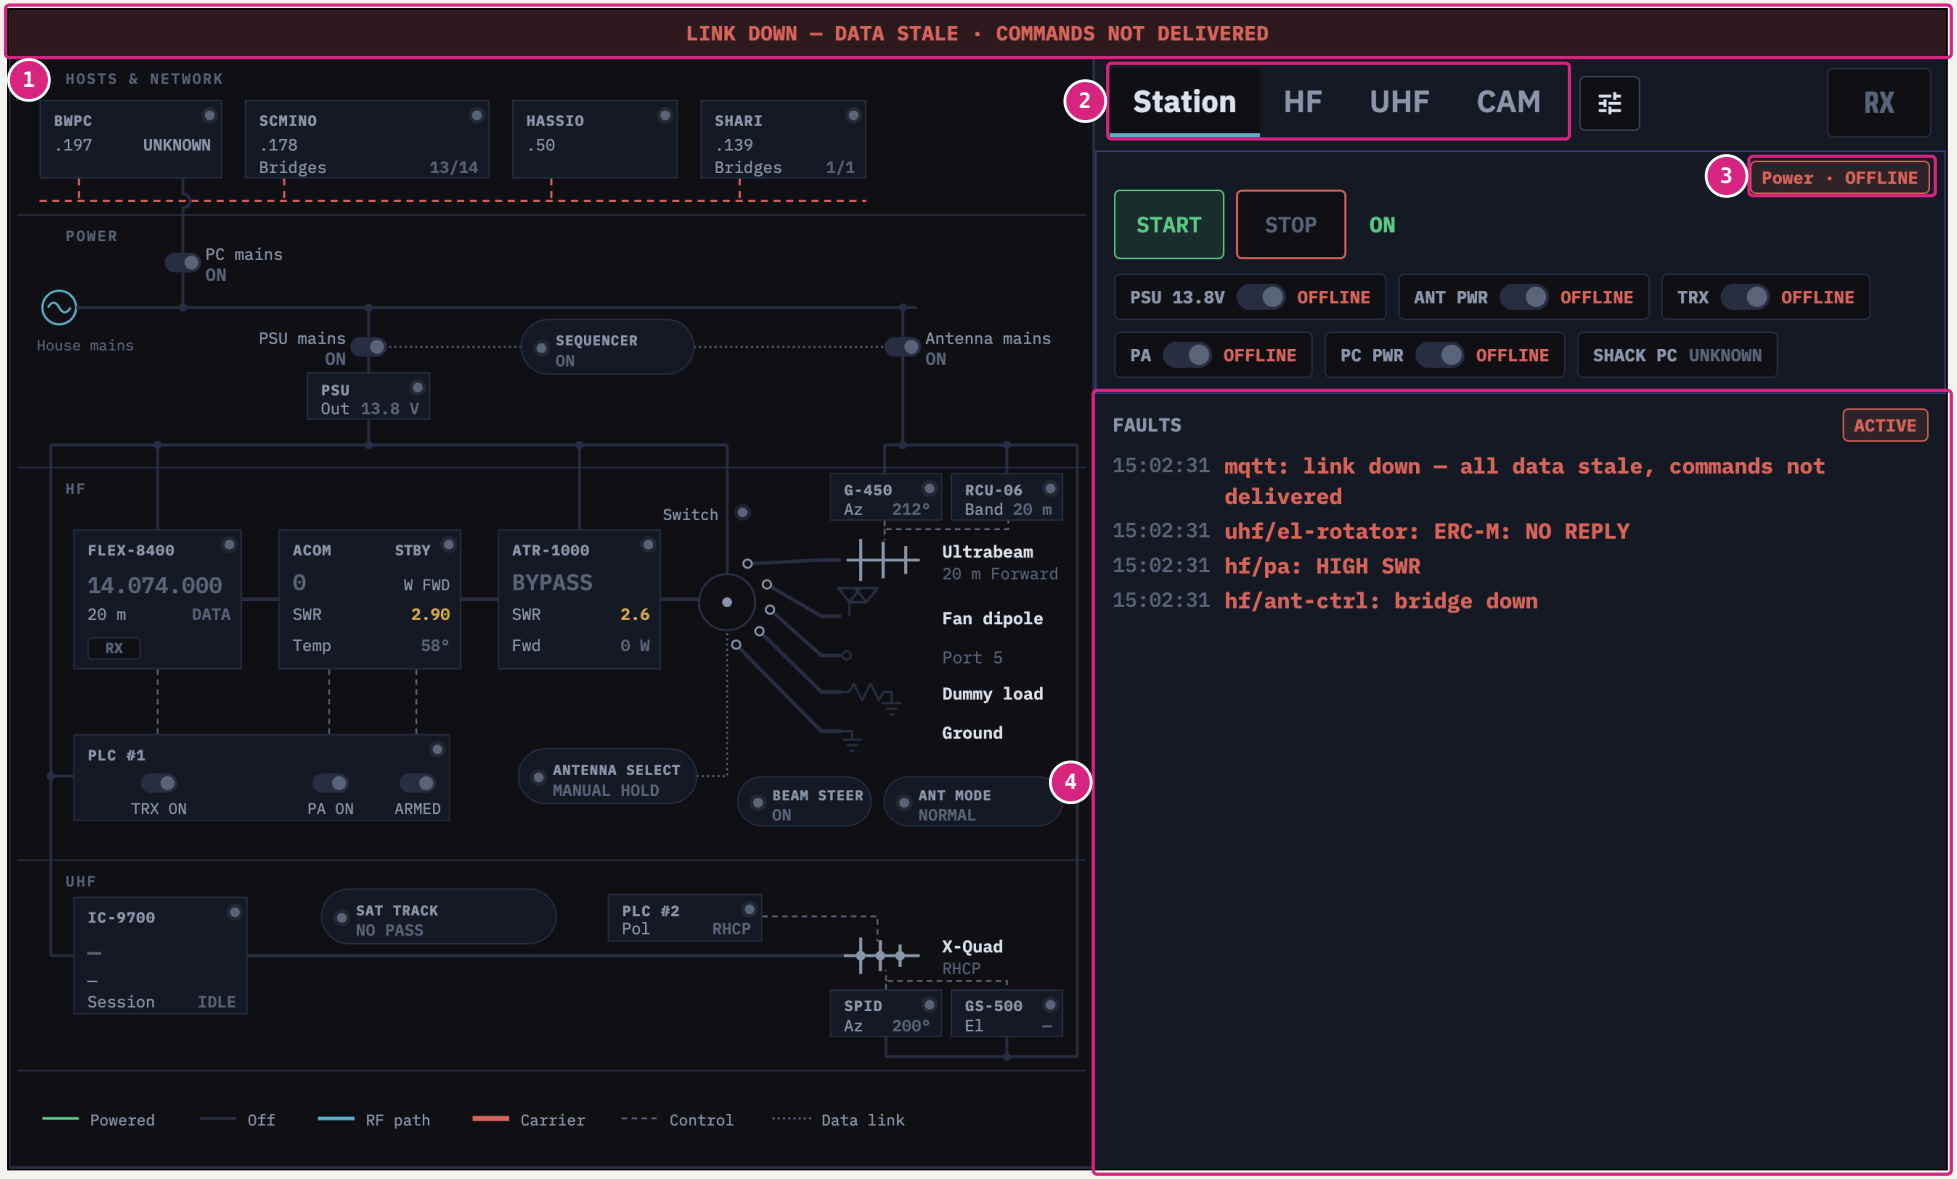

1 LINK DOWN banner
This console lost the broker; bus commands dropped, not queued

2 Station · HF · UHF · CAM
These are the page buttons: tap a name to switch

3 Status pill
Any one device down or unpowered turns the pill OFFLINE


4 FAULTS
Grey: cleared, or antenna gear unpowered on purpose

Everything that is not specifically labeled does what you think it does™

cyan = active / selected · green = healthy · amber = attention / hold · red = danger · TX · offline

HF PAGE

Aim the beam, pick the antenna, drive PA, tuner and FLEX.

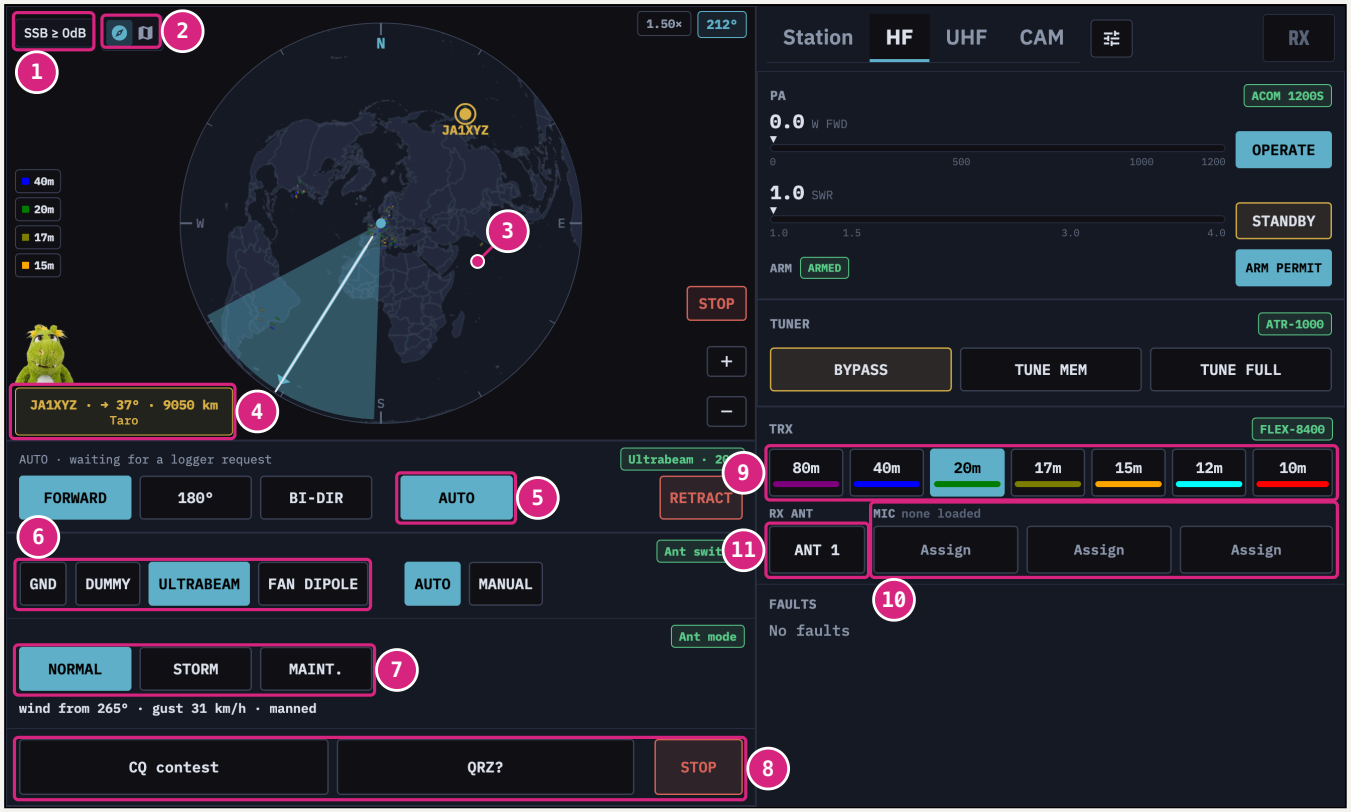

1 Spot filter (SSB ≥ 0dB)
Spot SNR gate follows radio mode: SSB 0 dB, CW –15 dB

2 Azimuthal / Mercator
Map projection; beam and tap-to-aim on azimuthal only

3 Compass
Tap to aim; arrow = boom, cone = radiation lobe

4 Selected station
Call keyed in DXLog/Log4OM; tap to aim at it

5 AUTO (beam steering)
Logger/map aims flip 180° if behind, turn only outside ±30°

6 Antenna ports
30-min idle grounds unless MANUAL tapped

7 NORMAL / STORM / MAINT.
STORM/MAINT.: ground, retract, park, lock until NORMAL; MAINT. ±5° nudge

8 Voice keyer (DVK)
Double-tap: pick memory + repeat time. Hold 0.7 s: auto-repeat [n] countdown; TX pauses it, tap resumes, hold exits

9 Band selection
Re-tap active band: SSB↔CW; stripe = spot colour on map

10 MIC profiles
Hold to rebind; MIC line shows only console-loaded profiles


11 RX ANT
Tap: ANT 1 ↔ RX A on the slice you hear; amber = set in SmartSDR

Everything that is not specifically labeled does what you think it does™

cyan = active / selected · green = healthy · amber = attention / hold · red = danger · TX · offline

STATION PAGE

Power the station up and down; see what runs where.

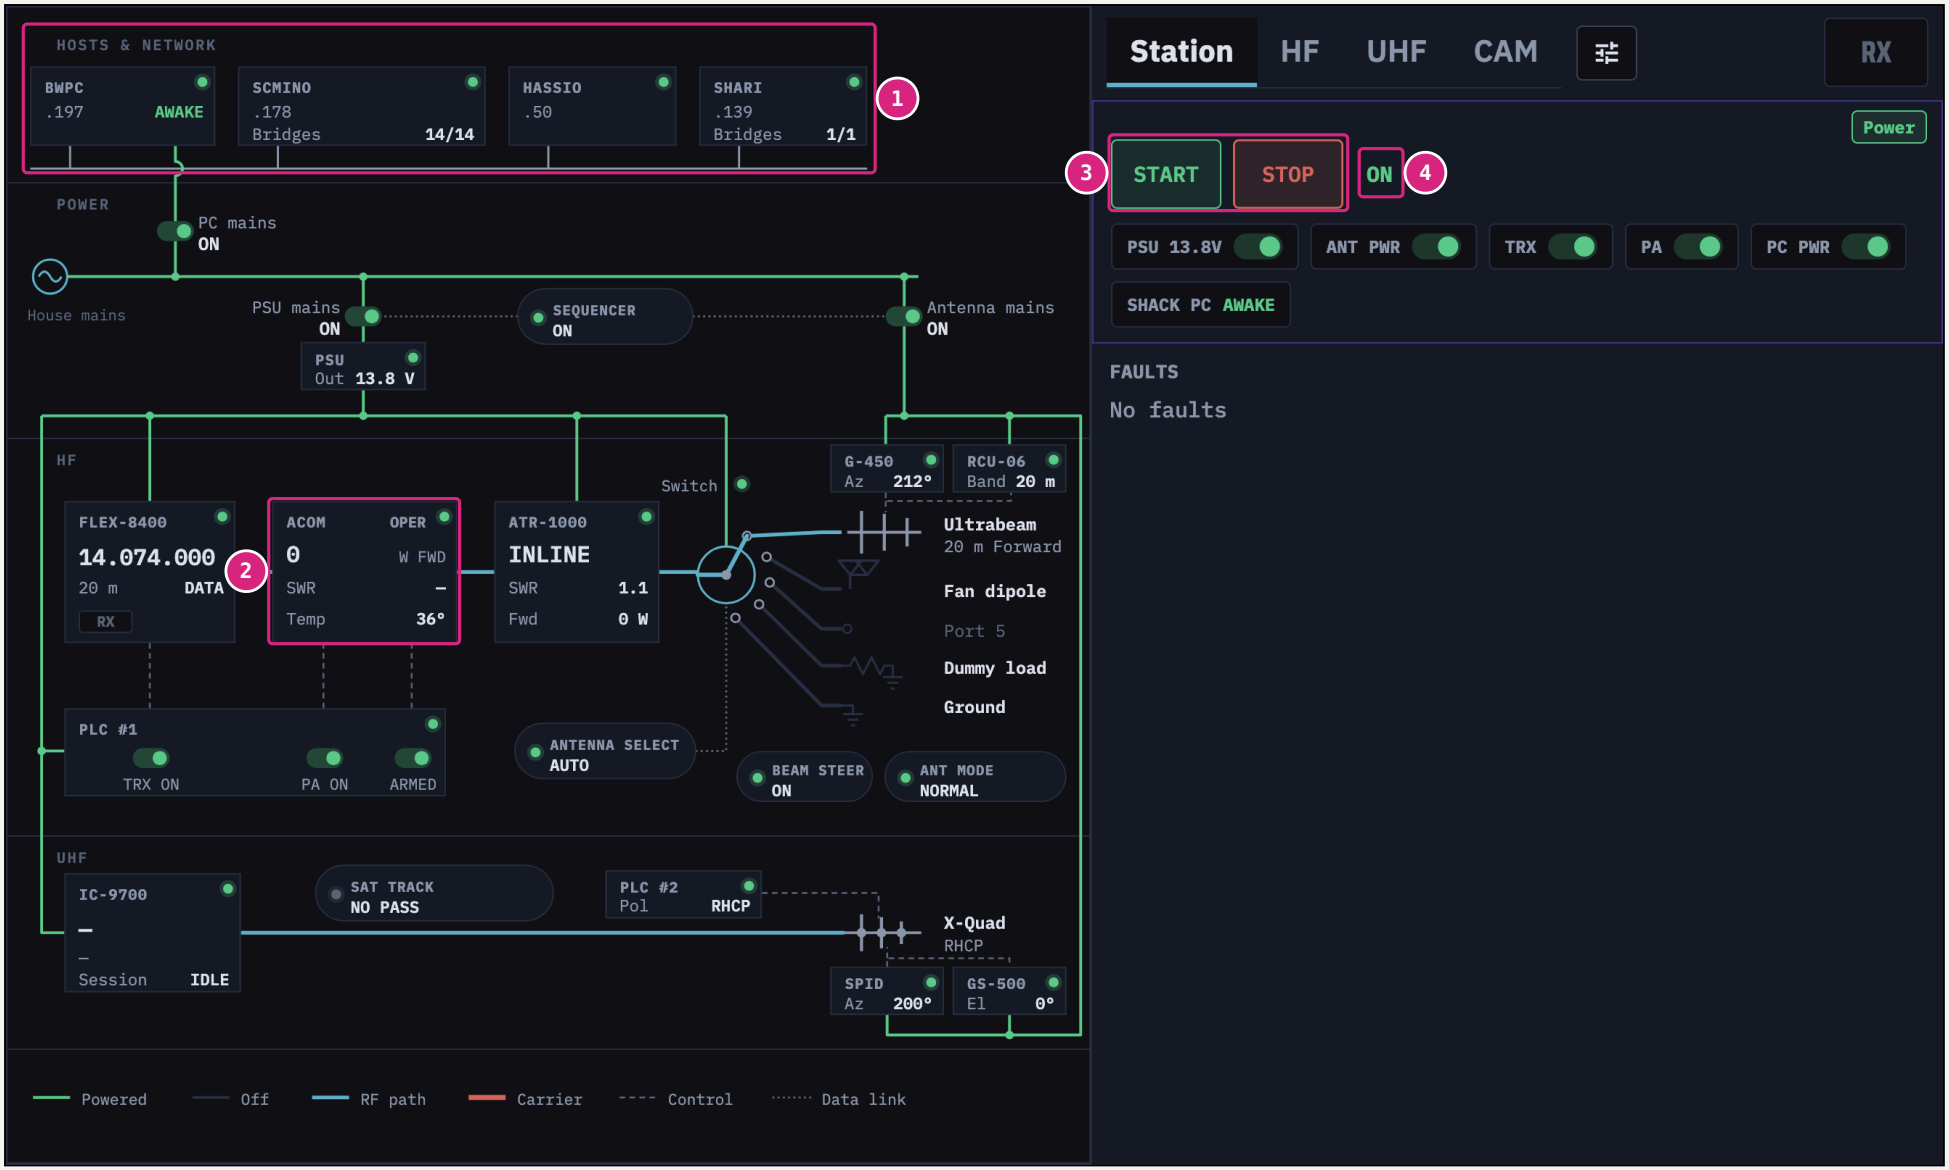

1 Bridges n/m
Up / expected bridges on that host; tap lists each

2 Schematic block (tap)
Tap any block for bridge, host, all values; no controls

3 START / STOP
START also wakes STANDBY; STOP leaves PC mains on


4 Phase (ON / STANDBY)
Unused station drops to STANDBY; a FLEX VFO change wakes it

Everything that is not specifically labeled does what you think it does™

cyan = active / selected · green = healthy · amber = attention / hold · red = danger · TX · offline

UHF PAGE

Point the satellite antennas, watch the IC-9700, set polarisation.

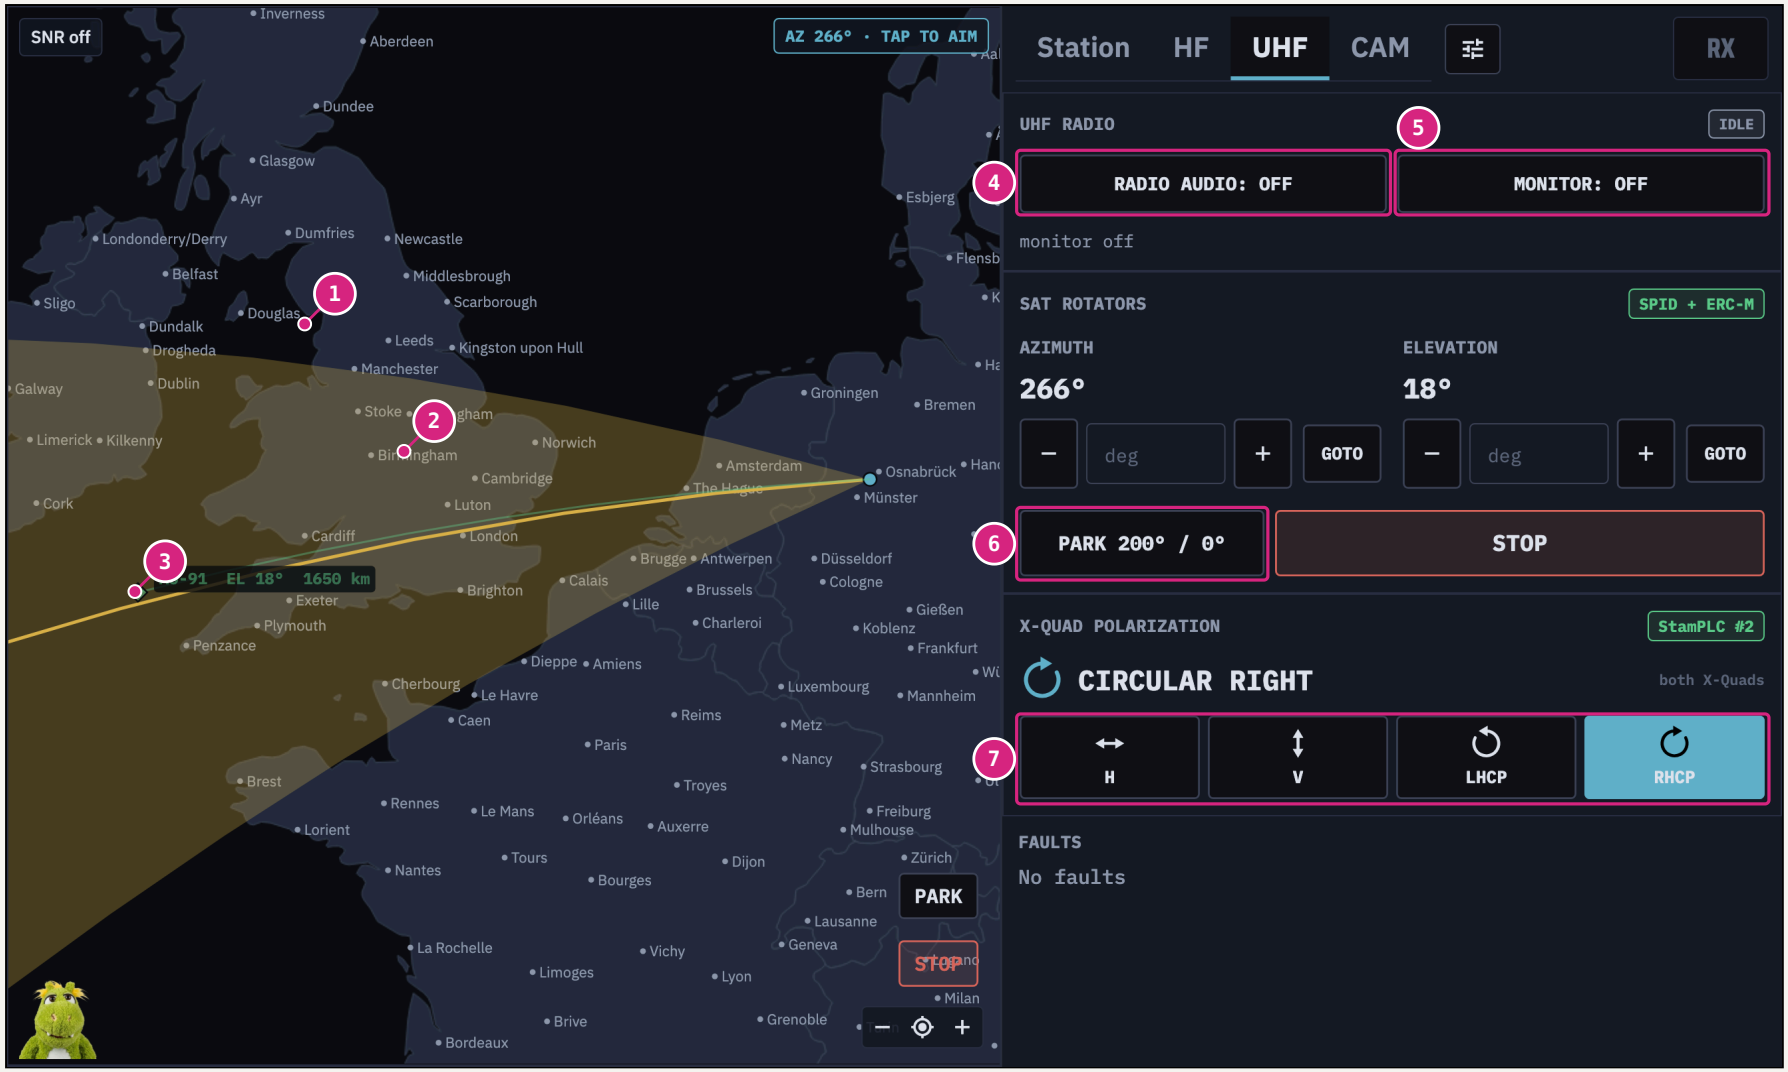

1 **Map tap**
Sets azimuth only (great-circle bearing); elevation unchanged

2 **Beam wedge**
Rotator beam ±20°, amber while a satellite is tracked

3 **Satellite**
OscarWatch sub-satellite point; dimmed while below horizon

4 **RADIO AUDIO**
Feeds CAM stream; auto-off after 60 s; wfview blocks it

5 **MONITOR**
Read-only CI-V readout; unavailable here, press shows ERR

6 **PARK 200° / 0°**
Also retunes IC-9700 (sat mode off), X-Quads to V


7 **H / V / LHCP / RHCP**
Manual only (PARK sets Vertical)

Everything that is not specifically labeled does what you think it does™

cyan = active / selected · green = healthy · amber = attention / hold · red = danger · TX · offline

CAM PAGE

Watch the antennas, record the stream, control IC-9700 audio.

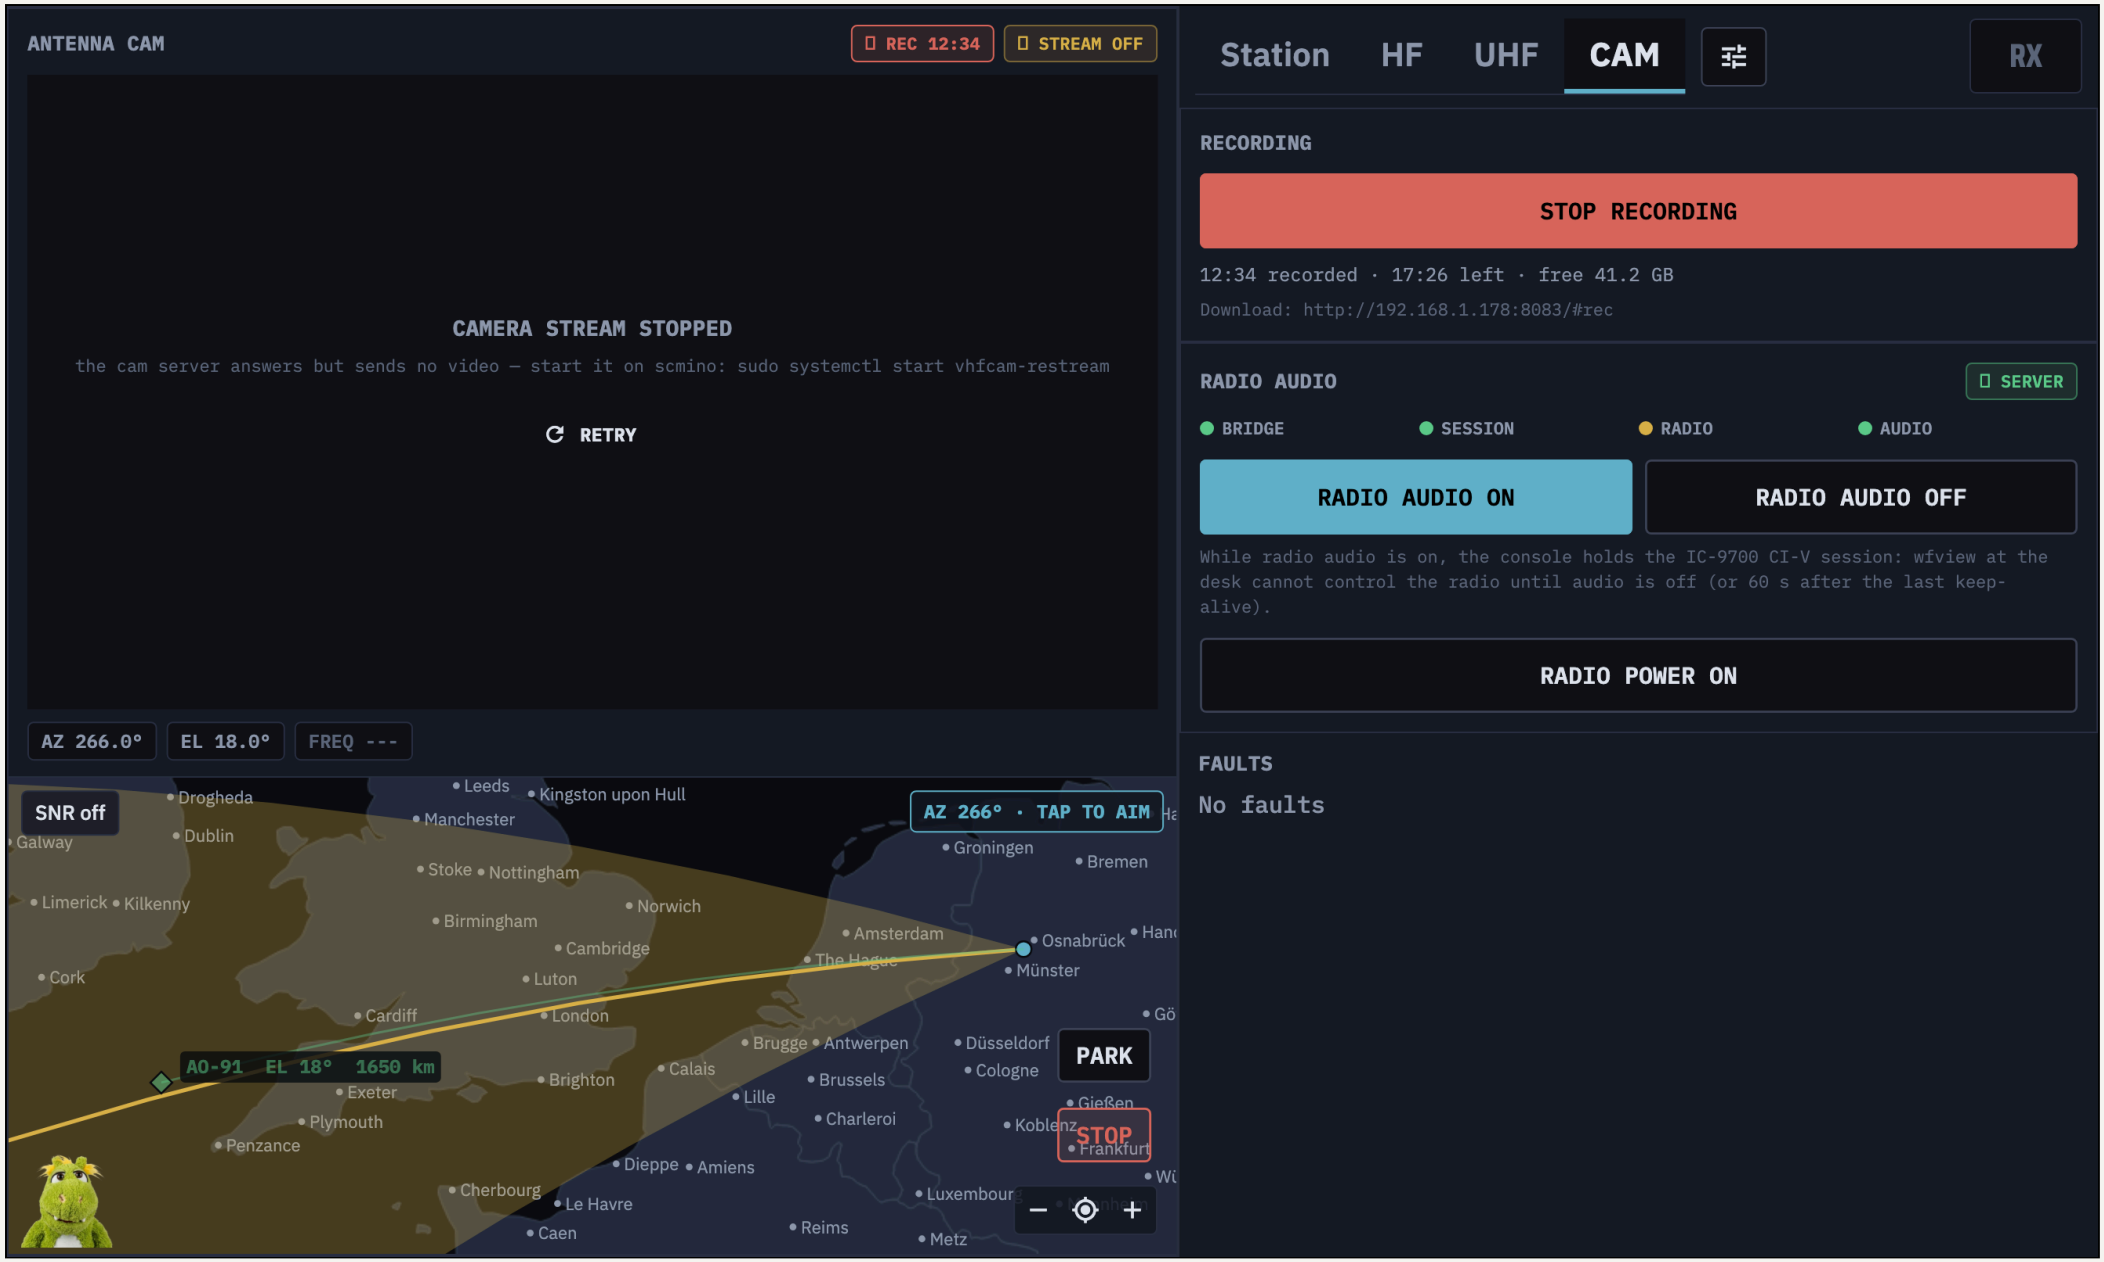

Everything that is not specifically labeled does what you think it does™

cyan = active / selected · green = healthy · amber = attention / hold · red = danger · TX · offline