
OVERVIEW

Find your way: pages, settings, link and fault status.

LINK DOWN banner
This console lost the broker; bus commands dropped, not queued

Dark / Paper / Aether
Applies instantly; not saved, Dark again after restart

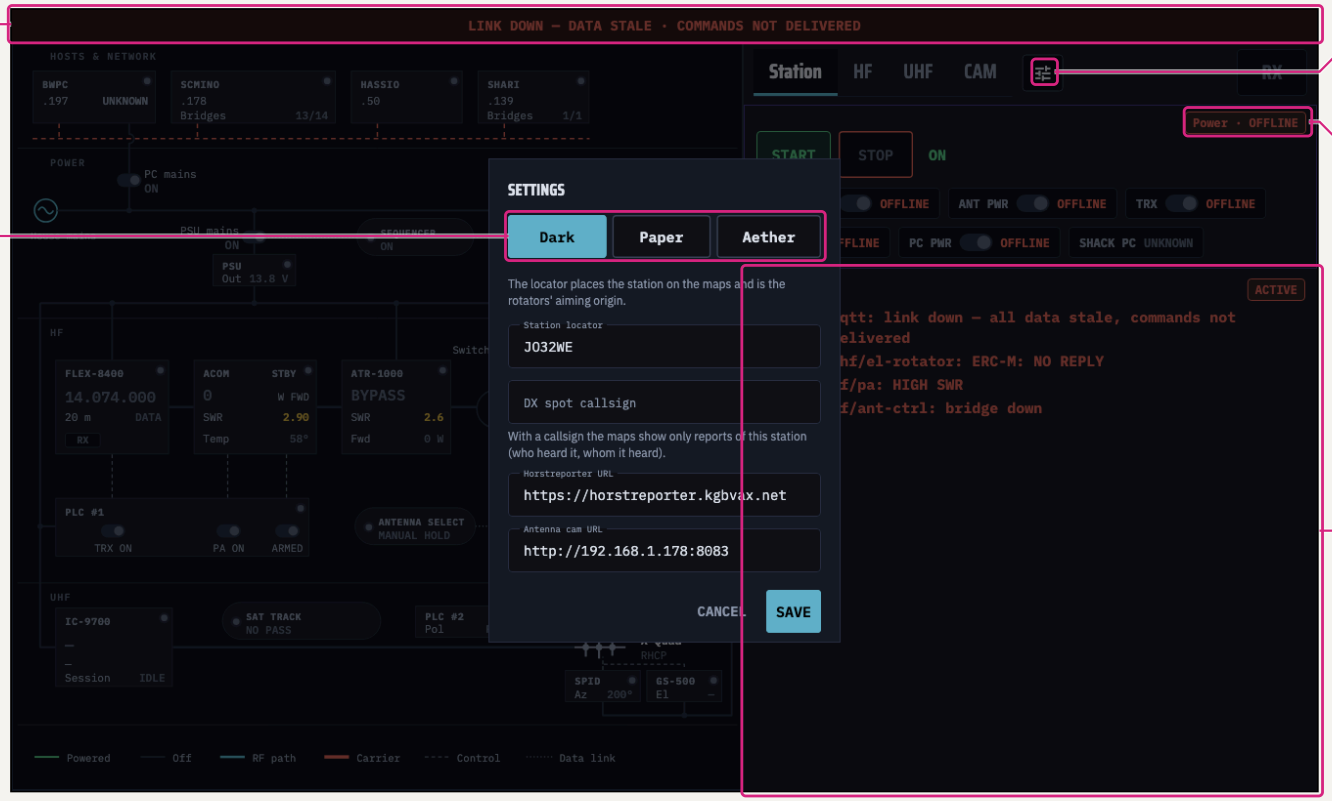

Settings (sliders icon)
Colours, locator, DX spots, camera URL

Status pill
Any one device down or unpowered turns the pill OFFLINE

FAULTS
Grey: cleared, or antenna gear unpowered on purpose

cyan = active / selected · green = healthy · amber = attention / hold · red = danger · TX · offline

HF PAGE

Aim the beam, pick the antenna, drive PA, tuner and FLEX.

Azimuthal / Mercator
Map projection; beam and tap-to-aim on azimuthal only

Spot filter (SSB ≥ 0dB)
Spot SNR gate follows radio mode: SSB 0 dB, CW –15 dB

Compass
Tap to aim; arrow = boom, cone = radiation lobe


Selected station
Call keyed in DXLog/Log4OM; tap to aim at it

AUTO (beam steering)
Logger/map aims flip 180° if behind, turn only outside ±30°

AUTO / MANUAL
Tapped MANUAL: no auto switching, no Ultrabeam/ATU band-follow

Antenna ports
Change in RX only; 30-min idle grounds unless MANUAL tapped

NORMAL / STORM / MAINT.
STORM/MAINT.: ground, retract, park, lock until NORMAL; MAINT. ±5° nudge

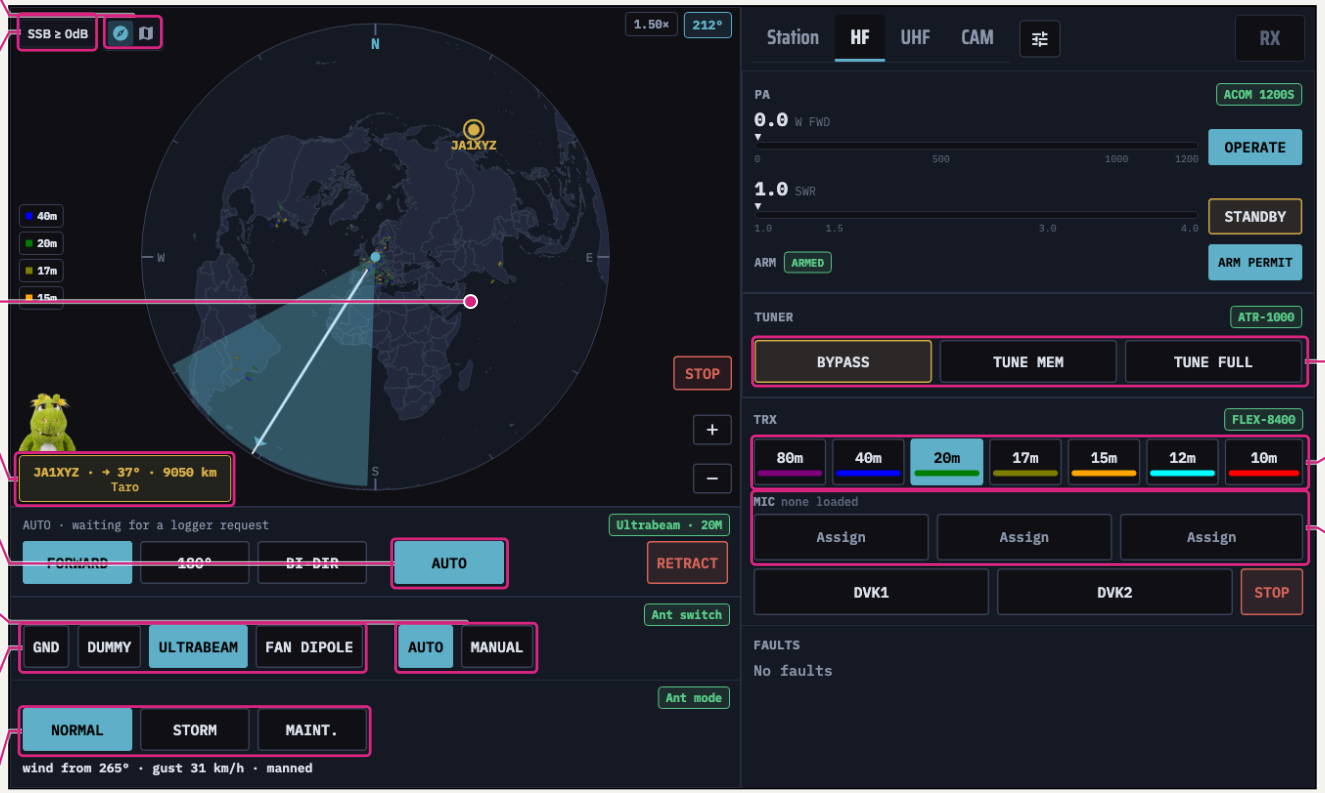

BYPASS / TUNE MEM / FULL
PA disarmed while tuning; in AUTO, in-line follows band

Band row
Re-tap active band: SSB↔CW; stripe = spot colour on map


MIC profiles
Hold to rebind; MIC line shows only console-loaded profiles

STATION PAGE

Power the station up and down; see what runs where.

Bridges n/m
Up / expected bridges on that host; tap lists each

Schematic block (tap)
Tap any block for bridge, host, all values; no controls

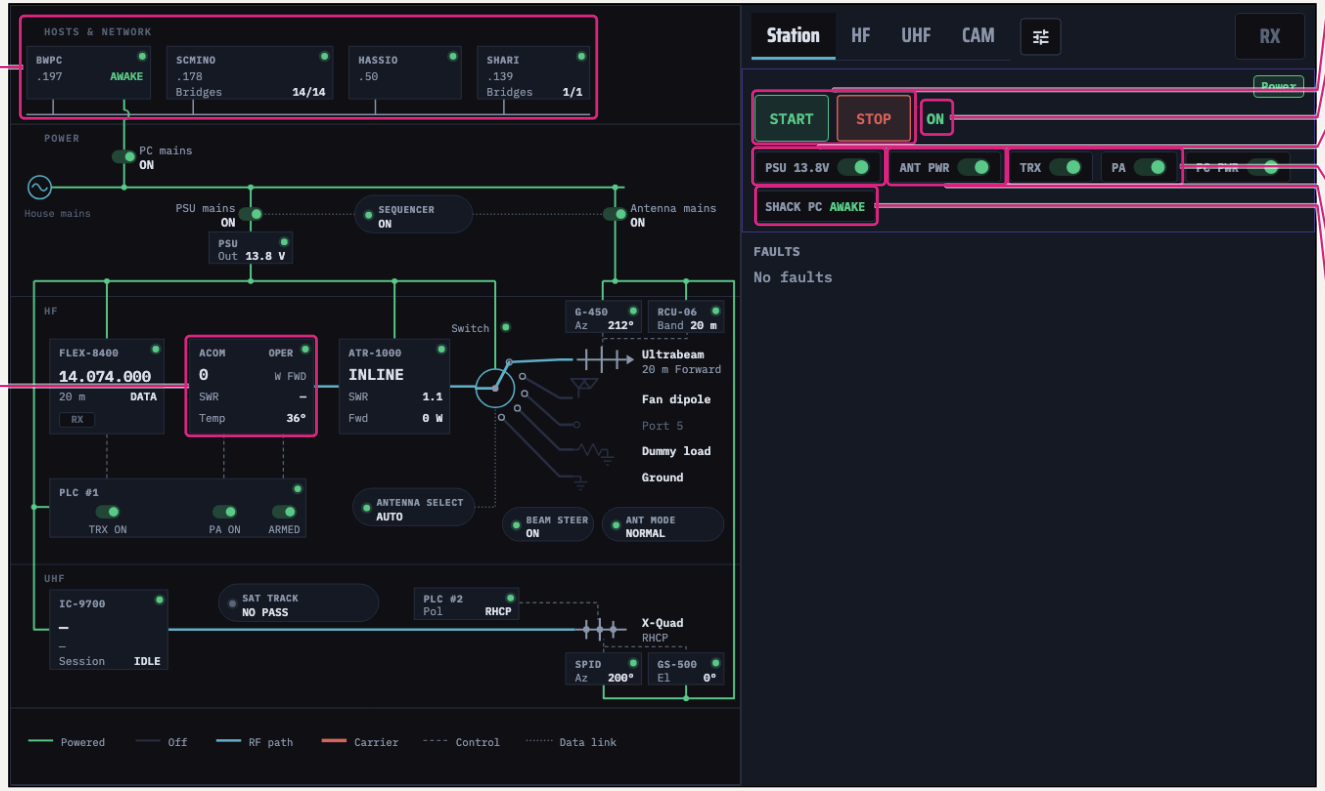

START / STOP
START also wakes STANDBY; STOP leaves PC mains on

Phase (ON / STANDBY)
Unused station drops to STANDBY; a FLEX VFO change wakes it

PSU 13.8V
Feeds FLEX, ATR-1000, antenna switch, PLC #1, IC-9700

TRX / PA
FLEX/ACOM remote-on via PLC #1; needs PSU 13.8V on

ANT PWR
HF and UHF rotators, Ultrabeam controller; off in standby

SHACK PC
Status only; standby asks it to sleep; wake sends WOL

UHF PAGE


Point the satellite antennas, watch the IC-9700, set polarisation.

Map tap
Sets azimuth only (great-circle bearing); elevation unchanged

Beam wedge
Rotator beam ±20°, amber while a satellite is tracked

Satellite (green diamond)
OscarWatch sub-satellite point; dimmed while below horizon

Re-centre (crosshair)
Recentres on station; while tracking, frames station and satellite

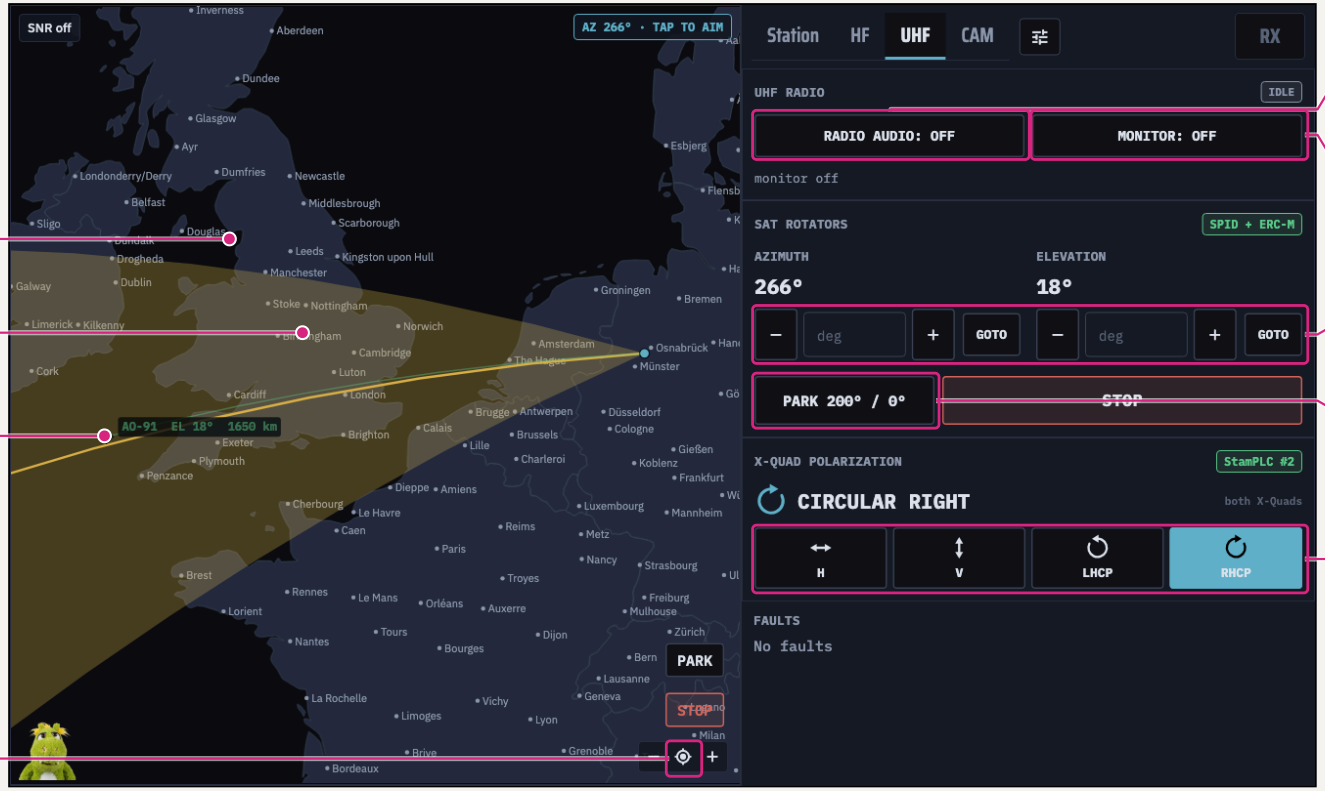

RADIO AUDIO
Feeds CAM stream; auto-off after 60 s; wfview blocks it

MONITOR
Read-only CI-V readout; unavailable here, press shows ERR

– / + / GOTO
– / + change the typed angle 1°; only GOTO moves


PARK 200° / 0°
Also retunes IC-9700 (sat mode off), X-Quads to V

H / V / LHCP / RHCP
Manual only (PARK sets V); survives controller reboots

CAM PAGE

Watch the antennas, record the stream, control IC-9700 audio.

Video
Runs about 10 s behind live

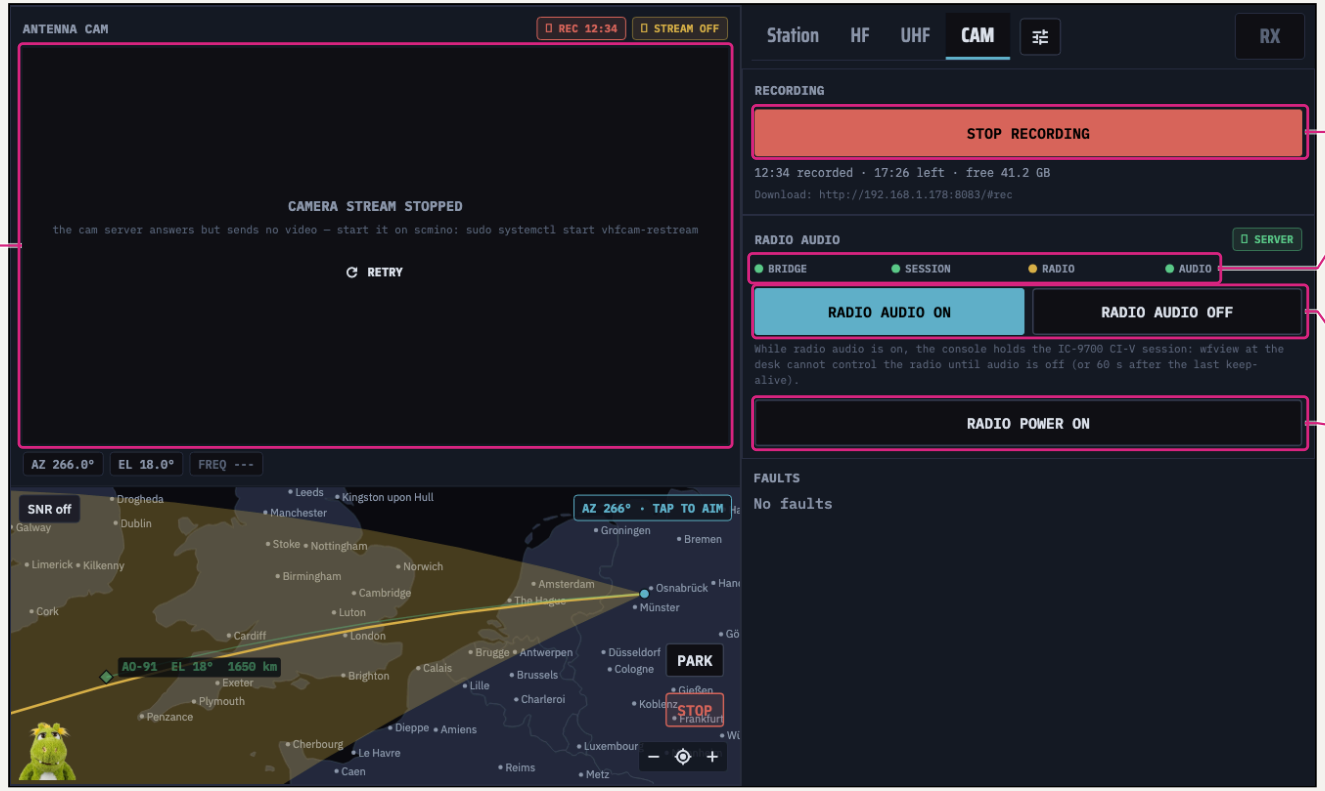

START / STOP RECORDING
Also holds radio audio on; auto-stops at limit or low disk

BRIDGE / SESSION / RADIO / AUDIO
RADIO always amber, not a fault; grey SESSION/AUDIO: audio off

RADIO AUDIO ON / OFF
Lit only while audio arrives; OFF cannot cut a recording

RADIO POWER ON
No effect here: the bridge has no serial CI-V port