
OVERVIEW

Find your way: pages, settings, link and fault status.

LINK DOWN banner
Broker lost: data stale, commands not sent

Dark / Paper / Aether
Colour scheme, applied at once

DX spot callsign
Map shows only this call's reports

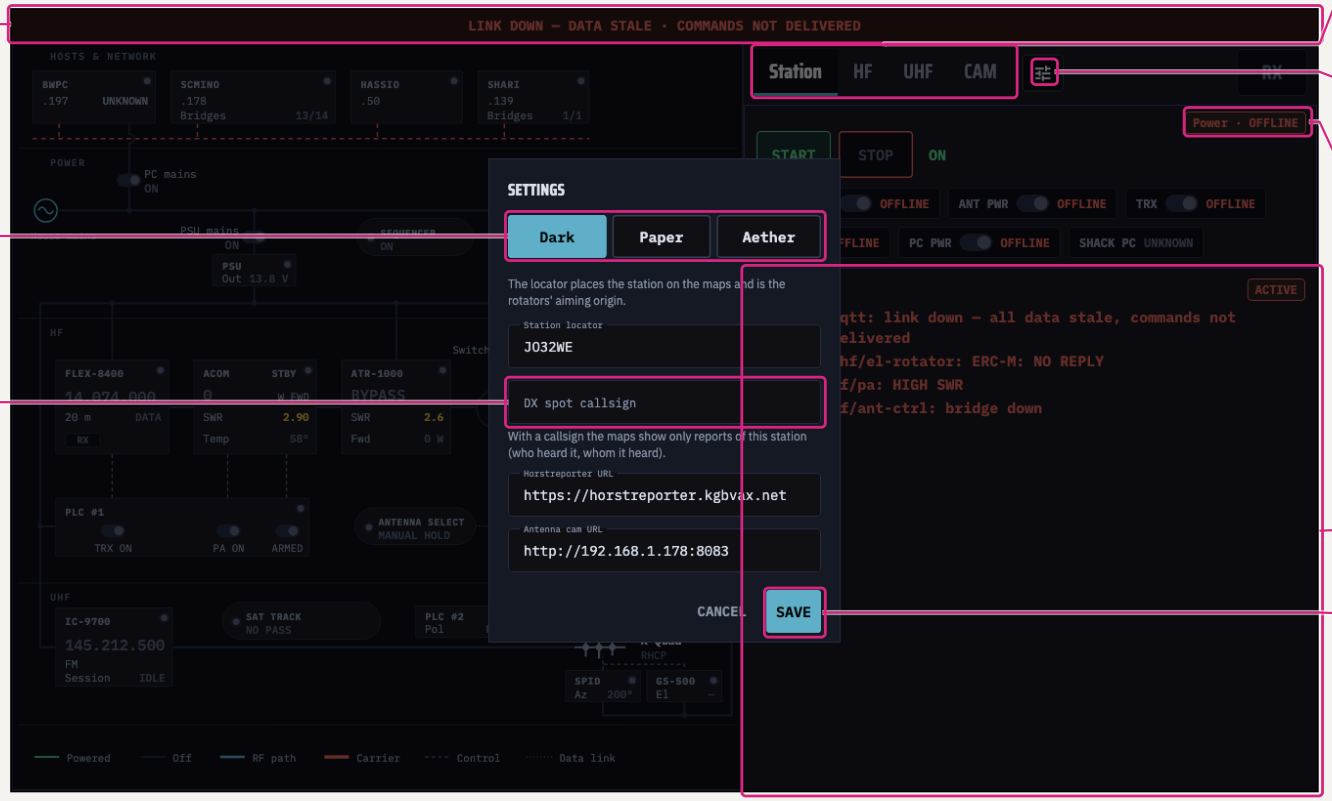

Page tabs
Switch page; underline marks current page

Settings (gear)
Colours, locator, DX feed, camera URL

Status pill
Green OK · amber attention · red fault/offline

FAULTS
Active faults red, cleared ones grey

SAVE
Apply; restarts DX feed and camera

HF PAGE

Aim the beam, pick the antenna, drive PA, tuner and FLEX.

Azimuthal / Mercator
Change map projection

Compass
Beam map; tap to turn the rotator

Selected station
From the logger; tap to aim

AUTO (Ultrabeam)
Logger steers: flip or rotate as needed


FORWARD / 180° / BI-DIR
Flip beam electrically, no rotation

RETRACT
Pull elements in; always available

AUTO / MANUAL
AUTO follows band; MANUAL holds your pick

Antenna ports
Pick antenna; locked while transmitting

NORMAL / STORM / MAINT.
Lock antennas for storm or work

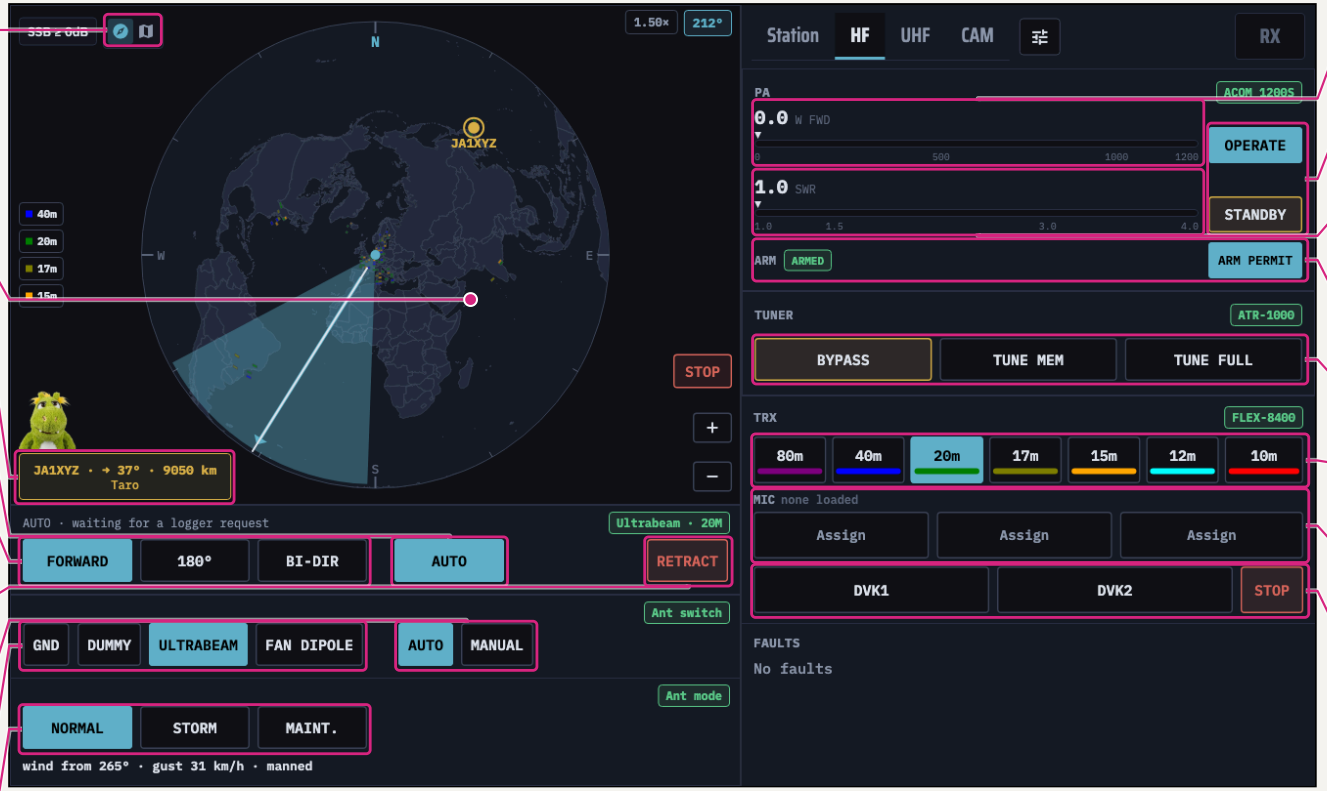

W FWD
Forward power, peak marker

OPERATE / STANDBY
Put PA in line or bypass it

SWR
Reflected match, 1.0–4.0

ARM PERMIT
Allow PA arming; tag says why not

BYPASS / TUNE MEM / FULL
Bypass ATU, recall or full tune

Band row
Change band; tap active band = SSB↔CW

MIC profiles
Tap loads profile; hold to assign

DVK1 / DVK2 / STOP
Play recorded message; STOP aborts


STATION PAGE

Power the station up and down; see what runs where.

Hosts (Bridges n/m)
Computers and how many bridges run

Schematic block (tap)
Details: state, problem, host, all values

RF path
Cyan = selected path, red = carrier

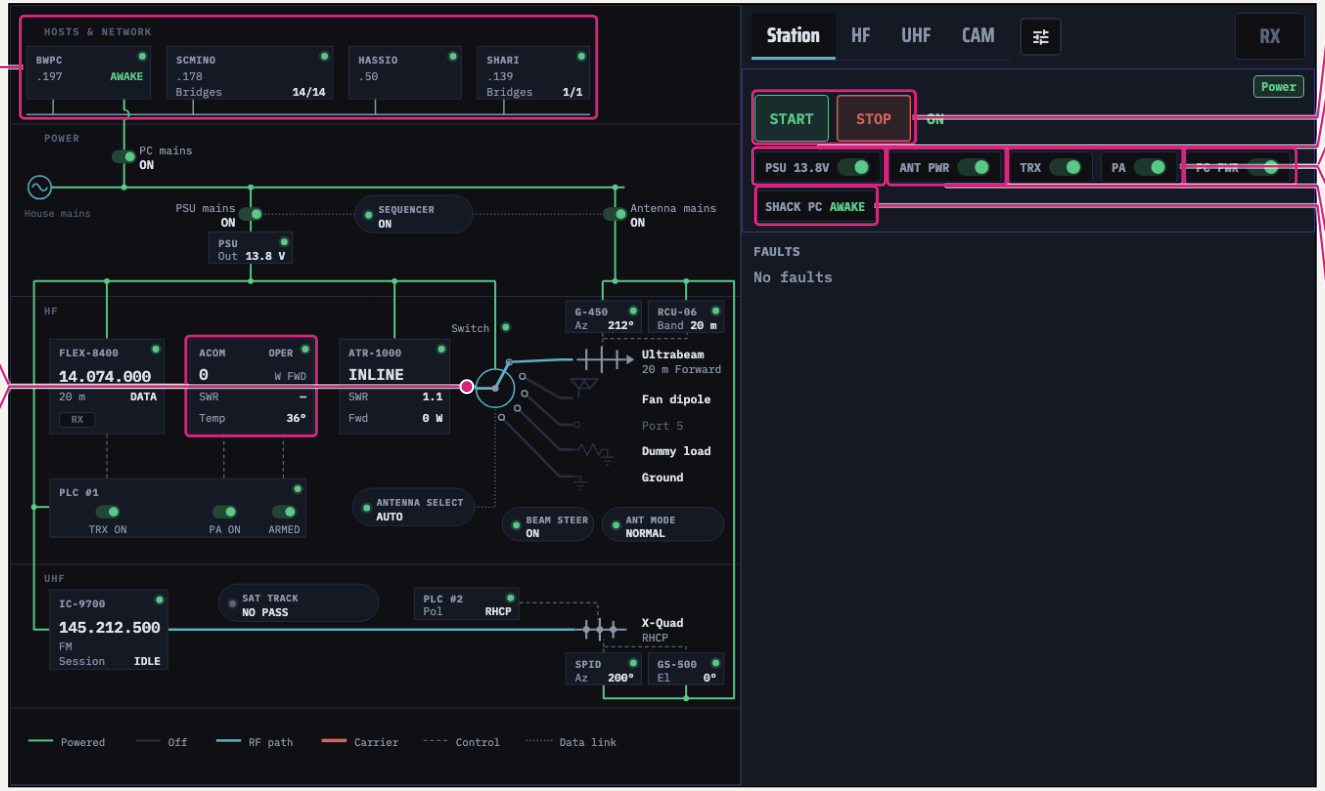

START / STOP
Power the station up or down in order

PSU 13.8V
Radio power supply relay

TRX / PA
Remote-on for FLEX and ACOM

PC PWR
Shack PC mains; asks before switching off

ANT PWR
Rotators and Ultrabeam controller power

SHACK PC
AWAKE / ASLEEP / NO POWER / OFFLINE

UHF PAGE


Point the satellite antennas, watch the IC-9700, set polarisation.

Heading chip
Azimuth now → target

VHF map
Tap to aim the UHF rotator

Satellite
Tracked satellite and coverage

PARK / STOP (map)
Park or stop both axes

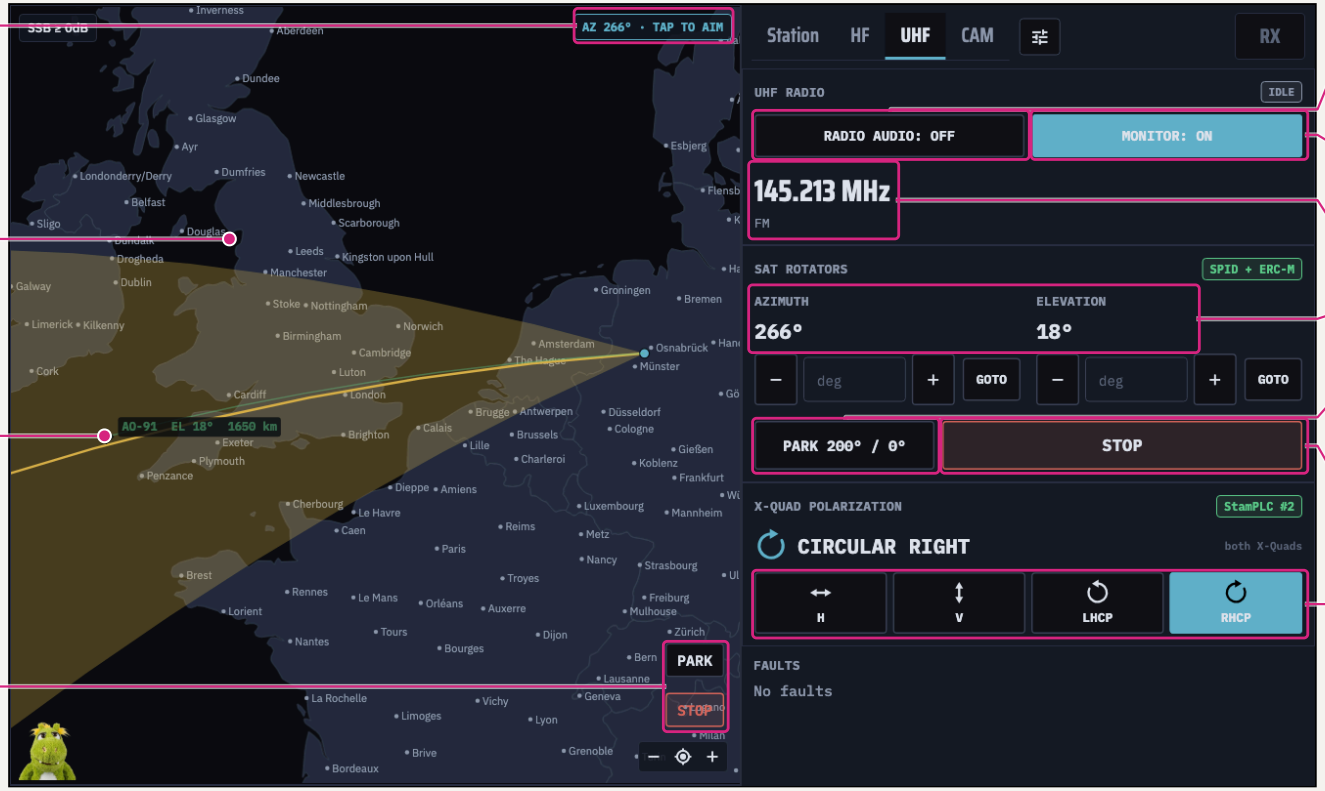

RADIO AUDIO
IC-9700 receive audio to the stream

MONITOR
IC-9700 serial telemetry on/off

Radio readout
Receive-only telemetry

AZIMUTH / ELEVATION
Position → target, MOVING/ERR

PARK 200° / 0°
Park; also sets radio and polarisation

STOP (rotators)
Stop both axes now


H / V / LHCP / RHCP
Switch both X-Quads

CAM PAGE

Watch the antennas, record the stream, control IC-9700 audio.

Video / RETRY
Antenna camera; retry when offline

AZ / EL / FREQ
Live rotator and radio values

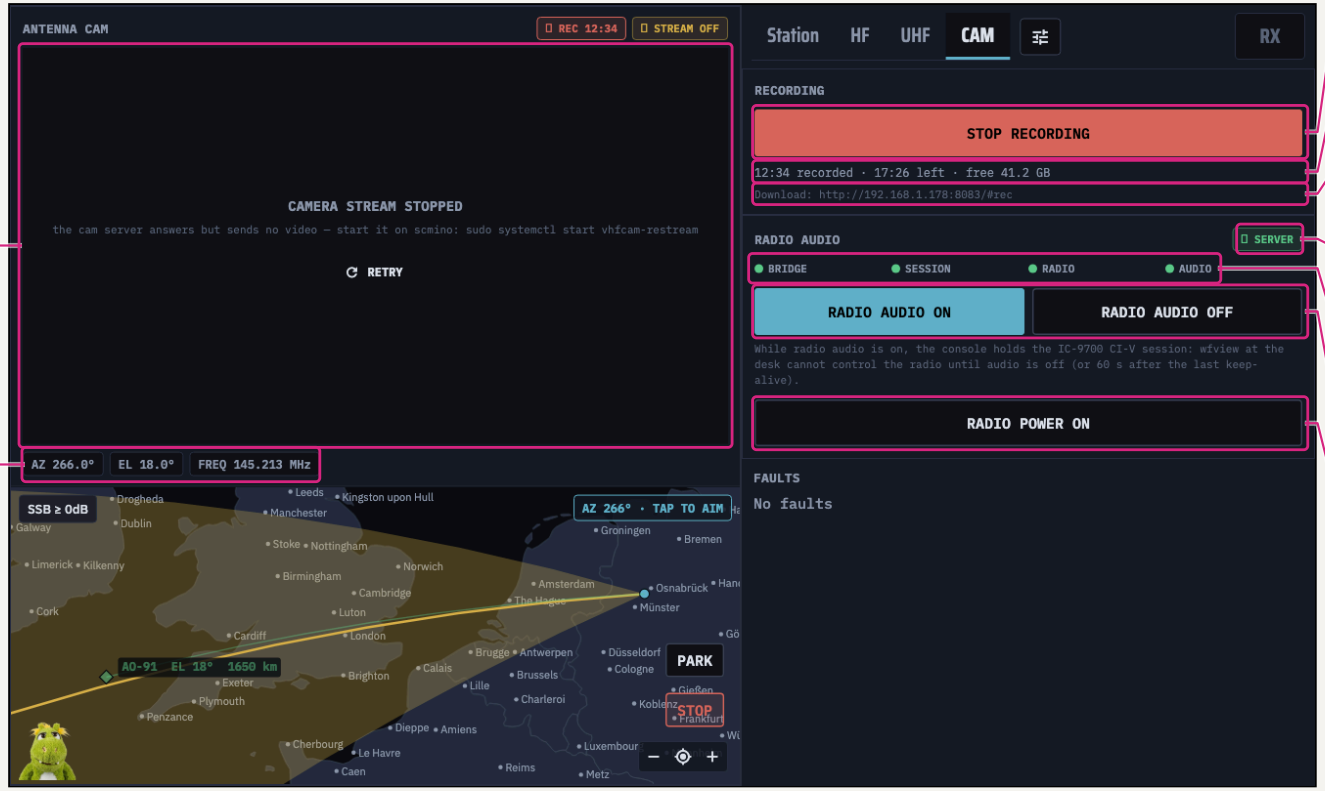

START / STOP RECORDING
Record the preview stream

Progress line
Length, time left, disk free

Download link
Fetch the recording

● SERVER
Camera server reachable

BRIDGE / SESSION / RADIO / AUDIO
Audio chain health, left to right

RADIO AUDIO ON / OFF
Feed IC-9700 audio into stream

RADIO POWER ON
Switch the IC-9700 on

cyan = active / selected · green = healthy · amber = attention / hold · red = danger · TX · offline