HOW TO Configure

Brand: UTC

Model: UTC 2021

Part Number: 352020

Initial Compass version: v. 2.0.25
Firmware version: ATS1809-00.06.15

Document Management	
Authors:	Luis Oliveira
Contact:	compasstechnicalsupport@motorolasolutions.com
Revision:	1.0
Updated:	2018-06-23

1. Supported models and software versions

ATS is an intrusion panel that can be integrated in COMPASS through the dll (atsDllWrapper.dll). The communication with the panel is in UDP (using the port 3001). This driver is integrated as a Global Device in COMPASS. The subsystem does not support being simultaneously configured in more than one COMPASS Global Device.

Supported Cases

This driver **supports** the following features:

- Receive alarms and technical alarms from the panel, with information about the elements that triggered the alarm;
- Display information from the alarm panel that is on the alarm (zone and/or detector, alarm category);
- Receives Alarms of Zones, panel and expansion modules;
- Zone Inhibit/Uninhibit;
- Reset the Panel;
- Arm/Disarm the panel (separate partitions).

Cases Unsupported By COMPASS

- Acknowledge of panel;
- Output's currently the driver doesn't create the output's because we can't get your state.

Brands and Models supported

- ATS 2021 with 1809
- ATS2121E with 1809
- ATS3021 with 1809
- ATS3421E with 1809
- ATS4021 with 1809
- ATS4621E with 1809
- All firmware versions are compatible with the SDK.

Supported software/firmware versions

- Release ATS1809-00.06.15 Wed Oct 3 11:14:04 CEST 2012

2. Before you begin

Before continue with the configuration, is necessary respect some requisites:


- A proper COMPASS installation (version 2.0.25.0 or above);
- Make sure you have the dll “atsDllWrapper.dll” in bin folder of Compass;
- IP access to the ATS equipment. Make sure you can ping it from the COMPASS server;
- The User/Password to access to the Web page

Note: The user that starts COMPASSManager service must have Administrative privileges. The alarm panel must be configured so that it is capable of working with COMPASS.

Before starting the installation and configuration you must ensure that you have a series of dependencies installed such as:

3. Install ATS8400.01.17_SDK17.exe
4. Install vc_redist.x86_2015.exe
5. Install vcredist_x86_2013.exe
6. Install vcredist_x86_v9_0_30729_17.exe

You should have this redistributables installed on compass server

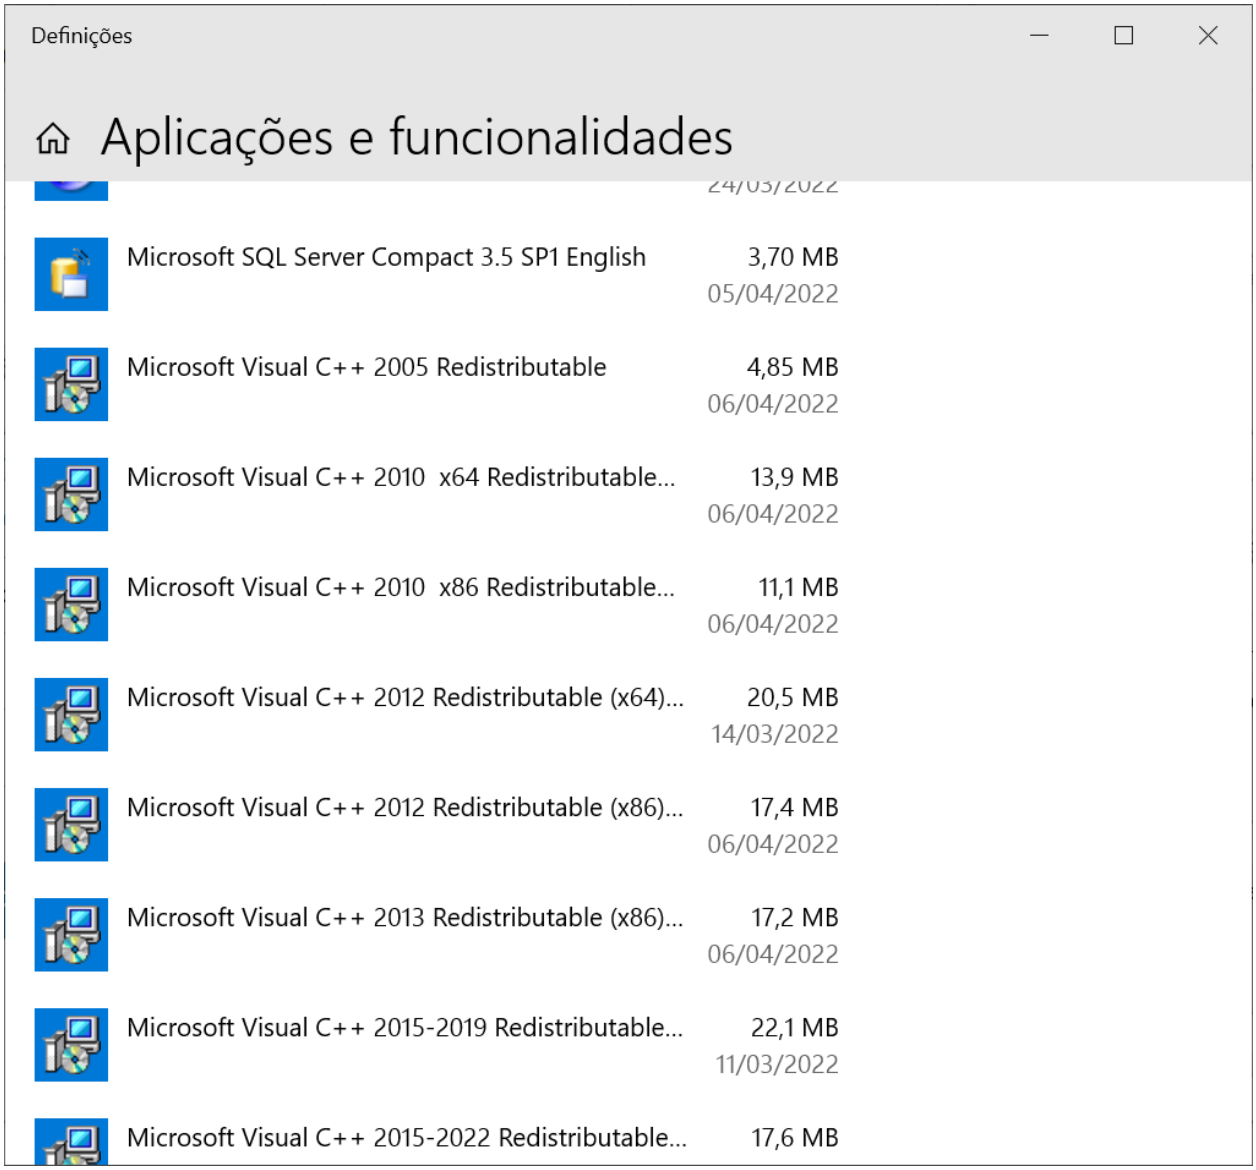


If you don't have these dependencies, please contact the support team


7. Configuration in subsystem

The main configurations are outlined on the following screens:


1) Open the browser and go to the IP address of the module, e.g. http://192.168.0.100/

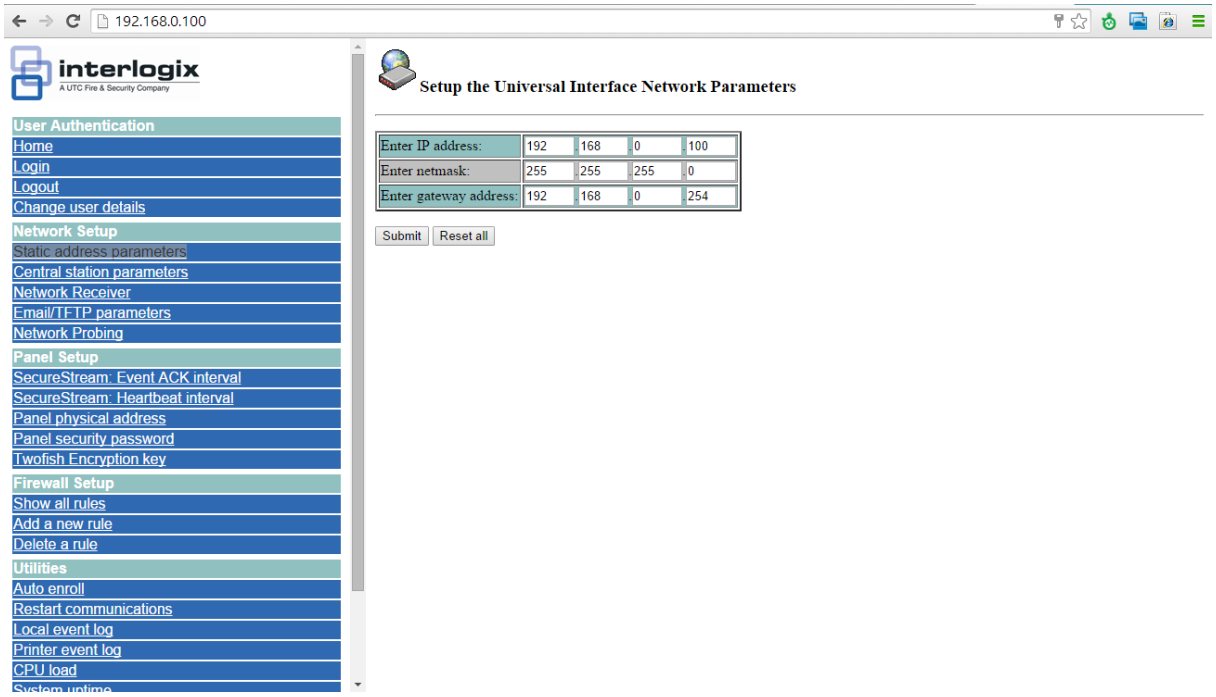

2) Go to “Central station parameters” and set COMPASS as a “Management Central Station” and insert COMPASS Server IP, Protocol: UDP, Port: 3001, Event Type: Computer, Encryption: twofish and press Submit (see image below).

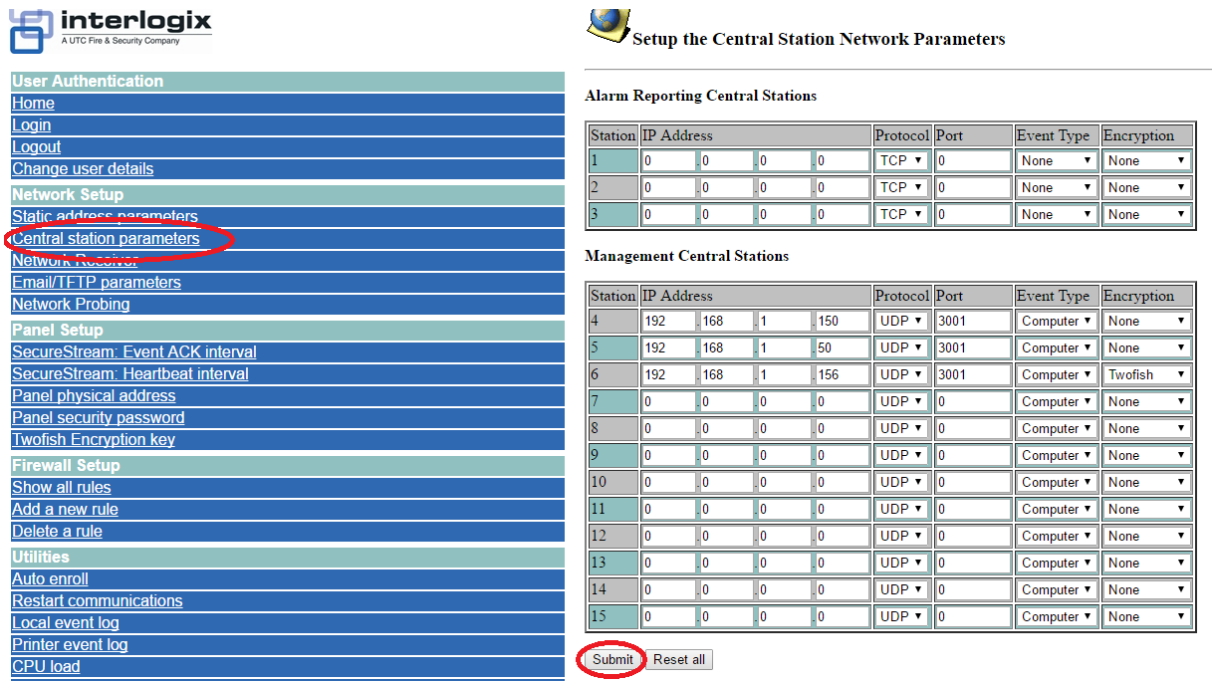

3) In the Twofish Encryption key all need to be set to 0 (see image below).

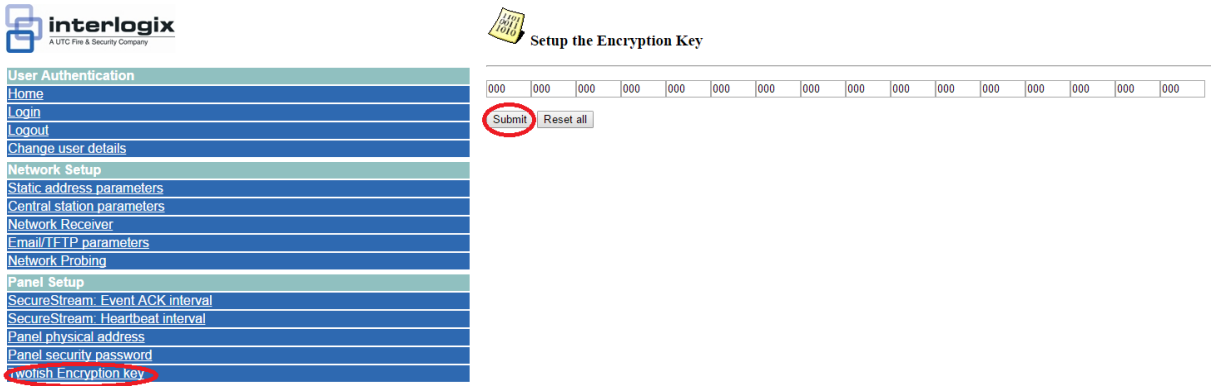

4) Go to “Reboot CPU” and press Reboot



8. Configuration in Compass

Driver Installation

Create one file with a name "ats.txt" and with this content


SUPPORTED_PRODUCTS:UTC_ATS_2021;UTC_GLOBAL_ATS;

1. Start a CMD.exe session with admin right
2. Change directory to %COMPASS_PATH%\bin

3. Execute: ..\runtime\x86\jre\bin\java.exe -classpath classes;lib/* -Djava.library.path=lib pt.observit.janus.setup.RegisterBinary -supportedProducts ats.txt -uniqueId agent_ats -partnumber **352020**


Device Configuration in Compass

1. Login to the COMPASS interface with administrator privileges and access "Configuration" via the User menu on the top right corner;
2. Access Global Devices;
3. If not created yet, create a new Global Device using the PLUS icon;
4. A popup will request the following information:
    a. Name: (to the global device)
    b. Brand: "UTC"
    c. Model: "ATS 2021"
    d. Event port: (3001 by default)

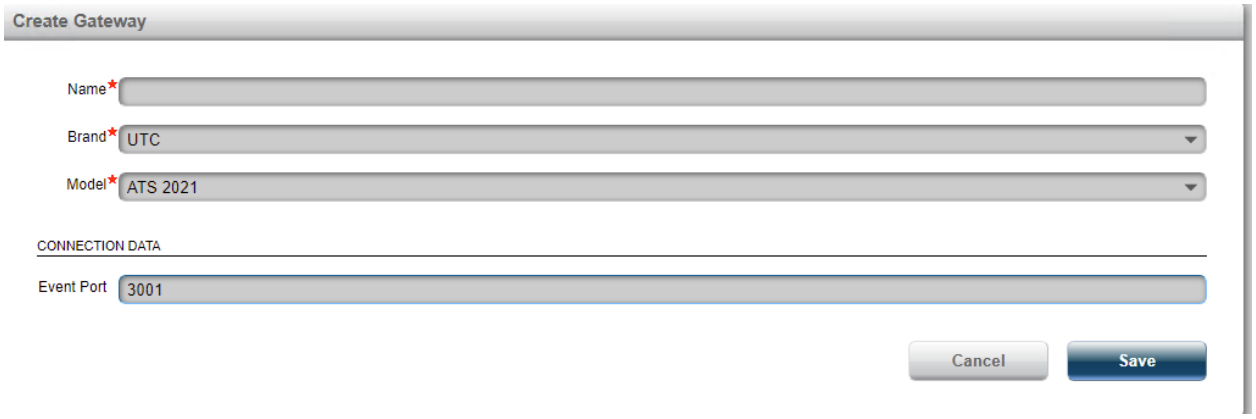

5. Next, click on "New" button to configure a new site mapping for the ATS Global Device just created. A popup with the following properties will appear:

a. IP: host where the ATS panel can be accessed at;
b. Control Port (default: 3001): UDP port where the agent send commands;
c. Encryption Key (default: 00000000000000000000000000000000)
d. Panel ID: should be the same as the "Account" value configured in step "3" of the panel configuration;
e. Alarm mapping (Optional): Allows for the use of a dynamic alarm mapping. This value should be in the format: *[contact_id_code_1]=[compass_alarm_id_1],[contact_id_code_2]=[compass_alarm_id_2]. (eg: BA=ALARMPANEL_USERALARM_1,BB=ALARMPANEL_USERALARM_2)*
f. Test Period : time between checking connectivity.

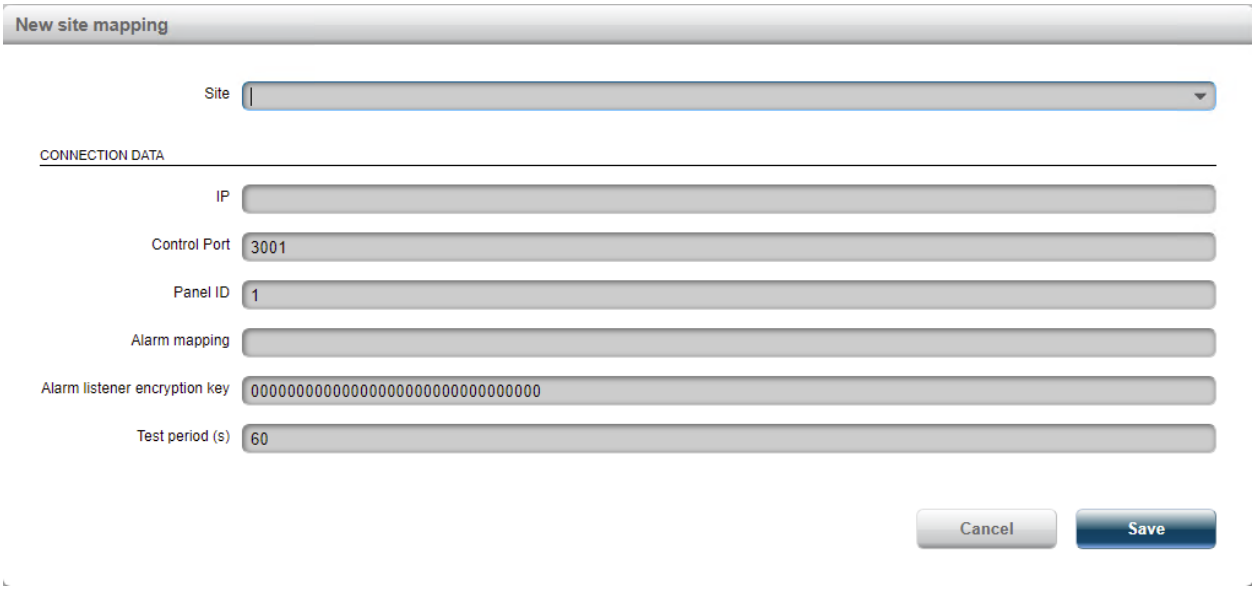

9. Logical Devices

Logical devices must be automatically created. However it additional devices were needed, it must to follow the following format:

Name	Device type	Function	Device state	Creation rule	User interaction	Icon	Hardware ID
<Zone_ name>	Generic Detecto r	When used COMPASS will send a command to the subsystem to inhibit/uninhibit the zone	Red when inhibited Green otherwise	One for each zone	If pressed, Red COMPASS will send commands to uninhibit the zone. If pressed when Green COMPASS will send commands to inhibit the zone.		zone_id
<Physic alDevic e_name >	Generic Detecto r	Will be used to trigger technical alarms	None	One for each physical device	None		TECHNICAL
<Physic alDevic e_name > User	Generic Detecto r	Will be used to trigger user alarms	None	One for each physical device	None		USER
<Physic alDevic e_name > RAS <ras_id >	Generic Detecto r	Will be used to trigger RAS alarms	None	One for each ras configured on the device	None		RAS:ras_id
<Physic alDevic e_name > DGP <dgp_id >	Generic Detecto r	Will be used to trigger DGP alarms	None	One for each dgp configured on the device	None		DGP:dgp_id

<physical_device_name> Fallback	Generic Detector	Will be used to trigger alarms when there's not a more specific device to trigger the alarm	None	One for each physical device	None		ALL
<partition_name> Arm/Disarm	ArmPanel	When used COMPASS will send a command to the subsystem to arm/disarm the partition	Red when disarmed, green otherwise	One for each partition	If pressed, Red COMPASS will send commands to arm the partition. If pressed when Green COMPASS will send a command to disarm the partition		PARTITION:partition_id;OPERATION:ARM_DISARM
<partition_name> Force Arm/Disarm	ArmPanel	When used COMPASS will send a command to the subsystem to force arm/disarm the partition	Red when disarmed, green otherwise	One for each partition	If pressed when Red COMPASS will send a command to force arm the partition. If pressed when Green COMPASS will send a command to disarm the partition		PARTITION:partition_id;OPERATION:FORCE_ARM_DISARM
<partition_name> Arm	ArmPanel	When used COMPASS will send a command to the subsystem to arm the partition	Red when disarmed, green otherwise	One for each partition	If pressed, Red COMPASS will send commands to arm the partition.		PARTITION:partition_id;OPERATION:ARM
<partition_name> Force Arm	ArmPanel	When used COMPASS will send a command to the subsystem to force arm the partition	Red when disarmed, green otherwise	One for each partition	If pressed when Red COMPASS will send a command to force arm the partition.		PARTITION:partition_id;OPERATION:FORCE_ARM
<partition_name> Disarm	ArmPanel	When used COMPASS will send a command to the subsystem to disarm the partition	Red when disarmed, green otherwise	One for each partition	If pressed when Green COMPASS will send a command to disarm the partition		PARTITION:partition_id;OPERATION:DISARM
<partition_name> Reset	ResetPanel	When used COMPASS will send a command to the subsystem to reset the partition	None	One for each partition	If pressed COMPASS will send a command to reset the partition		partition_id
<PhysicalDevice_name>	ResetPanel	When used COMPASS will send a command to the subsystem to reset the technical alarms	None	One for each physical device	If pressed COMPASS will send a command to reset technical alarms		TECHNICAL
<PhysicalDevice_name> Output <output_id>	Output	When used COMPASS will send a command to the subsystem to reset the technical alarms	Green when ON, red otherwise	One for each output	If pressed COMPASS will send a command to toggle the output		output_id

10. Alarms

An alarm is an occurrence that must be verified by an operator, an alarm can originate in a device or system, Compass or the Operator (Alarm On-demand).

Alarm Mapping Compass

In Compass, the alarm is verified using live video, pre- and post-alarm videos, following the script specified in the operator guide.

Alarms can be fire or intrusion, among others, but also remote video Guard Tours, remote concierge alarms or alarms on demand, that is, created in Compass by the user, such as an operator.

ATS event type	**Event description**	**COMPASS alarm type (numbers are ContactIDs)**
change-of-state:access-denied-areas-armed	Access Denied: Areas Armed	421
change-of-state:access-denied-hard-passback	Access Denied: Hard Passback	421
change-of-state:access-denied-invalid-code	Access Denied: Invalid Code	421
change-of-state:access-denied-invalid-door	Access Denied: Invalid Door	421
change-of-state:access-denied-invalid-pin	Access Denied: Invalid Pin	421
change-of-state:access-denied-invalid-system-code	Access Denied: Invalid System Code	421
change-of-state:access-denied-invalid-tz	Access Denied: Invalid Timezone	421
change-of-state:access-denied-too-less-hsu	Access Denied: Too Less Hsu	421
change-of-state:access-denied-two-cards	Access Denied: Two Cards	421
change-of-state:access-denied-void	Access Denied: Void	421
change-of-state:access-granted	Access Granted	ALARMDETECTOR_ALARM
change-of-state:access-granted-floor	Access Granted: Floor	ALARMDETECTOR_ALARM
change-of-state:access-granted-in	Access Granted: In	ALARMDETECTOR_ALARM
change-of-state:access-granted-job-start	Access Granted: Job Start	ALARMDETECTOR_ALARM
change-of-state:access-granted-job-stop	Access Granted: Job Stop	ALARMDETECTOR_ALARM
change-of-state:access-granted-out	Access Granted: Out	425
change-of-state:access-granted-region	Access Granted With Region	ALARMDETECTOR_ALARM
change-of-state:access-granted-request-to-exit	Access Granted: Request To Exit Pressed	ALARMDETECTOR_ALARM
change-of-state:access-granted-soft-passback	Access Granted: Soft Passback	ALARMDETECTOR_ALARM

change-of-state:all-armed	All Armed	ALARMPANEL_ARMED
change-of-state:am-offline	(Advisor Master) Offline	ALARMDETECTOR_ALARM
change-of-state:am-online	(Advisor Master) Online	ALARMDETECTOR_ALARM
change-of-state:answer-dial-in-call	Incoming Call Answered	ALARMDETECTOR_ALARM
change-of-state:area-armed	Area Armed	ALARMPANEL_ARMED
change-of-state:area-armed-automatically-by-tz	Area Armed Automatically By Tz	ALARMPANEL_ARMED
change-of-state:area-armed-whilst-in-exit-time	Area Armed In Exit Time	ALARMPANEL_ARMED
change-of-state:area-disarmed	Area Disarmed	ALARMPANEL_DISARMED
change-of-state:area-disarmed-after-during-alarm	Area Disarmed After/During Alarm	ALARMPANEL_DISARMED
change-of-state:area-disarmed-automatically-by-tz	Area Disarmed Automatically By Tz	ALARMPANEL_DISARMED
change-of-state:area-disarmed-whilst-in-exit-time	Area Disarmed In Exit Time	ALARMPANEL_DISARMED
change-of-state:area-entry-timer-started	Acpo: First Entry Timer Started In Acpo System Confirm Area.	ALARMDETECTOR_ALARM
change-of-state:area-out-of-time-zone	Area Out Of Tz - Alarm	ALARMDETECTOR_ALARM
change-of-state:area-secured-partset	Area Secured (Armed) Partset	ALARMPANEL_ARMED
change-of-state:area-within-time-zone	Area Out Of Tz - Restore	ALARMDETECTOR_ALARM
change-of-state:aritech-special-18	Aritech Special 18	ALARMDETECTOR_ALARM
change-of-state:aritech-special-19	Aritech Special 19	ALARMDETECTOR_ALARM
change-of-state:aritech-special-30	Aritech Special 30	ALARMDETECTOR_ALARM
change-of-state:aritech-special-31	Aritech Special 31	ALARMDETECTOR_ALARM
change-of-state:arm-test-completed	Arm Test Complete	ALARMDETECTOR_ALARM

change-of-state:arm-test-failed	Arm Test Failed	ALARMDETECTOR_ALARM
change-of-state:arm-test-over	Arm Test Over	ALARMDETECTOR_ALARM
change-of-state:arm-test-started	Arm Test Started	ALARMDETECTOR_ALARM
change-of-state:ats1806-config-changed	Ats1806 Config Changed	ALARMDETECTOR_ALARM
change-of-state:ats1806-hardware-fail	Ats1806 Hardware Fail	ALARMDETECTOR_ALARM
change-of-state:ats1806-hardware-restore	Ats1806 Hardware Restore	ALARMDETECTOR_ALARM
change-of-state:ats1806-link-fail	Ats1806 Link Fail	ALARMDETECTOR_ALARM
change-of-state:ats1806-link-restore	Ats1806 Link Restore	ALARMDETECTOR_ALARM
change-of-state:ats1806-no-ack-detected	Ats1806 No Ack Detected	ALARMDETECTOR_ALARM
change-of-state:ats1806-receiver-fail	Ats1806 Receiver Fail	ALARMDETECTOR_ALARM
change-of-state:ats1806-receiver-restore	This Event Is Locally Generated By The Ats1806 (Universal Interface)	ALARMDETECTOR_ALARM
change-of-state:ats1806-receiver-station-fail	This Event Is Locally Generated By The Ats1806 (Universal Interface)	ALARMDETECTOR_ALARM
change-of-state:ats1806-receiver-station-restore	Ats1806 Receiver Station Restore	ALARMDETECTOR_ALARM
change-of-state:ats1806-request-current-config	Ats1806 Request Current Config	ALARMDETECTOR_ALARM
change-of-state:ats1806-retry-attempt	Ats1806 Retry Attempt	ALARMDETECTOR_ALARM
change-of-state:ats1806-serial-comms-fail	This Event Is Locally Generated By The Ats1806 (Universal Interface)	ALARMDETECTOR_ALARM
change-of-state:ats1806-serial-comms-restore	Ats1806 Serial Comms Restore	ALARMDETECTOR_ALARM
change-of-state:ats7300-gsm-module-fail	Fault (Ats7300)	ALARMDETECTOR_ALARM
change-of-state:ats7300-gsm-module-restore	Fault Restored (Ats7300)	ALARMDETECTOR_ALARM
change-of-state:audio-device-fail	Fault Ats1510	ALARMDETECTOR_ALARM

change-of-state:audio-device-restore	Fault Restored Ats1510	ALARMDETECTOR_ALARM
change-of-state:auto-lock	Auto Lock	ALARMDETECTOR_ALARM
change-of-state:auto-reset	Auto Reset	305
change-of-state:auto-test-call	Auto Test Call	ALARMDETECTOR_ALARM
change-of-state:auto-unlock	Auto Unlock	ALARMDETECTOR_ALARM
change-of-state:burglar-cancel	Burglar Cancel	406
change-of-state:camera-pop-disable	Camera Pop Disable	ALARMDETECTOR_ALARM
change-of-state:camera-pop-enable	Camera Pop Enable	ALARMDETECTOR_ALARM
change-of-state:cancel-code	Cancel Code	406
change-of-state:card-control-alarm	Card Control Alarm	ALARMDETECTOR_ALARM
change-of-state:card-not-in-ium	Access Denied: Unknown Card	921
change-of-state:card-pin	Card Pin	ALARMDETECTOR_ALARM
change-of-state:code-door-open	Code Door Open	ALARMDETECTOR_ALARM
change-of-state:code-entered	Code Entered	ALARMDETECTOR_ALARM
change-of-state:computer-attempts-failed	Computer Attempts Failed	ALARMDETECTOR_ALARM
change-of-state:confirm-system-alarm	Confirm System Alarm	ALARMDETECTOR_ALARM
change-of-state:confirm-system-alarm-restore	Confirm System Alarm Restore	ALARMDETECTOR_ALARM
change-of-state:confirmation-alarm	Confirmation Alarm	ALARMDETECTOR_ALARM
change-of-state:confirmation-alarm-restore	Confirmation Alarm Restore	ALARMDETECTOR_ALARM
change-of-state:cpu-restart	Cpu Restart	ALARMDETECTOR_ALARM
change-of-state:cs-commanded-panel	Cs Commanded Panel	ALARMDETECTOR_ALARM

change-of-state:cs-commanded-panel-restore	Cs Commanded Panel Restore	ALARMDETECTOR_ALARM
change-of-state:delay-button-active	Delay Button Active	ALARMDETECTOR_ALARM
change-of-state:detector-dirty	Detector Dirty	ALARMDETECTOR_ALARM
change-of-state:detector-dirty-restore	Detector Dirty Restore	ALARMDETECTOR_ALARM
change-of-state:detector-low-battery	Detector Low Battery	384
change-of-state:detector-low-battery-restore	Detector Low Battery Restore	R384
change-of-state:detector-supervision	Detector Supervision	ALARMDETECTOR_ALARM
change-of-state:detector-supervision-restore	Detector Supervision Restore	ALARMDETECTOR_ALARM
change-of-state:dgp-batt-low	Dgp Batt Low	302
change-of-state:dgp-batt-missing	Dgp Batt Missing	311
change-of-state:dgp-batt-missing-restore	Dgp Batt Missing Restore	R311
change-of-state:dgp-batt-restore	Dgp Batt Restore	R302
change-of-state:dgp-batt-test-fail	Dgp Batt Test Fail	309
change-of-state:dgp-batt-test-finish	Dgp Batt Test Finish	ALARMDETECTOR_ALARM
change-of-state:dgp-batt-test-restore	Dgp Batt Test Restore	ALARMDETECTOR_ALARM
change-of-state:dgp-batt-test-start	Dgp Batt Test Start	ALARMDETECTOR_ALARM
change-of-state:dgp-cpu-restart	Dgp Cpu Restart	ALARMDETECTOR_ALARM
change-of-state:dgp-de-polled	Dgp De Polled	ALARMDETECTOR_ALARM
change-of-state:dgp-dip-switch-changed	Dgp Dip Switch Changed	ALARMDETECTOR_ALARM
change-of-state:dgp-encryption-error-restore	Dgp Encryption Error Restore	ALARMDETECTOR_ALARM
change-of-state:dgp-fuse-fail	Dgp Fuse Fail	ALARMDETECTOR_ALARM
change-of-state:dgp-fuse-restore	Dgp Fuse Restore	ALARMDETECTOR_ALARM

change-of-state:dgp-inhibited	Dgp Inhibited	ALARMPANEL_INIHIBIT
change-of-state:dgp-mains-fail	Dgp Mains Fail	ALARMDETECTOR_ALARM
change-of-state:dgp-mains-restore	Dgp Mains Restore	ALARMDETECTOR_ALARM
change-of-state:dgp-offline	Dgp Offline	ALARMDETECTOR_ALARM
change-of-state:dgp-online	Dgp Online	ALARMDETECTOR_ALARM
change-of-state:dgp-polled	Dgp Polled	ALARMDETECTOR_ALARM
change-of-state:dgp-power-unit-failure	Dgp Power Unit Failure	ALARMDETECTOR_ALARM
change-of-state:dgp-power-unit-restore	Dgp Power Unit Restore	ALARMDETECTOR_ALARM
change-of-state:dgp-siren-monitor-fail	Dgp Siren Monitor Fail	ALARMDETECTOR_ALARM
change-of-state:dgp-siren-monitor-restore	Dgp Siren Monitor Restore	ALARMDETECTOR_ALARM
change-of-state:dgp-tamper	Dgp Tamper	145
change-of-state:dgp-tamper-inhibit	Dgp Tamper Inhibit	ALARMDETECTOR_ALARM
change-of-state:dgp-tamper-inhibit-restore	Dgp Tamper Inhibit Restore	R145
change-of-state:dgp-tamper-restore	Dgp Tamper Restore	ALARMDETECTOR_ALARM
change-of-state:dgp-unihibited	Dgp Uninhibited	ALARMPANEL_UNINIHIBIT
change-of-state:dial-back-triggered	Dial Back Triggered	ALARMDETECTOR_ALARM
change-of-state:dial-for-service	Dial For Service	ALARMDETECTOR_ALARM
change-of-state:dial-manual-test-message	Dial Manual Test Message	ALARMDETECTOR_ALARM
change-of-state:direct-connect-via-j5-port	Direct Connect Via J5 Port	ALARMDETECTOR_ALARM
change-of-state:disable-door	Disable Door	ALARMDETECTOR_ALARM

change-of-state:disable-door-readers	Disable Door Readers	ALARMDETECTOR_ALARM
change-of-state:disarm-test-completed	Disarm Test Completed	ALARMDETECTOR_ALARM
change-of-state:disarm-test-failed	Disarm Test Failed	ALARMDETECTOR_ALARM
change-of-state:disarm-test-over	Disarm Test Over	ALARMDETECTOR_ALARM
change-of-state:disarm-test-started	Disarm Test Started	ALARMDETECTOR_ALARM
change-of-state:door-closed	Door Closed	R426
change-of-state:door-forced	Door Forced	ALARMDETECTOR_ALARM
change-of-state:door-forced-restore	Door Forced Restore	ALARMDETECTOR_ALARM
change-of-state:door-group-added	Door Group Added	ALARMDETECTOR_ALARM
change-of-state:door-open	Door Open	426
change-of-state:door-open-too-long	Door Open Too Long	426
change-of-state:door-open-too-long-restored	Door Open Too Long Restored	R426
change-of-state:door-secure	Door Secure	ALARMDETECTOR_ALARM
change-of-state:door-unsecure	Door Unsecure	ALARMDETECTOR_ALARM
change-of-state:download-software-connected	Download Software Connected	553
change-of-state:duress-code-entered	Duress Code Entered	121
change-of-state:duress-code-restored	Duress Code Restored	R121
change-of-state:emergency-alarm	Emergency Alarm	ALARMDETECTOR_ALARM
change-of-state:enable-door	Enable Door	ALARMDETECTOR_ALARM
change-of-state:enable-door-readers	Enable Door Readers	ALARMDETECTOR_ALARM
change-of-state:eng-reset-code-requested	Eng Reset Code Requested	313
change-of-state:engineer-walk-test-completed	Engineer Walk Test Completed	ALARMDETECTOR_ALARM

change-of-state:engineer-walk-test-failed	Engineer Walk Test Failed	ALARMDETECTOR_ALARM
change-of-state:engineer-walk-test-started	Engineer Walk Test Started	607
change-of-state:engineer-walk-test-zone-not-tested	Engineer Walk Test Zone Not Tested	ALARMDETECTOR_ALARM
change-of-state:engineer-walk-test-zone-tested	Engineer Walk Test Zone Tested	613
change-of-state:engineering-reset-ok	Engineering Reset Ok	313
change-of-state:event-log-substitution	Event Log Substitution	ALARMDETECTOR_ALARM
change-of-state:exit-area-fault	Exit Area Fault	ALARMDETECTOR_ALARM
change-of-state:exit-fault	Exit Fault	ALARMDETECTOR_ALARM
change-of-state:failure-to-communicate-fail	Failure To Communicate Fail	350
change-of-state:failure-to-communicate-restore	Failure To Communicate Restore	R350
change-of-state:film-low	Film Low	ALARMDETECTOR_ALARM
change-of-state:film-low-restore	Film Low Restore	ALARMDETECTOR_ALARM
change-of-state:film-low-restored	Film Low Restored	ALARMDETECTOR_ALARM
change-of-state:film-out	Film Out	ALARMDETECTOR_ALARM
change-of-state:film-out-restore	Film Out Restore	ALARMDETECTOR_ALARM
change-of-state:floor-auto-armed	Floor Auto Armed	ALARMDETECTOR_ALARM
change-of-state:floor-auto-disarm	Floor Auto Disarm	ALARMDETECTOR_ALARM
change-of-state:floor-group-added	Floor Group Added	ALARMDETECTOR_ALARM
change-of-state:floor-manual-arm	Floor Manual Arm	ALARMDETECTOR_ALARM
change-of-state:floor-manual-disarm	Floor Manual Disarm	ALARMDETECTOR_ALARM
change-of-state:hll-fuse-fail	Hll Fuse Fail	ALARMDETECTOR_ALARM

change-of-state:hll-fuse-fail-restore	Hll Fuse Fail Restore	ALARMDETECTOR_ALARM
change-of-state:hll-low-bat	Hll Low Bat	ALARMDETECTOR_ALARM
change-of-state:hll-low-bat-restore	Hll Low Bat Restore	ALARMDETECTOR_ALARM
change-of-state:hll-mains-fail	Hll Mains Fail	ALARMDETECTOR_ALARM
change-of-state:hll-mains-fail-restore	Hll Mains Fail Restore	ALARMDETECTOR_ALARM
change-of-state:hll-offline	Hll Offline	ALARMDETECTOR_ALARM
change-of-state:hll-online	Hll Online	ALARMDETECTOR_ALARM
change-of-state:hll-tamper	Hll Tamper	145
change-of-state:hll-tamper-restore	Hll Tamper Restore	R145
change-of-state:holiday-added	Holiday Added	ALARMDETECTOR_ALARM
change-of-state:input-fault	Input Fault	ALARMDETECTOR_ALARM
change-of-state:input-fault-restore	Input Fault Restore	ALARMDETECTOR_ALARM
change-of-state:input-mask	Input Mask	ALARMDETECTOR_ALARM
change-of-state:input-mask-restore	Input Mask Restore	ALARMDETECTOR_ALARM
change-of-state:installer-level-access-to-event-logs	Installer Level Access To Event Logs	627
change-of-state:isdn-device-fail	Isdn Device Fail	ALARMDETECTOR_ALARM
change-of-state:isdn-device-restore	Isdn Device Restore	ALARMDETECTOR_ALARM
change-of-state:lift-floor-landed	Lift Floor Landed	ALARMDETECTOR_ALARM
change-of-state:line-down	Line Down	ALARMDETECTOR_ALARM
change-of-state:line-fault-monitor-fail	Line Fault Monitor Fail	351
change-of-state:line-fault-monitor-restored	Line Fault Monitor Restored	R351

change-of-state:line-up	Line Up	ALARMDETECTOR_ALARM
change-of-state:local-alarm-acknowledged	Local Alarm Acknowledged	ALARMDETECTOR_ALARM
change-of-state:management-software-connected	Management Software Connected	ALARMDETECTOR_ALARM
change-of-state:management-software-disconnected	Management Software Disconnected	ALARMDETECTOR_ALARM
change-of-state:manual-lock	Manual Lock	ALARMDETECTOR_ALARM
change-of-state:manual-unlock	Manual Unlock	ALARMDETECTOR_ALARM
change-of-state:menu-entered	Menu Entered	ALARMDETECTOR_ALARM
change-of-state:menu-exited	Menu Exited	ALARMDETECTOR_ALARM
change-of-state:modem-dcd-fail	Modem Dcd Fail	ALARMDETECTOR_ALARM
change-of-state:modem-no-at	Modem No At	ALARMDETECTOR_ALARM
change-of-state:modem-no-dcd	Modem No Dcd	ALARMDETECTOR_ALARM
change-of-state:modem-no-originate-dcd	Modem No Originate Dcd	ALARMDETECTOR_ALARM
change-of-state:network-down	Network Down	350
change-of-state:no-dial-tone	No Dial Tone	350
change-of-state:om-cs	Om Cs	ALARMDETECTOR_ALARM
change-of-state:om-cs-comm	Om Cs Comm	ALARMDETECTOR_ALARM
change-of-state:om-event-to-chmap	Om Event To Champ	ALARMDETECTOR_ALARM
change-of-state:om-vr	Om Vr	ALARMDETECTOR_ALARM
change-of-state:output-active	Output Active	DIGITALPORT_TRIGGER_ON
change-of-state:output-reset	Output Reset	DIGITALPORT_TRIGGER_OFF

change-of-state:overriding-system-condition	Overriding System Condition	ALARMDETECTOR_ALARM
change-of-state:panel-link-offline	Panel Link Offline	ALARMDETECTOR_ALARM
change-of-state:panel-link-online	Panel Link Online	ALARMDETECTOR_ALARM
change-of-state:panel-link-substitution	Panel Link Substitution	ALARMDETECTOR_ALARM
change-of-state:panel-link-substitution-restore	Panel Link Substitution Restore	ALARMDETECTOR_ALARM
change-of-state:pin-not-in-ium	Pin Not In Ium	ALARMDETECTOR_ALARM
change-of-state:program-mode-entered	Program Mode Entered	429
change-of-state:program-mode-exited	Program Mode Exited	430
change-of-state:protocol-no-handshake-ack	Protocol No Handshake Ack	ALARMDETECTOR_ALARM
change-of-state:protocol-no-kiss-off	Protocol No Kiss Off	ALARMDETECTOR_ALARM
change-of-state:protocol-re-transmit	Protocol Re Transmit	ALARMDETECTOR_ALARM
change-of-state:radio-ack-fail	Radio Ack Fail	ALARMDETECTOR_ALARM
change-of-state:radio-ack-restored	Radio Ack Restored	ALARMDETECTOR_ALARM
change-of-state:radio-host-fail	Radio Host Fail	ALARMDETECTOR_ALARM
change-of-state:radio-host-restored	Radio Host Restored	ALARMDETECTOR_ALARM
change-of-state:radio-in-range	Radio In Range	ALARMDETECTOR_ALARM
change-of-state:radio-out-of-range	Radio Out Of Range	ALARMDETECTOR_ALARM
change-of-state:radio-unit-ncl-fail	Radio Unit Ncl Fail	353
change-of-state:radio-unit-ncl-restored	Radio Unit Ncl Restored	R353
change-of-state:ras-code-attemps	Ras Code Attempts	ALARMDETECTOR_ALARM
change-of-state:ras-cpu-restart	Ras Cpu Restart	ALARMDETECTOR_ALARM

change-of-state:ras-de-polled	Ras De Polled	ALARMDETECTOR_ALARM
change-of-state:ras-dip-switch-changed	Ras Dip Switch Changed	ALARMDETECTOR_ALARM
change-of-state:ras-encryption-error-restore	Ras Encryption Error Restore	ALARMDETECTOR_ALARM
change-of-state:ras-inhibited	Ras Inhibited	ALARMPANEL_INIHIBIT
change-of-state:ras-offline	Ras Offline	ALARMDETECTOR_ALARM
change-of-state:ras-online	Ras Online	ALARMDETECTOR_ALARM
change-of-state:ras-polled	Ras Polled	ALARMDETECTOR_ALARM
change-of-state:ras-reserved-0	Ras Reserved 0	ALARMDETECTOR_ALARM
change-of-state:ras-reserved-1	Ras Reserved 1	ALARMDETECTOR_ALARM
change-of-state:ras-reserved-2	Ras Reserved 2	ALARMDETECTOR_ALARM
change-of-state:ras-reserved-3	Ras Reserved 3	ALARMDETECTOR_ALARM
change-of-state:ras-tamper	Ras Tamper	145
change-of-state:ras-tamper-inhibit	Ras Tamper Inhibit	ALARMDETECTOR_ALARM
change-of-state:ras-tamper-inhibit-restore	Ras Tamper Inhibit Restore	R145
change-of-state:ras-tamper-restore	Ras Tamper Restore	ALARMDETECTOR_ALARM
change-of-state:ras-uninhibited	Ras Uninhibited	ALARMPANEL_UNINIHIBIT
change-of-state:recent-closing	Recent Closing	ALARMDETECTOR_ALARM
change-of-state:redial	Redial	ALARMDETECTOR_ALARM
change-of-state:remote-dial-in	Remote Dial In	411
change-of-state:remote-direct-disconnection	Remote Direct Disconnection	415
change-of-state:remote-unsuccessful	Remote Unsuccessful	413

change-of-state:restart-exit-timer	Restart Exit Timer	ALARMDETECTOR_ALARM
change-of-state:rf-jamming-fault	Rf Jamming Fault	344
change-of-state:rf-jamming-restore	Rf Jamming Restore	R344
change-of-state:ring-in-test-call	Ring In Test Call	ALARMDETECTOR_ALARM
change-of-state:service-completed	Service Completed	ALARMDETECTOR_ALARM
change-of-state:service-in	Service In	466
change-of-state:service-out	Service Out	R466
change-of-state:service-requested	Service Requested	616
change-of-state:short-supervision	Short Supervision	147
change-of-state:short-supervision-restore	Short Supervision Restore	R147
change-of-state:single-knock-event	Single Knock Event	ALARMDETECTOR_ALARM
change-of-state:soak-test-end	Soak Test End	ALARMDETECTOR_ALARM
change-of-state:soak-test-start	Soak Test Start	ALARMDETECTOR_ALARM
change-of-state:specific-data-changed	Specific Data Changed	ALARMDETECTOR_ALARM
change-of-state:summary-point	Summary Point	ALARMDETECTOR_ALARM
change-of-state:summary-point-restored	Summary Point Restored	ALARMDETECTOR_ALARM
change-of-state:suspicion-button-act	Suspicion Button Act	ALARMDETECTOR_ALARM
change-of-state:swinger-trouble	Swinger Trouble	ALARMDETECTOR_ALARM
change-of-state:system-log-test	System Log Test	ALARMDETECTOR_ALARM
change-of-state:time-changed	Time Changed	625
change-of-state:timezone-added	Timezone Added	ALARMDETECTOR_ALARM
change-of-state:too-less-hsu-behind-door	Too Less Hsu Behind Door	ALARMDETECTOR_ALARM
change-of-state:too-less-hsu-behind-door-output-activated	Too Less Hsu Behind Door Output Activated	ALARMDETECTOR_ALARM

change-of-state:too-less-hsu-behind-door-output-stopped	Too Less Hsu Behind Door Output Stopped	ALARMDETECTOR_ALARM
change-of-state:too-less-hsu-behind-door-restore	Too Less Hsu Behind Door Restore	ALARMDETECTOR_ALARM
change-of-state:trace-door	Trace Door	ALARMDETECTOR_ALARM
change-of-state:trace-user	Trace User	ALARMDETECTOR_ALARM
change-of-state:user-added	User Added	ALARMDETECTOR_ALARM
change-of-state:user-battery-low	User Battery Low	302
change-of-state:user-battery-low-restore	User Battery Low Restore	R302
change-of-state:user-deleted	User Deleted	ALARMDETECTOR_ALARM
change-of-state:user-duress	User Duress	121
change-of-state:user-duress-restore	User Duress Restore	R121
change-of-state:user-stopped-voice-reporting	User Stopped Voice Reporting	ALARMDETECTOR_ALARM
change-of-state:user-tamper	User Tamper	316
change-of-state:user-tamper-restore	User Tamper Restore	R316
change-of-state:user-walk-test-completed	User Walk Test Completed	ALARMDETECTOR_ALARM
change-of-state:user-walk-test-failed	User Walk Test Failed	ALARMDETECTOR_ALARM
change-of-state:user-walk-test-started	User Walk Test Started	607
change-of-state:user-walk-test-zone-not-tested	User Walk Test Zone Not Tested	R613
change-of-state:user-walk-test-zone-tested	User Walk Test Zone Tested	613
change-of-state:voice-device-fail	Voice Device Fail	ALARMDETECTOR_ALARM
change-of-state:voice-device-restore	Voice Device Restore	ALARMDETECTOR_ALARM
change-of-state:wireless-dgp-sensor-not-programmed	Wireless Dgp Sensor Not Programmed	ALARMDETECTOR_ALARM
change-of-state:wireless-dgp-sensor-programmed	Wireless Dgp Sensor Programmed	ALARMDETECTOR_ALARM
change-of-state:zone-active	Zone Active	ALARMDETECTOR_ALARM

change-of-state:zone-alarm-restore-whilst-in-exit	Zone Alarm Restore Whilst In Exit	ALARMDETECTOR_ALARM
change-of-state:zone-alarm-restored	Zone Alarm Restored	ALARMDETECTOR_ALARM
change-of-state:zone-alarmed-whilst-in-soak-test	Zone Alarmed Whilst In Soak Test	ALARMDETECTOR_ALARM
change-of-state:zone-arm-alarm	Zone Arm Alarm	ALARMDETECTOR_ALARM
change-of-state:zone-arm-alarm-restored	Zone Arm Alarm Restored	ALARMDETECTOR_ALARM
change-of-state:zone-delay-started	Zone Delay Started	ALARMDETECTOR_ALARM
change-of-state:zone-fault-restored	Zone Fault Restored	ALARMDETECTOR_ALARM
change-of-state:zone-in-alarm	Zone In Alarm	130
change-of-state:zone-in-alarm-whilst-in-exit	Zone In Alarm Whilst In Exit	ALARMDETECTOR_ALARM
change-of-state:zone-in-fault	Zone In Fault	ALARMDETECTOR_ALARM
change-of-state:zone-in-local-alarm	Zone In Local Alarm	130
change-of-state:zone-in-local-alarm-restored	Zone In Local Alarm Restored	R130
change-of-state:zone-in-mask-trouble	Zone In Mask Trouble	ALARMDETECTOR_ALARM
change-of-state:zone-in-mask-trouble-restore	Zone In Mask Trouble Restore	ALARMDETECTOR_ALARM
change-of-state:zone-inhibited	Zone Inhibited	ALARMPANEL_INIHIBIT
change-of-state:zone-normal	Zone Normal	ALARMDETECTOR_ALARM
change-of-state:zone-restored-whilst-in-soak-test	Zone Restored Whilst In Soak Test	ALARMDETECTOR_ALARM
change-of-state:zone-uninhibited	Zone Uninhibited	ALARMPANEL_UNINIHIBIT

External Dependencies

To use the ATS driver it is necessary to install the UTC SDK to allow communication with the panel. In this way, the ATS8400.01.17_SDK17.exe and the redistributables that allow its correct functioning.

11. Firewall Requirements

Note: ATS communicates with COMPASS with protocol UDP/IP using one DLL.

Description	Source	Destination	Protocol/Port
Event Reception	ATS	COMPASS Server	UDP/3001
Send Commands	COMPASS Server	ATS	UDP/3001

12. Driver Update

This driver update is distributed within the Compass software. That is, if some corrections are made in this driver so that they are reflected, it is necessary to update all the software.


The release notes for this driver are also distributed with the Compass software release notes.

13. Troubleshooting


Describe how the user can troubleshoot the driver.

Other tools


1. Procexp (Present in Compass tools folder) - Principal function is list all system processes - Should have a process with driver name.

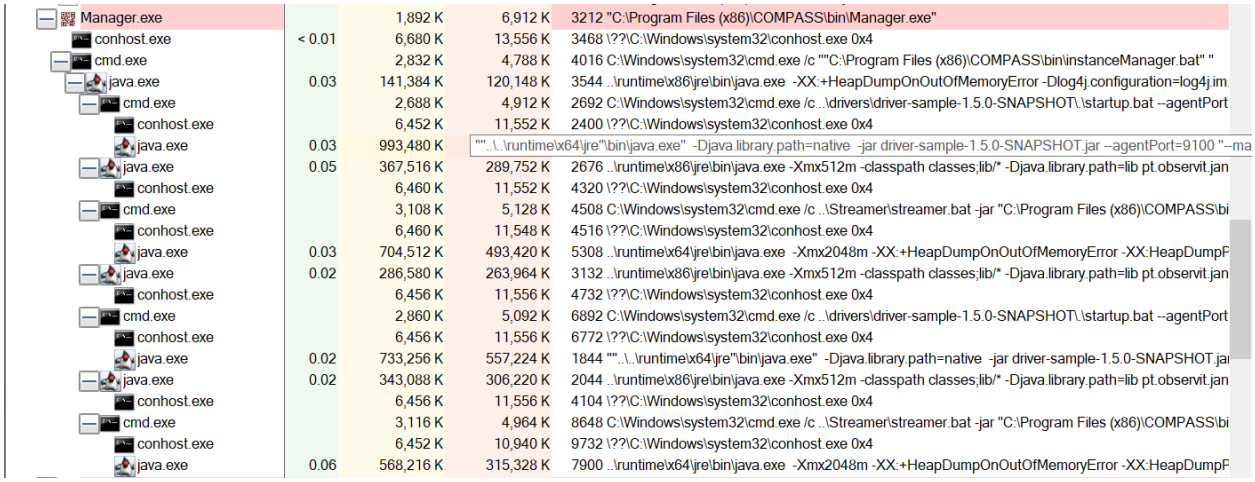

2. Baretail - Principal function is show logs - Open agent logger. To know what your agent is, go to Compass → Configuration → System Status → Agents and expand agents to find which one is used by your device.

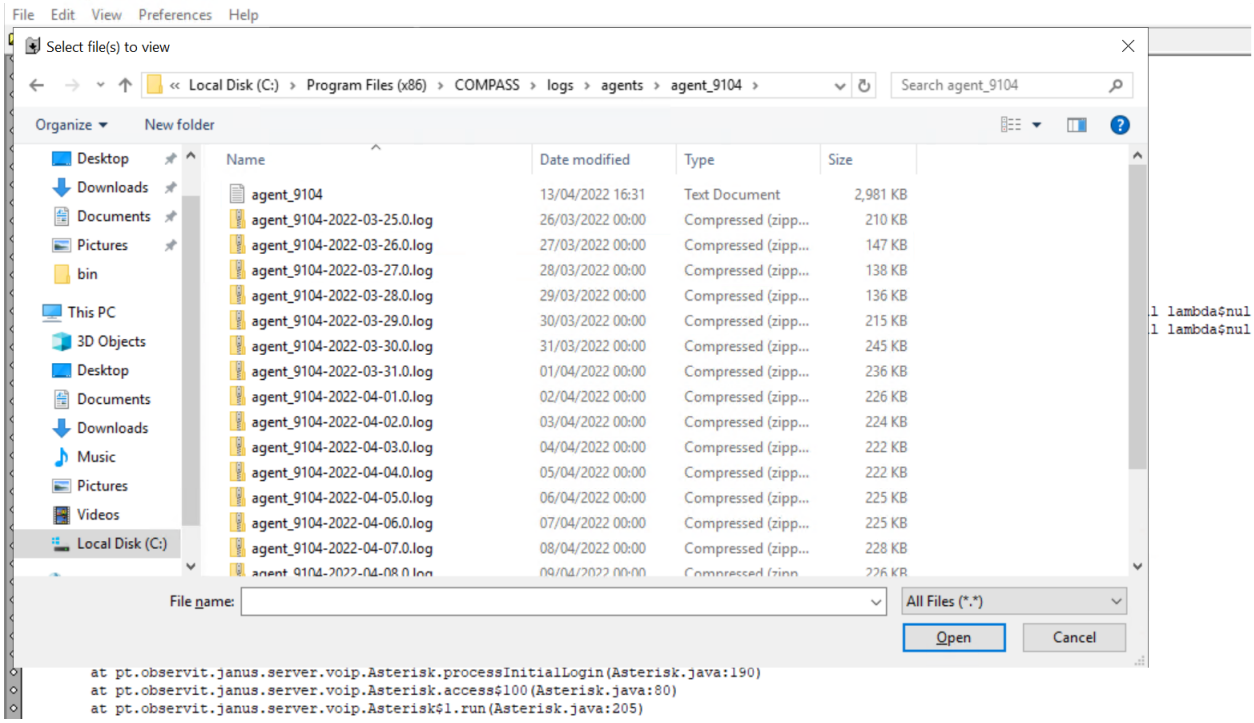

3. Windows Services - Verify if all Compass services are running

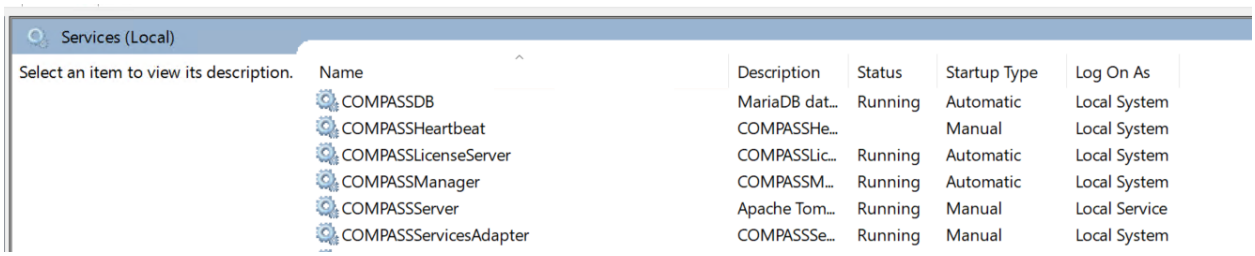

ATS dll error

Error in log:

“java.io.IOException: Failed to login to ATS Dll Wrapper”...

Note: Restart agent with correct permissions and teste again.

Notes

When migrating a system with more than one ATS panel from an COMPASS version prior to 2.0.25, manual intervention is required. If such is the case, please contact your support.