

Please Call First!

DO NOT RETURN TO STORE

Need help with assembly? Missing or broken parts?

Business Hours: M-F 8am-5pm PST

Toll Free: 1 (866) 632-6632 support@slambrands.com

07.07 B

MATAR TALL FLAT PANEL TV STAND

Assembly Instructions Item #222314








IMPORTANT INFORMATION

Read carefully before assembling TV Stand. Keep these instructions for further use.

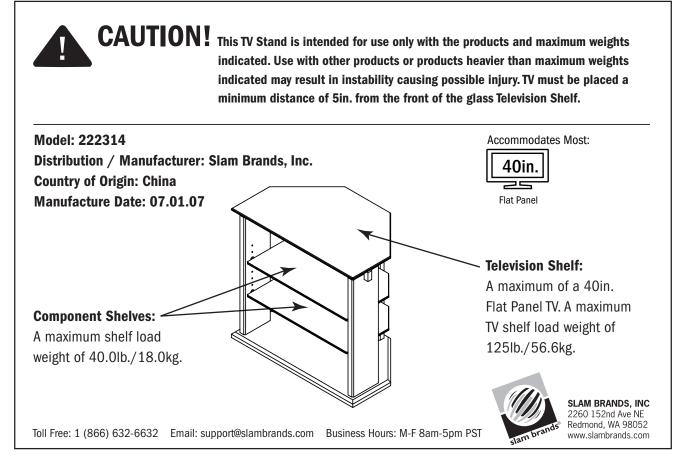


SAFETY FIRST

- ! When moving TV Stand, remove TV first. Do NOT move TV Stand with a TV on top
- ! TVs are front heavy. Place TV as far from front surface of stand as possible.
- To avoid injury, assemble TV Stand in final location. Moving the stand after assembled is not recommended.

This product is sold with anti-tip hardware and it is intended that the product be used with this hardware attached. Danger from tipping may result if the hardware is not attached to both the wall and the TV Stand. Slam Brands, Inc. is not responsible for any personal injury or damage to stand, television, components, or household effects resulting from improper use of this product.




ASSEMBLY OVERVIEW

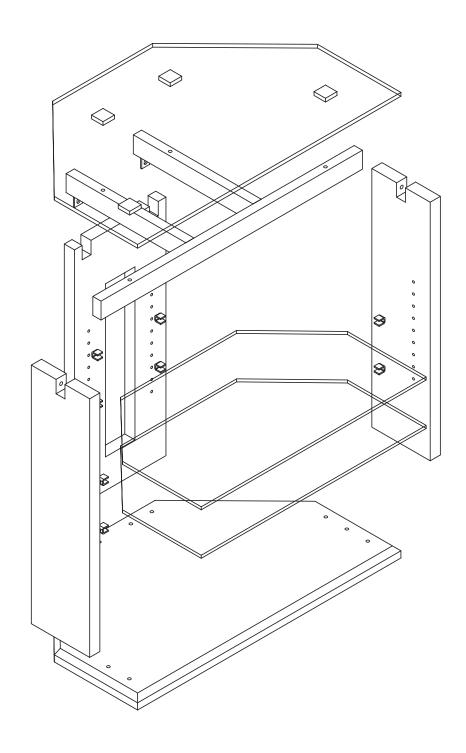




PARTS IDENTIFICATION




1 Top Glass Shelf (1) T00499




② Glass Shelves (2) T00500




(3) Left Side Support (1) T00501




(4) Right Side Support (1) T00502



(5) Back Board (1) T00503



6 Shelf Support (1) T00504

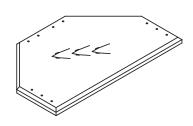

7 Base Board (1) T00505



HARDWARE IDENTIFICATION



(A) 1/4" x 3" Hex Bolts (2) H00229



(B) 1/4" x 11/4" Hex Bolts (2) H00045



© ¼" x 2" Hex Bolts (6) H00055



① ¼" x 2½" Hex Bolts (4) H00024



(E) ø ¼" Washers (6) H00212



F ø ¼" Spring Washers (6) H00193



G 4mm Allen Wrench (1) H00005



(H) 22 x 20 x 16mm Shelf Support (8) H00107



(1) 10 x 40mm Dowell (4) H00233



J 46 x 20 x 4mm Safety Bracket (2) H00228



(K) #7 x 1¼" Wood Screws (2) H00195



(L) #7 x 3/4" Wood Screws (2) H00211




M 250 x 8 x 1mm Safety Bracket Strip (1) H00230



BUILD FRAME

1

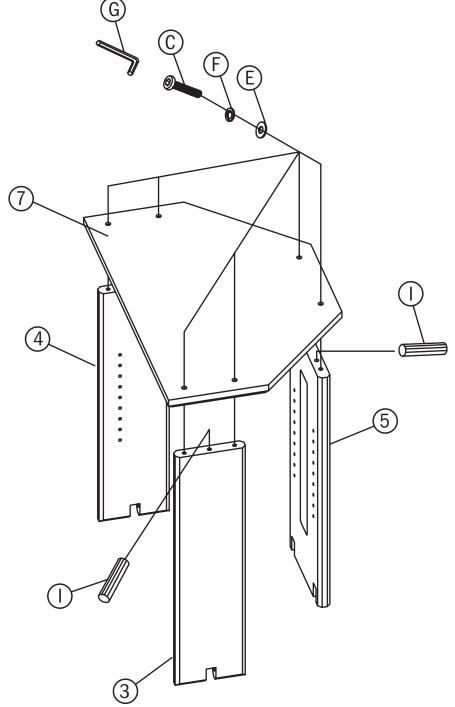



ATTACH SHELF SUPPORT TO FRAME

Turn frame assembly over after step 1.


(5)



3

ATTACH TOP GLASS AND GLASS SHELVES

Overtightening the bolt (D) (x4) may cause the glass to break. DO NOT OVERTIGHTEN!

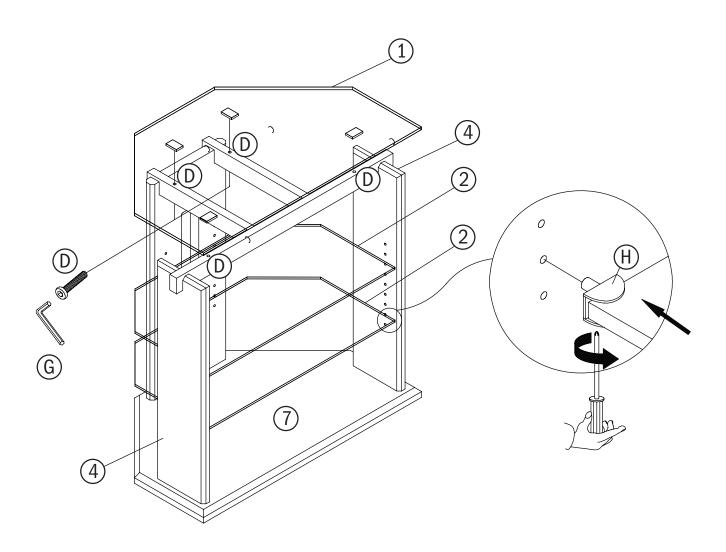

SECURE TV STAND TO WALL

