
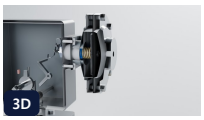
FEQ slam-shut valve (SSV) — Step-by-step

One page to follow along with the ② disassembly & assembly guide video — the ▶ time on the right opens that part of the video.

② Disassembly guide
English

Work by qualified personnel following the manufacturer's manual · KFNGS training material — not an Emerson publication
Work the manual does not describe: do not proceed until the manufacturer's procedure is confirmed
torques from the manual only · tool sizes from KFNGS service records — verify the actual fastener

Photo	Step · what to do / see	Tools · torque	★ Caution · check	Video
 3D	**Before you start — records, shutdown, pressure release** Record adjust-nut length M, turns and hook nut C/D positions; shut down and vent downstream then upstream, exhaust the BMS and confirm depressurization (pp. 10–11).	—	Training model: DN50 · BMS Type A · no step-by-step disassembly in the manual — disassembly and adjustment by manufacturer-trained staff only.	▶ 0:08
 3D	**① Remove the handle → emergency button** Remove the handle from the shaft, press the emergency button and check the indicator shows OFF (Fig. 8).	—	★ Never loosen the bonnet while latched open · preload remains even when closed (Fig. 3).	▶ 1:16
 3D	**② Disconnect the sensing line · store the handle** The sensing line, tee and exhaust valve connect to the BMS sensing port (3/8 NPT). Removal procedure not in the manual — do not proceed until the manufacturer's procedure is confirmed.	—	Leak-check after reconnecting — a leak can stop it shutting off (Table 4).	▶ 1:33
 Real 2015	**③ BM front cover · trip mechanism check** What to see: pin holder, hook, crank, travel stop, amortisseur (30); loose bolts or locknuts (Table 4). Front cover: Removal procedure not in the manual — do not proceed until the manufacturer's procedure is confirmed.	—	★ Do not knock the BM · loose bolts or locknuts shift the trip pressure (p. 5, Table 4).	▶ 1:49
 3D	**④ Set spring — check before disassembly** The manual does not provide a method for fully releasing set-spring compression — do not proceed until the manufacturer's procedure is confirmed.	Adjust nut: handle — no extension, no great force (p. 9)	M ≤ 19 mm is the adjust-nut limit, not proof that the spring load is released (p. 9, Fig. 15).	▶ 2:09
 Real 2015	**⑤ Remove the BMS** The manual does not describe removing the BMS while set-spring force may remain — do not proceed until the manufacturer's procedure is confirmed.	BMS mounting screws: 10 mm **Torque: check the manual value**	A bent threaded stem (3) shifts the trip pressure · after reassembly, reset the stem–pin B gap to 1.5 mm under the pressure and latch conditions on p. 9.	▶ 2:44
 Real 2015	**⑥ BMS pressure case · diaphragm** Assume spring force remains when opening the pressure case — the manual does not describe releasing it, so do not proceed until the manufacturer's procedure is confirmed.	Screws 10 mm · nut 14 and 16 mm **Torque: check the manual value**	A damaged diaphragm means no shut-off → replace (BMS Type A diaphragm kit JJJJ56BX021, p. 19).	▶ 2:56
 Real 2015	**⑦ Set spring · stem · adjust nut** What to see: set-spring colour = set range (Table 3). The manual does not describe removal of the set spring, square stem, adjust nut or locknut — do not proceed until the manufacturer's procedure is confirmed.	—	If the pressure setting changes, update the nameplate (p. 9).	▶ 3:26
 3D	**⑧ Remove the BM** BM: Removal procedure not in the manual — do not proceed until the manufacturer's procedure is confirmed.	Screws: 13 mm **Torque: check the manual value**	Inspect the cushion (32) and O-rings and replace them if needed (kit · p. 11).	▶ 3:39
 Real 2015	**⑨⑩ Bonnet assembly · plug · closing spring** Closing-spring preload remains even when closed — the manual does not describe releasing it, so do not proceed until the manufacturer's procedure is confirmed.	Bonnet screws: 24 mm **Torque: check the manual value**	After the manufacturer's procedure is confirmed, inspect O-rings 49, 46 and 50 per that procedure and replace them if needed (p. 11).	▶ 3:53
 Real 2015	**⑪⑫ Plug disk · bypass · orifice** What to see: damage to the disk, internal bypass, orifice and O-rings, and nicks or debris on the seat — clean off debris (p. 11, Table 4).	Plug and disk: strap wrench · snap-ring pliers	★ Do not scratch the round grooves of the plug or disk with tools (p. 11).	▶ 4:44
 3D	**Assembly · readjustment · commissioning** No reassembly procedure in the manual — do not proceed until the manufacturer's procedure is confirmed. Readjustment (stem–pin B 1.5 mm → overpressure set point → hook–pin A 1.5 mm, pp. 9–10) and commissioning (p. 7) follow the manual.	—	★ Commissioning: turn the handle about 10°, wait for internal equalizing, then latch · no extension bar (p. 7).	▶ 5:25

Photos: Real = KFNGS service records (year · 299HS = parts shared with the 299H) · 3D = KFNGS guide screen (training reconstruction) · ①… = guide video steps

KFNGS Co., Ltd. · 500 Daegonnam-ro, Daegot-myeon, Gimpo-si, Gyeonggi-do, Korea · Tel. +82-31-981-6117 · www.kfngs.com
KFNGS training material — not an Emerson publication. Product information is based on the manufacturer's published manuals; independently produced by KFNGS.
Installation, operation and maintenance must be performed by qualified personnel following applicable codes, site safety procedures and the manufacturer's manual.
The disassembly & assembly guides are training reconstructions, not manufacturer procedures. Do not perform any work the manual does not describe, including releasing spring force, until you have checked the manufacturer's procedure.
Fisher™ is a mark owned by Fisher Controls International LLC, an Emerson company. © 2026 KFNGS Co., Ltd. All rights reserved.