WRITTEN PITCH · BB SOPRANO SAX

Soprano Saxophone Fingering Chart

소프라노 색소폰 운지표: 기보음 low Bb부터 high F#까지, 표준 운지와 핵심 대체 운지 메모를 함께 정리했습니다.

● 누름/닫힘 ○ 열림 OK 옥타브 키

소프라노는 Bb 조 이조악기이므로 실제 소리는 기보음보다 장2도 낮습니다. High F#는 high F# key가 있는 악기 기준입니다.

1. Low Register


Written Bb3-Gb4

SOPRANO SAX · WRITTEN PITCH

Bb3 / A#3

실음 Ab3

Low Bb

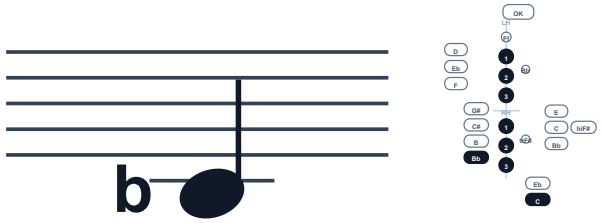


LH 123 + low Bb | RH 123 + low C

저음 B-flat

B3 / Cb4

실음 A3

Low B

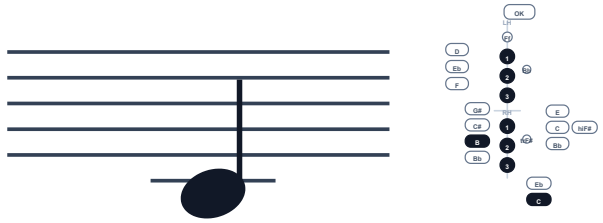


LH 123 + low B | RH 123 + low C

C4 / B#3

실음 Bb3

Low C

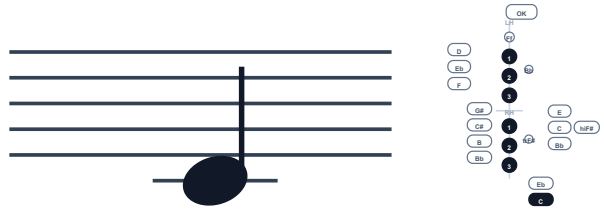


LH 123 | RH 123 + low C

C#4 / Db4

실음 B3

Low C#

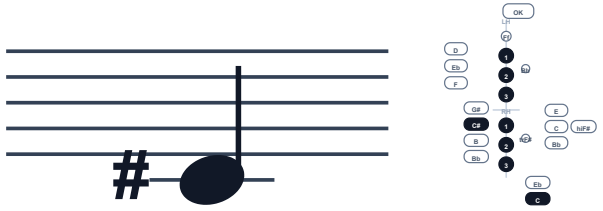

LH 123 + low C# | RH 123 + low C

D4

실음 C4

Low D




LH 123 | RH 123

Eb4 / D#4

실음 Db4

Low Eb

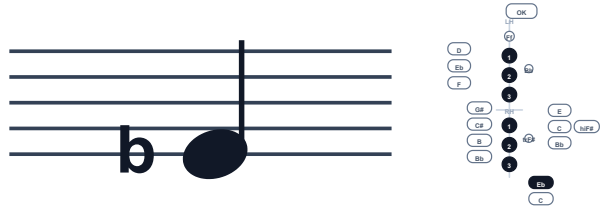

LH 123 | RH 123 + low Eb

E4 / Fb4

실음 D4

Low E



LH 123 | RH 12

F4 / E#4

실음 Eb4

Low F



LH 123 | RH 1

F#4 / Gb4

실음 E4

Low F#



LH 123 | RH 2

Alt: LH123 | RH1 + trF#

2. First Register


Written G4-Eb5

SOPRANO SAX · WRITTEN PITCH

G4

실음 **F4**

G

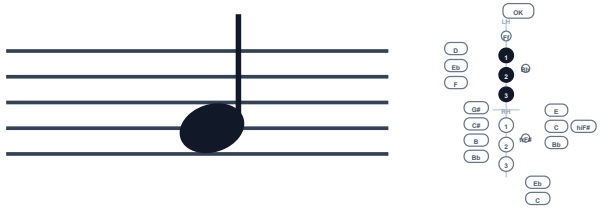


LH 123 | open RH

G#4 / Ab4

실음 **Gb4**

G#

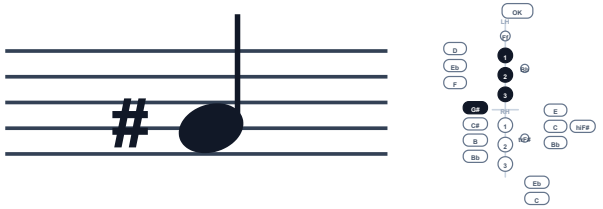

LH 123 + G# | open RH

A4

실음 **G4**

A




LH 12 | open RH

Bb4 / A#4

실음 **Ab4**

Bb

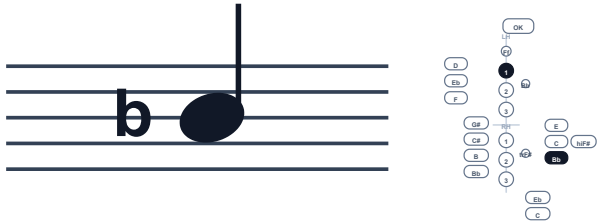


LH 1 + side Bb

Alt: LH1 + Bis Bb

B4 / Cb5

실음 **A4**

B

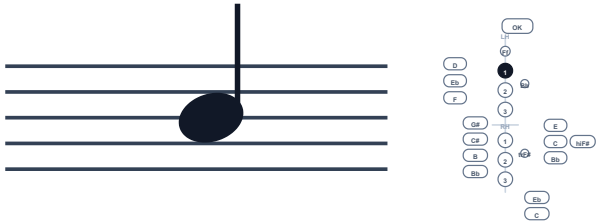


LH 1 | open RH

C5 / B#4

실음 **Bb4**

C

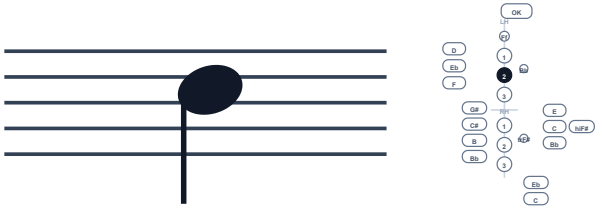


LH 2 | open RH

Alt: LH1 + side C

C#5 / Db5

실음 **B4**

C#

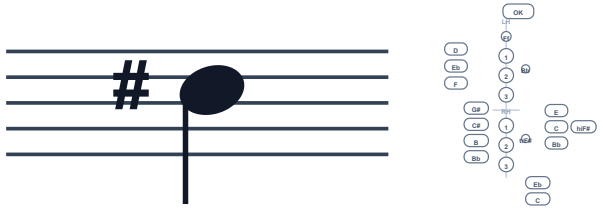


Open

중간 C#

D5

실음 **C5**

D + octave

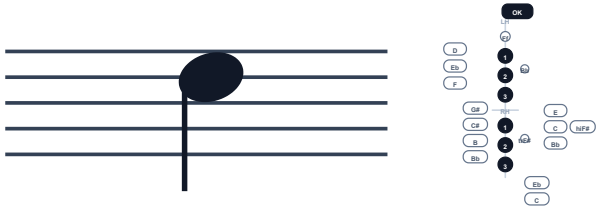

OK + LH 123 | RH 123

Eb5 / D#5

실음 **Db5**

Eb + octave



OK + LH 123 | RH 123 + low Eb

3. Octave-Key Register


Written E5-C6

SOPRANO SAX · WRITTEN PITCH

E5 / Fb5

실음 **D5**

E + octave

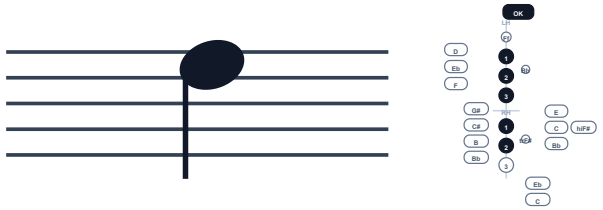


OK + LH 123 | RH 12

F5 / E#5

실음 **Eb5**

F + octave

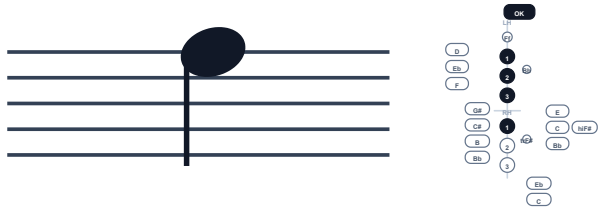


OK + LH 123 | RH 1

F#5 / Gb5

실음 **E5**

F# + octave

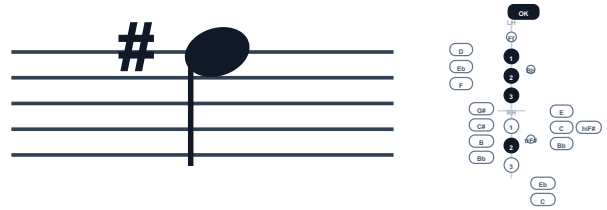

OK + LH 123 | RH 2

Alt: OK + LH123 | RH1 + trF#

G5

실음 **F5**

G + octave



OK + LH 123 | open RH

G#5 / Ab5

실음 **Gb5**

G# + octave



OK + LH 123 + G# | open RH

A5

실음 **G5**

A + octave




OK + LH 12 | open RH

Bb5 / A#5

실음 **Ab5**

Bb + octave

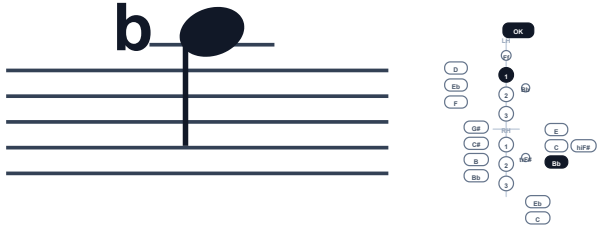


OK + LH1 + side Bb

Alt: OK + LH1 + Bis Bb

B5 / Cb6

실음 **A5**

B + octave

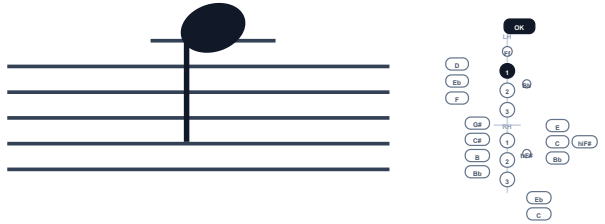


OK + LH1 | open RH

C6 / B#5

실음 **Bb5**

C + octave

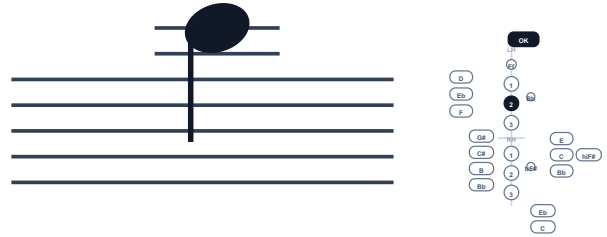

OK + LH2 | open RH

Alt: OK + LH1 + side C

4. Top Register


Written C#6-F#6

SOPRANO SAX · WRITTEN PITCH

C#6 / Db6

실음 **B5**

C# + octave

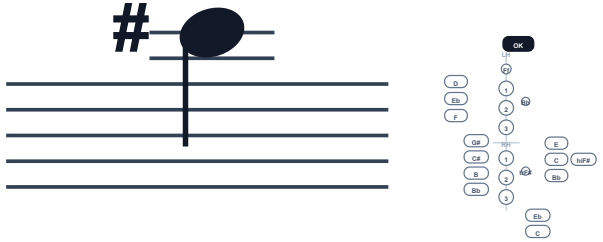


OK only

D6

실음 **C6**

Palm D

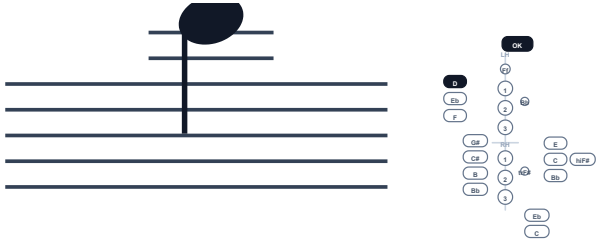

OK + palm D

3옥타브 D

Eb6 / D#6

실음 **Db6**

Palm Eb



OK + palm D + palm Eb

E6 / Fb6

실음 **D6**

High E



OK + palm D/Eb + side E

F6 / E#6

실음 **Eb6**

High F



OK + palm D/Eb/F + side E

F#6 / Gb6

실음 **E6**

High F#



OK + palm D/Eb/F + side E + high F# key

high F# key 장착 모델

검수 기준

표준 운지의 악기 공통성, 키 명칭, palm/side key 조합을 아래 자료로 대조했습니다.

- Yamaha Musical Instrument Guide: Saxophone fingering
- The Woodwind Fingering Guide: Fingering Scheme for Saxophone
- The Woodwind Fingering Guide: Second Octave Saxophone Fingerings
- Taming The Saxophone: Fingering Charts
- Sax School: High F on Saxophone