

# Welcome to Teensy® 4.0

32 Bit Arduino-Compatible Microcontroller

To begin using Teensy, please visit the website & click [Getting Started](http://www.pjrc.com/teensy).

[www.pjrc.com/teensy](http://www.pjrc.com/teensy)

## Digital Pins

digitalRead  
digitalWrite  
pinMode

## Analog Pins

analogRead

## PWM Pins

analogWrite

## Digital Audio

Audio Library

## Serial Ports

Serial1 - Serial7

## I<sup>2</sup>C Port

Wire Library


## SPI Port

SPI Library

## CAN Bus


FlexCAN\_t4  
Library

Red LED  
Loading Status  
dim: Ready  
bright: Writing  
blink: No USB

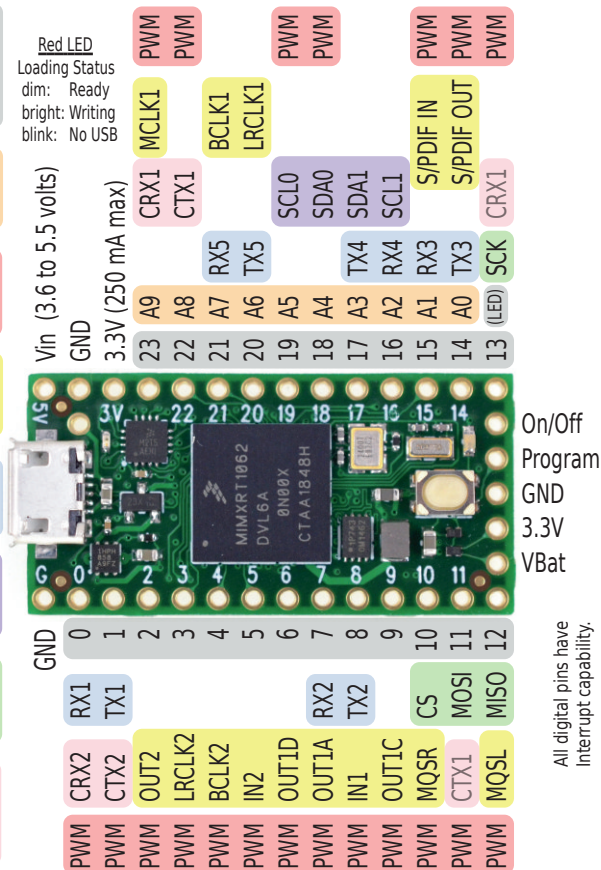

# Teensy® 4.0 Back Side

Additional pins and features available on the back side

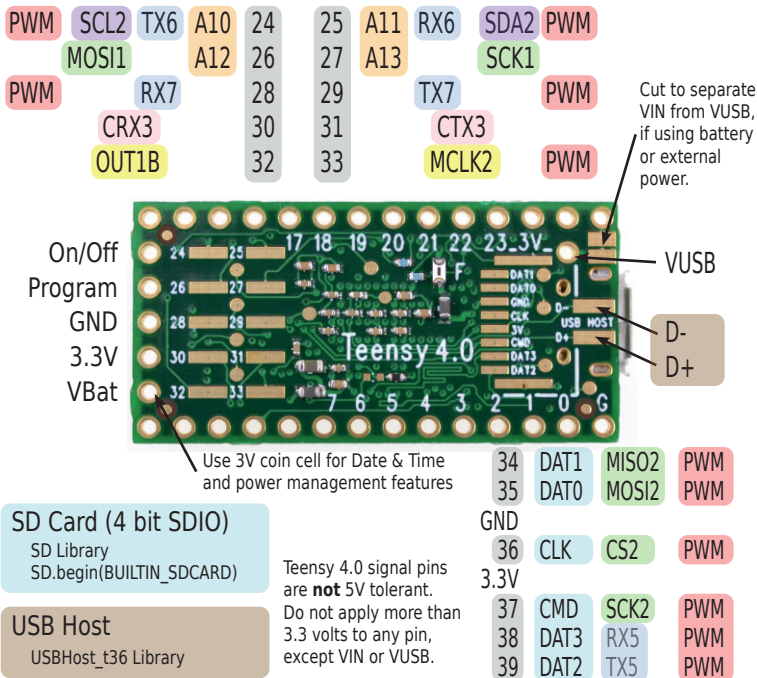

For solutions to the most common issues  
and technical support, please visit:

[www.pjrc.com/help](http://www.pjrc.com/help)

Teensy 4.0 System Requirements:

PC computer with Windows 7, 8, 10 or later  
or Ubuntu Linux 14.04 or later  
or Macintosh OS-X 10.8 or later  
USB Micro-B Cable

