Service Manual

OASYS 76 / OASYS 88

Part2 Appendix

CONTENTS

(APPENDIX)

PARTS DIAGRAMS
LCD : Page 2 - 4
PAD : Page 5
Joystick : Page 6


Vector Joystick : Page 7


How to change OASYS 76 CD-RW unit : Page 8 - 9


How to change OASYS 88 CD-RW unit : Page 10 - 11
CAUTION : OASYS FRONTPANEL SHIELD FORM: 12
Using the OASYS Internal Calibration Application: 13
How to reach HDD: Page14-24

5th Edition
Issued date : Oct.12, 2006
Issued by : KORG INC.


Downloaded from www.Manualslib.com manuals search engine

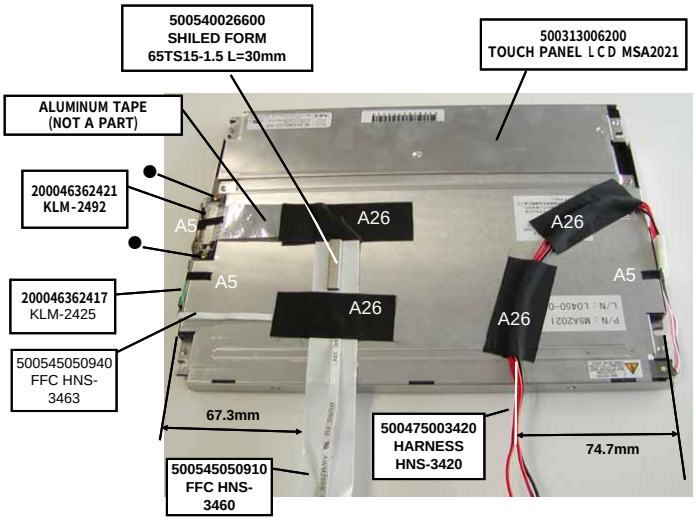


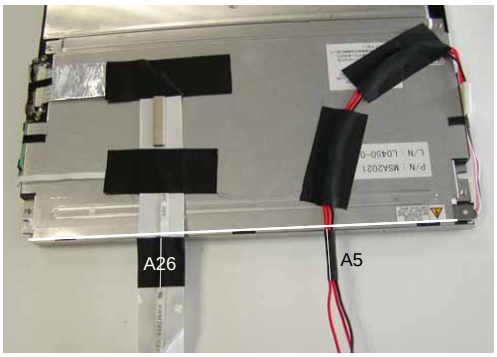

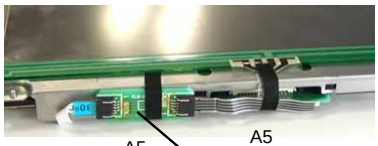

200046362417
KLM-2425

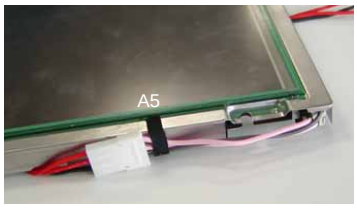

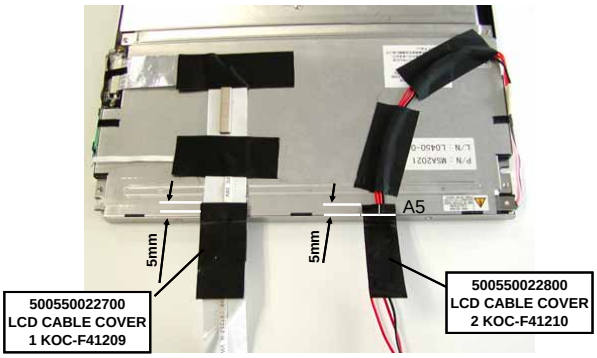


	SCREW	
●	PLAX B ZMC 2×5	2


	Ready-Made TAPE
A26	TAPE W=26mm
A5	TAPE W= 5mm


DRAWN	CHECKED	APPROVED	MODEL	X-2100/2160
TAMURA			TITLE	LCD UNIT 1
KORG INC.			NO.	3


Downloaded from www.Manualslib.com manuals search engine

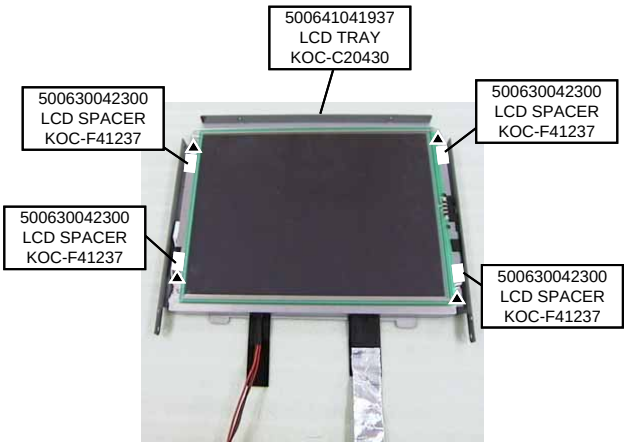

	SCREW	
▲	FE B BZMC 3*6	4

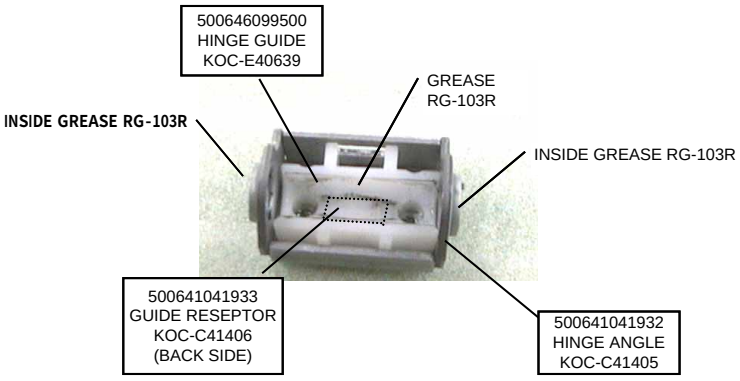


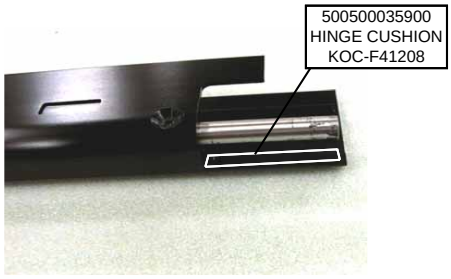

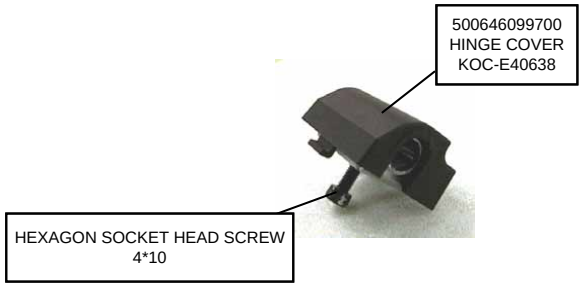

DRAWN	CHECKED	APPROVED	MODEL	X-2100/2160	
TAMURA			TITLE	LCD UNIT 2	
KORG INC.			NO.		4

Downloaded from www.Manualslib.com manuals search engine

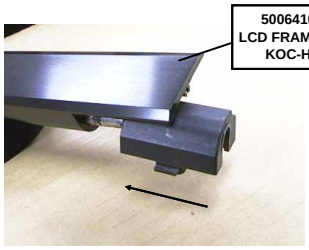


500641041951
LCD FRAME A ASSY
KOC-H30290

500646099600
CAP
KOC-E40641

500641041947
LCD FRAME D
KOC-C30684

DOUBLE-COATED ADHESIVE TAPE

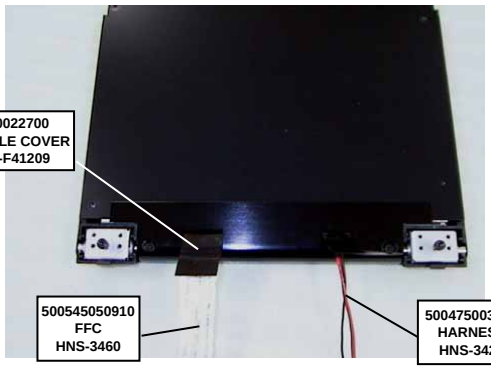

500550022700
LCD CABLE COVER
1 KOC-F41209


500545050910
FFC
HNS-3460

500475003420
HARNESS
HNS-3420

500641041927
KORG PLATE 5
KOC-C41155-5


500641041946
LCD FRAME C
KOC-C30683-2

500641041945
LCD FRAME B
KOC-C30683-1

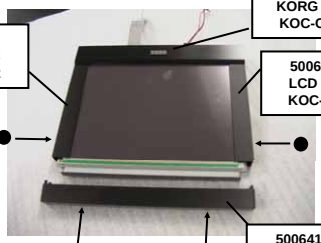

500641041947
LCD FRAME D
KOC-C30684


●	SCREW SH0308BNI(AZUMA)3*8	4

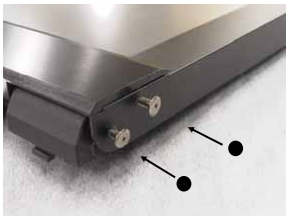


●	SCREW SH0308BNI(AZUMA)3*8	4



LOCTITE 242

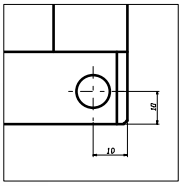

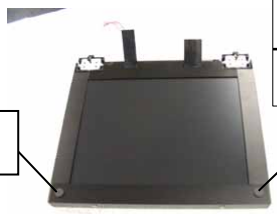

500500035800
LCD CUSHION
KOC-F41216

500500035800
LCD CUSHION
KOC-F41216

DRAWN	CHECKED	APPROVED	MODEL	X−2100／2160
TAMURA			TITLE	LCD UNIT 3
KORG INC.			NO.	5

Downloaded from www.Manualslib.com manuals search engine


PAD related parts

500646097700
PAD FRAME
KOC-E30371-1

500646097500
PAD BUTTON
KOC-E40623

500525002000
FERRITE

(NOTE) It is actually a magnet but it is wrongly listed as FERRITE CORE

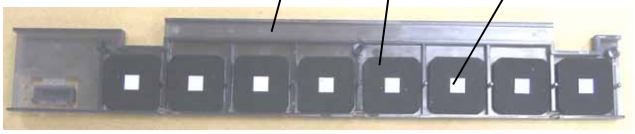


500646097600
PAD CUSSION
KOC-E30375



tear along perforation

KLM-2417-91/2505-63

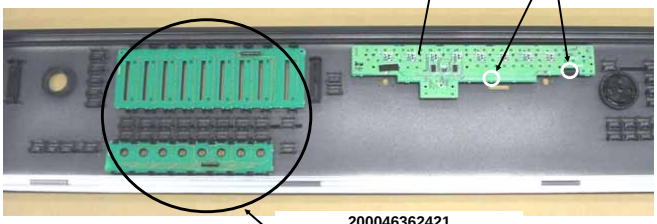

200046362421
PCB ASSY KLM-2421/22/92/2651


200046362417
PCB ASSY
KLM-2417-91/2505-

LED(pre-installed)

LED(pre-installed)




CLOSEUP

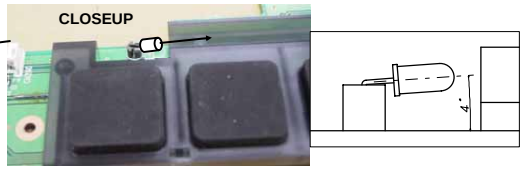


Downloaded from www.Manualslib.com manuals search engine


X-2100 JSPanel ASSY

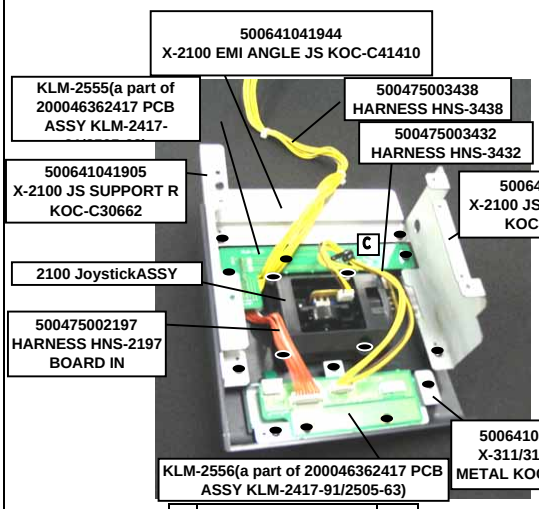

	Screw	Qty.
⬬	BT B BZMC 3x8	16
C	CoatingClip CS-6	1

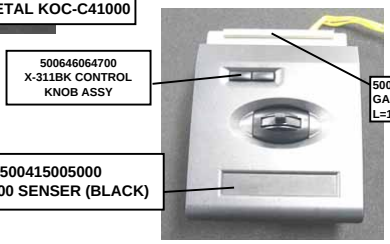

X-2160 JSPanel ASSY

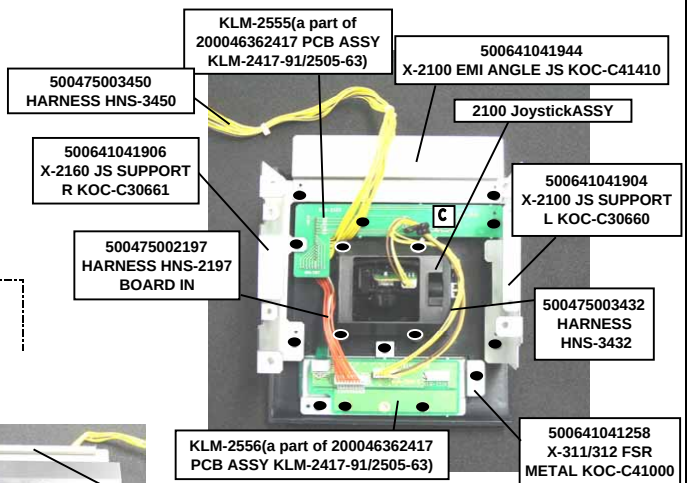


	Screw	Qty.
⬬	BT B BZMC 3x8	16
C	CoatingClip CS-6	1

REVISAL MARK	REVISAL REASON	REVISAL DATE	REVISAL BY	APPROVED

DRAWN	CHECKED	APPROVED	MODEL	X−2100／2160
田村 2005/5/27		武田 2005/5/31	TITLE	JSパネル加工図
KORG. INC			NO.	KOE−F32028 6

Downloaded from www.Manualslib.com manuals search engine

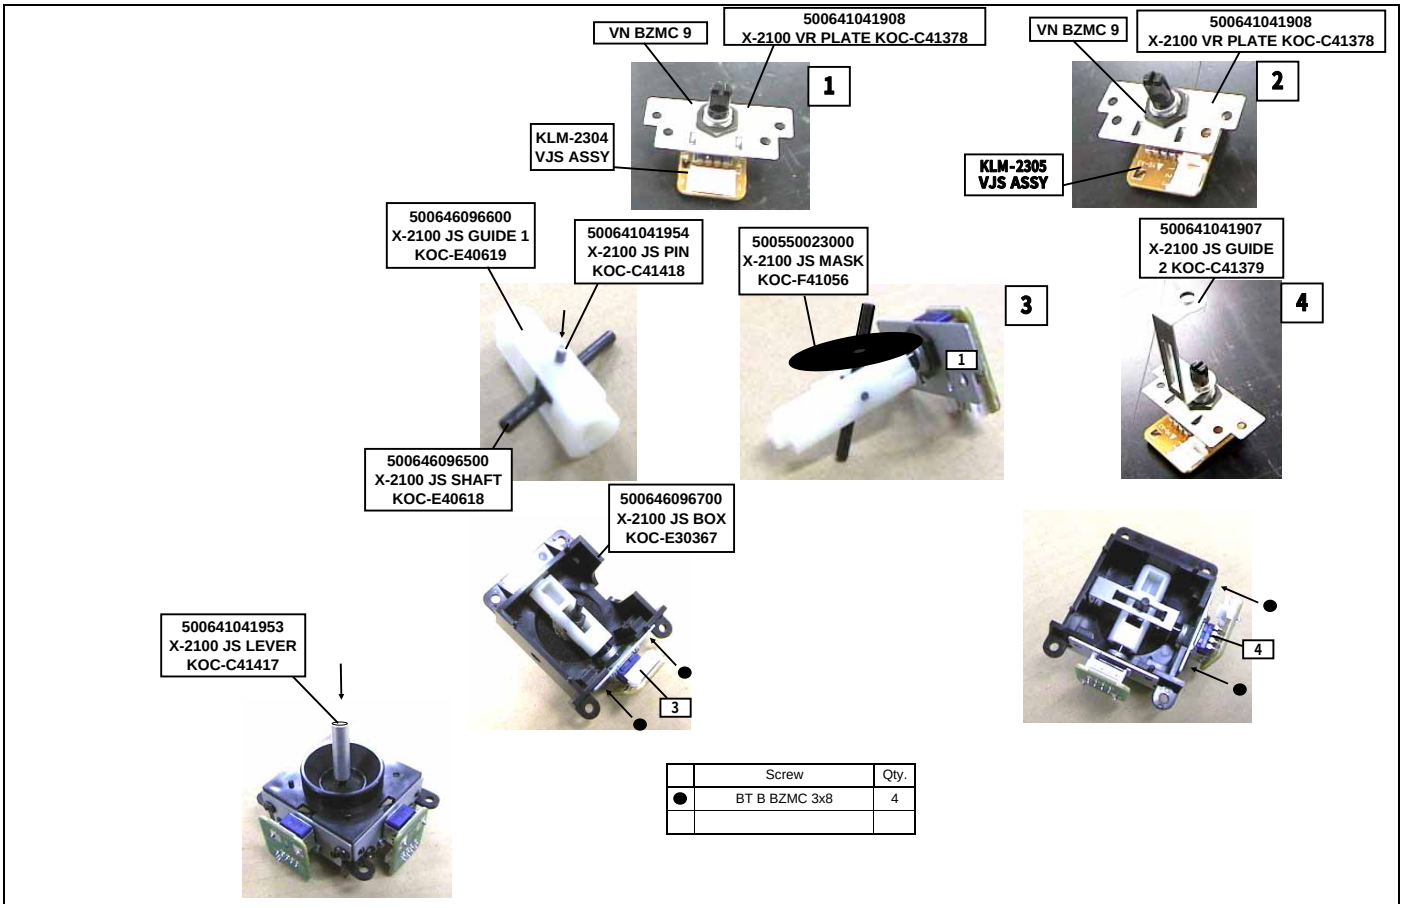


	Screw	Qty.
●	BT B BZMC 3x8	4

Downloaded from www.Manualslib.com manuals search engine

OASYS76 : CHANGE THE CD-RW

1.Open the front panel of OASYS76.
Remove the screw of ①OP COVER, ②**EMI ANGLE 1** and ③EMI ANGLE 2.

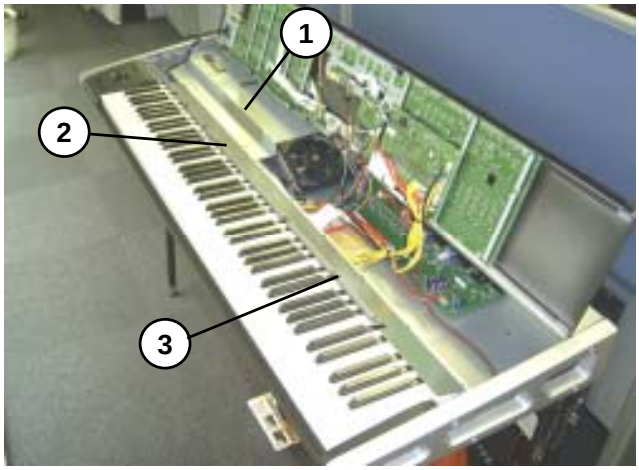

2.Remove the ①OP COVER, ②**EMI ANGLE 1** and ③EMI ANGLE 2 .



3.Remove the 12 screws of the JOYSTICK-PANEL and KEYBOARD ASSY from the bottom side.



Downloaded from www.Manualslib.com manuals search engine

KEYBOARD ASSY.
and remove the CD-RW UNIT.




5.Change the CD-RW.



Downloaded from www.Manualslib.com manuals search engine

OASYS88 : CHANGE THE CD-RW


1.Open the front panel of OASYS88.
Remove the screw of ①OP COVER, ②**EMI ANGLE 1** and ③EMI ANGLE 2.

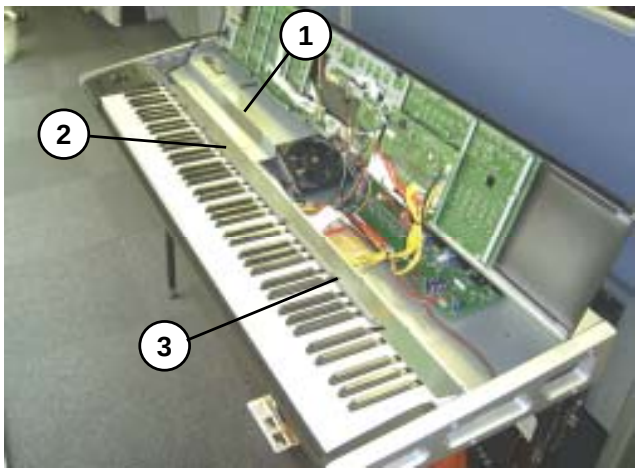

2.Remove the ①OP COVER, ②**EMI ANGLE 1** and ③EMI ANGLE 2 .




3.Remove 4 screws of the JOYSTICK-PANEL-ASSY from the bottom side.

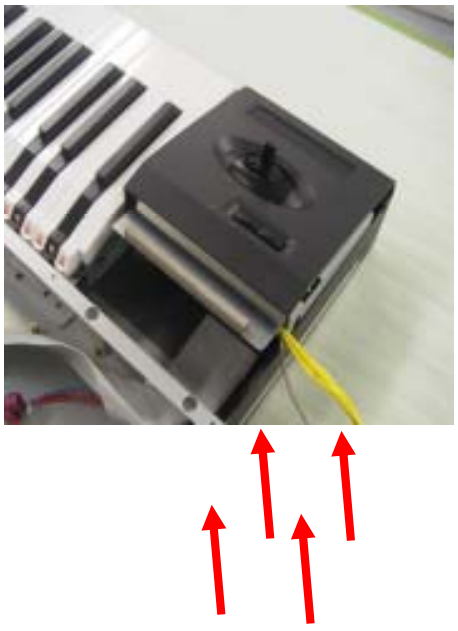

Downloaded from www.Manualslib.com manuals search engine

4.Remove the cables , Remove the JOYSTICK-PANEL-ASSY.
and remove the CD-RW UNIT.

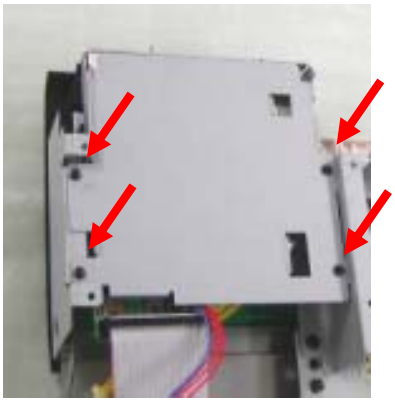


5.Change the CD-RW.



Downloaded from www.Manualslib.com manuals search engine


CAUTION : OASYS FRONTPANEL SHIELD FORM

The shield form is pasted to the front panel. (OASYS76 :4 pieces , OASYS88 :5 pieces)

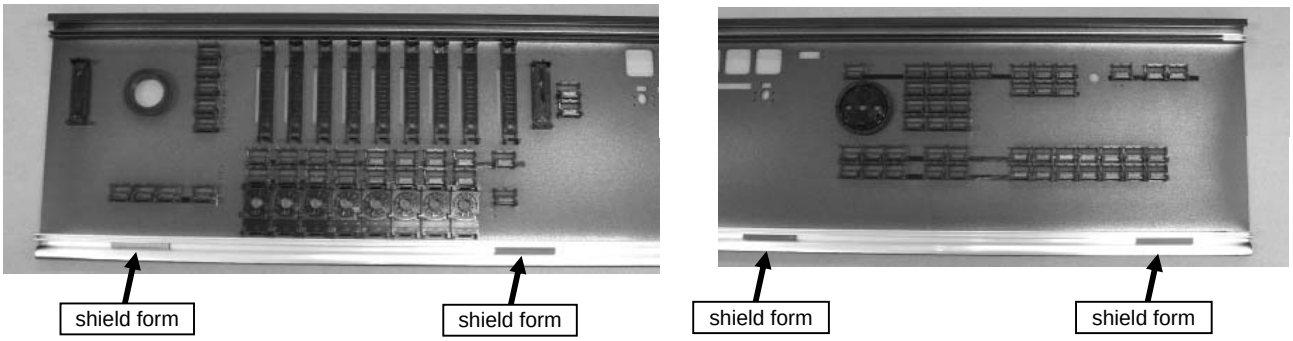

Please do not peel off the shield form when you insert the corner panel.

Troubre occurs when the shield form falls in the PCB.

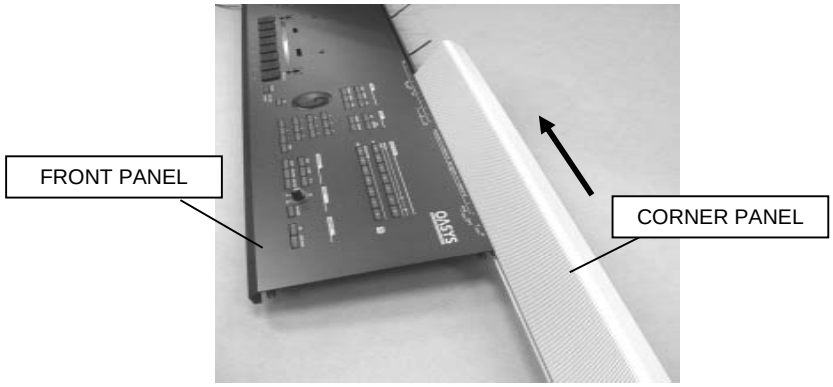

Downloaded from www.Manualslib.com manuals search engine

Using the OASYS Internal Calibration Application

Important precautions

BE VERY CAREFUL!

DO NOT TOUCH ANY BUTTONS OR CONTROLS OTHER THAN THE ONES NOTED BELOW.

TOUCH ONLY ONE CONTROLLER AT A TIME. DO NOT MOVE MULTIPLE KNOBS OR FADERS.

Dismissing error messages

At any point, if you move a different controller from the one that the application expects, an error message will appear. If this occurs, simply dismiss the error message by touching the screen, and then continue.

When is calibration necessary?

Each OASYS is calibrated before leaving the factory, using this hidden, internal application. The resulting calibration data is stored on the internal hard disk.

In general, it should not be necessary to re-calibrate, unless:

- controls have drifted over time (possible, but is not expected to be an issue), or
- the OASYS hard drive has been formatted.

Formatting the OASYS hard drive erases the stored calibration data. Without this, physical controls may still operate correctly–but to ensure the best performance, it will be necessary to re-calibrate.

This is one of the reasons that Korg recommends against formatting unless it is absolutely necessary.

Calibrating the physical controls

1. **Turn on the unit, wait for the Combi screen to appear.**
2. **Press and hold the following four buttons, in the specified order, so that at the end all four buttons are held down: EXIT, 2, ENTER, and FUNCTION.**

(Other orders will work, but one in particular - starting with ENTER + 2 - brings up a dialog box first, and appears to put the system in a slightly strange state.)

3. **Wait for a few seconds, until some strange text appears on the screen, over-writing the main display. (For those who are curious, these are Linux command-line messages.) You can release the buttons at this point.**

Wait about 10 more seconds. At the end of this time, the test application appears.

The calibration application includes a S/PDIF I/O test, and at startup it automatically checks to see if a S/PDIF cable is connected. If not, the screen will display a prompt: “Connect S/PDIF Cable.” For calibrating the physical controls, it’s completely unnecessary to have S/PDIF connected–but you’ll need to dismiss the message before proceeding:

4. **Touch anywhere on the screen to clear the Connect S/PDIF Cable message.**

Note the text “Fan Control” at the top of the screen. This shows the current test section.

5. **Press the INC/DEC key to browse through the test categories (the name is shown on the top of the screen).**

You will step through “Switch & LED,” “LCD,” and then “A/D Converter.”

6. **Stop when you see the “A/D Converter” category.**
7. **Press the front-panel ENTER button. You'll enter the “Ribbon Controller” section.**
8. **Press your finger along the full width of the ribbon, from left to right. “OK” will appear on the screen.**
9. **After seeing 3 OKs in all, lift up your finger, and press ENTER. At this point, the calibration data for the ribbon is updated.**

For all of the controllers below (except the rotary encoder), follow the same procedure: move the controller to its extreme max and min positions until the display shows OK for all values, and then press ENTER to proceed to the next section.

You can also use the FF>> and <<REW buttons to move back and forth between the tests. If you find that you are unable to get an OK message for a particular test, use FF>> and <<REW to exit and re-enter the test, and try it again.

10. **Joystick: move up and down, left to right.**
11. **Vector Joystick: move all around, in a circle.**
12. **Knobs, faders, and value slider: move each one to its max and min positions.**
13. **Rotary encoder (value dial): this test is slightly different. Rotate the encoder clockwise to *exactly* +30, and then counter-clockwise to *exactly* -30.**
14. **Tempo knob: move to max and min positions.**

After the Tempo knob section, the tests proceed automatically to the foot switch/pedal section. If you do not have all three foot switches/pedals connected, you can complete the calibration simply by turning off the power.

Calibration data is stored after each test

The calibration data is stored each time you press ENTER after completing an individual test. If you only need to calibrate the Ribbon, Joystick, and Vector Joystick, for instance, you can simply turn off the power after pressing ENTER at the end of the Vector Joystick test.

Aftertouch calibration (76-note only)

For 76-note keyboards only, aftertouch calibration is in the “Key & AfterT” section. Calibration for the 88-key is completely different, and not accessible via this application.

Document version history

1.0: Initial version

1.1: Added step to clear Connect S/PDIF message


1.2: Added “When is calibration necessary?” section


Downloaded from www.Manualslib.com manuals search engine

How to reach HDD

Open the OASYS


Drawn by H.Kudou Aug 21, 2006

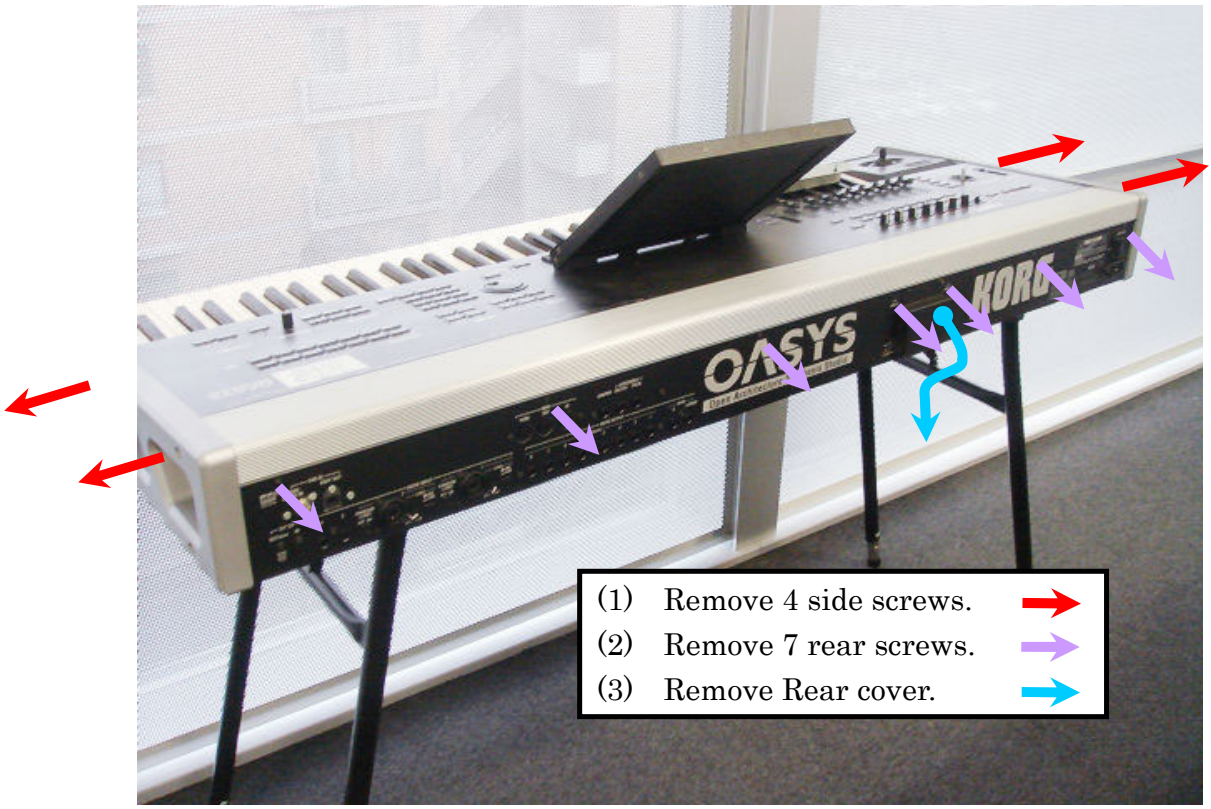

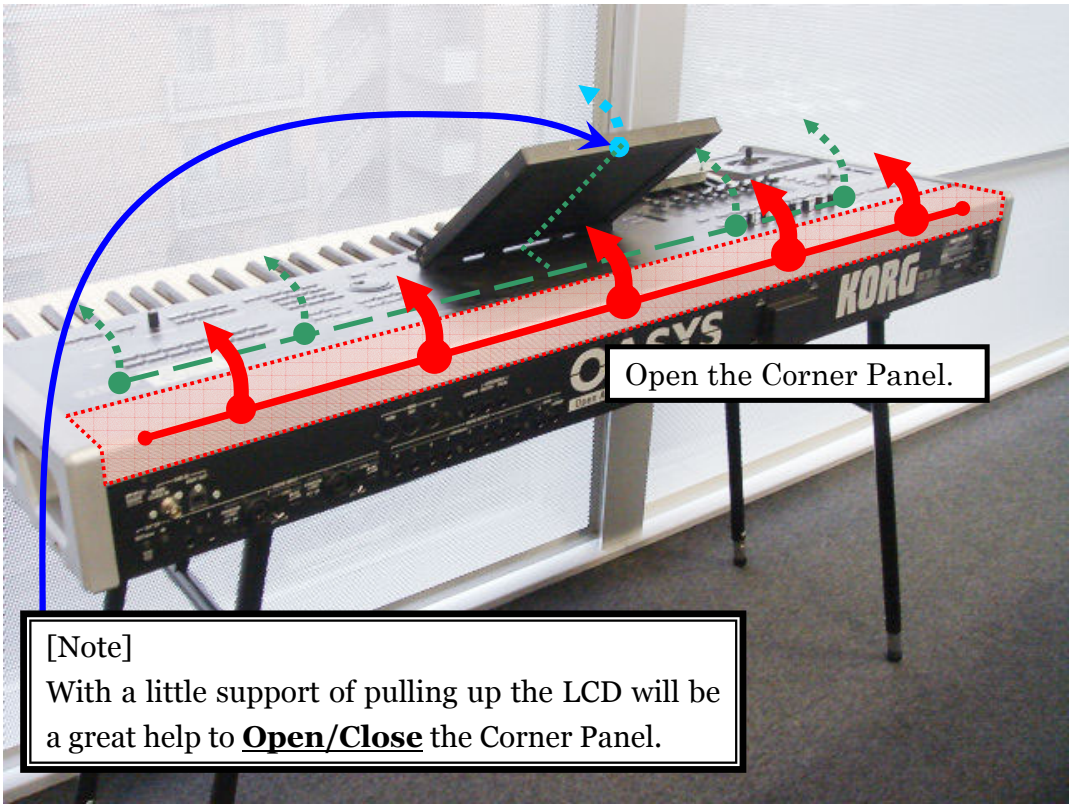



Downloaded from www.Manualslib.com manuals search engine



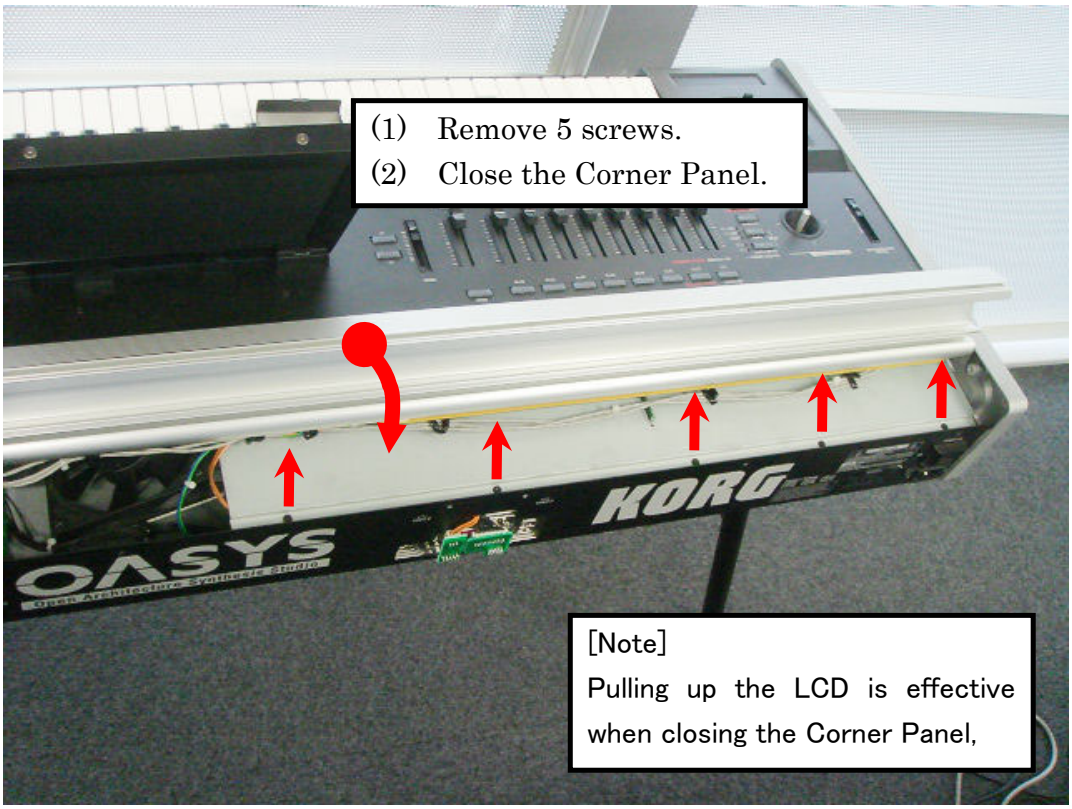



Downloaded from www.Manualslib.com manuals search engine

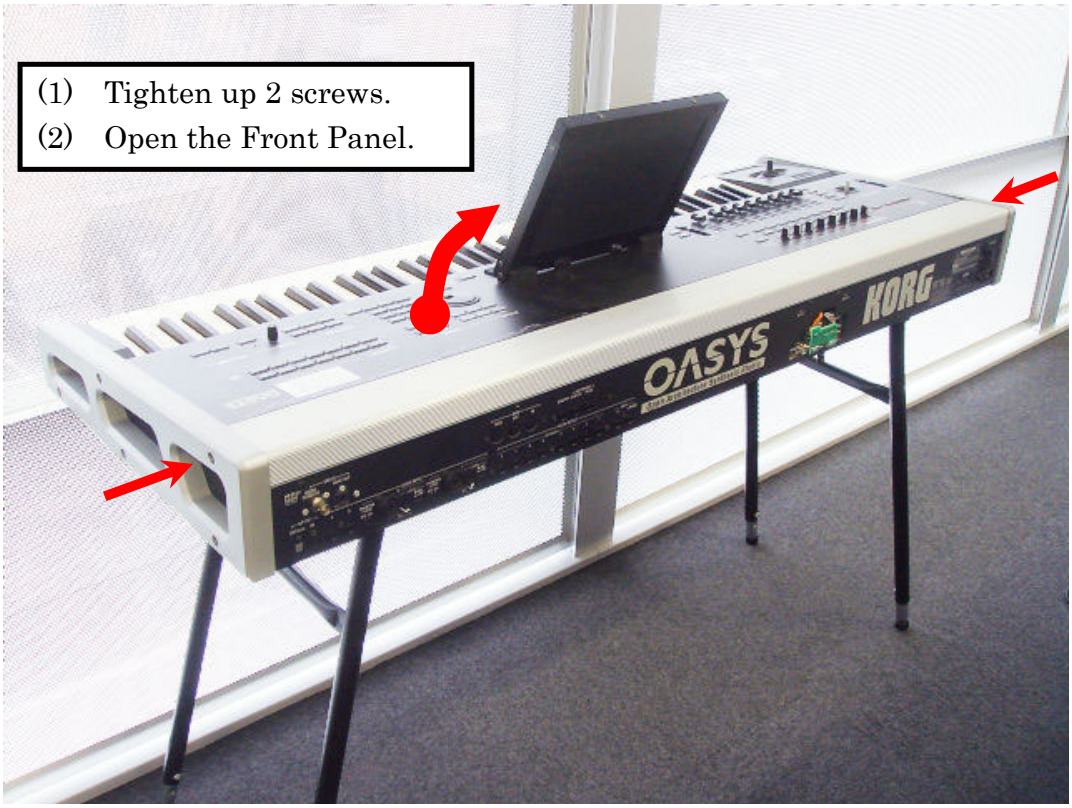

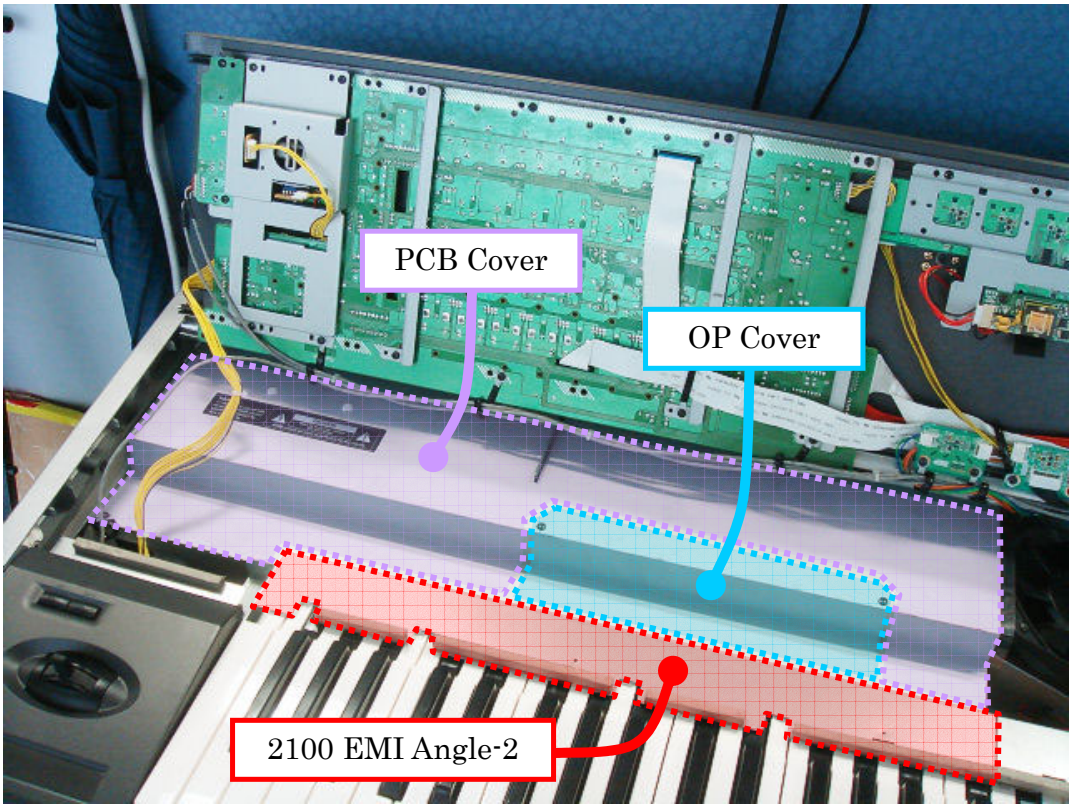



Downloaded from www.Manualslib.com manuals search engine

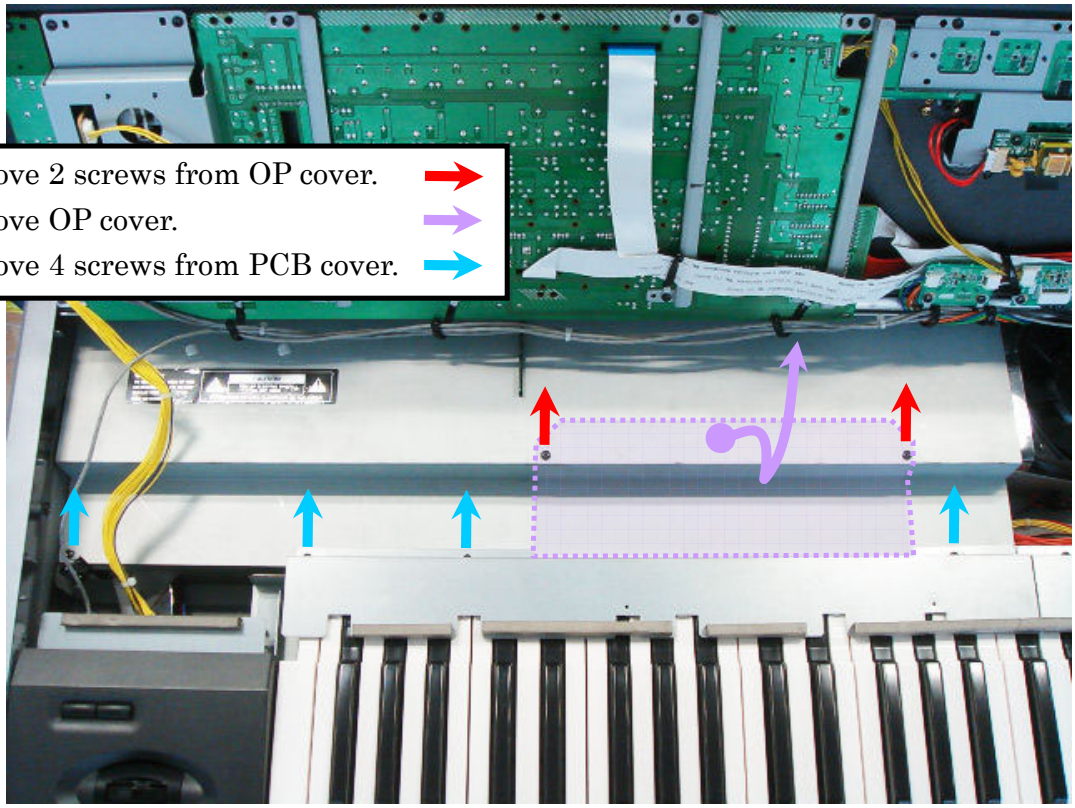

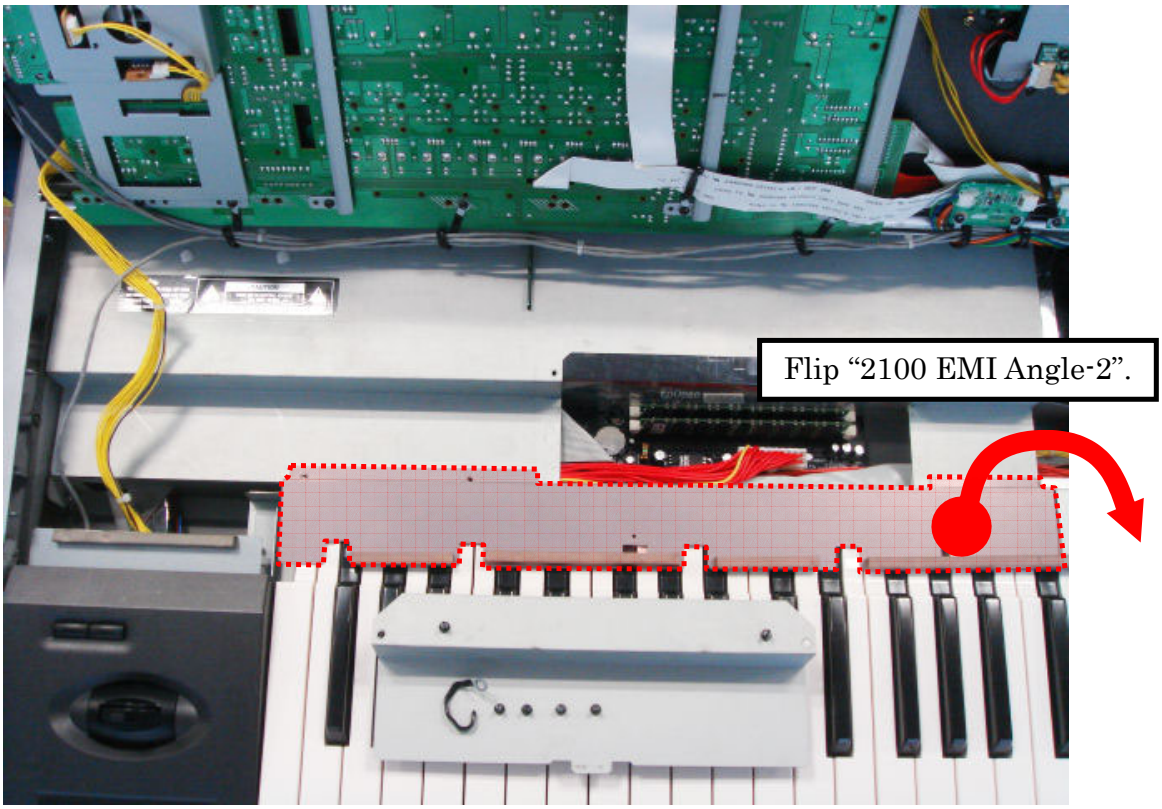


Downloaded from www.Manualslib.com manuals search engine

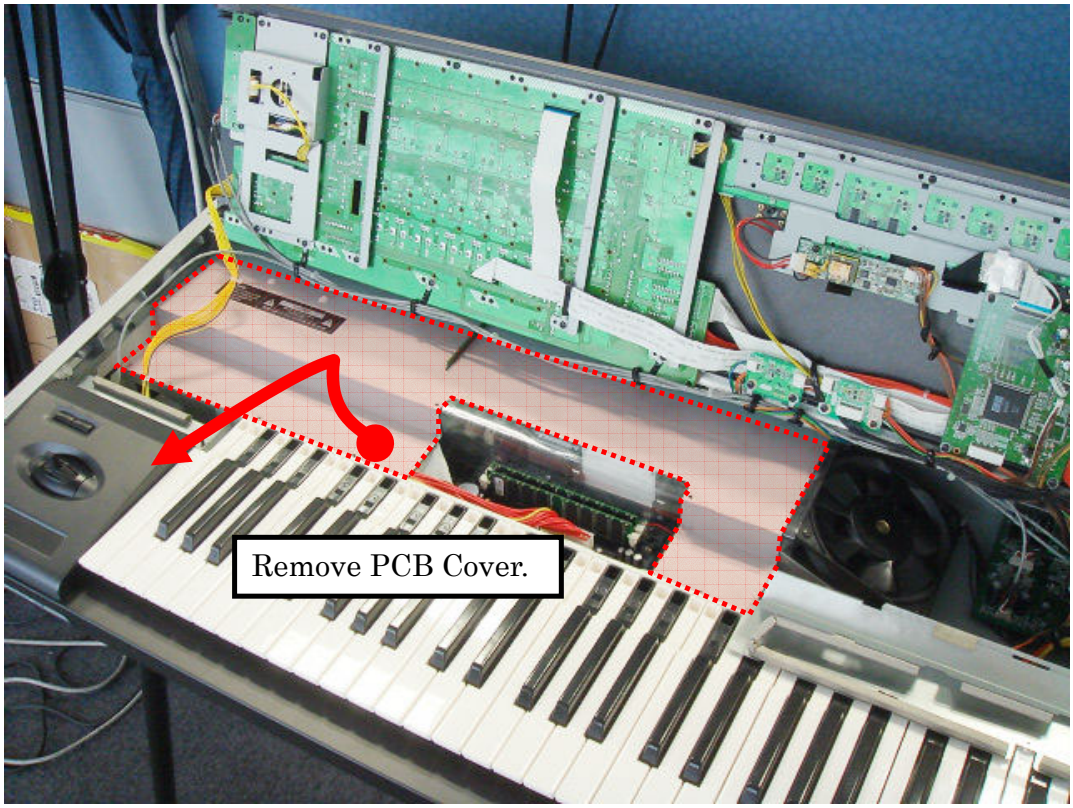

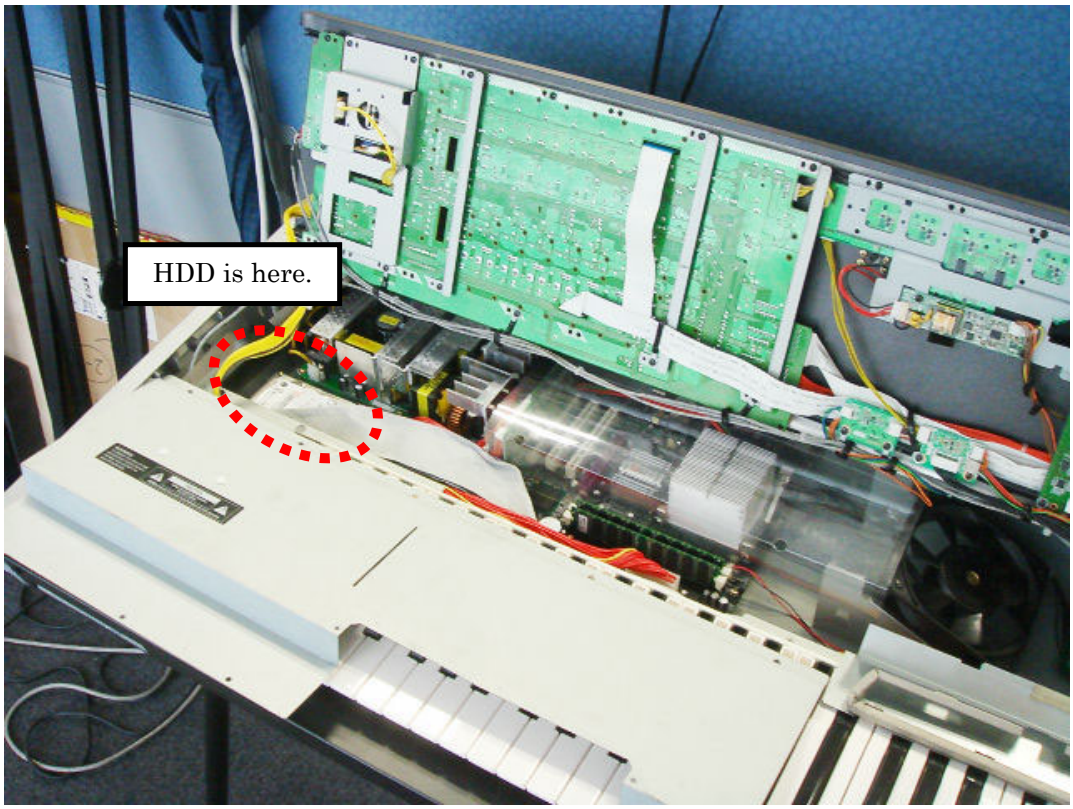

Downloaded from www.Manualslib.com manuals search engine


HDD

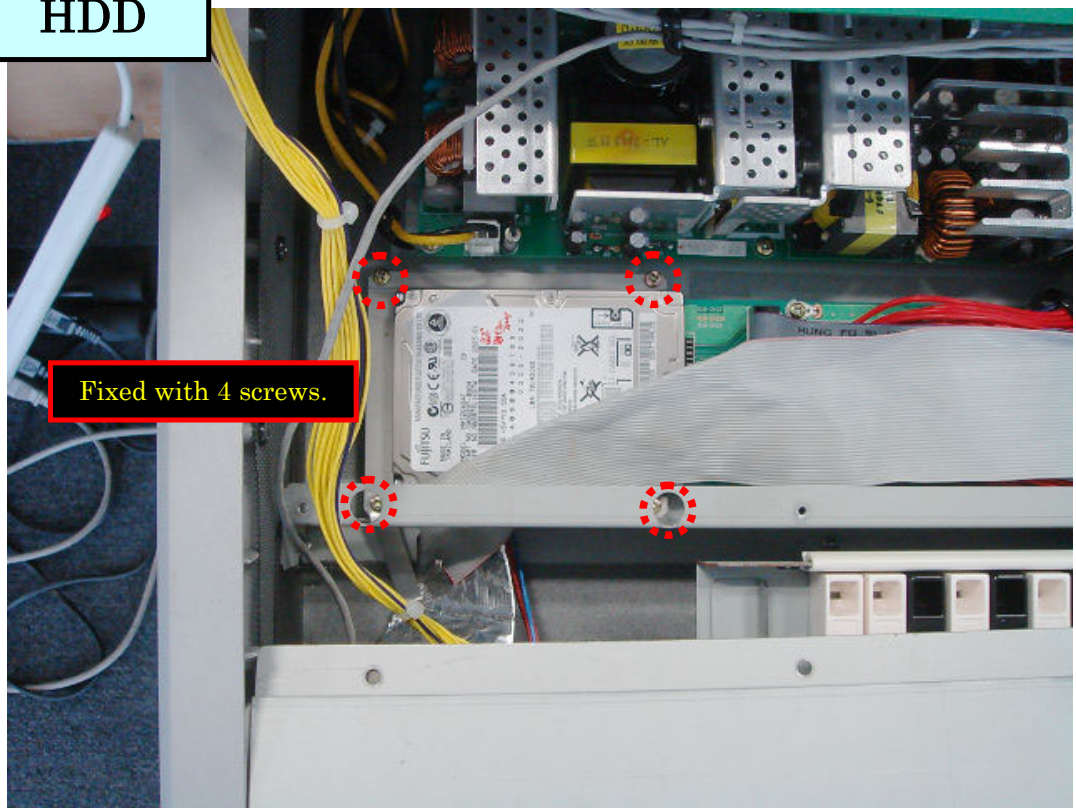


Downloaded from www.Manualslib.com manuals search engine

How to reach HDD


Close the OASYS

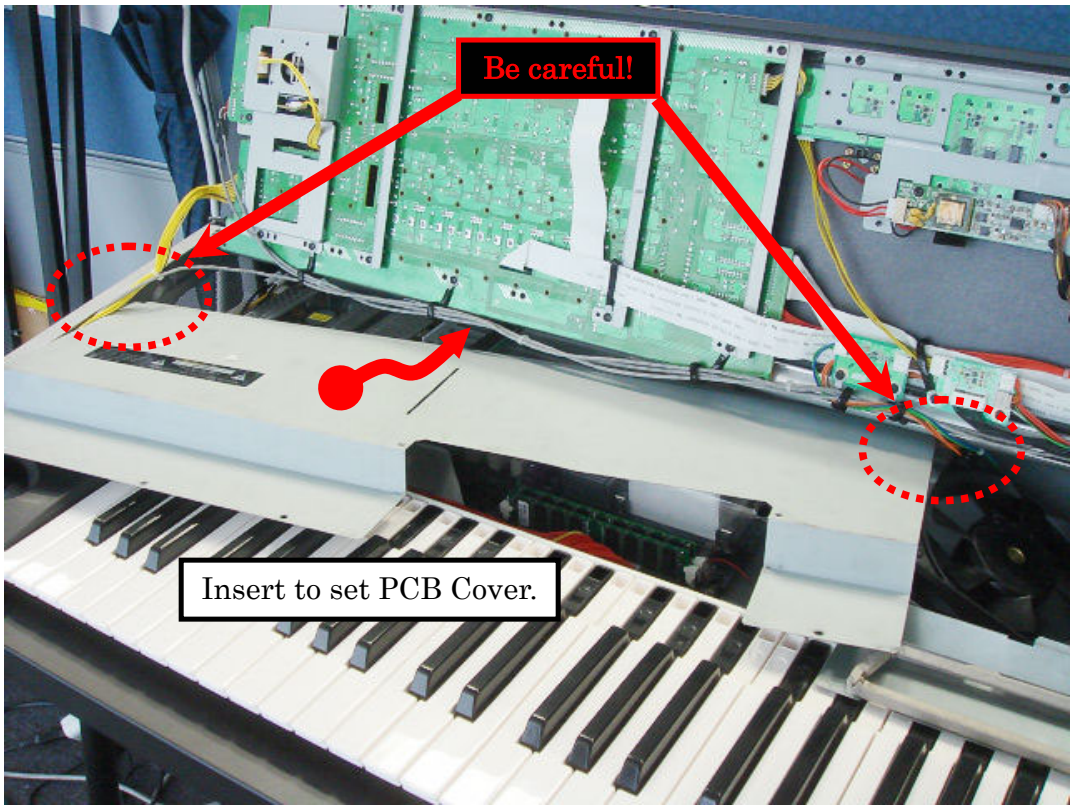

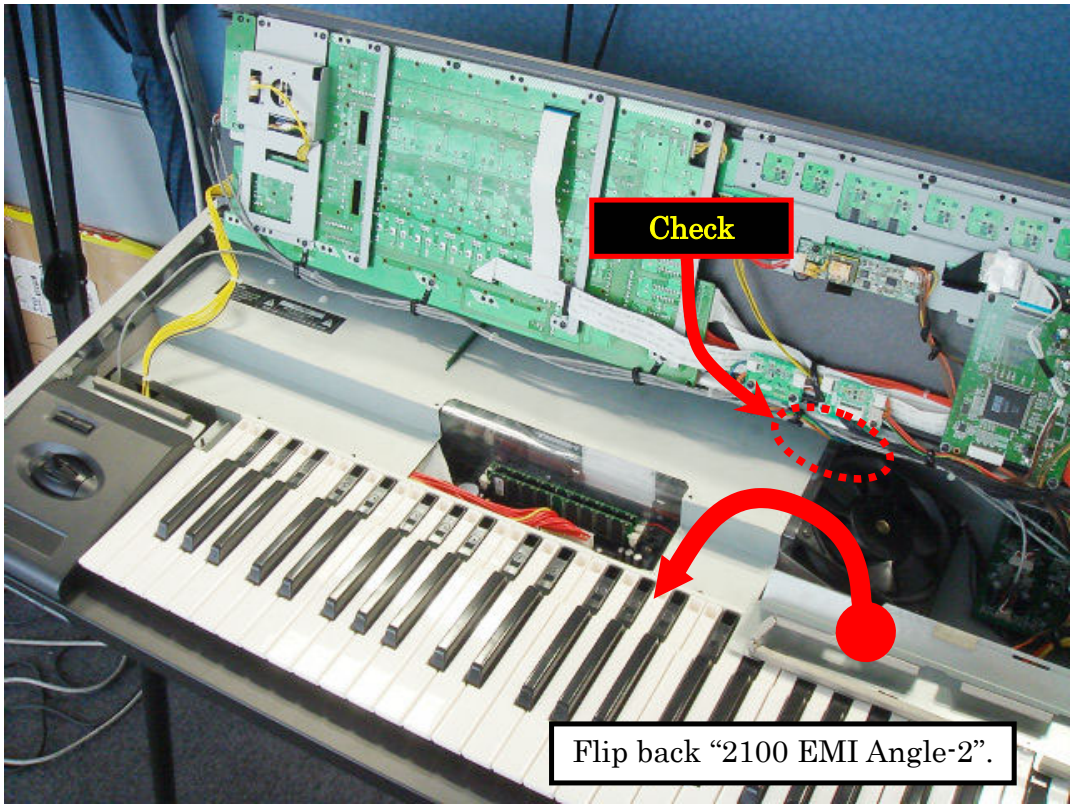


Downloaded from www.Manualslib.com manuals search engine

Check if the PCB Cover has correctly been set.
PCB Cover must be set under the Corner Panel.

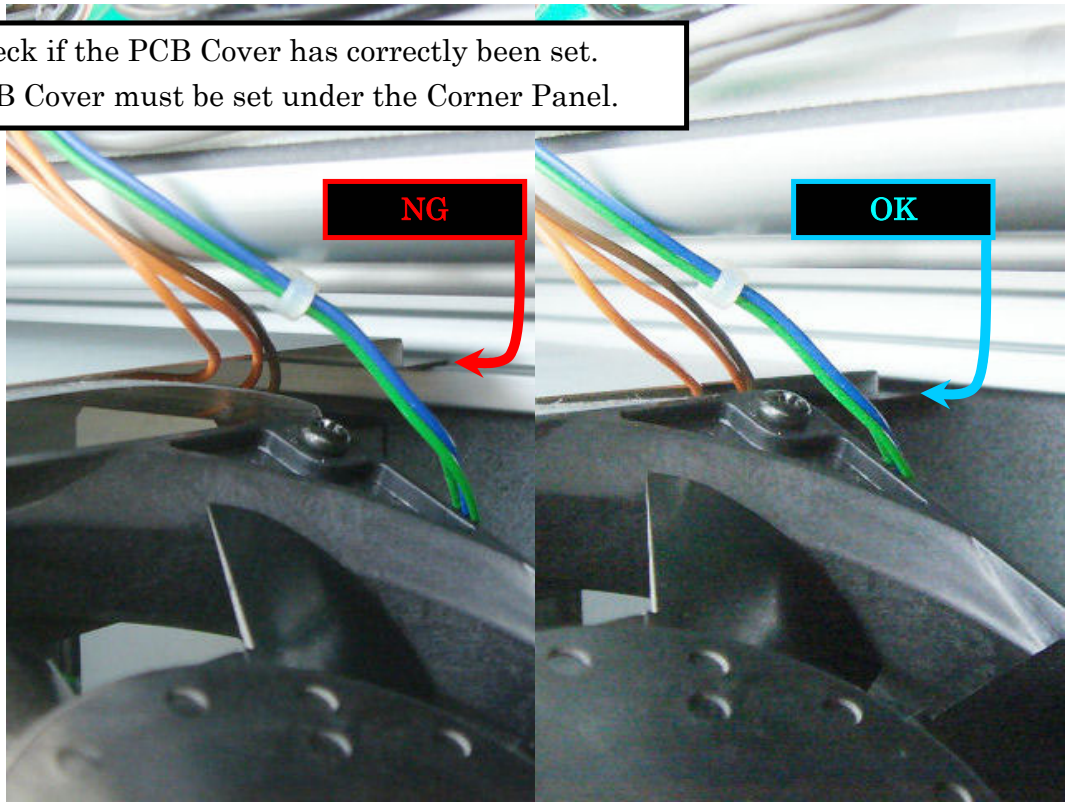



(1) Keep pushing PCB Cover toward the rear,
tighten up 4 screws to PCB Cover
(2) Set OP Cover.
(3) Tighten up 2 screws to OP Cover **tenderly**.

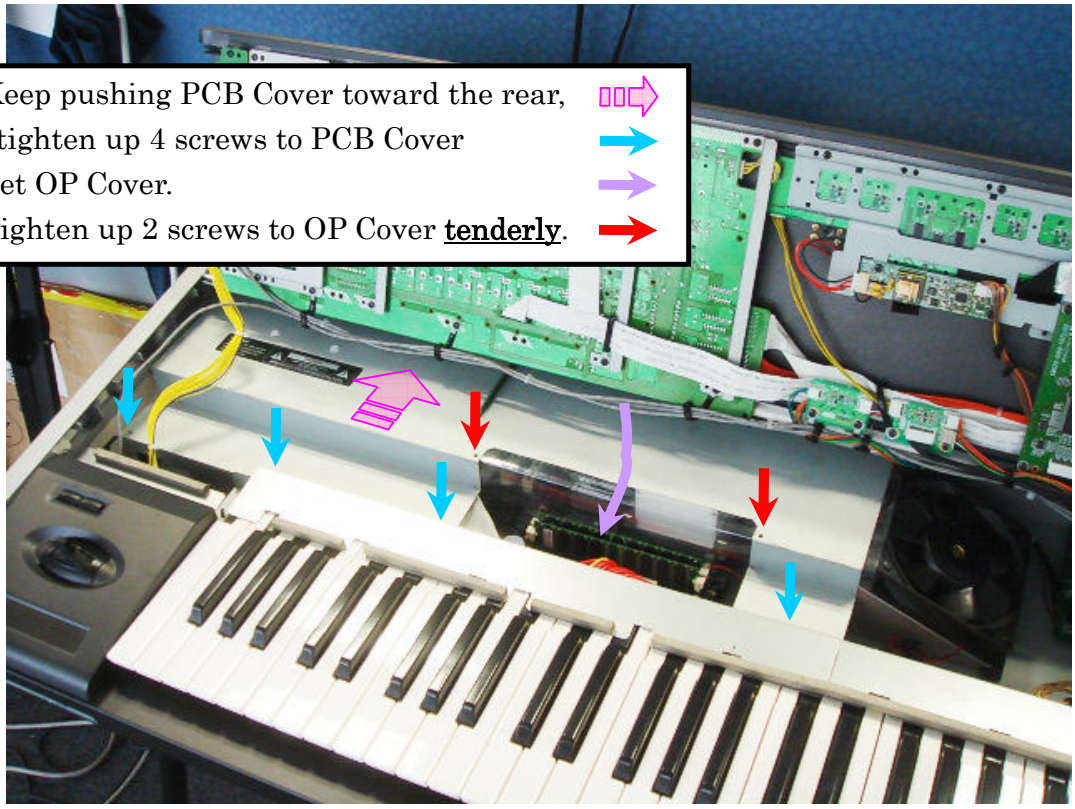

Downloaded from www.Manualslib.com manuals search engine


Check if the Harness has correctly been tied up.

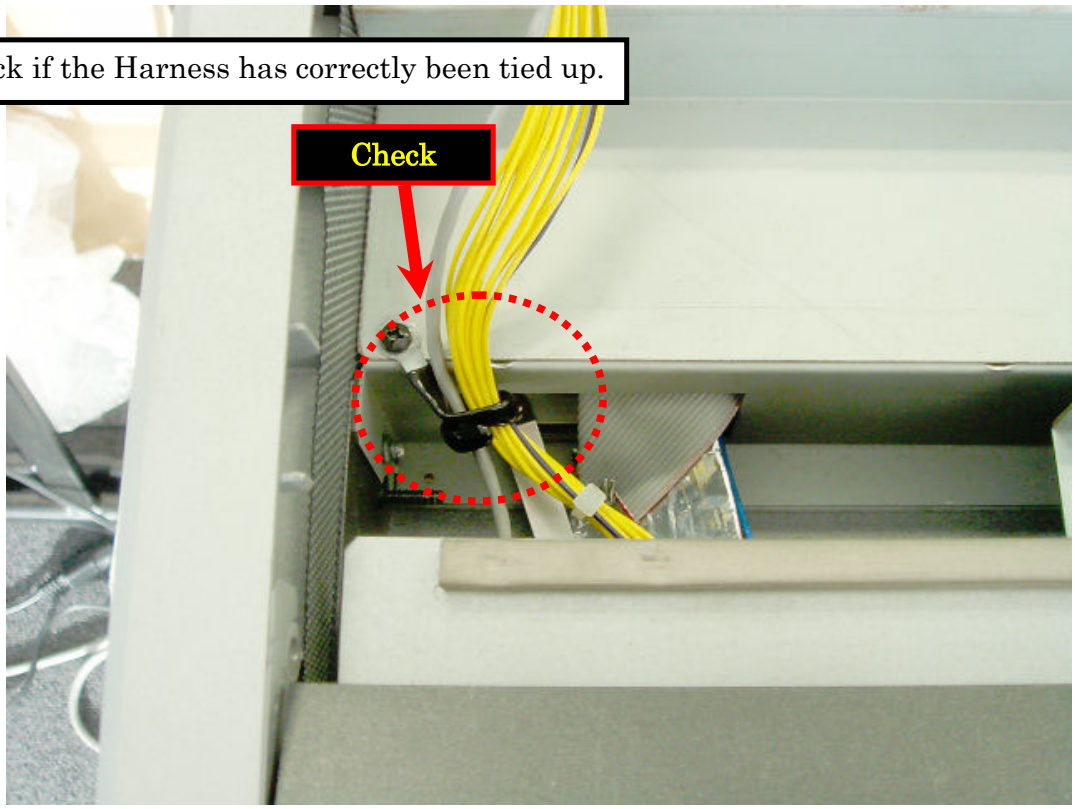

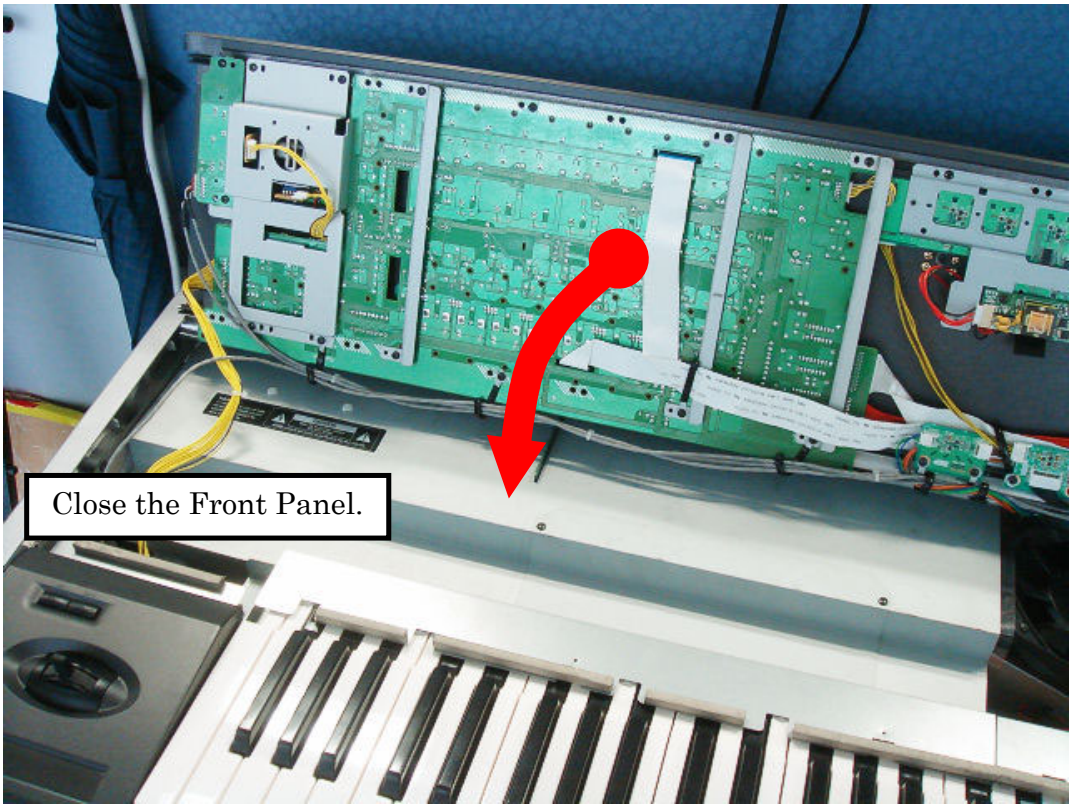


Downloaded from www.Manualslib.com manuals search engine


(1) Remove 2 side screws.
(2) Open Corner Panel.

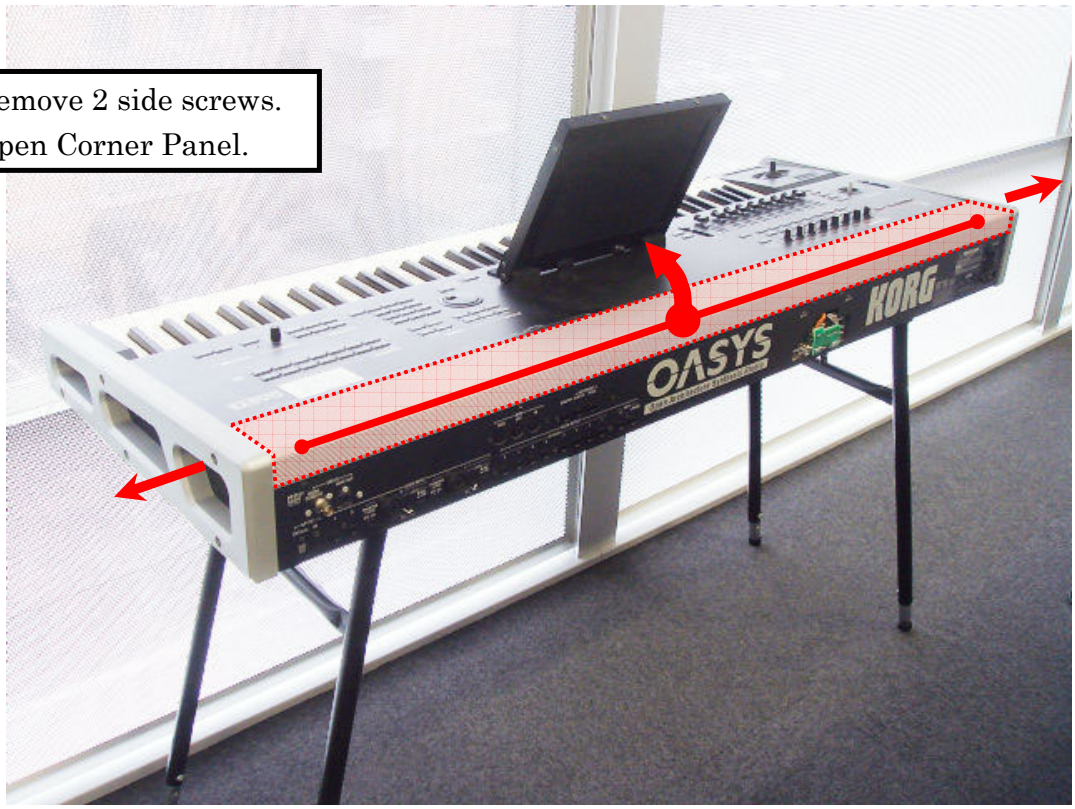

(1) Tighten up 5 screws.
(2) Close the Corner Panel.

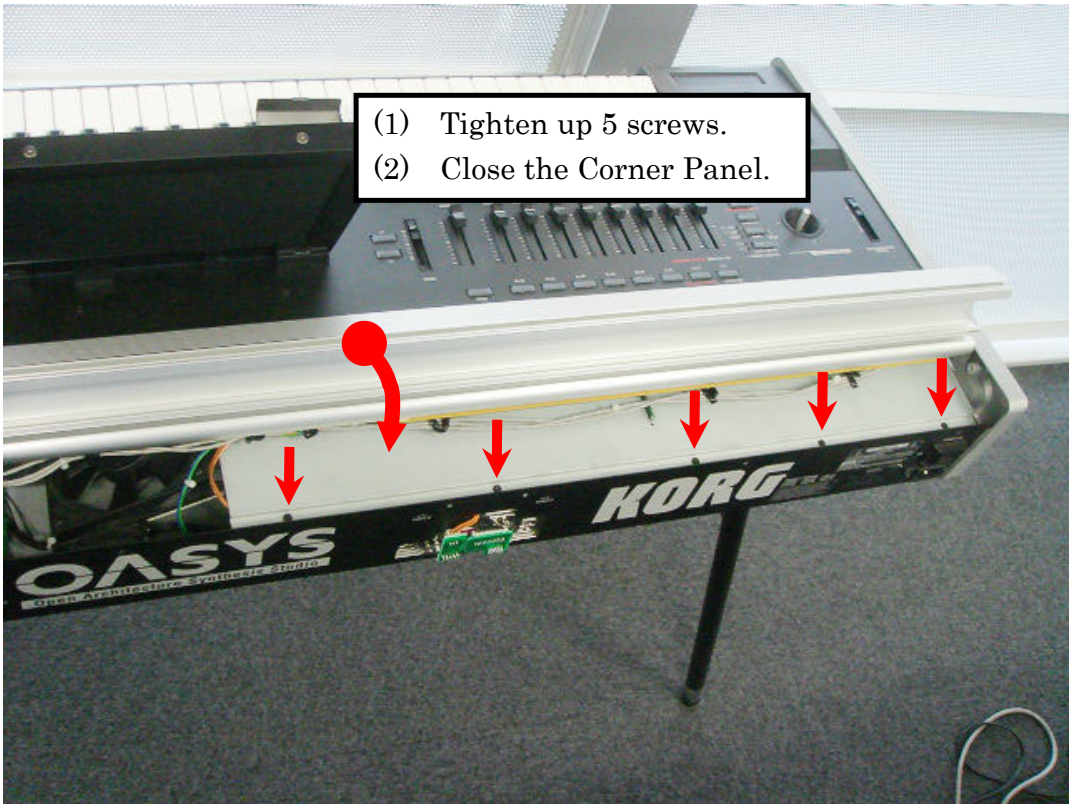

Downloaded from www.Manualslib.com manuals search engine

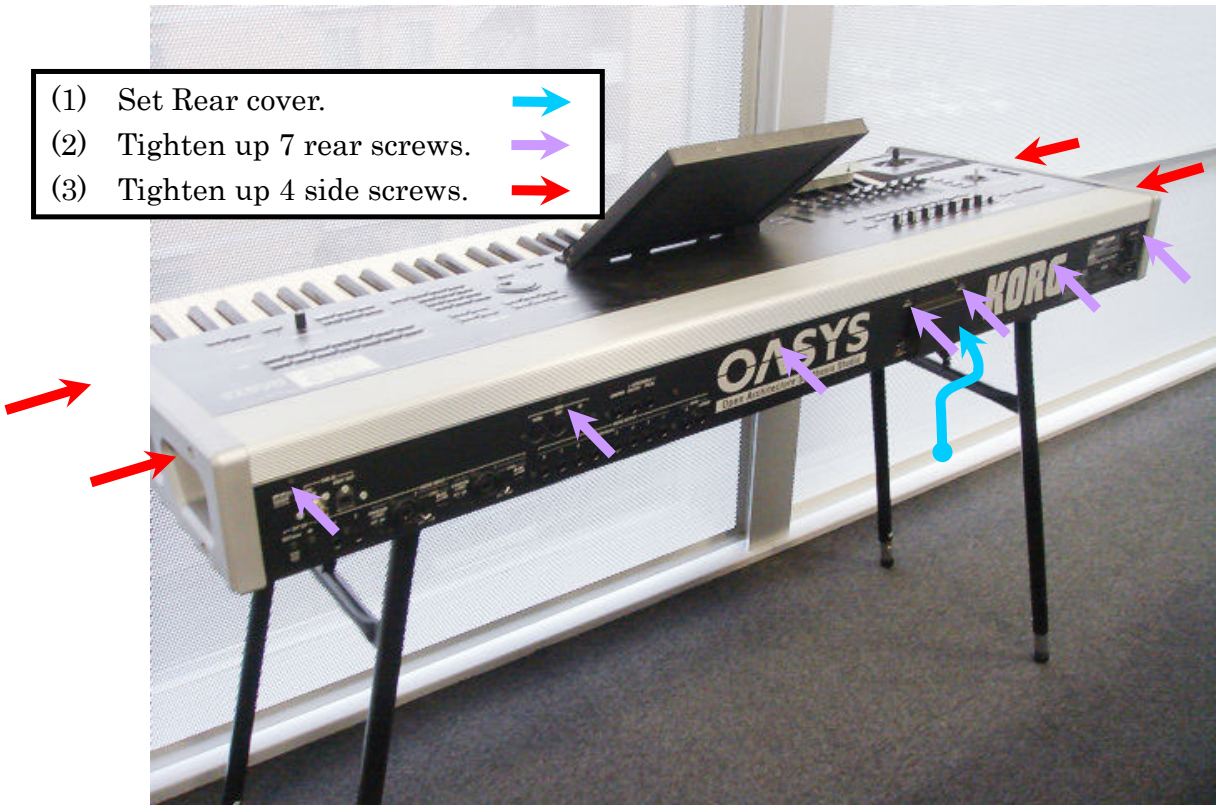

Downloaded from www.Manualslib.com manuals search engine