

Notification and caring


1. It is normal battery and charger is heat(60°C) during charging.
2. No water in the connector when charging, or will short circuit.
3. Use charger and battery provided by factory only, or may damage charger and battery.

Playing notification

1. Make sure your car is connecting correctly before playing.
2. Donot play in the street, road, slope or drain.
3. Donot play on the smooth place, like marble or floor tile.
4. Donot change forward/backward swithc during playing. Donot allow children stand on the seat.
5. Donot change car line or add any other thing.
6. Donot play car in the rain or water, keep car away from water and fire, or damage the car line.
7. Stop car when meet obstacle, move it first.
8. Donot paly indoor, or damage furniture or children.
9. When power low, light and music will not work, please recharge quickly.
10. Only one rider playing, no overload, max capacity is 20kg.
11. Turn off the power if you are not playing. Please loosen battery line if you don't use your car for quite a long time.

Caring

1. For safe driving, please often check and maintain the car.
2. Before assembling, please make sure no missing parts. if missed, please connect factory.
3. Often check whether screw loose or parts damage.
4. Make sure parts are ok, if not, please connect factory.
5. Often clean the car carefully. Donot use wet cloth to wash.
6. When dismounting, please read guide book carefully, or will damage part.
7. Often check charger, car line, plug, appearane and other parts. if broken, please replace and repair.

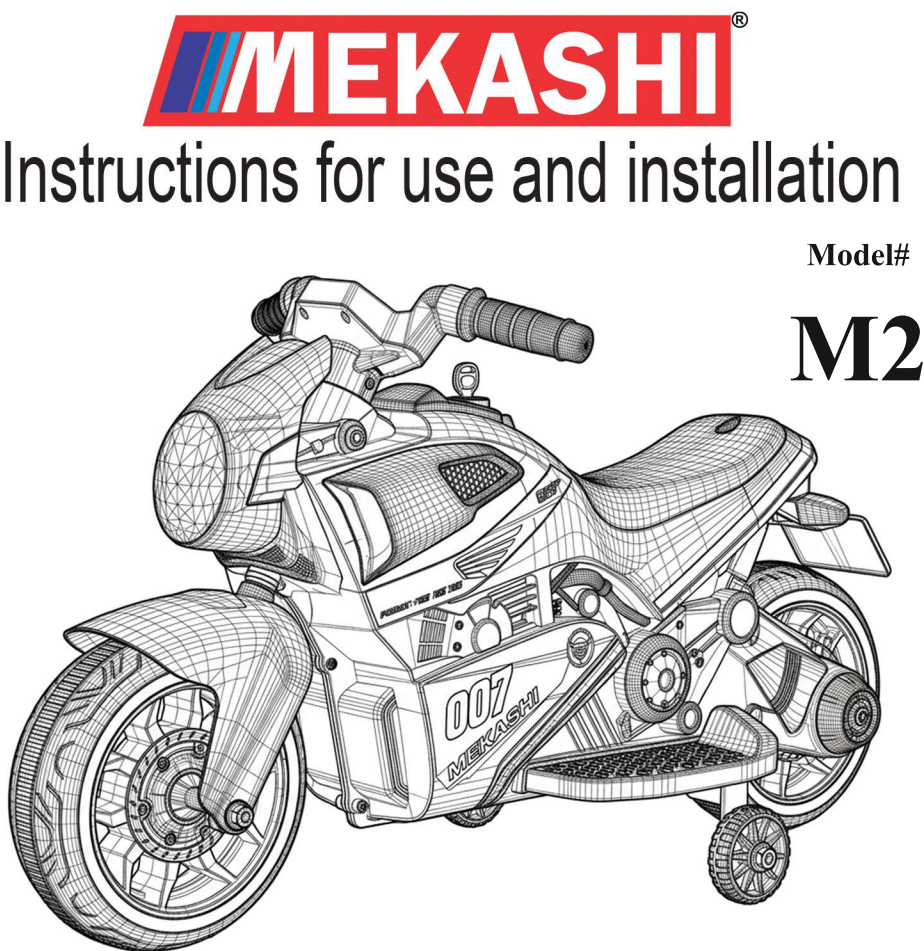

IS 15644:2006

CM/L-8800139014

Customer Care Contact:

MDK Enterprises

C-148 Hosiery Complex, Phase-2 Extn.

NOIDA-201305, Uttar Pradesh, India

Email: info@mekashi.toys ; mail@masoomtoys.in

Phone: +91 9810344926

WWW.MEKASHI.TOYS

In order to show how to operate the car and the struction of product we use picture to guide you. Maybe what you bought is different from the picture, please see the real one.

In orider to Improve our quality, we will change the appearance and struction without notification, please understand.

Please read the operating instructions carefully before using. Assembly it correctly or it will hurt your children. Please keep guide book properly.

Basic Information

| Name          | specification                        |
|---------------|--------------------------------------|
| battery       | one motor(6V4.5AH)                   |
| motor         | one motor(6V)                        |
| suitable age  | 24-72 months                         |
| load capacity | 30kg                                 |
| product size  | 770*360*450mm                        |
| Package Size  | 660*250*380mm                        |
| speed         | 3-4 km/h                             |
| playing time  | charging 8-12hours, playing 1-2hours |
| charger       | output: DC6V                         |
| fuse          | restorable: 5A                       |

Warning:

To reduce the risk of injury, adult supervision is required, never use in roadways, near cars, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than one rider.

Adult Assembly Required.

Take care during unpacking and assembly as product has small parts.

Sealed lead-acid battery must be recycled or disposed of properly.

Batteries are to be inserted with the correct polarity.

Toy must be assem bled by adult before use

Retain all noted instructions for future reference.

To reduce the risk of injury, adult supervision is required, never use in roadways, near cars, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than one rider.

Assembly by an adult.

Not to be used for traffic.

-1-

How to maintain, warning and charging notification

|                  |                                                               |                                                                                  |
|------------------|---------------------------------------------------------------|----------------------------------------------------------------------------------|
| speed slow       | 1. battery old<br>2. no power<br>3. overload<br>4. rough road | 1. replace new battery<br>2. recharge<br>3. normal weight 20kg<br>4. smooth road |
| loud motor noise | gear broken                                                   | factory repair                                                                   |
| car shaking      | 1. motor line loose<br>2. motor has dead point                | 1. reconnect<br>2. factory repair                                                |
| car not move     | battery line loose                                            | reconnect                                                                        |
| car stops        | spare parts broken                                            | factory repair                                                                   |

Warning:

Safe driving for your children, please read this carefully.

1. Assembling should be done by adults, children stay away from small spare parts.

2. Adult supervision is needed, do not leave children alone. Away from fire.

3. No standing on the pedal switch or on the car.

4. Charging only for adult. Charge first before using.

5. Keep children away from plastic bag. Suffocation danger.

6. Only use spare parts provided by factory.

7. Charger is not a toy.

8. Max capacity is 20kg, do not overload.

9. One car one charger.

10. Donot play car when charging.

11. Suitable age: 24-72 months.

12. This toys contains battery that are non-replaceable

13. Charger was used with the toy should be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toys must not be used with this transformer until the damage has been repaired.

Charging notification

1. Charging 18 hours for the first time, or will damage the battery.
2. Connecting battery and charger first, then plug into power.
3. After laying one hour, please charge. Normally charge for 8-12 hours, not over 20 hours.

How to use and maintain

SOCKET

8. Battery charge: please charge tricycle when battery is low. Charging hole is on the left side of the right wheel. Connecting charge hole, then charge. (Notice: cannot play when charging, charging only under adult supervision)

If the current is too large, the power will be cut off automatically and will be restored within 5-10 seconds.

| problem                            | cause                                                                                                                                                     | solution                                                                                                                                                        |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| car cannot move                    | 1. voltage to low<br>2. fuse fired<br>3. switch assembled uncorrect<br>4. battery line loose<br>5. battery broken<br>6. battery damage<br>7. motor broken | 1. recharge<br>2. replace new fuse<br>3. reassemble according to guide book<br>4. reconnect<br>5. replace new battery<br>6. factory repair<br>7. factory repair |
| cannot charge                      | 1. battery line loose<br>2. charger no electricity<br>3. charger broken                                                                                   | 1. reconnect<br>2. plug-in<br>3. replace new charger                                                                                                            |
| short time for playing             | 1. battery not full<br>2. battery old                                                                                                                     | 1. recharge<br>2. replace new battery                                                                                                                           |
| small noise and heat when charging | chemical reaction                                                                                                                                         | normal                                                                                                                                                          |

Part Name

|                        |                                             |                      |
|------------------------|---------------------------------------------|----------------------|
|                        |                                             |                      |
| 1 Motorcycle body      | 2 Front axle / Rear axle / Auxiliary wheels | 3 Handlebars         |
|                        |                                             |                      |
| 4 Front wheel          | 5 Seat                                      | 6 Fender             |
|                        |                                             |                      |
| 7 Rear wheel           | 8 The front                                 | 9 Charger            |
|                        |                                             |                      |
| 10 Motor / Motor cover | 11 Instruction                              | 12 Foot pedals       |
|                        |                                             |                      |
| 13 Front wheel fork    | 14 License plate                            | 15 Accessory Package |

How to assemble

Step 4:

Installing the License Plate

Take out the license plate, plug it into the slot at the rear of the motorcycle, and fix it with screws.

Step 5: Installing the Seat

Insert the seat into the two slots of the motorcycle body, press down, and then rotate the movable lock at the rear of the seat and align it with "close".

Caution: Please plug in the positive and negative wires of the battery before installing the seat.

Step 3: Rear Wheel

First put the motor into the motor position at the rear of the motorcycle body, and connect the motor to the connector from the motorcycle body, then install the rear wheel and clip it into the motor gear, and plug the sleeve into place from the other side of the motor and insert The rear axle passes through the sleeve, the rear wheel, and the motor in order.

Finally put gaskets on both sides and lock it with two nuts and install the motor cover over the motor.

Caution: Make sure that the motor cable is connected before installing the motor cover.

Step 1: Installing the Foot Pedals

Take out the foot pedals, insert the foot pedals into the grooves on both sides of the motorcycle body until the "click" is heard then the installation is completed.

Caution: When installing the foot pedal with foot switch, connect the foot switch cable first.

Step 2: Installing the Auxiliary Wheels

Take out the auxiliary wheel, align the auxiliary wheel with the slot on the bottom of the motorcycle body, and fix it with four screws.

How to assemble

Step 6: Installing the Front of the Motorcycle .

Take out the front of the motorcycle, first connect the wire connection terminals of the front and the main motorcycle body. Then align the hooks on the front of the car with the slots on the front of the motorcycle body and insert it directly to the bottom.

Finally, fix it with two screws under the front of the car.

Caution: Make sure to connect the headlight wire before installing the front.

Step 7: Installing the Front Wheels.

As shown in the figure, first put the fender on the front wheel fork, then use the front wheel shaft to hold the front wheel on the front fork, and finally use the nuts to fix it.

Caution: When fixing the front wheel, put two shaft sleeves inside the front fork, and the washers and nuts are placed on the outside of the fork in order.

Step 8: Installing the Handlebar

Take out the handlebar, use a screwdriver to remove the screw shaft on the handlebar, and then put the handlebar into the round tube of the front fork, align with the slot, and then use the screw shaft to pass through the slot under the handlebar and the iron tube in order. Finally use a screwdriver to fix it until the handlebar does not shake.